

Bedtime Wishes™



Thank you for purchasing this lovable friend!



TO USE

NOTE: This product is shipped in "demo" mode. Open seam on back and slide switch to "play" for full use at home.


Your child's BEDTIME WISHES GLOWORM friend eases the transition to bedtime with a friendly, glowing face and special wish that rhymes. All it takes is a gentle squeeze to bring this lovable character to life.



WASHING INSTRUCTIONS

(DO NOT WASH TOY WITH ELECTRONIC UNIT INSIDE!)

Open back, untie laces and remove electronic unit. Place the toy in pillow case and tie end closed. Machine wash in cold water, gentle cycle, mild detergent, NO BLEACH. Tumble dry in pillow case on low heat setting. After the toy is dry, distribute filling evenly throughout body. (During washing, filling may bunch up.) Place electronic unit in the toy with the bulb toward the head and the activation bar facing tummy. Fit lace through tab on each side of unit and tie to other lace. Close seam.

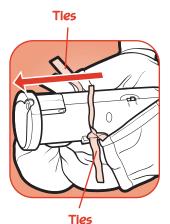

TO REPLACE LIGHT BULB


PR-3 or PR-7 (max I.2W) bulb required. (Light bulb should be replaced by an adult.)

- I. Open seam on back. Until laces and remove electronic unit.
- Loosen and remove screws from lens cover. Remove lens cover, and pull out and discard old bulb.
- Insert a PR-3 or PR-7 (max I.2W) light bulb into bulb compartment. Place lens cover back on electronic unit and retighten screws. Test to be sure unit works by pressing activation bar.
- 4. Place electronic unit in the toy with the bulb toward the head and the activation bar facing tummy. Fit lace through tab on each side of unit and tie to other lace. Close seam.



TO REPLACE BATTERIES

Using a Phillips/cross head screwdriver, loosen screw in battery cover (screw will remain attached to cover). Remove and discard old batteries. Insert 3 fresh I.5V "AA" or R6-size batteries into battery compartment. Alkaline batteries recommended. Replace cover and retighten screw.

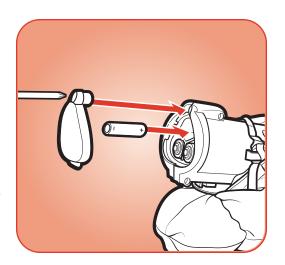

\wedge

CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

CAUTION:

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

At Playskool, we want to do all we can to help ensure that children thrive developmentally. That's why we have partnered with the National Campaign for Hearing Health to provide you with this Hearing Checklist for babies.

Your Baby's Hearing Checklist

Provided by National Campaign for Hearing Health 1050 17th Street NW, Suite 701 Washington, DC 20036

YES

NO



Talk to your doctor if you answer NO to any of these questions:

Birth to 3 Months

120	110	Differ to C 1/10Httls
		Reacts to loud sounds
		Is soothed by your voice
		Turns head to you when you speak
		Seems to know your voice and quiets down if crying
YES	NO	3 to 6 Months
YES	NO □	3 to 6 Months Looks upward or turns toward a new sound
YES	NO	
YES	NO	Looks upward or turns toward a new sound
YES	NO 	Looks upward or turns toward a new sound Responds to "no" and changes in tone of voice

The National Campaign for Hearing Health is sponsored by the Deafness Research Foundation. It is a public outreach, professional education and government relations initiative whose goal is to educate the public about hearing health.

Call the National Campaign for Hearing Health at 1.800.535.3323 or visit www.hearinghealth.net for more information.

Based on NIDCD/NIH infant hearing checklist.

FILLING: ALL NEW MATERIALS: 100% POLYESTER

FIBER REG. NO. PA-282





Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com