

RadioShack.

 
RC Honey Bee I Bug

60-2792

Step One


Installing Batteries In the Transmitter

1. Use a Phillips screwdriver to loosen the screw from the battery compartment, and remove the cover.
2. Place a 9 V battery (not supplied) in the compartment as indicated by the polarity symbols (+ and -).
3. Replace the cover and secure it with the screw.

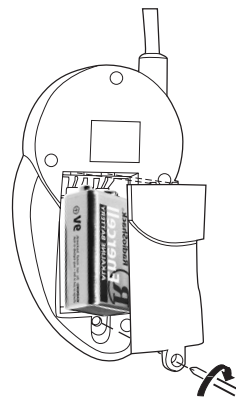

Battery Notes

 
- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries or rechargeable batteries of different capacities.
- If you do not plan to use the bug for several days, remove the batteries. Batteries can leak chemicals that can damage electronic parts.
- Batteries purchased for use in this toy may pose a hazard to children. Please check safety notice supplied with batteries before use.

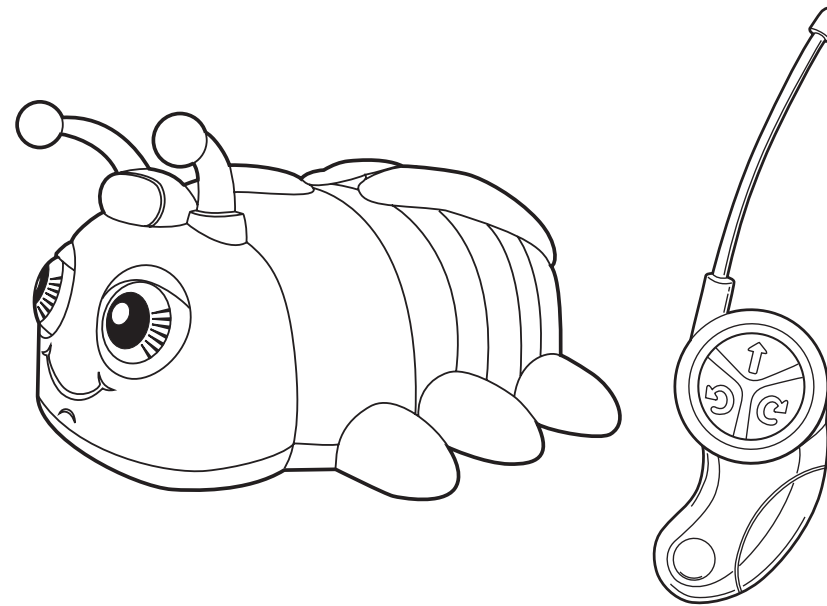

Step Two

Replacing Batteries in the Bug

 1. Turn off the Bug.
2. Use a Phillips screwdriver to loosen the screw from the battery compartment, and remove the cover.
3. Remove the old batteries and place three new AA batteries in the compartment as indicated by the polarity symbols (+ and -).
4. Replace the cover and secure it with the screw.

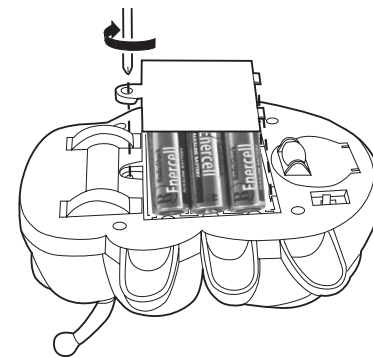

What's Included

- Bug
- Transmitter
- Three AA Batteries

Step Three

Driving the Honey Bee I Bug

ON/OFF is set to **ON** when shipping. Slide it once to **OFF** and then to **ON**. Use the transmitter's control buttons to drive and steer the Bug.

- Press **↑** to move forward.
- Hold down **↻** to spin clockwise.
- Hold down **↺** to spin counterclockwise.

When you finish driving the Bug, turn it off.

Notes

- If you do not play with the Bug for about five minutes while it is turned on, it goes into sleep mode. To restart the Bug, slide **ON/OFF** on the Bug to **OFF**, then **ON**, or press **Try me on**.
- When the Bug goes outside the transmitter's range, it stops. Hold the transmitter as high as possible (with the antenna vertical) to try to re-establish contact. Continue to move closer to the Bug until you can control it with the transmitter.

Helpful Hints

- Your bug works best on firm surface (but not slippery) such as a wooden or tile floor.
- Running your bug continuously for long periods of time generates high heat levels. Heat causes wear and tear on motor. To keep heat level down, cool your bug at least 10 minutes before installing fresh batteries.
- If the bug's antennae flashes but does not respond to the transmitter, move closer to the bug and try again.
- If someone uses a CB nearby, it might interfere with control of the bug. If this happens, move the bug away from the CB.
- You cannot operate your bug near devices with transmitters that use the same frequency as your bug (27 or 49 MHz). Check the box to see which frequency you have.
- If the bug moves slowly and you have installed fresh batteries, check the wheel mechanisms for lint, thread, hair or dust.

FCC Information

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Product:	Honey Bee I Bug
Model:	60-2792
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your bug.
- Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

Care

Keep the bug dry; if it gets wet, wipe it dry immediately. Use and store the bug only in normal temperature environments. Handle the bug carefully; do not drop it. Keep the bug away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new. If your bug is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the bug's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

Limited 90-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for 90 days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003. RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

60-2792
Printed in China
06A03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>