
 


# CID-947 79-Memory Caller ID Module

with Backlight



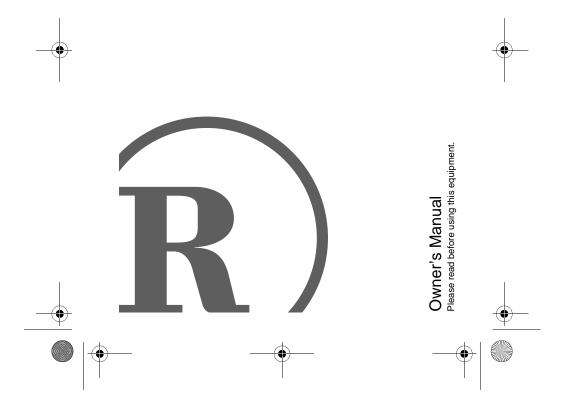





# □ Contents

Features	. 4
FCC Information	. 6
Preparation	. 8
Installing Batteries	. 8
Connecting the AC Adapter	10
Connecting the Module	. 11
Mounting the Module	
Adjusting the Display Contrast	
Choosing a Language	
Setting Your Local Area Code	
Operation	17
Receiving and Storing Calls	
Reviewing Call Records	17
Redialing From Call Record Memory	21
Deleting Calls	
VIP Call List	
Troubleshooting	24
Care and Maintenance	25
The FCC Wants You to Know	
Lightning	

© 2000 Tandy Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by Tandy Corporation.






2







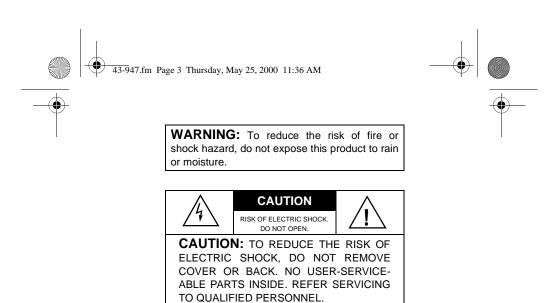






This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.








This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

  
The graphical symbols with supplemental markings are located on the bottom of the module.

 


 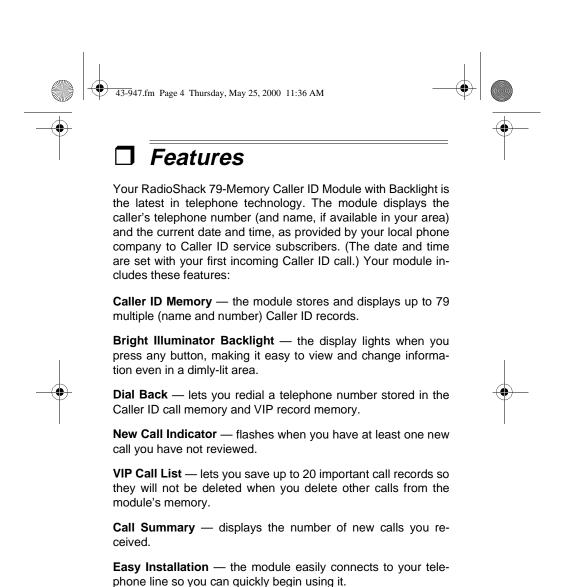


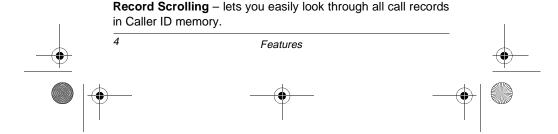

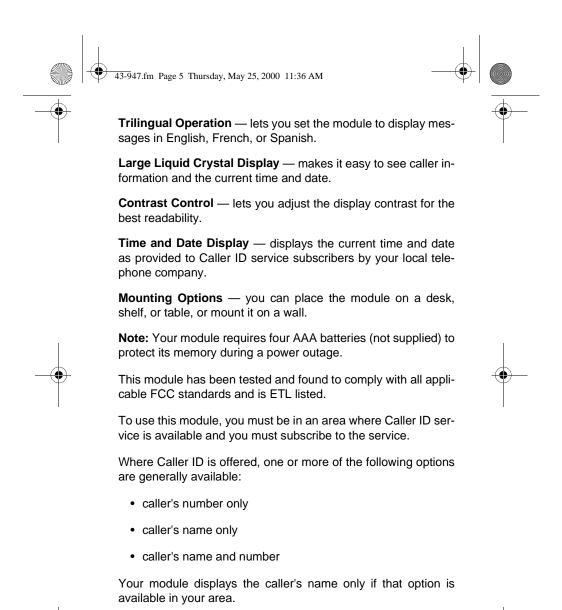







The actual number of Caller ID records your module will store depends on the amount of Caller ID information sent by the phone company.

#### **FCC INFORMATION**

This module has been tested and found to comply with all applicable FCC standards.

 
We have designed your module to conform to federal regulations, and you can connect it to most telephone lines. However, each module (and each device, such as a telephone or answering machine) that you connect to the telephone line draws power from the telephone line. We refer to this power draw as the device's ringer equivalence number, or REN. The REN is on the bottom of your module.

If you use more than one phone or other device on the line, add up all of the RENs. If the total is more than five (or three in rural areas), your telephones might not ring. If ringer operation is impaired, remove a device from the line.

Your module complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are on the bottom of the module.


Note: You must not connect your module to:

- · coin-operated systems
- · party-line systems
- · most electronic key telephone systems









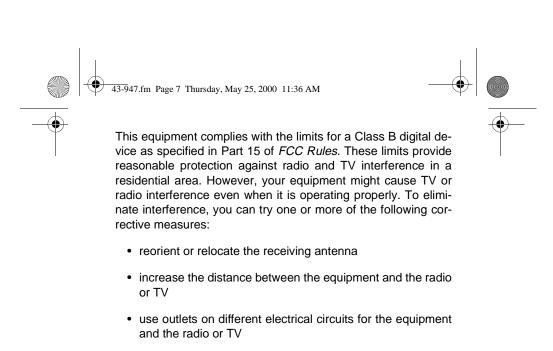



Consult your local RadioShack store if the problem still exists.

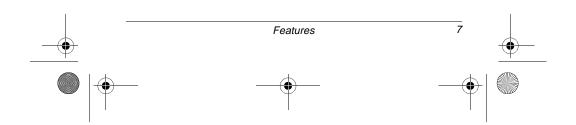

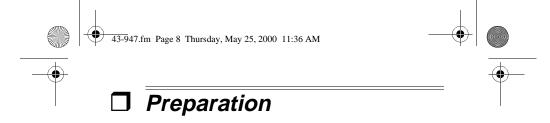

Your module's display is protected by a piece of plastic film dur-

# ing shipment. Peel off this film before you use the module.

**INSTALLING BATTERIES** 

 
Your module requires four AAA batteries (not supplied) to protect its memory during a power failure. For the best performance and longest life, we recommend RadioShack alkaline batteries.

#### Cautions:

 
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries or different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- When you replace the batteries, do not press any buttons on the module after you remove the old batteries. Doing so could erase all stored information.
- When replacing the batteries, have fresh ones on hand before you begin. If you do not install the new batteries within about 2 minutes after removing the old ones, you will lose all the information stored in the module.

Follow these steps to install batteries.

 If you are replacing batteries, unplug the module from the telephone line, the telephone, and AC power. Unplug both modular line cords from the back of the module.










2. Use a Phillips screwdriver to remove the screw from the battery compartment cover.



 
3. Slide the battery compartment cover in the direction of the arrow until it stops, then lift up the cover.



**Caution:** The battery compartment cover is attached to the module. Do not try to remove it completely.

 4. Place the batteries in the compartment, as indicated by the polarity symbols (+ and –) marked inside.







Close the cover and secure it with the screw. If you are replacing the batteries, reconnect the phone line, AC adapter, and the phone.


When **BATT** (battery) appears or the display dims, replace the batteries.

   **Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.












**Caution:** If you do not plan to use the module for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.


# CONNECTING THE AC ADAPTER

  The module uses the supplied 9V, 200-mA AC adapter for power.


#### Cautions:

You must use a Class 2 power source that supplies 9V DC and delivers at least 200 mA. Its plug must fit the module's 9V DC 200mA jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the module or the adapter.






  
To power the module, plug the adapter's barrel plug into **9V DC 200mA** on the back of the module. Then connect the other end of the adapter to a standard AC outlet.

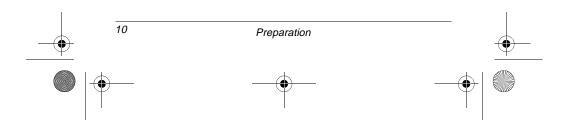













# **CONNECTING THE MODULE**


Your module connects to any modular phone jack and your phone. You can also connect it to an answering machine.

**Note:** The module might not work with older phones, such as Western Electric phones.
   
#### Connecting to a Single-Line Phone









3. Plug the other end of the cord into the phone's jack.


#### Connecting to a Two-Line Phone

 To record information about calls received on a two-line phone, you can connect two CID-947 modules using a triplex adapter. Each module only records information about calls received on the line to which it is connected.






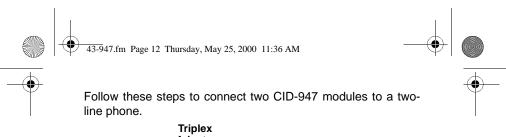


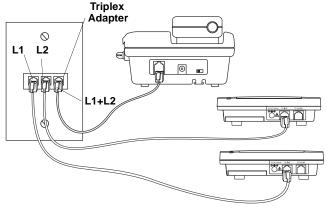



 - 1. Disconnect the telephone line cord from the modular phone jack (on the wall) and plug it into L1+L2 on the triplex adapter.
- 2. Plug the triplex adapter into the modular phone jack.
- 3. Plug one end of the supplied line cord into the **TO LINE** jack on one of the modules.
- 4. Plug the other end of the cord into either L1 or L2 on the triplex adapter.
- 5. Repeat Steps 3 and 4 to connect another module to the remaining open jack (L1 or L2) on the triplex adapter.




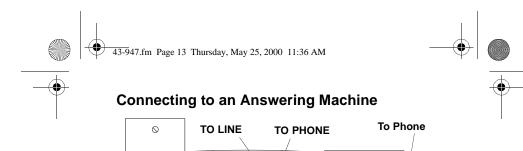


- 1. Disconnect the phone line cord that connects your answering machine to the phone line from the answering machine's jack. Then plug it into the module's **TO LINE** jack.
- 2. Plug one end of the supplied line cord into the module's **TO PHONE** jack.
- 3. Plug the cord's other end into the answering machine's jack.
- 4. Set your answering machine to answer after two or more rings. This gives the module time to record the call information that the phone company sends between the first and second rings.

# **MOUNTING THE MODULE**

  You can place the module directly on a desk, shelf, or table by itself or using the stand on the supplied mounting bracket. Or, you can use the bracket to mount the module on a wall.













# **Attaching the Mounting Bracket**

 

- 1. Align the slots on the bottom of the module with the hooks on the mounting bracket.
- 2. Gently push the module down on the bracket to secure it.

 If you are placing the module on a desk, shelf, or table, pull out the stand on the back of the bracket until it clicks.







# Mounting on a Wall


To mount the module on the wall, you need two screws (not supplied) with heads larger than the keyhole slots on the back of the mounting bracket.

   - 1. Using the keyhole slots in the supplied mounting bracket as a template, mark the mounting screw locations on the wall.
- 2. Drill a hole in the wall at each marked location.
- 3. Thread a screw through each hole, letting the head extend <sup>1</sup>/<sub>8</sub>-inch (3.5-mm) from the wall.












 - 4. Attach the mounting bracket to the module (see "Attaching the Mounting Bracket" on Page 14).
- 5. Route the phone line cords and AC adapter cord through the slots on the back of the bracket.





Align the keyhole slots on the bracket with the screws in the wall, then slide the module down onto the screws until it is secure.




# **ADJUSTING THE DISPLAY CONTRAST**

   
To lighten or darken the display, hold down **ERASE** and **REVIEW** ◀ until **CONTRAST ADJUST** appears. Repeatedly press **REVIEW** ▶ to increase the contrast.

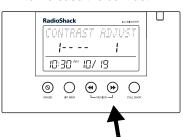











#### **CHOOSING A LANGUAGE**

Your module is programmed to display messages in English, but you can change it to display in French or Spanish.

 
- Hold down REVIEW ◀ and CALL BACK for about 3 seconds until the current language (ENGLISH, ESPANOL for Spanish, or FRANCAIS for French) appears.
- Repeatedly press REVIEW ▶► until the language you want appears, then press REVIEW ◄◄ to set the language you selected.

**Note:** If you do not press any button within about 10 seconds, the time (if set) appears.




#### **SETTING YOUR LOCAL AREA CODE**

- 1. Hold down REVIEW ◆ and REVIEW ▶▶ together until LOCAL AREA CODE appears.
- To change the area code's first digit, repeatedly press REVIEW ▶► until the desired digit appears, then press ERASE to confirm.
- 3. Repeat Step 2 to set the area code's second and third digit.
- To set the area code, do not press any button. Or, press REVIEW ◄ to set the module to its idle mode.





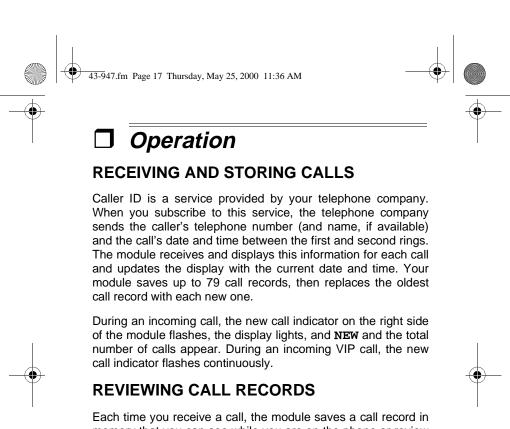

Each time you receive a call, the module saves a call record in memory that you can see while you are on the phone or review later.

Each call record includes the time and date of the call, the call number (the order in which the call is received), the caller's telephone number, and the caller's name (if available).

To scroll through the call records, repeatedly press (or hold down) REVIEW ◀ or REVIEW ▶ .


#### Notes:

 If no call information is stored, NO CALL appears when you press REVIEW 

or REVIEW 

.









- If you do not press a button within about 10 seconds, the module automatically returns to the time and date display.
- After you review all calls, **END OF LIST** appears. Simply press **REVIEW** ◀ or **REVIEW** ▶ to view again.

# **Displayed Call Information**

The module can display the following information.

Display (English, French, Spanish)	Description
REPT	Appears with a number if you have received a call from the same phone number more than once (between 2 and 9 times).
LONG DISTANCE LONGUE DISTANCE LARGA DISTANCIA	Appears along with <b>LDC</b> (long distance call) if your phone company sends information indicating that the incoming call is long distance.
-UNKNOWN NAME- -NOM INCONNU- NOM DESCONOCIDO	The incoming call is from a area that does not send Caller ID name information.
UNKNOWN NUMBER NUMERO INCONNU NUM DESCONOCIDO	The incoming call is from an area that does not send Caller ID number information.
UNKNOWN CALLER APPELER INCONNU DESCONOCIDO	The incoming call is from an area that does not send any Caller ID information.







 
















Display (English, French, Spanish)	Description
CALL 1	Appears when you received a call for the first time.
-BLOCKED NAME- -NOM BLOQUE- NOMBRE PRIVADO	The caller has blocked the Caller ID name information from being sent.
BLOCKED NUMBER -NUMERO BLOQUE- NUMERO PRIVADO	The caller has blocked the Caller ID number information from being sent.
BLOCKED CALL APPEL BLOQUE LLAMADA PRIVADA	The caller has blocked any Caller ID information from being sent.
-SERVICE ERROR- ERREUR DE LIGNE ERROR EN LINEA	Call information was distorted before reaching the module. Normal static on the telephone can cause this message. If it happens often, contact your phone company.
BATT	Appears when battery level is low.
-NO CALL- -PAS D APPEL- -NO LLAMADA-	No call information is stored in the module.
NEW NOUV NUEVO	The module has received incoming calls that have not been reviewed.
#NEW	The total number of received calls which have not been reviewed.





















l	Y	15 > 1711111 Tage 20	111aisaaj, 111aj 25, 2000	11.5011.11

Display (English, French, Spanish)	Description
TOTAL TOT. TOTAL	The total number of incoming calls (not including VIP calls).
-RECORD STORED- -MEMORISE- -MEMORIZADO-	The caller ID record is stored in VIP memory.
VIP	VIP memory is active.
-VIP MEMO FULL- -VIP PLEIN- -VIP LLENO-	Appears when the VIP number memory is full.
DELETE ALL? EFFACER TOUT? BORRAR TODO?	Delete all Caller ID records from memory except VIP records.
-NO DATA SENT- PAS DE DONNEES -NO ENVIADO-	Call information was not sent by the phone company.
M or MESSAGE WAITING M or MESSAGE M or MENSAJE	Appears when you have message waiting.
-END OF LIST- -FIN DE LISTE-	End of the list of stored Caller ID records.



20

-FIN DE LISTA-













0	J

Display (English, French, Spanish)	Description
DIALING COMPOSER MARCAR	The module is dialing a stored Caller ID record.
LOCAL AREA CODE INDICATIF PREFIJO	Appears when you set the area code.

# REDIALING FROM CALL RECORD MEMORY

You can redial a telephone number stored in the Caller ID's memory.

 
- Press REVIEW ◆ or REVIEW ▶▶ to view the desired call record.
- 2. Lift your phone's handset and check for a dial tone.
- Press CALL BACK to redial the telephone number. If the number to be redialed is out of your area code, dial 1 on your phone before pressing CALL BACK.

#### **DELETING CALLS**

# **Deleting a Single Call**

- Press ERASE. The module deletes that record and automatically renumbers the remaining call records. After 10 seconds, the time and date reappear.







 

















# **Deleting All Calls**


- 1. While the module displays the time and date, press REVIEW ◀◀ or REVIEW ▶▶ .
- 2. Hold down ERASE until DELETE ALL? appears.

While DELETE ALL? appears, press ERASE again. NO CALL appears. Or, to cancel the deletion, do not press any button. After about 5 seconds, **DELETE ALL?** disappears.


#### **VIP CALL LIST**

  Your system lets you save up to 20 call records in its VIP call list so they will not be deleted if you delete all calls from the system's memory. This lets you save a list of important callers.








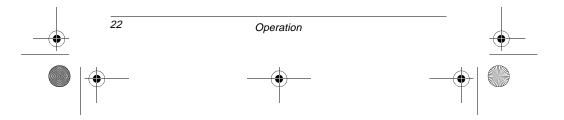





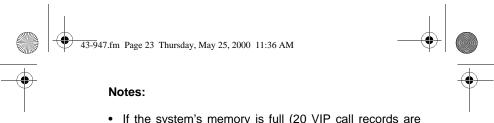



 If the system's memory is full (20 VIP call records are already stored), VIP MEMO FULL appears when you press VIP MEM. To store another VIP call record, you must first delete an existing one.


• If you save a call record as a VIP call record, the total number of call records decreases by 1.

To review VIP call records, press VIP MEM, then repeatedly press REVIEW ◀◀ or REVIEW ▶▶ .

  To delete a VIP call record, press **VIP MEM**, select the call record you want to delete, then press **ERASE**.



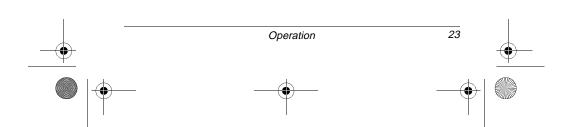





If your system is not working as it should, these suggestions might help you eliminate the problem.


Problem	Solution
Blank screen	The module is not receiving power.  Make sure the batteries are installed and the AC adapter is plugged in.
	Adjust the contrast as described in "Adjusting the Display Contrast" on Page 15.
You have an incoming call, but do not receive any Caller ID information.	You answered the call before the module received the call information. Wait until your phone rings at least 2 times before answering a call.
No dial tone on the phone attached to the module.	Check all wires and cables to make sure that all connections are secure.
	Check your phone line by discon- necting the module then reconnect- ing the phone and checking for a dial tone.

  If you see a message that you do not understand, see "Displayed Call Information" on Page 18.



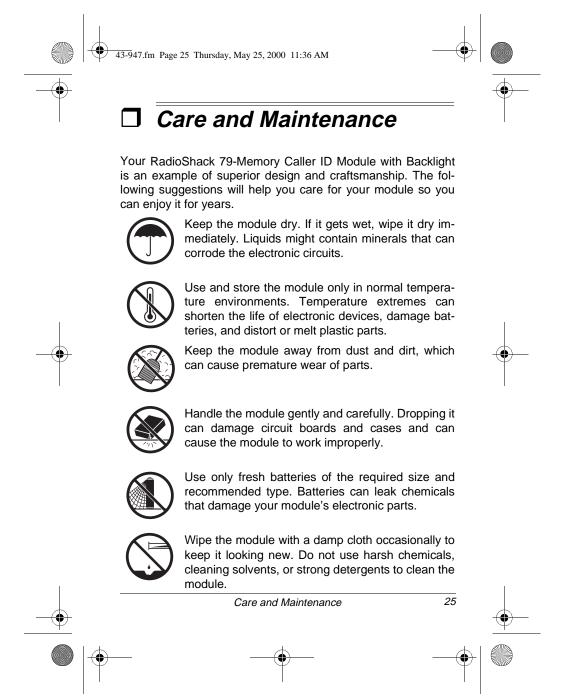






Modifying or tampering with the module's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your module is not performing as it should, take it to your local RadioShack store for assistance. If the trouble is affecting the telephone lines, the phone company can ask you to disconnect your module until you have resolved the problem.

#### THE FCC WANTS YOU TO KNOW

 In the unlikely event that your module causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.





# LIGHTNING

Your module has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your module.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your module when storms approach to reduce the possibility of damage.





Care and Maintenance








 


 




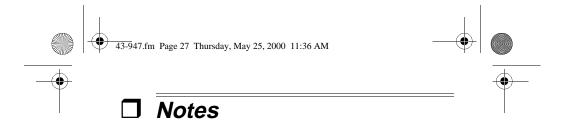







#### **Limited One-Year Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BRACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

tions or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99



RadioShack — A Division of Tandy Corporation Fort Worth, Texas 76102

43-947 04A00 Printed in China











Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com