



# Compact AM/FM Clock Radio



**Owner's Manual**  
Please read before using this equipment.

---

---

## **Features**

Your RadioShack AM/FM Alarm Clock Radio is easy to use and has these features:

**Compact Size** — lets you place the clock radio just about anywhere.



**6-Inch Red Digital Display** — makes the clock easy to read.

**Battery Backup with Battery Sentinel** — maintains the clock and alarm operation during a power failure and lets you know when to replace the battery.

**Snooze** — lets you temporarily silence the alarm or radio for about 9 minutes.

**Sleep Timer** — lets you program the radio to play for up to 1 hour and 59 minutes before it automatically turns off.

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICE-ABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

The graphical symbols with supplemental markings are located on the bottom of the product.

*Features*

3

## **Preparation**

### **CONNECTING TO AC POWER**

Plug the clock radio's power cord into a standard AC outlet. As soon as you connect AC power, the display turns on and BATTERY SENTINEL on the front of the clock radio lights.

**Caution:** The clock radio's AC power cord is equipped with a polarized plug to prevent electric shock. One blade on the cord's plug is wider than the other and the plug only fits an outlet one way. If you cannot easily insert the plug, turn it over and try again. Do not force it.

### **INSTALLING A BACKUP BATTERY**

To keep the clock running for up to 8 hours and the alarm sounding for up to 10 minutes during an AC power failure, install a 9-volt battery (not supplied) in the battery compartment. For the longest life, we recommend a RadioShack alkaline battery.

**Caution:** Use only a fresh battery of the required size and recommended type.

#### **Notes:**

- BATTERY SENTINEL on the front of the clock radio lights if there is either no battery installed or the installed battery requires replacement.
- To prevent unnecessary drain on the battery, plug in the AC power cord then install the battery.

1. While holding back the tab on the battery compartment cover, pull up the cover to remove it.
2. Snap the battery onto the connector in the compartment and place the battery in the compartment. BATTERY SENTINEL turns off.
3. Replace the cover.

When BATTERY SENTINEL lights, check or replace the back-up battery. When you connect a new battery, BATTERY SENTINEL turns off.

**Warning:** Always dispose of an old battery promptly and properly. Do not burn or bury it.

**Caution:** Always remove an old or weak battery. Batteries can leak chemicals that can destroy electronic parts.

**Notes:**

- The display does not light when the clock radio is operating only on battery power.
- A prolonged power failure can drain the battery. If the display flashes after an AC power failure, the battery is too low to run the clock. Replace the battery and reset the clock.

---

---

## ***A Quick Look at Your Clock Radio***

*(illus - show front and right side of the clock radio)*

## **Operation**

### **SETTING THE TIME**

1. To set the hour, hold down **TIME** then repeatedly press (or hold down) **HOUR** until the desired hour appears. PM lights to indicate a PM hour.
2. To set the minute, hold down **TIME** then repeatedly press (or hold down) **MINUTE** until the desired minute appears.

### **SETTING THE ALARM TIME**

1. Slide **ALARM/AUTO/OFF/ON** to **OFF**.
2. Hold down **ALARM** and repeatedly press (or hold down) **HOUR** until the display shows the desired alarm hour setting. PM lights to indicate a PM hour.
3. Hold down **ALARM** and repeatedly press (or hold down) **MINUTE** until the display shows the desired alarm minute setting.
4. To confirm the alarm time, press **ALARM**.
5. Rotate **VOLUME** to set the desired alarm sound level (buzzer alarm or radio).

### **USING THE ALARM**

To have the buzzer sound or the radio turn on at the preset alarm time, slide **ALARM/AUTO/ON/OFF** to **ALARM** for a buzzer alarm or to **AUTO** to have the radio play as the alarm. At the pre-

set time, the alarm sounds or the radio turns on for up to 1 hour, 59 minutes then automatically turns off.

To turn off the alarm, slide **ALARM/AUTO/ON/OFF** to **OFF**. To resume the alarm, slide **ALARM/AUTO/OFF/ON** back to **ALARM** (for buzzer) or **AUTO** (for radio).

### USING SNOOZE

To temporarily silence the alarm for about 9 minutes, press **SNOOZE**. You can repeat this cycle as many times as you like. To turn off the alarm so it does not sound again, slide **ALARM/AUTO/OFF/ON** to **OFF**.

### USING THE SLEEP TIMER

You can set the radio to play for up to 1 hour and 59 minutes then automatically turn off.

1. Slide **ALARM/AUTO/OFF/ON** to **OFF**, **AUTO**, or **ALARM**.
2. Press **SLEEP**, **0 : 59** appears on the display. To select the desired sleep time, hold down **SLEEP**, then press (or hold down) **MINUTE** or **HOUR**. Release **SLEEP** when you reach the desired play time.
3. To turn off the radio before it automatically turns off, press **SNOOZE**.

**Note:** If you press **SLEEP** again, the sleep time is reset to 0:59.

### PLAYING THE RADIO

1. Rotate **VOLUME** toward **Min.** to turn down the volume.

 

 




2. To turn on the radio, slide **ALARM/AUTO/OFF/ON** to **ON**.
3. Slide **BAND** to **FM** or **AM** then rotate **VOLUME** to a comfortable listening level.
4. Rotate **TUNING**. A pointer indicates the station's frequency on the dial.

**Note:** The AM antenna is built-in. Rotate the clock radio for the best AM reception. The AC power cord also serves as the FM antenna. For the best FM reception, fully extend the AC power cord.

5. To turn off the radio, slide **ALARM/AUTO/OFF/ON** to **OFF**.

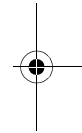

---

---

## **Care**

To enjoy your RadioShack AM/FM Alarm Clock Radio for a long time:

- Keep the clock radio dry. If it gets wet, wipe it dry immediately.
- Use and store the clock radio only in normal temperature environments.
- Handle the clock radio gently and carefully. Do not drop it.
- Keep the clock radio away from dust and dirt.
- Wipe the clock radio with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the clock radio's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your clock radio is not performing as it should, take it to your local RadioShack store for assistance.

### **THE FCC WANTS YOU TO KNOW**

Your clock radio might cause TV or radio interference even when it is operating properly. To determine whether your clock radio is causing the interference, turn off your clock radio. If the interference goes away, your clock radio is causing it. Try to eliminate the interference by:

- moving your clock radio away from the receiver

- connecting your clock radio to an outlet that is on a different electrical circuit from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your clock radio.

---

---

## **Specifications**

**Bands:**

AM ..... 530–1710 kHz

FM ..... 88–108 MHz

Power Output (at 10% THD) ..... 280 mW

**Power Sources:**

Clock/Radio ..... 120V AC

Battery Backup ..... 9V DC

Dimensions (HWD) ..... 2.2 × 7 × 4.5 in.  
(57 × 180 × 115 mm)

Weight (without batteries) ..... 1 lb 1 oz  
(480 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX  
76102

*We Service What We Sell*

12/99

RadioShack — A Division of  
Tandy Corporation  
Fort Worth, Texas 76102

12-1630  
03A00  
Printed in the Philippines

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>