



USER'S GUIDE —

Please read before using this equipment.

43-3595

CONTENTS

Introduction ..... 2

Important Information ..... 3

    FCC Statement ..... 3

    Surge Protection ..... 4

Important Safety Instructions ..... 5

Important Caller ID Information ..... 6

Installation ..... 7

    Selecting a Location ..... 7

    On a Desktop ..... 8

    Installing the Charging Cradle ..... 8

    On a Wall Plate or Wall ..... 8

    Connecting/Charging the Battery Pack ..... 9

    Before Using, Register Extra Handset to the Main Base Unit ..... 11

    When to Re-register Handsets ..... 12

    Call Transfer Feature ..... 13

Operation ..... 14

    Making and Receiving Calls ..... 14

    Adjusting the Handset Ringer and Earpiece Volume ..... 15

    Redial ..... 16

    Tone Dialing Switch-over ..... 16

    Traveling Out of Range ..... 16

    Selecting a Different Channel ..... 16

    Page ..... 17

    Flash and Call Waiting ..... 17

    Setting Menu Options ..... 17

Memory Dialing ..... 19

    Storing Phone Numbers and Names ..... 19

    Steps for Entering Names and Special Characters ..... 22

    Making Calls with Memory Dialing ..... 23

    Chain Dialing ..... 24

    Editing a Stored Name and/or Phone Number ..... 24

    Erasing a Stored Name and Phone Number ..... 25

    Testing Stored Emergency Numbers ..... 26

    One-touch Speed Dial ..... 26

    Storing and Editing the Speed Dial ..... 27

    Making Calls with the Speed Dial ..... 27

    Deleting the Speed Dial ..... 27

Caller ID ..... 28

    When the Telephone Rings ..... 28

    Viewing the Caller ID Message List ..... 29

    Deleting Information from the Caller ID List ..... 29

    Using the Caller ID List ..... 31

    Changing the Digital Security Code ..... 32

Additional Information ..... 33

    Installing the Optional Beltclip ..... 33

    Headset Installation ..... 33

Troubleshooting ..... 34

Care ..... 36

Service and Repair ..... 36


**Two Cordless Handsets** — allow greater convenience in placement of handsets.

**Ten-Number Memory Dialing** — lets you store up to ten numbers in memory on each handset for easy dialing. (See “Memory Dialing” on page 19.)

**Ample Talk and Standby Time** — the supplied battery (when fully charged) provides about 7 hours of talk time or 10 days of standby time.

**Headset Jack** — lets you connect an optional headset for hands-free convenience. (See “Headset Installation” on page 33.)

**Auto Talk** — lets you set the phone to answer a call by simply lifting the handset from the cradle.

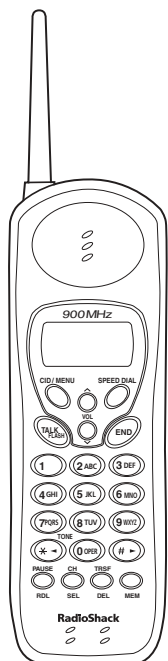

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

- Warning
- Caution

- Important
- Hint

- Note

## INTRODUCTION

Thank you for purchasing a RadioShack 900 MHz Cordless Telephone. Your phone uses advanced technology to give you superior audio quality and extended range. The phone's Caller ID unit records each caller's telephone number (and name, if available in your area) and the date and time of the call, as provided by your local phone company to Caller ID service subscribers. If you subscribe to Call Waiting with Caller ID, the phone shows you the incoming caller information, even when you are already talking on the phone.

Cordless phones require AC power to operate. When the power is off, you cannot make or receive calls by using your phone. You should also have a phone that does not need AC power to operate (not a cordless phone), so you can still make and receive calls if there is an AC power failure. !

### **! IMPORTANT !**

- When AC power is lost, the phone loses the digital security code connection between the base and the handset. When power is restored, put both handsets on the main base to re-register to the main base.
- Your phone operates on standard radio frequencies as allocated by the FCC.
- It is possible for other radio units operating nearby on similar frequencies to unintentionally intercept your conversation or cause interference. This possible lack of privacy can occur with any cordless phone.

# IMPORTANT INFORMATION

This telephone has been tested and found to comply with all applicable UL and FCC standards.

## FCC STATEMENT

Your telephone complies with Part 68 of the FCC Rules. Upon request, you must provide the phone's FCC registration number and REN to your phone company. These numbers are on the base unit.

Your phone is not intended to be used with party-line systems. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission, or corporation commission for information. ☑

We have designed your phone to conform to federal regulations, and you can connect it to most telephone lines. However, each phone (and each device, such as a telephone or answering machine) that you connect to the telephone line draws power from the telephone line. We refer to this power draw as the device's ringer equivalence number, or REN on the back of your phone.

If you use more than one phone or other device on the line, add up all of the RENs. If the total is more than five (three in rural areas), your telephones might not ring. If ringer operation is impaired, remove a device from the line.

In the unlikely event that your phone causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

### ☑ NOTE ☑

You must not connect your phone to:

- coin-operated systems
- most electronic key telephone systems

Also, the phone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this phone. The telephone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your telephone service.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

## **SURGE PROTECTION**

Your telephone has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your telephone.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your phone when storms approach to reduce the possibility of damage.

# IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

## SAVE THESE INSTRUCTIONS

## **IMPORTANT CALLER ID INFORMATION**

To use Caller ID and Call Waiting, you must be in an area where those services are available and you must subscribe to those services through your local phone company. Where Caller ID is offered, one or more options are generally available:


- caller's number only
- caller's name only
- caller's name and number

If you subscribe to Call Waiting and Caller ID, the system can show you incoming caller information, even when you are already talking on the phone.

# INSTALLATION


Before using your phone, carefully peel the protective film off the display. The film protects the handset window during shipment and is not necessary for use.

## SELECTING A LOCATION

You can place the phone cradles on a desk or table, or mount the base on a standard wall plate or directly on a wall. Select a location that is 

- near an accessible AC outlet
- near a telephone line jack
- out of the way of normal activities
- away from electrical machinery, electrical appliances, metal walls or filing cabinets, wireless intercoms, alarms, and room monitors
- away from other cordless phones

The location of the base affects the range of the handset. If you have a choice of several locations, try each to see which provides the best performance.

Your telephone connects directly to a modular telephone line jack. If your telephone wiring does not have a modular jack, you can update the wiring yourself using jacks and adapters, available at your local RadioShack store, or have the telephone company update the wiring for you. You must use compatible modular jacks that are compliant with Part 68 of *FCC Rules*. 

### **NOTES**

- If your home has specially wired alarm equipment connected to the telephone line, be sure that installing the system does not disable your alarm equipment. If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.
- The USOC number of the jack to be installed is RJ11C (or RJ11W for a wall plate jack).



## CAUTION



You must use a Class 2 power source that supplies

9V DC and delivers at least 210 mA. Its center tip must be set to positive and its plug must fit the phone's **DC IN 9V** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the phone or the adapter.


## ON A DESKTOP

1. Plug one end of the supplied long modular cord into the **TEL LINE** jack on the bottom of the base.
2. Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack on the bottom of the base and route the adapter's cord through the strain relief slot on the base.
3. Plug the other end of the modular cord into a modular phone line jack.
4. Plug the adapter into a standard AC outlet.

## INSTALLING THE CHARGING CRADLE

1. Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack on the back of the charger.
2. Route the cord through the strain relief slot and plug the adapter into a standard AC outlet.

DC IN 9V

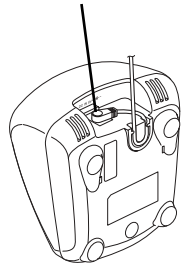


## ON A WALL PLATE OR WALL

To mount the main base directly on a wall, you need two screws (not supplied) with heads that fit into the keyhole slots on the base. Drill two holes  $3^{15}/_{16}$  inches apart. Thread a screw into each hole, letting the heads extend about  $1/8$  inch.



1. Plug one end of the supplied short modular cord into the **TEL LINE** jack on the bottom of the base.
2. Plug the supplied AC adapter's barrel plug into the **DC IN 9V** jack.
3. Route the adapter and modular cords through the grooves on the back of the base.
4. Plug the adapter into a standard AC outlet. And plug the other end of the modular cord into a modular phone line jack.
5. For a wall plate, align the keyhole slots on the bottom of the base with the wall plate studs and slide the base downward to secure it.

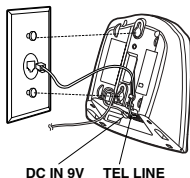

For direct wall mounting, align the base's keyhole slots with the mounting screws and slide the base downward to secure it.

## CONNECTING/CHARGING THE BATTERY PACK

The phone comes with a rechargeable nickel-cadmium battery pack in the handset, but not connected. Before using your phone, you must connect the battery pack. Then charge it for about 15–20 hours. !

1. Press down and slide the battery compartment cover off of the handset.
2. Lift the battery pack out of the compartment.

### ! IMPORTANT !

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.



## ! IMPORTANT !

Be sure the battery pack is properly connected before you try to charge it. The **CHARGE/IN USE** or **CHARGE** indicator illuminates when the handset is on the cradle, even if the battery pack is not connected.

### NOTES

- If the phone does not work, recharge the battery pack. (The battery power might be too low for the display to operate.)
- If the battery pack becomes weak during a call, the handset beeps and **Low Battery** flashes. When this happens, you cannot make a call on the phone until you recharge the battery pack.
- If the battery pack is completely discharged or the base loses power while the handset is away from it, place both handsets on the main base to re-register to the main base.

3. Plug the battery pack's connector into the socket in the compartment (the connector fits only one way). Place the battery pack in the compartment.
4. Replace the cover.

To charge the battery pack, place each handset on the base or charging cradle. The **CHARGE/IN USE** and **CHARGE** indicators on the cradles should light up. !

Recharge the battery pack when **Low Battery** flashes on the display.

When you first use the phone after charging or recharging the battery pack, the phone might not work and you might hear error beeps. If this happens, place both handsets on the main base.

Using a damp cloth, clean the charging contacts on the handsets and cradles about once a month.

About once a month, fully discharge the battery packs by keeping the handsets off the cradles until **Low Battery** flashes on each handset display. Otherwise, the battery pack loses its ability to fully recharge.

The supplied battery pack should last about a year. If the battery pack does not hold a charge for more than two hours after an overnight charge, replace it with a new 3.6V, 600 mAh battery pack with a connector that fits the socket in the battery compartment. You can order a replacement battery pack through your local RadioShack store (or online at [www.RadioShack.com](http://www.RadioShack.com)). Install the new battery pack and charge it for about 24 hours.

If you have trouble replacing the battery pack, take the phone to your local RadioShack for assistance. ⚠

## BEFORE USING, REGISTER EXTRA HANDSET TO THE MAIN BASE UNIT

When the dual handsets are removed from the packaging, the handset that is placed in the main base unit first (to charge the battery for 15-20 hours), will automatically be registered to the main base unit. (It does not matter which handset you choose to place in the main base unit first). ✓

You will also need to register the extra handset by placing it on the main base. The extra handset **WILL NOT** operate properly until the registration has been completed. Once the handset is registered, it is ready for use.

Follow these simple steps to register:

1. First, install the battery packs in both handsets. Place either handset in the main base cradle, then place the extra handset in the extra charging cradle. Charge both handsets for 15-20 hours.

### ⚠ WARNING ⚠

Dispose of the old battery pack promptly and properly. Do not burn or bury it. There is a risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

### ✓ NOTES ✓

- When you charge the handset, the Caller ID summary screen and the name of the handset, **HS1** appears. If **HS2** appears, you are charging handset No.2.
- The smaller cradle is simply an extracharging device for either handset.

2. After fully charging both batteries, remove the handset in the extra charging cradle and place it on the main base cradle. The LED light on the main base will begin to flash, indicating that the registration is taking place between the extra handset and the main base.
3. Wait for at least five seconds before removing the handset from the main base.

Congratulations, the registration has been completed and your dual handset cordless phone is ready for use!

## WHEN TO RE-REGISTER HANDSETS

1. You'll need to re-register the extra handset (follow steps "Before Using, Register Extra Handset to the Main Base Unit" on page 11) each time the digital security code is changed. Refer to "Changing the Digital Security Code" on page 32 for details regarding the Digital Security Code. ✓
2. When there is a power failure for more than one hour, (e.g. due to electrical storm or if the unit is unplugged during a move), both handsets will need to be re-registered. To re-register, follow the registration process on "Before Using, Register Extra Handset to the Main Base Unit" on page 11.

### NOTES

- If the extra handset's battery becomes very low, the handset must be recharged for 15-20 hours and re-registered to the main base unit.
- Make sure to return the handsets to the cradles after each phone call.

## CALL TRANSFER FEATURE

Conveniently, your cordless phone allows you to transfer outside calls from handset to handset simply by pressing **TRSF/DEL**.

Conversations will not be interrupted; only one handset at a time can talk with an outside caller. The second handset cannot go off hook to listen to conversations or make an outgoing call while the other handset is in use.

### To transfer a call (to the second handset)

1. Press **TRSF/DEL** during a call. The call will automatically be placed on hold and the transfer tone sounds. ✓
2. When the other handset receives the call, the transfer tone stops. To cancel the transfer, press **TRSF/DEL** or **TALK/FLASH** on the handset.

### To receive a transferred call (from the second handset)

Pick up the handset (when Auto Talk is set to On), or pick up the handset and press **TALK/FLASH** to answer the transferred call.

Additionally, you can answer the transferred call by pressing any number key, **\*/-/ TONE**, or **#/>** (when Auto Talk is set to On).

#### NOTE


If you transfer the call and it is not picked up after five minutes, the call will be disconnected.

# OPERATION

## MAKING AND RECEIVING CALLS

### NOTE

Refer to page 17 “Setting Menu Options” to turn On the Auto Talk feature if desired.

Action	Handset On Cradle	Handset Off Cradle
To answer a call	<ul style="list-style-type: none"><li>• Auto Talk On  Pick up the handset.</li><li>• Auto Talk Off Pick up the handset and press <b>TALK/FLASH</b>.</li></ul>	<ul style="list-style-type: none"><li>• Auto Talk On Press <b>TALK/FLASH</b>, any number, * / - / <b>-tone</b> or # / &gt; .</li><li>• Auto Talk Off Press <b>TALK/FLASH</b>.</li></ul>
To make a call	<ol style="list-style-type: none"><li>1) Pick up the handset.</li><li>2) Press <b>TALK/FLASH</b>.</li><li>3) Listen for the dial tone.</li><li>4) Dial the number.</li></ol> OR <ol style="list-style-type: none"><li>1) Pick up the handset.</li><li>2) Dial the number.</li><li>3) Press <b>TALK/FLASH</b>.</li></ol>	<ol style="list-style-type: none"><li>1) Press <b>TALK/FLASH</b>.</li><li>2) Listen for the dial tone.</li><li>3) Dial the number.</li></ol> OR <ol style="list-style-type: none"><li>1) Dial the number.</li><li>2) Press <b>TALK/FLASH</b>.</li></ol>
To hang up	Press <b>END</b> or return the handset to either cradle (Auto Standby).	


Action	Handset On Cradle	Handset Off Cradle
To redial	1) Pick up the handset. 2) Press <b>TALK/FLASH</b> . 3) Listen for the dial tone. 4) Press <b>PAUSE/RDL</b> . OR 1) Pick up the handset. 2) Press <b>PAUSE/RDL</b> . 3) Press <b>TALK/FLASH</b> .	1) Press <b>TALK/FLASH</b> . 2) Listen for the dial tone. 3) Press <b>PAUSE/RDL</b> . OR 1) Press <b>PAUSE/RDL</b> . 2) Press <b>TALK/FLASH</b> .

## ADJUSTING THE HANDSET RINGER AND EARPIECE VOLUME

### Handset Ringer Tone and Volume

Press the volume up key or volume down key (labeled as, **VOL/ ^** or **VOL/ v** keys) in standby mode to select one of five ringer tones and volume combinations. **Ring Type A High, Ring Type A Low, Ring Type B High, Ring Type B Low, or Ringer Off.**

### Earpiece Volume

Press the volume up key or volume down key (labeled as, **VOL/ ^** or **VOL/ v** keys) during a call to change the earpiece volume of the handset. This setting will remain in effect after the telephone call has ended. 

#### **NOTE**

When you press volume up key (**VOL/ ^**) in Maximum mode or volume down key (**VOL/ v**) in Low mode, an error tone sounds.

## Temporarily Mute Ringer

If the handset is off the cradle, simply press **END** to temporarily mute the incoming ring. The ringer will sound with the next incoming call.

## REDIAL

**PAUSE/RDL** redials the last number dialed. The redialed number can be up to 32 digits long.

## TONE DIALING SWITCH-OVER

Some telephone companies use equipment that requires pulse dialing (sometimes referred to as rotary dialing).

If you need to enter tone dialing digits, you can switch-over to tone dialing during the call. For example, entering your bank account number after you have called your bank. ☑

Initially make your call with the pulse dialing mode. Once your call connects, press **\* / - / TONE**. Enter the desired number. These digits will be sent as tone dialing. Once the call ends, the tone mode is canceled and pulse dialing mode resumes.

## TRAVELING OUT OF RANGE

During a call, as you begin to move your handset too far from your base unit, noise increases. If you pass the range limits of the base unit, your call will terminate within one minute.

## SELECTING A DIFFERENT CHANNEL

If you encounter interference while using your phone, you can manually change the

### ☑ NOTES ☑

- The tone feature only applies when the dial mode is set to pulse.
- This special number can be stored in a memory location. This is referred to as Chain Dialing (See “Chain Dialing” on page 24.)



channel for clear operation. This function works only when the phone is in use. Press **CH/SEL. Scanning** appears on the display, indicating the phone is changing to another channel.

## PAGE

To locate the handset (while it's off the base), press **PAGE** on the base. The handsets beep for 60 seconds. Paging is canceled when you press **PAGE** on the base or any key on either handset. ✓

## FLASH AND CALL WAITING

If you have "Call Waiting" service and a call waiting tone sounds while you are on a call, press **TALK/FLASH** to accept the waiting call. There is a short pause before you hear the new caller. To return to the original caller, press **TALK/FLASH** again. ✓

## SETTING MENU OPTIONS

There are four setup options available. They are Auto Talk, CIDCW (Caller ID on Call Waiting), Area Code, and Dial.

Auto Talk allows you to answer the phone without pressing **TALK/FLASH**.

If the phone rings when Auto Talk is On, simply remove the handset from the cradle and the phone automatically answers the call. If the phone rings when Auto Talk is Off, you must press **TALK/FLASH** to answer the call. ✓

## Changing the Auto Talk and CIDCW

1. Press and hold **CID/MENU**.
2. Use **VOL/ ^** or **VOL/ ~** keys to move the pointer to the selection that you would

## NOTES

### Page

Paging is also canceled when the phone receives an incoming call.

### Flash and Call Waiting

You must subscribe through your local telephone company to receive Call Waiting Service.

### Setting Menu Options

- The Cordless phone features include **Auto Talk** and **Auto Standby**. Auto Standby allows you to hang up by simply returning the handset to the cradle.
- Auto Talk and Area Code settings can be also changed from handset 2. Only two settings (**Auto Talk** and **Area Code**) appear on the display. CIDCW On/Off setting can be changed from handset 1. To confirm which handset is HS1, look at the display indicating **HS1** or **HS2** when the handset is on the cradle.

 **NOTE** 


When the area code has already been stored in memory, the stored area code will be displayed. To change it, use the **TRSF/DEL** and number keys to enter the new area code. Then press **CH/SEL**. A confirmation tone sounds. To complete the setting, press **END** or return the handset to the base unit.

like to change. Press **CH/SEL** to toggle between **On** and **Off** for Auto Talk and CIDCW.

3. Press **END** and return the handset to the base unit to complete the setting. The handset returns to the standby mode.

## Entering Your Area Code

If you enter a three-digit area code number in the Area Code option, your local area code does not appear in Caller ID messages. Do not program this option if your calling area requires ten-digit dialing. When reviewing Caller ID messages, you will see only the local seven digit number. For calls received from outside your local area code, you will see a full ten-digit number.

1. When the phone is in the standby mode, press and hold **CID/MENU**. The Caller ID setting screen appears.
2. Press **VOL/∨** key twice to select **Area Code**.
3. Press **CH/SEL**. 
4. Use the number keys (0 - 9), or **TRSF/DEL** to enter the three-digit area code.
5. Press **CH/SEL**. A confirmation tone sounds and the displayed area code is entered.
6. Press **END** or return the handset to the base unit to complete the setting. The handset returns to the standby mode.

## Choosing the Dialing Mode

Most phone systems use tone dialing which sends DTMF tones through the phone lines. However some phone systems still use pulse dialing such as in rural areas. ☞

The default setting is tone dialing. Depending on your dialing system, set the mode as follows:

1. When the phone is in the standby mode, press and hold **CID/MENU**.
2. Press **VOL/∨** key three times to select **Dial**.
3. Press **CH/SEL** to toggle between **Tone** and **Pulse** for each setting.
4. Press **END** and return the handset to the base unit to complete the setting. The handset returns to the standby mode.
  - If you are not sure of your dialing system, set for tone dialing. Make a trial call. If the call connects, leave the setting as is, otherwise set for pulse dialing.
  - If your phone system requires pulse dialing and you need to send the DTMF tones for certain situations during a call, you may “switch-over” to tone dialing. (Refer to “Tone Dialing Switch-over” on page 16.)

## MEMORY DIALING

### STORING PHONE NUMBERS AND NAMES

Memory Dialing allows you to dial a number using just a few key presses. Your cordless

#### NOTE

Dialing mode can only be changed from handset 1 (HS1).

To confirm which handset is HS1, look at the display indicating **HS1** or **HS2**.

**NOTE**

In memory dialing operation, you must press a key within 30 seconds or the phone will return to the standby mode. If you return the handset to the cradle, the phone will return to the standby mode also.

telephone stores up to ten names/numbers in each handset.

1. Press and hold **MEM**, **Memory Store** is displayed.
2. Press **VOL/ ^** or **VOL/ v** keys, or enter a number (**0 - 9**) to select the memory location where you would like to store the number.
3. Press **CH/SEL**. A cursor flashes indicating that the display is ready for the name to be entered.

If **Edit Memory** appears, the selected memory location is already stored. Then you must either edit the entry in this location, delete the entry in this location, or select **Go Back** to choose another location.

4. To enter a name (up to 14 characters), use the number keys.
  - See “Steps for Entering Names and Special Characters” on page 22.
  - Use **#/ >** and **\*/ </TONE** to move the cursor to the desired location.
  - Use **TRSF/DEL** to delete characters as needed.
  - Press and hold **TRSF/DEL** to delete all the characters.
  - If a name is not required, go to step 5.
5. Press **CH/SEL**. **Store Number** is displayed.

The cursor flashes indicating that the display is ready for the number to be entered.

6. Use the number keys to enter the phone number.
  - The phone number cannot exceed 20 digits.
  - Use **PAUSE/RDL** to enter a pause in the dialing sequence. The display shows a **P**. Each pause counts as one digit and represents a two second delay of time between the digits. ☑
  - Use **TRSF/DEL** to delete digits as needed.
7. Press **CH/SEL**. You will hear a confirmation tone. Memory storage is complete. For example, if you store a name and number into memory location number 1, the display shows **Memory 1 Stored**.

After about two seconds, **Memory Store** is displayed.

Repeat steps 2 - 7 to store more numbers.

8. Press **END** to return to the standby mode.

☑ **NOTE** ☑

The pause feature is useful for long distance calling, credit card dialing, or sequences that require a pause between digits.


## STEPS FOR ENTERING NAMES AND SPECIAL CHARACTERS

Refer to the letters on the number keys to select the desired characters.

With each press of a numeric key, the displayed character appears in the following order: Upper case letters first, lower case letters next and finally the number corresponding to the key.

keys	Number of times key is pressed								
	1	2	3	4	5	6	7	8	9
1	1								
2abc	A	B	C	a	b	c	2		
3def	D	E	F	d	e	f	3		
4ghi	G	H	I	g	h	i	4		
5jkl	J	K	L	j	k	l	5		
6mno	M	N	O	m	n	o	6		
7pqrs	P	Q	R	p	q	r	s	7	
8tuvw	T	U	V	t	u	v	8		
9xyz	X	Y	Z	x	y	z	9		
0**	*	#	-	&	<	>	(blank)	0	

For example, to enter Movies.

1. Pick up the handset. Press and hold **MEM**.
2. Enter a number or press **VOL/ ^** or **VOL/ v** keys to select a memory location.
3. Press **CH/SEL**. (When there is information already stored in the selected memory location, **Edit Memory** is displayed. See "Editing a Stored Name and/or Phone Number" on page 24 for information.)
4. Press 6. Then press **#/▶** to move the cursor to the right. 
5. Press 6 six times.
6. Press 8 six times.
7. Press 4 six times.
8. Press 3 five times.

### NOTE

If the next character uses the same number key, you must press **#/▶** to move the cursor over. Otherwise the next time you press the number key, it changes the character that was previously set.

9. Press 7 eight times.
10. When finished, press **CH/SEL**.

To continue to store the telephone number, proceed to step 6 on “Storing Phone Numbers and Names” on page 21.

### **If you make a mistake while entering a name**

Use **\*/-/TONE** or **#/▷** to move the cursor to the incorrect character.

Press **TRSF/DEL** to erase the wrong character. Then enter the correct character.

To delete all characters, press and hold **TRSF/DEL**.

## **MAKING CALLS WITH MEMORY DIALING**

### **Memory Dialing from Standby Mode**

1. Press **MEM**. The handset displays your programmed memory locations.
2. Press **VOL/∧** or **VOL/∨** keys, or enter the number (0 - 9) to select the memory location you would like to dial.
3. Press **TALK/FLASH**. **Talk** and the volume setting appear on the display. Then the displayed number is dialed. ✓

### **Memory Dialing from Talk Mode**

1. Press **TALK/FLASH**. **Connecting** appears.
2. After the display changes from **Connecting** to **Talk**, press **MEM**.

#### **NOTE**

If you press **CH/SEL** before **TALK/FLASH**, you can confirm the name and the number stored in the selected memory location.

## NOTES

- To exit the memory function without dialing, press **END**. The handset returns to the standby mode.
- Whenever you are using a memory menu screen, you must press a key within 30 seconds or the phone will return to the standby mode.
- If you select a memory location that does not have a stored number, the phone will not dial.

3. Enter a number (**0 - 9**) to select the memory location of the desired phone number. The selected phone number is displayed and dialed.
4. To hang up, press **END**.

## CHAIN DIALING

The memory locations on the handset are not limited to phone numbers. You can also store a group of numbers (up to 20 digits) that you need to enter once your call connects. This is referred to as Chain Dialing.

An example of this is a bank account number. Once you have called your bank, and are prompted to enter the account number, press **MEM** and enter the location number (**0 - 9**) where the special number has been stored.

Store your special number with an identifying name. (Refer to "Storing Phone Numbers and Names" on page 19.)

## EDITING A STORED NAME AND/OR PHONE NUMBER

1. Press and hold **MEM**, **Memory Store** is displayed.
2. Press **VOL/ ^** or **VOL/ v** keys, or enter a number (**0 - 9**) to select the memory location you would like to edit, and press **CH/SEL**. The screen appears with the memory location number that you have selected in the display.
3. Press **VOL/ ^** or **VOL/ v** keys to select **Edit Memory**. Then press **CH/SEL**. **Store Name** is displayed. The cursor flashes indicating that the display is



ready for the name to be edited. When a name has not been stored, the cursor appears at the beginning of the second line.

4. Use the number keys, **\* / - / TONE**, **# / >**, or **TRSF/DEL** to edit the name. (See “Storing Phone Numbers and Names” on page 19.) To edit only the phone number, skip this step.
5. Press **CH/SEL**. The cursor flashes indicating that the display is ready for the number to be edited.
6. Use the number key, **\* / - / TONE**, **# / >**, **PAUSE/RDL** or **TRSF/DEL** to edit the phone number. The phone number cannot exceed 20 digits.

If you don't want to change the phone number, skip this step.

7. Press **CH/SEL**. You hear a confirmation tone. The memory storage is complete.

For example, if you edit a name and number into memory location number 1, the display shows **Memory 1 Stored**. After about two seconds, **Memory Store** is displayed.

8. Press **END** to return to the standby mode.

## ERASING A STORED NAME AND PHONE NUMBER

1. Press and hold **MEM**, **Memory Store** is displayed.
2. Press **VOL/ ^** or **VOL/ ~** keys, or enter a number (**0 - 9**) to select the memory location you would like to erase.

3. Press **CH/SEL**.

The screen appears with the memory location number that you have selected in the display.

4. Press **VOL/∨** key to move the pointer down to **Delete Memory**.
5. Press **CH/SEL**. The confirmation screen appears.
6. Press **VOL/∧** key to move the pointer to **Yes**.
7. Press **CH/SEL** or **TRSF/DEL**. You hear a confirmation tone.
8. After about two seconds, the display returns to **Memory Store**. You may delete the information in another memory location (return to step 2) or press **END** to return to the standby mode.

## TESTING STORED EMERGENCY NUMBERS

If you store an emergency service's number (police department, fire department, ambulance) and you choose to test the stored number, make the test call during the late evening or early morning hours to avoid peak demand periods. Also, remain on the line to explain the reason for your call.

## ONE-TOUCH SPEED DIAL

You can store your most frequently dialed number in the SPEED DIAL location. The One-touch speed dial allows you to dial a number with one key press. (There is no need to press **TALK/FLASH**. The phone will automatically dial the number stored.)

## STORING AND EDITING THE SPEED DIAL

1. When the phone is in the standby mode, press and hold **SPEED DIAL**. ☑

If **Edit Number** appears, there is a number already stored. Press **VOL/ ^** or **VOL/ v** keys to select **Edit Number**. Then press **CH/SEL**.

2. Store the number by following step 6 under “Storing Phone Numbers and Names” on page 21.
3. Press **CH/SEL**.

You hear a confirmation tone. Memory storage is complete.

## MAKING CALLS WITH THE SPEED DIAL

When the phone is in the standby mode, simply press **SPEED DIAL**. The number stored in the SPEED DIAL memory location is instantly dialed. ☑

## DELETING THE SPEED DIAL

1. When the phone is in the standby mode, press and hold **SPEED DIAL**.
2. Press **VOL/ ^** or **VOL/ v** keys to select **Delete Number**.
3. Press **CH/SEL**.
4. Press **VOL/ ^** key to move the pointer to **Yes**.
5. Press **CH/SEL** or **TRSF/DEL**.

You hear a confirmation tone and **Number Deleted** appears. After

### ☑ NOTES ☑

#### *Storing and Editing the Speed Dial*

Number stored in SPEED DIAL is independent from the numbers stored in Memory Dial locations.

#### *Making Calls with the Speed Dial*

If the SPEED DIAL does not have a stored number, the handset will beep rapidly and the phone will not dial.

## NOTES

- If you answer a call before the Caller ID message is received (Example: before the second ring), the Caller ID message will not appear.
- When the call is received via a telephone company that does not offer Caller ID service, the caller's phone number and name do not appear. (This includes international calls.)
- When the call is via a private branch exchange (PBX), the caller's phone number and name may not appear.
- Data errors appear as ■ .

about two seconds, the handset returns to the standby mode.

## CALLER ID

**You must subscribe to Caller ID service to use this feature.**

When the telephone rings, the Caller ID feature allows you to view the caller's name and phone number on the display before you answer the phone. The handset displays the phone number of the incoming call, the name of the caller, and the time of the call. Additionally, you can dial the displayed number and store the information for memory dialing. Make sure you have turned on the Caller ID on Call Waiting feature. (See "Changing the Auto Talk and CIDCW" on page 17.)

## WHEN THE TELEPHONE RINGS

1. When the Caller ID message is received, the display shows the caller's phone number along with the date and time. The incoming call information is stored in the Caller ID record. If the Caller ID service includes the caller's name, the caller's name appears on the display (up to 15 letters). ✓


You may receive any one of the following messages:

Message	Display
When invalid data is received	<b>Incomplete Data</b>
When a private name is received	<b>Private Name</b>

Message	Display
When a private number is received	<b>Private Number</b>
When an unknown name is received	<b>Unknown Name</b>
When an unknown number is received	<b>Unknown Number</b>

- When you pick up the phone, the display changes to **Talk**. (Auto Talk feature is set to on.)

## VIEWING THE CALLER ID MESSAGE LIST

The Caller ID list stores information for up to 30 incoming calls in each handset - even unanswered calls. 

- Press **CID/MENU**.

The summary screen appears. The screen shows the number of new messages and total messages.

- Press **VOL/∨** key to display the latest Caller ID message.
- Press **VOL/∨** key to see the next message. Or press **VOL/∧** key to see the previous message.
- Press **END** to return to the standby mode.

## DELETING INFORMATION FROM THE CALLER ID LIST

The cordless phone stores up to 30 messages in each handset. If the phone receives the 31st message, the oldest one in the list is automatically deleted and the

### NOTES

- In Caller ID operation, if no key is pressed for more than 30 seconds, an error tone sounds and the telephone returns to the standby mode.
- If a call comes in via a telephone system that does not offer Caller ID service, no information is stored.
- Each message can be up to 15 characters for the phone number and the name.
- The number of calls from the same Caller ID appears next to the received time. Once you view the new message, the number will disappear.

## NOTES

### **Deleting Information from the Caller ID List**

While using the **Delete All?** or **Delete Message?** screen if no key is pressed for more than 30 seconds, an error tone sounds and the telephone returns to the standby mode.

### **Deleting a Caller ID Message**

If you get an incoming call or page, the deleting operation is canceled and you can answer the call or page.

newest is stored. Caller ID data can also be deleted manually. ☑

## **Deleting a Caller ID Message**

1. Press **CID/MENU**. Display the message to be deleted from the Caller ID list by pressing **VOL/^** or **VOL/~** keys.
2. Press **TRSF/DEL**.
3. Press **VOL/^** or **VOL/~** keys to select **Yes** or **No**.
4. Press **CH/SEL** or **TRSF/DEL**.

When the pointer is at **Yes**, a tone sounds and the Caller ID message is deleted. The next Caller ID message is then displayed. ☑

When the pointer is at **No**, the display returns to the Caller ID message.

## **Deleting all Caller ID Names/Numbers**

1. Press **CID/MENU**.
2. Press **TRSF/DEL**.
3. Press **VOL/^** or **VOL/~** keys to select **Yes** or **No**.
4. Press **CH/SEL** or **TRSF/DEL**.

When the pointer is at **Yes**, a tone sounds and all stored Caller ID messages are deleted.

When the pointer is at **No**, the display returns to the summary screen.

# USING THE CALLER ID LIST

## Calling a Party from the Caller ID List

You can place a call from the Caller ID list. The cordless phone stores up to 30 messages. ✓

1. Press **CID/MENU**. Select the phone number that you want to dial by pressing **VOL/ ^** or **VOL/ v** keys.
2. Press **TALK/FLASH**. The displayed phone number dials automatically.

## Long Distance Calls and Area Code Setting/Cancellation

Pressing **1** while the incoming Caller ID information is displayed will place or remove the prefix **1** in the display to set up for a long distance call or cancel. Pressing **3** will set or cancel an area code setting. ✓

## Dial Edit

You can temporarily edit the Caller ID number that is displayed by pressing **CH/SEL**. A cursor appears in the display. Press **TRSF/DEL** to move the cursor left and enter the new phone number you would like to dial. And then press **TALK/FLASH**. This will not change the number in the Caller ID list memory.

## Storing Caller ID Messages in Memory Dial

Messages shown in the Caller ID list can be stored in memory dial. Using the incoming call information (i.e., Caller ID list), the phone number of the party on the Caller ID list can be stored in memory. ✓

1. Press **CID/MENU**.

### NOTES

#### *Calling a Party from the Caller ID List*

You cannot make a call from the Caller ID list if your cordless telephone is connected to a private branch exchange (PBX).

#### *Long Distance Calls and Area Code Setting/Cancellation*

When a long distance call has been set, **1** appears in the display.

#### *Storing Caller ID Messages in Memory Dialing*

You cannot store a Caller ID message if no phone number appears in the message.

✍ **NOTE** ✍

If a message has already been stored in the selected memory number location, a confirmation screen is displayed.

Press **VOL/ ^** key to select **Yes**. Press **CH/SEL** to overwrite.

The display returns to the Caller ID list.

Select the phone number to be stored from the Caller ID list by pressing **VOL/ ^** or **VOL/ ~** keys.

2. Press **MEM**.
3. Press **VOL/ ^** or **VOL/ ~** keys or enter a number (0 - 9) to select the memory location to be stored.
4. Press **CH/SEL**. ✍

You hear a confirmation tone and the number is stored in memory. The display returns to the Caller ID list.

## CHANGING THE DIGITAL SECURITY CODE

In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code.

1. Remove the handset from the cradle. Press and hold **PAGE** on the base.
2. While holding **PAGE**, place the handset in the main base and leave the handset in the main base for more than three seconds.
3. Remove the handset from the main base. Then place the second handset in the main base and wait for more than three seconds. Do not hold **PAGE** this time.
4. Press the **TALK/FLASH** key on one handset. Once you make sure **Talk** appears on the display, press the **END** key. Then, try with the second handset. If each handset displays **Talk**, a new



security code is set. Otherwise, return to step 1 and try again.

## ADDITIONAL INFORMATION

### INSTALLING THE OPTIONAL BELTCLIP

#### To attach the beltclip

Insert the beltclip into the holes on each side of the handset. Press down until it clicks.

#### To remove the beltclip

Pull both sides of the beltclip to release the tabs from the holes.

### HEADSET INSTALLATION

You can connect an optional headset with a  $\frac{3}{32}$ -inch (2.5-mm) plug. Contact RadioShack for a suitable headset.

To connect the headset, open the rubber cover on the side of the handset. Then insert the headset's plug into the jack. ✓

When you finish using the headset, disconnect it from the handset and close the rubber cover to protect the jack.

#### NOTES

- If you place the handset on the cradle to recharge it while the headset is connected, be sure the handset seats properly.
- You can use a handset holder (available from your local RadioShack store) to hang the handset on your belt for greater convenience when using a headset.

# TROUBLESHOOTING

If your phone is not performing to your expectations, please try these simple steps first

Problem	Solution
The <b>CHARGE/IN USE</b> or <b>CHARGE</b> indicator won't illuminate when the handset is placed on the cradle.	<ul style="list-style-type: none"><li>• Make sure the AC adapter is plugged into the cradle and wall outlet.</li><li>• Make sure the handset is properly seated in the cradle.</li><li>• Make sure the charging contacts on the cradles and handsets are clean.</li></ul>
The audio sounds weak and/or scratchy.	<ul style="list-style-type: none"><li>• Move the handset and/or base to a different location away from metal objects or appliances and try again.</li><li>• Press <b>CH/SEL</b> to help eliminate background noise.</li><li>• Make sure that the handset is not too far from the base.</li></ul>
Can't make or receive calls.	<ul style="list-style-type: none"><li>• Re-register both handsets. (See "Before Using, Register Extra Handset to the Main Base Unit" on page 11.)</li><li>• Check both ends of the base telephone line cord.</li><li>• Make sure the AC adapter is plugged into the base and wall outlet.</li><li>• Disconnect the AC adapter for a few minutes, and then reconnect it.</li><li>• Make sure that the handset is not too far from the base.</li></ul>
The handset doesn't ring or receive a page.	<ul style="list-style-type: none"><li>• Re-register both handsets. (See "Before Using, Register Extra Handset to the Main Base Unit" on page 11.)</li><li>• The battery pack may be weak. Charge the battery for 15-20 hours.</li><li>• The handset may be too far away from the base unit.</li><li>• Place the base unit away from appliances or metal objects.</li></ul>

Problem	Solution
Severe noise interference.	<ul style="list-style-type: none"> <li>• Make sure the volume setting is not Ringer off.</li> <li>• Keep the handset away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances.</li> <li>• Move the base to another location or turn off the source of interference.</li> </ul>
The Caller ID does not display.	<ul style="list-style-type: none"> <li>• The handset was picked up before the second ring.</li> <li>• The call was placed through a switchboard.</li> <li>• Call your local telephone company to verify your Caller ID service is current.</li> </ul>
Handset No.1 or No.2 not working.	<ul style="list-style-type: none"> <li>• Make sure the battery pack is connected to the handset and fully charged.</li> <li>• Re-register both handsets (See “Before Using, Register Extra Handset to the Main Base Unit” on page 11.)</li> </ul>
<b>Unavailable</b> message is displayed on the LCD screen of the handset.	<ul style="list-style-type: none"> <li>• Make sure the other handset is not already in use. Both handsets cannot be in talk mode at the same time.</li> <li>• Re-register both handsets (See “Before Using, Register Extra Handset to the Main Base Unit” on page 11.)</li> <li>• Make sure the handset is not too far from the base when trying to use.</li> </ul>
The handset doesn't communicate with the base or the other handset.	<ul style="list-style-type: none"> <li>• Re-register both handsets (See “Before Using, Register Extra Handset to the Main Base Unit” on page 11.)</li> <li>• Make sure that you registered the extra handset.</li> </ul>
No 3-way conversation.	<ul style="list-style-type: none"> <li>• Only one handset at a time can talk with an outside caller. To allow the other handset to talk to the caller, transfer the call.</li> </ul>
<b>Low Battery</b> message is displayed on the LCD screen.	<ul style="list-style-type: none"> <li>• Place the handset back in either cradle to recharge over night.</li> </ul>

If you still have problems, disconnect the phone. If other phones on the same line work properly, the fault is in this phone or its installation. If you cannot find the problem, take the phone to your local RadioShack store for assistance.

## **CARE**

Keep the phone dry; if it gets wet, wipe it dry immediately. Use and store the phone only in normal temperature environments. Handle the phone carefully; do not drop it. Keep the phone away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

## **SERVICE AND REPAIR**

If your phone is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website ([www.radioshack.com](http://www.radioshack.com)), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the phone's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

# NOTE

# NOTE

# NOTE

## Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>