#### FCC information

**USER MANUAL** 

**RS2769iS** 

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected Consult the dealer or an experienced radio/TV technician for help

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance

### operate the equipment nis Class B digital apparatus complies

vith Canadian ICES-003


could void the user's authority to



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USERSERVICEABLE PARTS INSIDE. **REFER SERVICING TO QUALIFIED SERVICE** PERSONNEL.

#### Caution:

This product utilizes a laser. Use CAUTION: USE OF CONTROLS OR of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure. Do not open covers and do not repair yourself. Refer servicing to qualified personnel.

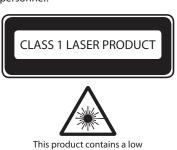

THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR

ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN HOSE SPECIFIED MAY RESULT I HAZARDOUS RADIATION EXPOSURE. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

WARNING: MAINS PLUG IS USED AS DISCONNECT DEVICE AND IT SHOULD REMAIN READILY OPERABLE DURING INTENDED USE IN ORDER TO DISCONNECT THE MAINS PLUG FROM MAINS COMPLETELY, THE MAINS PLUG SHOULD BE DISCONNECTED FROM THE MAINS SOCKET OUTLET COMPLETELY.

# MAIN PEAKE (L)

REAR

SPEAKE (L)

#### **Remote Control** FM ST. - To switch between ST SHUFFLE - To turn on/off random on and off modes. playback

-11-

-6-

LINE IN/ AUX - To select the MENU - To display iPod menu; external sound input from LINE and return to previous menu. IN/ AUX IN jacks.

DISC SKIP - To skip to next CD in lists CD mode.

decrease the volume.

playback.

PREV/IMM, NEXT/IMM - To tune radio frequency: to skip CD/iPod track: **SLEEP** – To select the time

CD/iPod track. **OPEN/CLOSE** – To open and close

CD disc tray.

**STOP** – To stop playing CD/iPod.

different play mode.

 $\mathfrak{Q} \times - \mathsf{To}$  mute and restore audio output.

**SELECT** – To confirm iPod menu

INTRO - To turn INTRO mode on

**VOL+** / **VOL-** – To increase/ or off to play the first 10 seconds

navigate the iPod menu list.

to fast search through current interval in minutes before the

The remote control must be inserted with 2 "AAA" batteries

of each track. ► II – To play and pause CD/iPod < **PRESET** ► – To select previous / next tuner preset station: to

unit turns off.

prior to use.

Source CD TUNER iPod PROG SLEEP ĪŴ REPEAT 1ALL INTRO DISCS 剾 SHUFFLE Plavback mode

activated SLEEP - sleep mode activated

status

Product demonstration mode Display brightness Press DIMMER•DEMO to turn 1. Press and hold DIMMER•DEMO on/off demonstration mode. The demonstration scrolls through all 2. While "DIM" is displayed, display operations.

e indication	Lights when loaded Flashes for the current disc Animates when playing
	1/2 1/3 1/4 1/5
100 100 100 100 101 101 101 101	)₩  ₩  kHz, MHZ FM BASS . ₩   ₩  ▷    . ₩  1₩  ▷    AM PM
	l Radio bands
activated <b>B</b>	ASS – bass boost activated


CD tray status:

vated **EQ** – preset equalizer activated

for more than 2 seconds. press **DIMMER•DEMO** repeatedly to select the desired level (DIM 1-3).

-12-



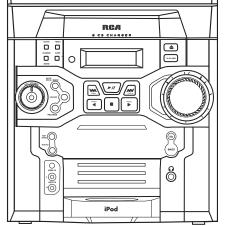

It's important to read this instruction prior to using your new product for the first time.

# **IMPORTANT SAFETY INSTRUCTIONS**

• Connect power cord only to AC power source as marked on the product.

- Care should be taken so that objects do not fall into the product. · Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

#### IF YOUR PRODUCT OPERATES ON BATTERIES, adhere to the following precautions:

#### A. Do not mix old and new batteries. B. Do not mix alkaline, standard (carbon-zinc), or rechargeable (NiCd,

- NiMH, etc) batteries. C. Any battery may leak electrolyte or explode if disposed of in fire or an
- attempt is made to charge a battery not intended to be recharged. D. Discard leaky batteries immediately. Leaking batteries can cause skin burns or other personal injury. When discarding batteries, be sure to
- dispose of them in the proper manner, according to your state/provincial and local regulations E. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

-5-

-10-

#### -1-Important Information

#### Precautions

- This compact disc player uses Have a Blast-Just Not a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pickup lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush or use an air blower brush designed for camera lenses.

Headset safety in your eardrums! Make sure you turn down the volume on the unit before you put on headphones. Increase the

volume to the desired level only after headphone are in place Do not play your headset at high volume. Hearing experts

¥

- warn against extended highvolume play If you experience ringing in
- your ears, reduce volume or discontinue use.

You should use with extreme caution or temporarily discontinue use in potentially hazardous situations Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

 Excessive sound pressure from earphones and headphone can cause hearing loss.

## **Getting Started** Unpacking the system

power laser device

-2-

You should have the following: one main unit (with two surround 1. AM loop antenna jack

speakers)

AM loop antenna

 
- one remote control • one AM loop antenna
- one user manual

Display

2. FM pigtail antenna 3. Speaker jacks мΔіг PEAKER (R)

Connections


**Back view** 



REAR

PEAKE (R)

-7-

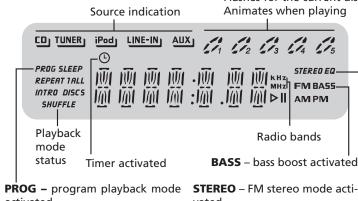

Remote control Q + QØŹ Ò Ö RСЛ

Remote Control

Ο̈́ – To turn power on or off (STANDBY mode)

CD – To select the CD player.

EQ - To select the equalizer TUNER - To select the tuner and change the radio band.  $\Omega$  – Jack for connecting headphones

INFO - To select among disc PLAY MODE - To cycle between display information.

**iPod** – To select iPod playback.

Unit Controls

tuner mode.

different play mode.

external audio sources.

audio sources.

presets.

playback.

► II – To play or pause CD/iPod.

To stop CD/iPod playback.

**PRESET** ◀ / ► – To select the

previous or next preset stations in

**SHUFFLE** – To turn on/off random

PLAY MODE - To cycle between

LINE IN - Ø3.5mm jack for

AUX IN•L/R - Jacks for external

BASS - To turn BASS on or off.



#### For your safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one Do not attempt to bypass this safety feature.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- Technical information Product: 5 Disc Audio System
- Brand: RCA Model: RS2769iS
- Power Supply: 120V ~ 60Hz Power Consumption: 240 Watts

#### Service information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service. refer to the warranty included in this Guide

#### **Getting Started**

#### **Using FM and AM antennas**

Before you use your audio system, you'll want to make sure both the FM and AM antennas are positioned properly. Uncoil the FM antenna at the back of the unit, making sure it is fully extended (you may even want to tape it to the wall behind the unit if possible, the higher the better).

You'll also need to connect the AM antenna loop to the back of the unit if you listen to AM stations. Rotate the AM loop antenna for better reception.

#### **Connecting speakers**

Each speaker wire has different color matching with the speaker jacks on the main unit. When connecting the speakers, match the red wires to red jacks, purple wires to purple jacks, grey wires to grey jacks, and black wires to black jacks. Be sure to connect the large main speakers to the terminals marked "MAIN SPEAK-ER" and "SUBWOOFER". Connect the smaller rear "surround" speakers to the terminals marked "REAR SPEAKER".

#### **Clock and Timer**

#### Setting the clock

- 1. Press and hold CLOCK until the hour flashes on the display
- 2. Press ₩ / ₩ to set the hour and then press CLOCK to shift to minute digits 3. Press ₩ / ₩ to set the

minute. 4. Press CLOCK to save settings.

- When system is ON, you can tap **CLOCK** to display the current time - it will
- display time for about 2 seconds. When the system is OFF (standby), the display will
- turn off to save power.

#### Setting the timer

-8

-13-

- For RADIO timer, tune in to a desired station
- For CD timer, insert a CD into the unit.
- For iPod timer, insert your iPod into the connector.
- 1. Press and hold **TIMER** until ON (timer on time) appears with the hour flashing.
- 2. For setting time, press 🛏 / 🛏 Sleep mode to set the hour and then press You can select the time interval in digits.
- Press Int I have to set the minute 4. Press TIMER to change to OFF (timer off time) with hour flashing. Repeat steps 2 & 3 for timer off time setting.
- 5. Press **TIMER** to select the 2. When sleep is activated, press source. Press ⊶ / ► to select among TUNER, CD or iPod. 6. Press TIMER to set the
- volume. Adjust the timer volume by pressing 🛶 / 🛏 to select the desired volume level.

prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

PLEASE READ AND SAVE THIS FOR FUTURE REFERENCE

**IMPORTANT SAFETY INSTRUCTIONS** 

- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories
- specified by the manufacturer. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.




#### **Portable Cart Warning**

Unplug this apparatus during lightning storms or when unused for long periods of time.

**Unit Controls** 

Main Unit

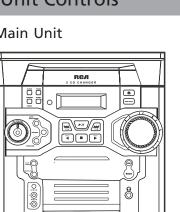

**ON/STANDBY** - To turn powe on or off (STANDBY mode)

AUTO PROG•BAND - To toggle between AM and FM. Also used to auto-preset radio stations in FM mode

player, TUNER, iPod, LINE IN and AUX sources

## Clock and timer

Note: To avoid startling you or other individuals in your home, this product will not turn on at a volume higher than 15.

7. Press **TIMER** to save settings.

#### Activating the timer

Tap **TIMER** to turn on/off the timer. The timer is active when the clock icon 🕒 is lit.

TIMER to shift to the minute minutes before the unit turns off automatically.

- 1. Press SLEEP to select amo OFF, 120, 90, 60, 45, 30, 15, 10 and 5 minutes. The sleep icon 1. Press EQ on the unit to select lights on the display when sleep mode is activated.
- **SLEEP** once to view remaining sleep time. Press **SLEEP** again when the remaining sleep 3. While BASS or TREB is time is displayed to change the sleep time.
- Sleep is automatically deactivated when the unit is 4. Press **EQ** to exit. turned off. -14-

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

#### ADDITIONAL SAFETY INFORMATION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openinas
- Do not place lighted candles, cigarettes, cigars, etc. on the product

**PROGRAM** – To enter program mode for CD and tuner.

CLOCK – To show time and enter clock setting mode.

TIMER - To turn the timer on/off; press and hold to enter the timer

DIMMER•DEMO - To turn the feature demonstration on or off: to adjust display brightness.

**SLEEP** – To select the time interval in minutes before the unit turns off.

▲ – To open or close the disc tray.

DISC SKIP - To skip to the next CD in the tray in CD mode.

**VOLUME** – To increase/decrease the volume

SOURCE - To select among CD to skip CD/iPod track; to fast search through current CD/iPod track

#### Sound Features

#### Bass boost

-9-

Press BASS to turn on/off boosting the bass frequency. The BASS icon lights on the display when it is activated.

#### Muting audio

Press <a>vlash</a> cut or restore the sound.

#### Using preset equalizer curves

Press EQ on the unit to select among FLAT, ROCK, POP, JAZZ, CLASSIC and CUSTOM. The display shows your selection briefly.

 
#### Creating a Custom Curve

- the CUSTOM mode.
- 2. While CUSTOM is displayed, press 🔫 / 🗪 to cycle among the displayed BASS and TREB range levels.
- displayed, adjust the volume to set the associated gain between -10 - +10.

# Release tab to lock wire in the

wire.

keep the spacing shown below free from other surfaces:



Push speaker terminal tab down to insert terminal.

# **NOTE:** Make sure the insulation





-4-



is completely removed from the ends of the speaker wires at all connection points

Some of the following information

may not apply to your particular

product: however, as with any

electronic product, precautions

should be observed during handling

• Do not use this apparatus near

Do not block any ventilation openings. Install in accordance

• Do not install near any heat

with the manufacturer's

sources such as radiators, heat

registers, stoves, or other

apparatus (including amplifiers)

Do not defeat the safety

purpose of the polarized

or grounding-type plug. A

polarized plug has two blades

with one wider than the other.

A grounding type plug has two

blades and a third grounding

• Read these instructions.

Follow all instructions.

• Heed all warnings.

Keep these instructions.

• Clean only with dry cloth.

and use.

water.

-3-

instructions.

that produce heat.

## Installation

To ensure sufficient ventilation,

#### **CD** Playback

## This unit is compatible with CD-RW/ CD-R discs Please take care for playback.

#### Notes on CD-R/RW Disc:

- Do not affix any type of labels to either side (recordable or labeled side) of a CD-R/RW disc as this may result in the unit malfunctioning
- To avoid damages to the CD-R/RW disc, do not open the disc compartment door while the disc is being read.
- Do not load an unrecorded CD-R/RW disc into the unit. This may take a longer time to read the disc.
- Playback capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder used to create the disc.

## when loading or unloading discs in the disc drawer. Read below

- for details. Remove all discs from the disc drawer before moving or transporting the unit.
- Do not put discs in the trays of the disc drawer when they are still moving.
- Do not push or force the rotation of the disc trays. Always use the **DISC SKIP** button.
- Do not put discs in any unexposed disc trays. Only put disc in tray
- that is fully exposed. If an error occurs and the disc drawer does not close, empty all disc trays and try again.

3. If a different program

location is preferred, press

🕶 / 🗪 to select the desired

selected frequency at that

4. Press PROGRAM to store the

Auto preset programming (FM

Press and hold AUTO

**PROG**•**BAND** for 2 seconds to

scan stations in the FM band. The

stations will then be stored as

preset channels. A maximum of

Beware of your preset channels

being erased accidentally because

the scanning and storing process

is automatic upon pressing and

holding the button for 2 seconds.

32 stations can be stored.

preset number (1-32).

# **CD** Playback

#### Loading discs

- 1. Press **SOURCE** repeatedly to select CD mode.
- 2. Press **OPEN/CLOSE** or **\triangleq** to open the drawer. 3. Insert up to five discs with la-
- bel face up. (Press **DISC SKIP** to rotate the disc carrier.) 4. Press **OPEN/CLOSE** or **\triangleq** to
- close the drawer. Loaded disc position icon lights.

#### Selecting discs Press DISC SKIP to skip discs.

#### Playing discs

- Press ► u to begin or pause playback, and **u** to stop playback.
- Press 🖂 / 🛏 to select a specific track.

Searching through a CD Press and hold Hand I have to search through a CD while it is playing.

Shuffling play order Press **SHUFFLE** to turn on/off the playing of tracks in random order.

Sampling tracks Press INTRO to play the first 10 seconds of each track on the current disc, all discs in the tray, or turn INTRO mode off.

Play mode

Press PLAY MODE to cycle between Repeat 1, Repeat 1 Disc, Repeat All Discs, 1 Disc, and All Discs

## **CD** Playback

• Press INFO

۲

- repeatedly to view elapsed track time, track remain time and disc remain time during playback
- You may also press **PLAY** MODE to select 1 disc or all discs before activating INTRO & SHUFFLE functions.

**CD** Program

- You can program the CD player Playing a program List to play up to any 32 tracks on the CDs in the tray. ►II,
- 1. While the CD player is stopped, press **PROGRAM** to **Displaying the program List** enter program mode. The system displays the next available program number: "- - P 01," with "--" flashing, prompts 2. Press **PROGRAM** repeatedly you for the first track in the
- program list. 2. Press 🖛 / 🛏 to select a track (Press DISC SKIP to select a
- track from a different disc). 3. Immediately press **PROGRAM** and hold **I** for 3 seconds. The unit to assign the selected track to the program number. You are prompted for the next track in the program list. (In CD program mode, PROG icon will be lit.)

• Check that CD label is facing

Check that PAUSE mode is not

scratches, or other damage.

• Check if something is causing

• Make sure the speakers are at

• Switch to another function

(TUNER, iPod, LINE IN/AUX)

least 3 feet away or on a dif-

ferent surface from the main

the system to vibrate. If so,

# Radio

#### Press SOURCE or TUNER on the remote control to select TUNER.

Selecting tuner band Press AUTO PROG•BAND on the unit or **TUNER** on the remote control to select between AM and FM radio bands.

Tuning to a station Press  $\bowtie$  /  $\bowtie$  to select frequencies. Press and hold to start auto searching for the next available station.

Preset and tune modes The tuner can be in either TUNER or PRESET mode. When in PRESET mode, the PROG indicator is on.

#### Presetting stations Manually setting presets

1. Press ₩ / ₩ to access the desired frequency.

2. Press PROGRAM button

#### -20-

-15-

displayed.

preset.

only)

### Limited Warranty

AVC MULTIMEDIA ("AVC") makes the following limited warranty. Packaging and Shipping Instruction This limited warranty extend to the original consumer purchaser and is limited to non-commercial use of the product.

#### **One Year Parts & Labor Warranty**

**AVC** products purchased in the United States or Canada are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase. If the unit fails to conform to this warranty, we will service the product using new or refurbished parts and products, at AVC's sole discretion.

During a period of one year from the effective warranty date, AVC will provide, when needed, service labor to repair a manufacturing defect at its designated Service Center. To obtain warranty service in the United States or Canada, you must first call our **Customer Support Center** at 1-877-252-6873, during the hours listed in the box below. The determination of service will be made by AVC Customer Support. PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by AVC at its designated Service Center for one year from the effective warranty date. Such replacement parts or products are warranted for an additional one year from the date of repair or replacement. The Customer will be required to ship the unit to the Service Center indicated at the time Customer Support is contacted to make the necessary repairs. The customer is responsible for all transportation charges to the service facility.

-25-

## Radio

program location will be scan by pressing TUNE+/TUNEbutton, but the erased stations cannot be recovered.

#### Using presets

Press **◄ PRESET ►** to access the previous or next preset station. The display first shows the preset program number and after a few seconds, the frequency will be displayed. (e.g. P 01 is preset 1)

Suppressing stereo signal Press FM ST. to select between ST ON and ST OFF for stereo FM stations.

Limited Warranty

ignated by **AVC**.

purchase.

(2)

Your Responsibility

## LINE IN/ AUX

The most recently accessed You can stop the automatic Play external sound through the speaker system

> Press SOURCE on the unit repeatedly to select LINE IN or AUX mode. Or press LINE IN/AUX on the remote control to change to LINE IN mode from CD, TUNER or iPod mode; press LINE IN/AUX again to

Suggest using Ø3.5mm for auxiliary equipment such

# Troubleshooting Tips

-17-

up

on

lected.

Clean the disc.

CD sound skips

Clean the disc.

unit

Try another CD.

move the system.

you press DISC SKIP

and then back to CD.

#### System will not turn on Check power cord for a secure

- connection Unplug the unit for a moment, and then plug into • Check that CD function is sepower source again.
- Use CD lens cleaner. Check the outlet by plugging in another device.

#### No sound

- Increase the volume setting. • Check connection to speakers.
- Check that you have selected Check disc for warping
- the appropriate function: CD, TUNER, iPod, LINE IN/AUX. Make sure mute is off.
- Make sure headphones are not plugged in.

#### Poor radio reception

- Check antenna connection.
- Move antenna. • Turn off nearby electrical ap- CD button will not respond, or pliances, such as hair dryer, does not change discs when vacuum cleaner, microwave,
- fluorescent lights. CD does not play
- Check that CD is in the tray.

## Limited Warranty

#### **Out of Warrantv**

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at 1-877-252-6873 or

-22-

Saturday: 9am-NOON Eastern time. Important:

operated in the United States or Canada. (3) Warranties extend only to defects in material or workmanship, and do not extend to any product or parts which have been lost or discarded. or damage to product or parts caused by misuse, accident, improper operation or maintenance, or use in violation of instructions provided with the product, or to product which has been altered or modified thout authorization of **AVC**, or to products or parts thereof which have had the serial number removed or changed.

These warranties are effective only if the product is purchased and

www.RCAav.com

# Hours: Monday-Thursday: 9am-7pm, Friday: 9am-5pm,

-27-

You are responsible for any transportation, shipping or insurance

All warranties implied by state law, including the implied warranties damages, so the above provisions may not apply to you. of merchantability and fitness for a particular purpose, are expressly mited to the duration of the limited warranties set forth above. With For more information on other products and services, please visit our the exception of any warranties implied by state law as hereby limited, web site at **www.RCAav.com** the foregoing warranty is exclusive and in lieu of all other warranties, guarantees, agreements and similar obligations of manufacturer or seller with respect to the repair or replacement of any parts. In no event shall AVC be liable for consequential or incidental damages.

-21-

When you send the product to the **AVC** service facility you must use

the original carton box and packing material or an equivalent as des-

(1) You must retain the original sale receipt to provide proof of

# change to AUX mode.

-16-

player and AUX IN jacks as DVD, VCR or PC.

#### **CD** Program

# While in PROGRAM mode, press • iPod touch (1st generation )

- 1. While the CD player is stopped, press **PROGRAM** to enter PROGRAM mode.
- to list each track assignment in the program list.

#### Deleting program List

While in PROGRAM mode, press displays the message "CLEAR".

# Troubleshooting Tips

# Remote control does not work

- properly installed.
- Replace weak batteries.
- Check the system is plugged Cleaning into power source. • Point the remote directly at
- the system's front panel. Move closer to the system.
- system

#### iPod does not respond to the speaker system

• Remove your iPod from the dock and check for obstruction on the connectors in the dock and on your iPod. • Make sure that your iPod is working properly before docking into the unit. Please refer to your iPod manual for details

#### Cleaning CDs

- Dirty CDs can cause poor
- -23-

### **Limited Warranty**

No person, agent, distributor, dealer or company is authorized to Important: Also keep your "Bill of Sale" as proof of purchase. change, modify or extend the terms of these warranties in any manner whatsoever. The time within action must be commenced to enforce any obligation of **AVC** arising under the warranty or under any statute, or law of the United States or Canada or any state thereof, is hereby limited to one year from the date of purchase. This limitation does not apply to implied warranties arising under state law.

This warranty gives you specific legal rights and you may also have other rights, which may vary, from state to state. Some states do not allow limitation on how long an implied warranty lasts, when an action may be brought, or the exclusion or limitation of incidental or consequential

## iPod Playback

# Compatible iPod Types

- 8GB, 16GB, 32GB • iPod touch (2nd generation )
- 8GB, 16GB, 32GB iPod classic 80GB,120GB
- 160GE • iPod 5th generation (video)
- 30GB, 60GB, 80GB iPod nano 4th generation
- (video) 8GB, 16GB iPod nano 3rd generation (video) 4GB, 8GB
- iPod nano (2nd generation) 2GB, 4GB, 8GB
- iPod nano (1st generation) 1GB, 2GB, 4GB
- Note: also supports iPhone when iPhone is set to "airplane mode".

#### Installing an iPod Dock Listening to your iPod Adapter

1. Choose the iPod Dock Adapter mend using the adapter that was supplied with your iPod.

## -18-

#### Additional Information

Disconnect the audio system from • Check that the batteries are the power source before performing any maintenance

Clean the exterior of the system using a soft dust cloth.

#### CD Player

• Remove any obstacles be- CAUTION! This system operates tween the remote and the with a laser. It must be opened by only a qualified technician.

#### Handling CDs

Do not touch the signal surfaces. Hold CDs by the edges, CD Lens Care or by one edge and the hole. Do not affix labels or adhesive damaged (cracked or warped) CDs.

- sound quality. Always keep

## iPod Playback

(dock adapter is not included with this Audio System)

2. Insert your iPod Dock Adpater into the dock until it sits firmly in place.

#### Removing an iPod Dock Adapter

Remove the iPod Dock Adapter as illustrated.



Insert your iPod into the connector in the dock.

- that fits your iPod, we recom- 1. Press ► n to begin or pause playback, and **STOP/** to stop
  - plavback. 2. Press i I → to select a specific -19-

## Additional Information

CDs clean by wiping them Technical specifications gently with a soft cloth from the inner edge toward the outer perimeter.

- If a CD becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on CDs. Also, never clean CDs with benzene, thinner, or other volatile solvents which may cause damage to disc surface.

ty of your system. For instructions languages. on cleaning the CD lens, refer to the ones accompanying the lens cleaner.

track. (You may also use the control wheel and keys on your iPod to operate it.)

- 3. Press and hold i hol through a track while it is play-
- 4. Press **MENU** to display iPod menu, press again to return to previous menu
- Press < PRESET > on the remote control to navigate iPod menu lists.
- 6. Press SELECT to pick item in iPod menu list.
- Your iPod will be charged automatically (until fully charged) once it is docked.
- iPod charging function is inactive when the main unit is on standby position and powered off.
- To prevent interference to AM radio signals, please switch off the iPod while listening to AM Radio.

Power supply: 120V~60Hz Dimensions (W x D x H inches): Unit size - 11.0 x 17.3 x 12.0 Main unit weight: 16.06 lbs CD player: Response curve (+/-2dB): 60Hz to 15 kHz Rating Plate: Look for it at the back of the set.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right When your CD lens gets dirty it to make any improvement or can also cause the system to out- modification without prior notice. tapes to the label surfaces. Do put poor sound quality. To clean The English version serves as the not scratch or damage the la- the lens you will need to pur- final reference on all products bel. CDs rotate at high speeds chase a CD lens cleaner which can and operational details should inside the player. Do not use maintain the output sound quali- any discrepancies arise in other

#### -24-

## Limited Warranty

N	lodel no
Р	roduct name
Ţ	ype of set
S	erial no
Ir	ivoice no.
 D	ate purchased
	ealer name

FOR SUPPORT, SERVICE AND REPAIR, PLEASE VISIT **WWW.RCAav.com** Specifications and external appearance are subject to change without notice

ing

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com