

## HS-1903 Earpiece with Boom Microphone, Noise Cancellation, Volume Control and Microphone Mute

Your RadioShack HS-1903 Earpiece with Boom Microphone, Noise Cancellation, Volume Control and Microphone Mute gives you portable, convenient communication. Using the ultra-light headset while you make and receive calls, you can keep your hands free to do other things. The headset connects easily to many cordless or cellular phones that have a  $\frac{3}{32}$ -inch (2.5mm) jack.

Your headset includes these features:

**Reversible Ear Piece** — lets you wear the headset over either ear.

**Flexible Microphone Boom** — lets you adjust the microphone's position so callers can hear you more clearly.

**Noise Canceling Microphone** — minimize surrounding noise and unnecessary wind sound while you talk to the microphone.

**On-Cord Volume Control and Mute Button** — easily adjust the incoming sound source volume level and mute control for microphone.

**Replaceable Microphone Sponge and Ear Muff** — easily replaceable for hygiene purposes.

**3 Different Sizes of Ear Sponge and Ear Hooks** — to fit and position different ear size more firmly.

**Storage Pouch** — for easy carrying and travelling.

**Lapel Clip** — lets you securely anchor the headset's modular cord to your clothing to prevent the headset from slipping.

### CONNECTING THE HEADSET

Insert the headset's mini plug into the  $\frac{3}{32}$ -inch (2.5 mm) jack of a cordless or cellular phone.

### ADJUSTING THE HEADSET

1. Place the headset over either ear as shown.
2. Hold the headset in place and adjust the microphone boom until it is about even with your chin. Experiment until you find the most comfortable position.
3. Attach the cord's lapel clip to your clothing. Leave enough slack in the cord so you can move your head without pulling the headset.

### USING VOLUME AND MUTE

Adjust the phone's volume to a point between its middle and maximum levels. Then adjust **VOLUME** on the head-phones' cord to a comfortable level.

Turn **MUTE** to **ON** on the headset's cord to turn off the microphone, Turn **MUTE** to **OFF** to turn it on.

---

---

## Listening Safely

To protect your hearing, follow these guidelines when you use the headset.

- Set the phone's volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

## Traffic Safety

Do not use the headset with your cellular telephone when operating a motor vehicle or riding a bicycle in or near traffic. Doing so can create a traffic hazard and could be illegal in some areas.

If you use the headset with your cellular telephone while riding a bicycle, be very careful. Do not listen to a continuous broadcast. Even though some earphones/headphones let you hear some outside sounds when listening at normal volume levels, they still can present a traffic hazard.

## CARE AND MAINTENANCE

Your RadioShack HS-1903 Earpiece with Boom Microphone, Noise Cancellation, Volume Control and Microphone Mute is an example of superior design and craftsmanship. The following suggestions will help you care for your headset so you can enjoy it for years.

- Keep the headset dry. If it gets wet, wipe it dry immediately.
- Handle the headset gently and carefully. Don't drop it.
- Use and store the headset only in normal temperature environments.
- Keep the headset away from dust and dirt.
- Wipe the headset with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the headset's internal components can cause a malfunction and might invalidate your headset's warranty. If your headset is not performing as it should, take it to your local RadioShack store for assistance.



**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

---

---

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.  
RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

*We Service What We Sell*

3/97

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>