

PRO-100 Communications Headset

Your RadioShack PRO-100 Communications Headset delivers a wide frequency response for impressive sound in an extremely lightweight design. It is ideal for use with CB radios, scanners, and shortwave radios. The adjustable headband accommodates any head size or shape for a comfortable fit.

The frequency response is 20–18,000 Hz. The impedance is 32 ohms $\pm 10\%$. The diameter of each speaker is 1½ inches.

FEATURES

High Energy Elements — deliver professional quality sound in a lightweight package.

Volume Control — lets you set the sound level.

Closed Earcup Design — reduces ambient sound and provides an acoustically isolated listening experience.

Foam-Filled Earcushions — let you listen in comfort.

OPERATION

1. Turn down the volume on your sound source.
2. Rotate the volume control on the left earpiece clockwise to its minimum position.

Illust.

3. Plug the headset into a 1/8-inch headphone jack.

Note: If you are connecting the headset to an audio source that has a 1/4-inch jack, use the supplied 1/8-inch to 1/4-inch adapter.

4. Put on the headset and adjust the headband for a comfortable fit.

Illust.

5. Set the sound source's volume to a mid-range level. Then adjust the volume control on the left earpiece until you reach a comfortable listening level.

Listening Safely

To protect your hearing, follow these guidelines when you use this headset.

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

Traffic Safety

Do not wear this headset while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and could be illegal in some areas.

CARE

To enjoy your RadioShack PRO-100 Communications Headset for a long time:

- Keep the headset dry. If it gets wet, wipe it dry immediately.
- Use and store the headset only in normal temperature environments.
- Handle the headset gently and carefully. Don't drop it.
- Keep the headset away from dust and dirt.
- Wipe the headset with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the headset's internal components can cause a malfunction and might invalidate its warranty. If your headset is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102





Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>