



Fish Flashlight

60-1240

Owner's Manual

for installing, setting up and using your new product

Thank you for buying a RadioShack Fish Flashlight. Your flashlight makes a great night-time companion in your room, in the backyard, or on camp-outs. The flashlight's carrying handle is sized just right for small hands. Designed for children ages 4 and up.


Step One

Installing Batteries

You will need two AA batteries (not supplied).

1. Use a Philips screwdriver to remove the screw from the battery compartment's cover. Then use a flat-blade screwdriver to lift and open the cover.
2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside the compartment.
3. Close the cover. Then insert and tighten the screw.

Battery Compartment Cover

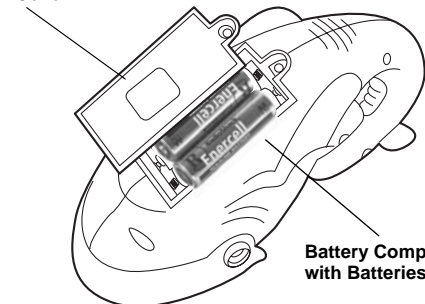

Battery Compartment with Batteries Installed.


When the flashlight dims, replace the batteries.

Step Two

Turn this switch to turn on the flashlight.

Operation


Close the fish's mouth to turn off the flashlight.

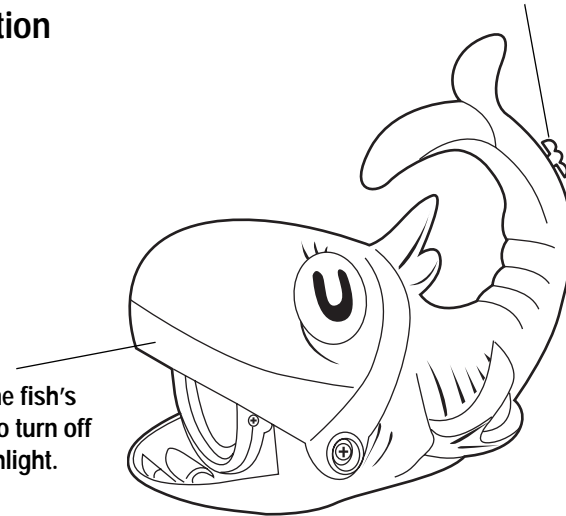

Replacing the Light Bulb

1. Push the button on the flashlight's handle down to open its mouth.
2. While holding the fish's mouth open, use a screwdriver to remove the screw from the bezel securing the bulb's lens. Gently pry off the bezel and then remove the lens.
3. Rotate the old bulb counterclockwise to remove it, and then thread a fresh bulb clockwise into the bulb socket.
4. Replace the lens, snap the bezel in place, and replace the screw.

If the light stops working, replace the bulb with a new 2.47-volt, 300 mA Type 14 bulb (not supplied), available at your local RadioShack store.

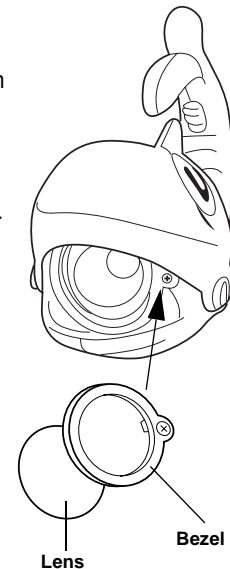

Battery Notes

- Dispose of the batteries promptly and properly; do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the flashlight for several weeks, remove the batteries.

Care

- Keep the flashlight dry; if it gets wet, wipe it dry immediately. Use and store the flashlight only in normal temperature environments.
- Handle the flashlight carefully; do not drop it. Keep the flashlight away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Limited 90-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003, RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

60-1240
Printed in China
06A03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>