
31-5029


QUICK START


ENGLISH

5 DVD Home Theater in a Box with Wireless Rear Speakers

Refer to your Owner's Manual for complete instructions.

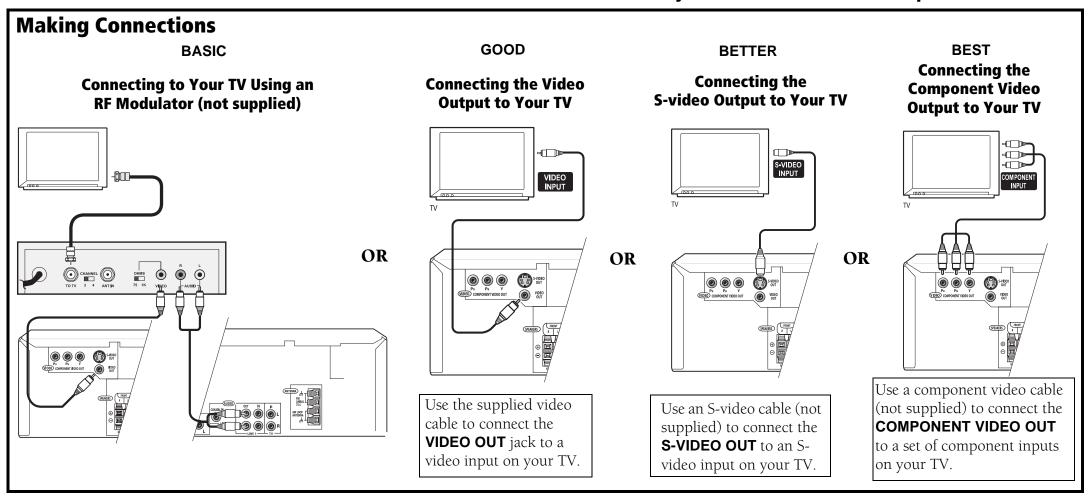


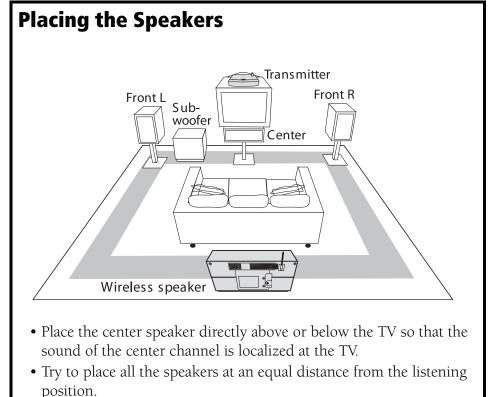

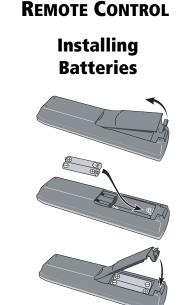


The remote requires two AA batteries (not supplied).

Listening to TV Audio Through the System

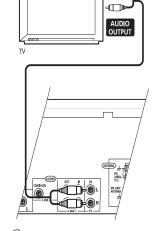

Connect a stereo audio cable (not supplied) from the audio outputs of your TV to the **TV IN** jacks on this system.

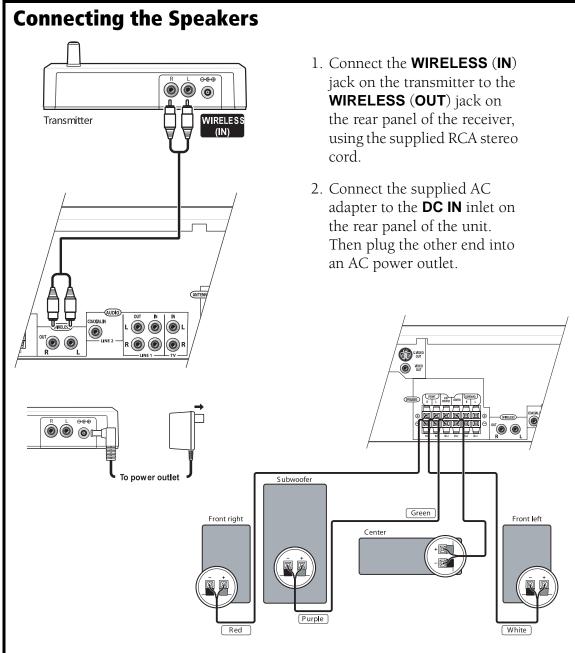

- Make sure you disconnect power from all components.
- The wireless mode is the default setting.
- Connect each speaker using the color-coded speaker cable. Match them to the colored labels above the speaker terminals.
- Do not connect any of the supplied speakers to any other amplifier. This may result in malfunction or fire.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com