


Race Scanner Intercom with Pit Crew Headsets

20-285

OWNER'S MANUAL — Please read before using this equipment.

MIC GAIN/OFF/MAX — Turn clockwise until you hear a click to turn on the intercom. Turn towards **MAX** to increase the volume or towards **OFF** to decrease the volume. Turn to **OFF** until you hear a click to turn off the intercom.

Left Side Jacks (L) — Connect up to two headsets to the L jacks for the persons sitting on the left side.

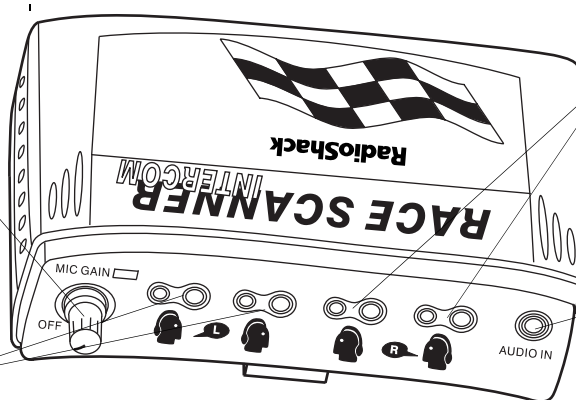

Right Side Jacks (R) — Connect up to two headsets to the R jacks for the persons sitting on the right side.

AUDIO IN — Connect the supplied scanner cable to **AUDIO IN** and the other end of the cable to the scanner headphone jack to listen to a scanner.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning

💡 — Hint

⚡ — Caution

📝 — Note

! — Important

📝 NOTE 📝

- When you turn on the intercom, the green LED lights. If the LED turns red, replace the batteries.
- If you do not use the intercom for an extended period of time, remove the batteries.
- Disconnect the headset if it not being used. Otherwise, if the microphone is placed near the earpiece, it might cause a piercing sound.
- Turn **MIC GAIN/OFF/MAX** off or to the lowest level before connecting or disconnecting the headset.

Thank you for purchasing the RadioShack Race Scanner Intercom with Pit Crew Headsets. It enables up to four people to listen to a scanner and communicate at the same time. It comes with two headsets and a 3-foot cable to connect a scanner to the intercom. Additional headsets are available at your local RadioShack store.

PREPARATION

INSTALLING BATTERIES

The intercom uses four AA batteries. For the longest battery life, we recommend RadioShack alkaline batteries. 📝

1. Push the battery compartment cover back and slide it off to open.
2. Place four AA batteries in the battery holder as indicated by the polarity symbols (+ and -).
3. Slide the cover back in place until it snaps shut.

CONNECTING A SCANNER TO THE INTERCOM

Connect one end of the supplied scanner cable to the scanner's headphone jack and the other end to the intercom's **AUDIO IN** jack.

CONNECTING HEADSETS

Turn **MIC GAIN/OFF/MAX** off or to the lowest level. 📝

Connect a headset for the person(s) on the left to either of the left side jacks (**L**) and a headset for the person(s) on the right to either of the right side jacks (**R**). This allows them to hear each other's voice through the corresponding earpiece of their headset. For example, a listener on the right side will hear the other person's voice in the the left

earpiece. The scanner will be heard in the right earpiece. The listener on the left will hear the other person's voice in the right earpiece. The scanner will be heard in the left earpiece.

LISTENING SAFELY

To protect your hearing, follow these guidelines when you use headsets. 📝

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort initially might still damage your hearing.

TRAFFIC SAFETY

Do not use a headset with your intercom when operating a motor vehicle or riding a bicycle in or near traffic. Doing so can create a traffic hazard and could be illegal in some areas.

If you use a headset with your intercom while riding a bicycle, be very careful. Do not listen to a continuous broadcast. Even though some headsets let you hear some outside sounds when listening at normal volume levels, they still can present a traffic hazard.



RadioShack®

www.radioshack.comSM

© 2002 RadioShack Corporation.
All Rights Reserved.

RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

OPERATION

1. Turn on your scanner and set its volume to the minimum.
2. Turn on the intercom.
3. Adjust the scanner's volume to a comfortable level. The scanner's audio is heard from both the left and right earpieces.
4. To speak to another person, set **MIC GAIN/OFF/MAX** on the intercom to the minimum position and press the push-to-talk button on the headset. Speak into the microphone.
5. Adjust the intercom's **MIC GAIN/OFF/MAX** so the sound level of your voice is comfortable to the listener. The persons on the left side hear the voice from the right earpiece and the right side persons hear the voice from the left earpiece. The scanner is heard through the other earpiece.
6. Release the push-to-talk button on the headset when you finish speaking.
7. Turn **MIC GAIN/OFF/MAX** on the intercom to **OFF** to turn it off.

CARE

Keep the intercom dry; if it gets wet, wipe it dry immediately. Use and store the intercom only in normal temperature environments. Handle the intercom carefully; do not drop it. Keep the intercom away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your intercom is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the intercom's internal components can cause a malfunction and might invalidate its warranty.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>