



60-4397

Catapult Stunt RC

Spin, jump, drive, and perform many other stunts in your catapult stunt car! It can reach speeds of up to 900 feet per minute and **has a spring suspension for softer landing**. It comes in two frequencies, 27 and 49MHz. Check your box to see which frequency you have. This car is suitable for children age 8 and above.



transmitter

car

Thank you for purchasing your Catapult Stunt RC from RadioShack.


replacing wings

1. Remove the wheel next to the wing you need to replace.
2. Remove the damaged wing and replace it with a new wing.
3. Replace and secure the wheel.

in the car

Your car requires one 9.6V battery pack (not included) for power. We recommend a RadioShack 1600mAh Ni-MH battery pack.

1. Slide **ON/OFF** to **OFF**.
2. Remove the battery compartment cover.
3. Insert a fully charged battery pack, making sure to connect the car's socket to the battery pack socket.

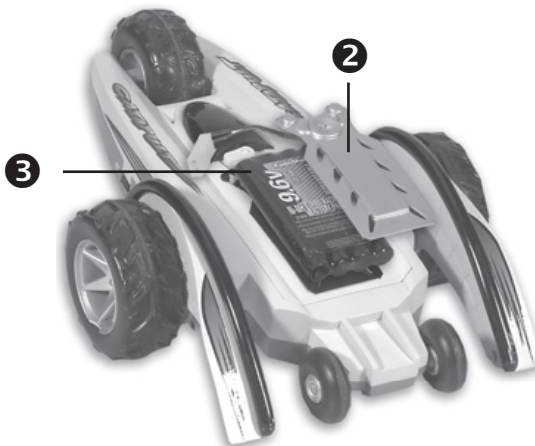

4. Replace the battery compartment cover and lock it. If your car moves slowly or cannot jump, replace the battery pack.

installing batteries

in the transmitter

The transmitter requires one 9V battery (not included) for power.

1. Slide **ON/OFF** on the transmitter to **OFF**.
2. Remove the battery compartment cover.
3. Insert a 9V battery.
4. Replace the cover. When the transmitter's range decreases, replace its battery.



helpful hints

- Surfaces may become hot and burn if the car gets wet. Do not use in water or snow.
- Running the car for long time periods generates high heat levels. Heat causes wear and tear on the motor.
- To keep heat levels down, let the car cool at least 10 minutes before installing new batteries.
- If the motor runs but your car does not respond to the transmitter, move the transmitter closer to your car and try again.
- If someone uses a CB nearby, it might interfere with control of your car. If this happens, move your car away from the CB. You cannot operate your car near devices with transmitters that use the same frequencies (27 MHz or 49 MHz).
- If the car moves slowly and you just installed a fully charged battery pack, check the wheel mechanisms for lint, thread, hair, or dust.
- If your car is stopped by another car or object **for around 6 seconds**, it won't respond to the transmitter for about 10 seconds.
- To prevent injury, children and pets should keep a distance from the car when it is moving at high speeds.

what's included

car

transmitter

Please read this user's guide before installing, setting up and using your new product
www.radioshack.com

driving your stunt rc

Driving

To drive forward, push the left and right lever forward. *To drive in reverse*, pull the left and right lever back. *To stop*, release both levers.

Steering

To steer left, push the right lever forward while releasing the left lever.

To steer right, push the left lever forward while releasing the right lever.

Steering in Reverse

To turn right while driving in reverse, pull the right lever back while releasing the left lever.

To turn left while driving in reverse, pull the left lever back while releasing the right lever.

Fast Turns

To make a sharp right turn, simultaneously push the left lever forward and pull the right lever back.

To make a sharp left turn, simultaneously push the right lever forward and pull the left lever back.

Stunts

Hold both levers forward, and press the stunt button to rotate the car's cams and wings. Release the stunt button to stop stunts.

Note: The car can run and jump even when its underside is turned upward.



Caution: Don't press and hold the stunt button only continuously for long time, otherwise it will damage the function of your vehicle.

care

Keep the car dry; if it gets wet, wipe it dry immediately. Use and store the car only in room temperature environments. Handle the car carefully; do not drop it. Keep the car away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new. If your car is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the car's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

FCC information

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product: Catapult Stunt RC
Model: 60-4397
Responsible Party: RadioShack
100 Throckmorton
Fort Worth, TX 76102
Phone: 817-415-3200

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your stunt rc.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

limited 90-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. For complete warranty details and exclusions, check with your local RadioShack store.

RadioShack Customer Relations
200 Taylor Street, 6th Floor, Fort Worth, TX 76102
04/04



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>