

PRO-2021 Scanner  
(200-0113)

Operation

Faxback Doc. # 31132

## Programming Frequencies

1. Select the desired channel.
2. Press [PROGRAM] to enter the programming mode.
3. Enter the desired frequency.
4. Press [ENTER].

## Selecting the Channel

### Step 1:

1. Press [MANUAL]. Continue pressing until the display shows Channel 20. Press [PROGRAM].
2. Press [2][0][MANUAL]. Press [PROGRAM]. (or press [PROGRAM], press [2][0], press [PROGRAM]).

### Step 2:

Press the keys (example 162.55)

### Step 3:

Press [ENTER]. To program the next frequency, move to another channel in this way. Press [PROGRAM] to advance to the next channel. Repeat the same steps to add more frequencies.

## SKIPPING BANKS

1. Turn the power on.
2. Press the number key that corresponds to the bank to be skipped.
3. The corresponding bank number indicator disappears from the display and the entire bank is skipped.

NOTE: To restore the banks, press the number key again.

## SEARCHING WITH YOUR PRO-2021

To search for transmission, press [PROGRAM], enter limits of frequency range, and press [up arrow] or [down arrow] to activate "search."

1. Press [PROGRAM].
2. Press [LIMIT].
3. Enter the lower limit of frequency range to be searched.
4. Press [ENTER].
5. Press [LIMIT].
6. Enter the upper limit of frequency range to be searched.
7. Press [ENTER].

Activate "search" by pressing [up arrow] or [down arrow]. [Down arrow] starts search from the highest frequency and goes down. [Up arrow] moves in the opposite direction.

Press [SPEED] to accelerate or to slow down the search.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>