

**R** RadioShack

## Automotive Surge and Spike Protector

270-1565

### Step One

The US Society of Automotive Engineers [SAE] has documented the existence of power surges and high voltage spikes on cigarette lighters and other 12-volt DC power outlet circuits. These potentially damaging spikes can be as great as 600 volts! Computers, TV's, DVD players, PDA's, cell phones, and other portable electronics can be damaged by these surges and spikes if unprotected. Protect your equipment by plugging the Automotive Surge and Spike Protector into your vehicle's cigarette lighter socket or power outlet. Then plug your equipment into the Protector.

This product complies with SAE Specification J1113-11 and ISO Specification 7637. Tests were performed by an independent testing laboratory verifying that the unit eliminated the potentially damaging surges and spikes identified in these specifications. Use of this product provides you with an assurance that your sensitive and valuable electronics are connected to a powerful, power-conditioning circuit that will divert damaging high voltage spikes. The three outlets can carry a combined 12-volt DC load of 10 amps and are protected by a replaceable 15-amp fuse. For best results, follow the Installation and Use instructions.



### Step Two

#### Installation and Use

1. Insert the power plug firmly into the vehicle's 12-volt cigarette outlet or other 12 volt-DC power source.
2. The green LED should light. If not, try turning the vehicle's ignition switch to the "On" or "Accessory" position. Some vehicles turn off all 12-volt circuits when the key is turned off.

*If you are using a cigarette lighter receptacle and the LED still does not light, check the cigarette lighter circuit to see if the lighter heats up. Push the lighter into the receptacle until it latches. If the lighter does not heat up and pop out after 30 seconds, you may have a defective lighter or a blown fuse in the lighter circuit. Refer to your vehicle owner's manual for the fuse location and replacement procedure.*

*If you are using a separately provided 12-volt DC power outlet and the LED does not light, check the fuse in the circuit by referring to your owner's manual for the fuse location and replacement procedure.*

3. If the LED goes out, the adapter's surge and spike protection circuits are not working. Check the adapter's replaceable fuse and if blown, replace with the same type of 15-amp fuse. Replace the fuse by pressing in the tip, rotating it, then pull to remove.



4. Before using the adapter, unplug all items connected to the adapter. Connect your products one at a time to see if one of the products is causing the fuse to blow. If the fuse blows immediately after inserting the product's adapter plug into an outlet, replace the fuse in the adapter and have the product repaired.
5. If the green LED turns off after normal operation, the surge and spike protector has experienced a powerful surge and has protected your equipment. In doing so, the protection circuitry has been depleted and the surge and spike protector must be replaced to continue protecting your equipment.

## LIMITED ONE-YEAR WARRANTY AND CONNECTED EQUIPMENT GUARANTEE

LIMITED WARRANTY -- This surge protector product is warranted by RadioShack to the original purchaser against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase (the "Warranty Period") from RadioShack company owned stores and authorized RadioShack franchisees and dealers. In the event of a covered product defect during the Warranty Period, RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by surge protector repair without charge for parts and labor; (b) replace the surge protector with one of the same or similar design; or (c) refund the purchase price of the surge protector.

CONNECTED EQUIPMENT GUARANTEE -- RadioShack warrants to the original purchaser of the surge protector that if any electronic equipment (the "Connected Equipment"), which is properly installed and connected (as defined below) to the surge protector and is damaged during the Warranty Period by a transient voltage surge/spike from the DC automotive power system, that enters the Connected Equipment through the surge protector, RadioShack will reimburse to the original purchaser of the surge protector the lower of the: (a) Connected Equipment repair charges; (b) purchase price of equipment comparable (as determined by RadioShack) to the Connected Equipment; or (c) original purchase price of the Connected Equipment, up to a maximum of two thousand five hundred U.S. dollars (\$2,500.00) (the "Equipment Limit"). The Connected Equipment Guarantee does not cover data loss or any other damages excluded in the all capitalized paragraph below. In order to qualify for Connected Equipment reimbursement, the surge protector must be returned to RadioShack and inspection of the surge protector must show its protection capacity was exhausted by a surge. "Properly installed and connected" means the surge protector must be plugged directly into a properly wired 12VDC automotive cigarette lighter socket, and no more than one piece of Connected Equipment may be connected to any one surge protector outlet. All power wires leading into the Connected Equipment must be plugged into the surge protector. The total current draw from the Connected Equipment must not exceed the surge protector rating.

This Limited Warranty and Connected Equipment Guarantee applies only to the original purchaser of the surge protector.

EXCEPT AS PROVIDED HEREIN, RADIOSHACK MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY OR CONNECTED EQUIPMENT GUARANTEE, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

To make a claim for surge-induced damage to Connected Equipment, you must:

1. Call RadioShack at (866) 447-2326 for a return authorization number during the Warranty Period. Under no circumstances will a claim for surge-induced damage to Connected Equipment be accepted without a return authorization number;
2. Have any surge-induced, damaged Connected Equipment repaired (or get an estimate for repair) by a service center authorized by the manufacturer of the Connected Equipment unless the service center determines that the Connected Equipment is not repairable or that the cost of repair will be more than the purchase price of comparable replacement equipment. If the Connected Equipment is not to be repaired, get a written quotation for the purchase price of comparable replacement equipment. In no event will RadioShack reimburse more than the Equipment Limit. The repair bill or estimate from the authorized service center must indicate that the damage to the Connected Equipment was surge-induced; and
3. Ship the original surge protector, postage prepaid to: RadioShack CEG, 5404 Touhy Avenue, Skokie, IL 60077. Include: (a) your name, address and daytime telephone number; (b) the original or a photocopy of the sales receipt for the surge protector; (c) a brief description of any problem with the surge protector; (d) a brief description of how the damage to the Connected Equipment occurred; (e) the original authorized service center repair bill or estimate documenting that the damage to the Connected Equipment was surge-induced; and (f) if replacement equipment is to be purchased, the original or a photocopy of the quotation for comparable replacement equipment and the authorized service center repair estimate must contain a statement that the Connected Equipment is not repairable or that the cost of repair will be more than the purchase price of comparable replacement equipment.

If RadioShack determines that damage to Connected Equipment is covered, RadioShack will reimburse, up to the Equipment Limit amount defined herein, to the original purchaser of the surge protector the lower of the: (a) repair charges; (b) purchase price of comparable replacement equipment; or (c) the original purchase price of the Connected Equipment. In addition, in the event of a covered product defect during the Warranty Period, RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by surge protector repair without charge for parts and labor; (b) replace the surge protector with one of the same or similar design; or (c) refund the purchase price of the surge protector.

To make a warranty claim for a defect in the surge protector without a claim for surge-induced damage to Connected Equipment, you must, during the Warranty Period, take the surge protector and the RadioShack sales receipt as proof of purchase date to any RadioShack store.

All replaced parts, products, and Connected Equipment and products and Connected Equipment on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts in surge protectors and replacement surge protectors are warranted for the remainder of the Warranty Period. You will be charged for repair or replacement of the product made after the expiration of the Warranty Period.

This Limited Warranty and Connected Equipment Guarantee does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning; (b) any repairs other than: (i) surge protector repairs provided by a RadioShack Authorized Service Facility; and (ii) reimbursement of the cost of initial repairs to Connected Equipment performed by a service center authorized by the manufacturer of the Connected Equipment; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product or Connected Equipment removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations  
200 Taylor Street, Sixth Floor  
Fort Worth, Texas 76102

We Service What We Sell

### What's Included

3-Outlet Adapter

©2003. RadioShack Corporation.  
All Rights Reserved.  
RadioShack and RadioShack.com are  
trademarks used by RadioShack Corporation.

270-1565  
Printed in China  
06A03

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>