



Cat. No. 43-3201

## Compact Fashion Phone

### READ THIS FIRST



We have designed your telephone to conform to federal regulations and you can connect it to most telephone lines. However, each device you connect to the phone line draws power from it. This power draw is the device's Ringer Equivalence Number, or REN. The REN is on the bottom of your phone.

If you are using more than one phone or other device on the line, add up all the RENs. If the total is more than five (or three in rural areas) your phones might not ring. If the ringer operation is impaired, remove one of the devices from the line.

If your phone causes problems on the phone line, the phone company can disconnect your service. The phone company tries to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

The phone company can also make changes to its lines, equipment, operations, or procedures that could affect the phone's operation. The phone company notifies you in advance, so you can take the necessary steps to prevent interruption of your phone service.

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
<p><b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.</p>		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

© 2000 Tandy Corporation.  
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

## FCC STATEMENT

Your telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your telephone company. These numbers are on the bottom of your phone.

**Note:** You must not connect your telephone to:

- coin-operated systems
- party-line systems
- most electronic key phone systems

## SETUP

 
Plug the handset cord into the jacks on the handset and on the base's side.

If you want to place the phone on a desk, plug one end of the supplied long telephone cord into the jack on the bottom of the base. Press the cord into the channel provided to keep it out of the way. Plug the cord's other end into a modular phone jack.


If you prefer a wall phone to a desk phone, you can mount the phone on a wall plate or directly on a wall.

### Wall Mount with Wall Plate

1. To mount the phone on a wall plate, plug one end of the supplied short telephone cord into the jack on the bottom of the base.

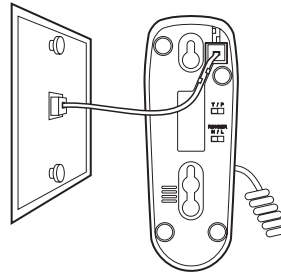


 
2. Plug the cord's other end into the modular jack in the wall plate.
3. Fit the wall-plate studs into the key-hole slots on the bottom of the phone's base, then slide the phone down until it is secure.
4. Before you hang up the phone's handset, slide up the handset holder to remove it, turn it over so its tabbed edge faces up, then slide it back down into its slot.

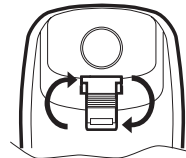

### Wall Mount without Wall Plate

1. To mount the phone directly on a wall, drill two holes  $3\frac{15}{16}$  inches apart as shown, then thread a screw (not supplied) through each hole, letting the head extend about  $\frac{1}{8}$  inch from the wall.

  **Note:** Be sure to use screws with heads that fit into the keyhole slots on the bottom of the phone.

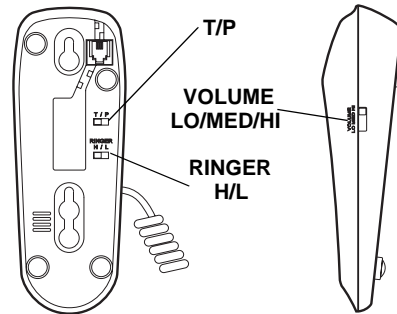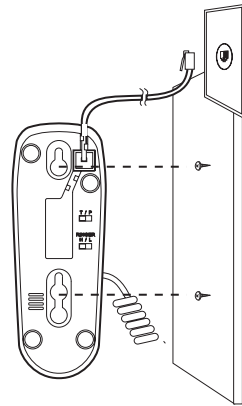

2. Plug one end of the supplied long telephone cord into the jack on the bottom of the base.
3. Plug the cord's other end into a modular phone jack.
4. Line up the keyhole slots with the screws in the wall, then slide the phone down until it is secure.
5. Before you hang up the phone's handset, slide up the handset holder to remove it, turn it over so its tabbed edge faces up, then slide it back down into its slot.

**Note:** The USOC number of the jack to be installed is RJ11C (RJ11W for a wall plate jack).

## USING THE PHONE

Set the ringer volume by sliding **RINGER** to **H** (high) for a louder ring in a noisy room, or to **L** (low) for a softer ring in a quiet room.

Set **T/P** to **T** (tone) or **P** (pulse) to match the type of service you have.

Set **VOLUME** to **LO** (normal), **MED** (medium), or **HI** (high) for a comfortable listening level.

Press **REDIAL** to dial the last number dialed.

**Note:** If you will be redialing a number preceded by an access code (9, for example), dial the access code, press **PAUSE**, then dial the number.

Press **FLASH** to perform the switchhook operation for special services, such as Call Waiting. If you do not have a special phone service, pressing **FLASH** might disconnect the current call.

**Note:** The redial memory does not store a **FLASH** entry or any digits entered before you press **FLASH**.

## CARE

To enjoy your phone for a long time:

- Keep the phone dry. If it gets wet, wipe it dry immediately.
- Use and store the phone only in normal temperature environments.
- Handle the phone gently and carefully. Do not drop it.
- Keep the phone away from dust and dirt.
- Wipe the phone with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the phone's internal components can cause a malfunction and invalidate its warranty. If your phone is not performing as it should, take it to your local RadioShack store for assistance. If the trouble is affecting the telephone lines, the phone company can ask you to disconnect your phone until you have resolved the problem.

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

01A00

Printed in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>