READ THIS FIRST

We have designed your telephone to conform to federal regulations and you can connect it to most telephone lines. However, each device you connect to the phone line draws power from it. This power draw is the device's *ringer equivalence number*, or REN. The REN is shown on the bottom of your phone.

If you are using more than one phone or other device on the line, add up all the RENs. If the total is more than five (or three in rural areas) your phones might not ring.

If ringer operation is impaired, remove one of the devices from the line, or contact your local telephone company for information about boosting the ringer power on the line.

If your phone causes problems on the phone line, the telephone company can disconnect your service. The phone company tries to notify you in advance. If advance notice is not practical, the telephone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC

The phone company can also make changes to its lines, equipment, operations, or procedures that could affect the phone's operation. The phone company notifies you in advance, so you can take the necessary steps to prevent interruption of your phone service.

FCC STATEMENT

Your telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your telephone company. These numbers are shown on the bottom of your phone.

Note: You must not connect your telephone to:

- Coin-operated systems
- Party-line systems
- · Most electronic key phone systems

CARE

- Keep the phone dry.
- · Handle the phone carefully. Do not drop it.
- Do not use or store the phone in temperature extremes.
- Keep the phone away from dust and dirt.
- Do not modify or tamper with the phone's internal components. Doing so might invalidate the phone's warranty and void your FCC authorization to operate it. If the phone is not operating as it should, take it to your local Radio Shack store for assistance. If the trouble is harming the phone lines, the phone company might ask you to disconnect the telephone until you fix the problem.

Radio Shaek

Cat. No. 43-812 Owner's Manual

RADIO SHACK LIMITED WARRANTY

This telephone product is warranted against manufacturing defects in material and workmanship for one (1) year from the date of purchase from Radio Shack company owned stores and authorized Radio Shack franchisees and dealers. Within this period **bring your Radio Shack sales slip** as proof-of-purchase date to any Radio Shack store. This warranty does not cover damage or failure caused by or attributable to Acts of God, abuse, misuse, improper or abnormal usage, faulty installation, improper maintenance, lightning or other incidence of excess voltage, or any repairs other than those provided by a Radio Shack Authorized Service Facility, or transportation costs.

Radio Shack is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to loss of property, loss of revenue or profit, or costs of removal, installation or reinstallation.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO EXPRESS WARRANTIES, AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES SET FORTH HEREIN. Some states do not allow the limitation or exclusion of incidental or consequential damages and some states do not allow limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

There will be charges rendered for repairs to the product made after the expiration of the aforesaid one (1) year warranty period.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

ET-205 Big Button Fashion Fone

n Big Buttons for Easy Dialing
n Hold Button and Indicator
n Tone or Pulse (Rotary) Dialing
n Redial

RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102
Printed in Taiwan

4A4

Interface Loop Start

Ringer......Standard Bridged Ringer 20–60 Hz Sine or Square Wave 40–135 Volts Ring Signal

We supply this information to help you answer possible

OPERATING PARAMETERS

technical questions from your phone company.

Current 20-80 mA (Off Hook)

MOUNTING THE PHONEDesk Mounting

Modular Telephone Jack

Wall Mounting (With or Without Wall Plate)

Wall Plate

Short Line Cord (Not Supplied)

Line Cord

To Jack

Handset Holder (Wall Mounting)

- 1. Pull out.
- 2. Rotate 180°.

Note: The phone company can charge you for the installation of the necessary jacks. The USOC number of the jacks to be installed is RJ11C (RJ11W for a wall jack).



CAUTION
RISK OF ELECTRIC SHOCK





This symbol is intended to alert you that parts inside the telephone present a risk of electric shock.




This symbol is intended to alert you to important operating and servicing instructions included in the papers with the telephone.

USING THE PHONE

Set **RINGER** to **HI** in a noisy room. Set it to **LOW** in a guiet room.

Switch to **TONE** or **PULSE** to match the type of service you have. If you have pulse (rotary) service, you can switch to **TONE** during a call to use tone services.

(Back of Telephone)

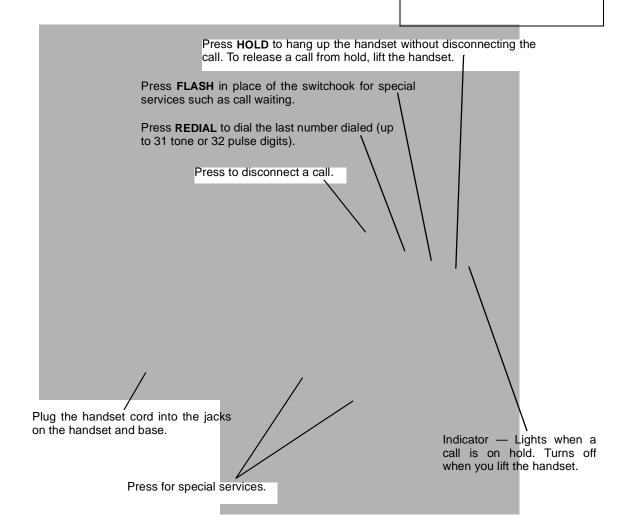

© 1994 Tandy Corporation.

All Rights Reserved.

Radio Shack is a registered trademark used by Tandy Corporation.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com