

READ THIS FIRST

We have designed your telephone to conform to federal regulations and you can connect it to most telephone lines. However, each device you connect to the phone line draws power from it. This power draw is the device's *ringer equivalence number*, or REN. The REN is on the bottom of your phone.

If you are using more than one phone or other device on the line, add up all the RENs. If the total is more than five (or three in rural areas) your phones might not ring. If ringer operation is impaired, remove one of the devices from the line.

If your phone causes problems on the phone line, the telephone company can disconnect your service. The phone company tries to notify you in advance. If advance notice is not practical, the telephone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

The phone company can also make changes to its lines, equipment, operations, or procedures that could affect the phone's operation. The phone company notifies you in advance, so you can take the necessary steps to prevent interruption of your phone service.

FCC STATEMENT

Your telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are on the bottom of your phone.

Note: You must not connect your telephone to:

- coin-operated systems
- party-line systems
- most electronic key phone systems

CARE

- Keep the phone dry.
- Handle the phone carefully. Do not drop it.
- Use and store the phone only in normal temperature environments.
- Keep the phone away from dust and dirt.
- Modifying or tampering with the phone's internal components can cause a malfunction and invalidate its warranty and void your FCC authorization to operate it. If the phone is not performing as it should, take it to your local RadioShack store for assistance. If the trouble is affecting the phone lines, the phone company can ask you to disconnect your telephone until you have resolved the problem.



RadioShack®

ET-886 Compact Telephone with Headset Jack

n Space-Saving Design

n Headset Jack

n Handset Volume Control

n Redial

n Tone or Pulse (Rotary) Dialing

n Adjustable Ringer

n Flash

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W,
100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

Owner's Manual

Cat. No. 43-886

INSTALLING THE PHONE

Desktop Mounting

Modular Telephone
Jack

Wall Mounting

(With or Without Wall Plate)

Handset Holder (Wall Mounting)

Slide the clip up. Rotate it,
then slide it back into the
slot.

Note: The USOC number of the jack to be installed is RJ11C (RJ11W for a wall jack).



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



This symbol is intended to inform you
that parts inside the telephone present
a risk of electric shock.



This symbol is intended to alert you to
important operating and servicing
instructions included in the papers with
the telephone.

USING THE PHONE

Press **FLASH** to produce a timed
switchhook signal for special ser-
vices such as call waiting.

Note: If you do not subscribe to
any special services, pressing
FLASH might disconnect the call.

Set to **TONE** or **PULSE** to match
the type of service you have.

If you have pulse (rotary) service,
you can switch to **TONE** during a
call to use tone services.

Press **REDIAL** to dial the
last number dialed (up to
32 digits).

Plug the handset cord into
the jacks on the handset and
base.

To make or answer a call using a headset, lift
the handset and place it beside the base, then
press **HEADSET**. Then (if you are making a
call), dial the phone number. To end a call,
press **HEADSET** again and replace the hand-
set.

To immediately redial or place another call
when you finish a call, press **HEADSET** then
the switch hook to disconnect the phone call.
Then press **HEADSET** again and press
REDIAL or dial the number.



© 1998 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

Use this phone as you
would most other phones
to make and answer calls.

Press the switchhook to
disconnect a call.

Set **RINGER** to **OFF**,
LOW, or **HI**. You can
make calls with the
ringer off, and you can
answer calls if you hear
another phone on the
same line ringing.

Set **VOLUME LO/**
MED/HI to adjust the
volume you hear
through the hand-
set.

The headset indicator
lights when you make
and receive a call
using the headset,
and turns off when you
end a call.

The headset jack (🎧) lets you
connect an optional headset so
you can step away within the
cord's reach to do another job.
We recommend RadioShack Cat.
No. 43-195.

To connect a headset, insert the
headset's $\frac{3}{32}$ -inch (2.5-mm) plug
into 🎧.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>