

Golf Scorekeeper Watch

63-5086

OWNER'S MANUAL — Please read before using this equipment.


! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning
📌 — Note

⚡ — Caution
! — Important

Thank you for purchasing the RadioShack Golf Scorekeeper Watch. This useful, water resistant sports tool helps keep score for your golf game. It includes a clock display with daily alarm and hourly chime signal, a chronograph with a working range of 24 hours and $\frac{1}{100}$ second resolution. Its handy backlight eliminates the problems of reading the display in poor lighting.

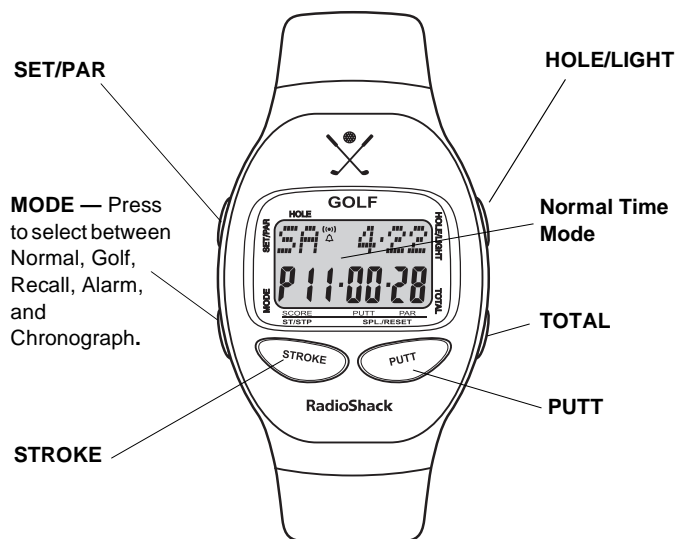

OPERATION

Your watch has a Normal Time Mode, a Golf Mode, a Recall Mode, an Alarm Mode and a Chronograph Mode (stopwatch). Repeatedly press **MODE** to select the desired mode.

SETTING THE TIME

1. To set the time, select the normal time mode.
2. Hold down **SET/PAR** for 2-3 seconds. The second digits flash.
3. Repeatedly press **MODE** to select the hour, minute, month, date, week or second.

When setting the second digits, press **STROKE** or **PUTT** to reset the digits to **00**.

4. Press or hold down **STROKE** or **PUTT** to advance through the digit(s).
5. Press **SET** to confirm.

12/24 Hour Format

1. To choose between the 12 and 24 hour format, select the normal time display mode.
2. Press **TOTAL** to switch between the 12-hour and the 24-hour format.

In the 12-hour time display format, **A** (AM) or **P** (PM) appears before the hour.

SCORING YOUR GAME

This watch scores 18 holes of golf. You may record strokes, putts and par for each hole of the current game and memories of **FRONT (FRONT)**, **BACK (BACK)** and **FINAL (FINAL)** for up to a total of 50 games. Results for **TOTAL (TOTAL)**, **FRONT**, **BACK** and **FINAL** can be recalled at any time.

1. To keep score, select golf mode. **GOLF** appears on the left of middle row.
2. Repeatedly press **SET/PAR** to set par as 3, 4 or 5 for the first hole.
3. Press **STROKE** for each stroke and press **PUTT** for each putt. The counter displays up to 50 strokes and 5 putts for each hole.
4. Press **HOLE/LIGHT** to start a new hole. The counter records up to 18 holes.
5. To set par for the new hole, repeat step 2.

The counter automatically totals the strokes and putts for all of the holes, so you can see your scores at any time.

Repeatedly press **TOTAL** to review current scores of **TOTAL** (the number of strokes for the entire game prior to the final stroke), **FRONT** (the first nine holes), **BACK** (the second nine holes) or **FINAL** (the completed eighteen holes).

Hold down **HOLE/LIGHT** for 2-3 seconds to save the current game and start a new game. **SAVED** appears shortly on the upper row of the display.

NOTE

Setting the Time

When you press the **STROKE** or **PUTT** to reset the second digits, if the count is 30 or more the minute advances by one. If the count is less than 30, the minute does not change.

Scoring Your Game

- After 50 games have been saved into memory, additional saved games replace the oldest previously saved games in sequence. For example, when a new game (the 51st game) is saved, it becomes the 50th game. The game in the first memory slot is deleted, and all other games move up one memory slot number.
- Hold down **STROKE** and **PUTT** to decrease the digit(s) for wrong entry.
- To turn on the backlight, press **HOLE/LIGHT** in any mode except the golf mode. The backlight will come on for about three seconds.



RadioShack
www.radioshack.com

© 2002 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

⚠ WARNING ⚠

- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

⚡ CAUTION ⚡

Use only a fresh battery of the required size and recommended type.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

Recalling the Records

1. To review the records of your previous games, select the recall mode. **RC** appears on the center of the upper row, or **NO REC** appears if there is no record.
2. Press **STROKE** to recall the previous game or press **PUTT** to recall the next game.
3. Press **TOTAL** to move through FRONT, BACK or FINAL records of the recalled game.

You can also delete game records in the recall mode.

1. To delete a record, hold down **SET** for 2-3 seconds. **CLR** appears on the right upper corner of the display.
2. Press **SET** to delete the current record.

To cancel deletion, press **STROKE** or **PUTT** while **CLR** appears.

Setting the Alarm

1. To set the watch's alarm, select the alarm mode. **AL** appears on the left upper corner of the display.
2. Hold down **SET** for 2-3 seconds. The hour digit flashes.
3. Press or hold down **STROKE** or **PUTT** to increase the digit(s). Then press **MODE**, the minute digits flash.
4. Press or hold down **STROKE** or **PUTT** to increase the digit(s).
5. Press **SET** to confirm. **(^o)** appears automatically.
6. Repeatedly press **TOTAL** to turn on or off alarm or chime function. **(^o)** and **⏰** appear or disappear accordingly. A chime signal sounds every hour if **⏰** appears.

The alarm sounds at the alarm time for 20 seconds, press any button to silence the alarm.

USING THE CHRONOGRAPH

1. To use the stopwatch, select the chronograph mode. **CH** appears on the left upper corner of the display.
2. To reset the stopwatch, press **PUTT** while the stopwatch is not counting.
3. To start the stopwatch counting from zero, press **STROKE**.
4. To take the split time, press **PUTT** (**SPL** appears).
5. To continue the original counting, press **PUTT** again (**SPL** disappears).
6. Press **STROKE** to stop the counting, and press again to continue.

Replacing the Battery

The watch comes with one CR 2025 type lithium button-cell battery for power. When the screen looks dim or the sound becomes weak, replace the battery. All records are cleared when the battery is removed.

For the best performance and longest life, we recommend a RadioShack lithium battery. **⚠ ⚡**

1. To replace the battery, place the watch on a solid surface with the display facing down.
2. Hold the watch firmly and use a small, flat-blade screwdriver (not supplied) to press the spring-bars inwards, and remove the watchband.
3. Use the screwdriver to remove the four screws from the watch's back cover, then remove the cover.
4. Use the screwdriver to remove the screw from the battery cap, then remove the cap.
5. Remove the old battery and install the new one, positive (+) side facing up.
6. Replace the cap and cover and secure them with screws.
7. Hold the watch firmly, and use the screwdriver to slide the spring-bars into their holes on the watch to secure the watchband.

CARE

Keep the watch dry; if it gets wet, wipe it dry immediately. Use and store the watch only in normal temperature environments. Handle the watch carefully; do not drop it. Keep the watch away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your watch is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the watch's internal components can cause a malfunction and might invalidate its warranty.

SPECIFICATIONS

Power	One CR2025 3V Button Cell
Battery Life	One Year
Accuracy	±0.67 Sec/Day
Dimensions (w/o band) ..	21/16 × 19/16 × 1/2 Inches (52 × 40 × 13 mm)
Accessories	Golf Tees (2 pcs)
.....	Ball Markers (2 pcs)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>