Safety Information English

BLUE wire to the terminal coded N (Neutral) or coloured black.

DO NOT make any connection to the terminal in the plug

ymbol or coloured green or green and yellow.

Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

Have a Blast - Just Not in Your Eardrums!

Make sure you turn down the volume or the unit before you put on headphones. Increase the volume to the desired level only after headphone are in place.

Connecting the Speakers

The speaker connection jacks are located on the back of the unit.

When connecting the speakers, match the red wires to the red jacks and the black wires to the black jacks.

13

Speaker Wire Connection

Using the Antenna

AC & DC Power Input

Listening to Radio

Press ON/ECO to switch on the unit.

Press ON/ECO to switch on the unit.
 Press SOURCE to select TUNER mode.
 Press BAND (or Band+APP on the remote control) to select radio band.
 Press I or I be to tune down or up radio frequency. Press and hold for automatic channel search, "ATUO" shows on the display when searching is in progress.

Push Speaker terminal tab down to insert wire. Release tab to lock wire in the terminal.

NOTE: Make sure the insulation is completely removed from the ends of the speaker wires at all connection points.

Before you use your audio system, you'll want to make sure the FM antenna is positioned properly. The FM antenna is the coiled wire connected to the back of the unit. Uncoil it, making sure it is fully

back of the unit. Uncoll it, making sure it is fully extended (you may even want to tape if to the wall behind the unit, if possible. The higher, the better.) You'll also need to connect the AM antenna loop to the back of the unit if you listen to AM stations. Rotate the AM loop antenna for better reception.

Make sure you have connected all cables before

plug in. For AC power, connect the power plug to an AC power outlet (230V~50Hz).

Note: DC power input will be disconnected whenever AC power is connected. Do not connect both DC and AC power at the same time.

You can also power the unit with a 12V DC adapter (not included). Connect the adapter to the input jack at the back of the unit.

or coloured red.

which is marked by the letter E or by the earth

3A - (8)

0

For UK Only

CONNECT THE MAIN LEAD INTO A MAINS POWER SOCKET POWER SUPPLY 230V. It must not be

connected to D.C. mains Note: The mains lead of the set is fitted

Note: Ine mains lead of the set is fitted with a moulded plug. If the mains socket are not compatible or if for any reason the plug is removed please follow the directions below. The moulded plug cannot be rewired and if removed must be disposed of safely.

<u>DO NOT</u> under any circumstances plug the severed plug into any mains socket as this could result in electric shock.

Important: If the plug is removed, rewire the new plug as follow: The wires in the mains plug are coloured in accordance to the following code:

BLUE = NEUTRAL/BROWN = LIVE

CAUTION!

Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam. laser beam. LASER λ = 780 nm, P max = 5 mW Rating Information: At bottom/rear of the unit. This unit comply with the existing requirements

In accordance with the rating plate of the unit, this unit complies with current standards concerning electrical safety and electromagnetic compatibility.


Before You Begin

Unpacking Your System

You should have: • One main unit (with 2 speakers); • One remote control; One user's guide;
One Thomson Warranty Card

Installation

To ensure sufficient ventilation, keep the spacing shown as below:

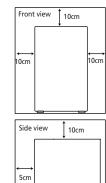

Quick Start

Refer to the following for basic playback and radio listening. For detailed operations and more advanced features, please refer to relevant sections.

Listening to CD/mp3/WMA Discs


- Press ON/ECO to switch on the unit. Press SOURCE to select CD mode Press OPEN on the top of the unit to open
- Press OPEN on the top of the unit to open the CD compartment door.
 Insert up a disc with the label facing up.
 Close the CD compartment door.
 Wait while the unit reads and counts the total number of songs on the disc.
 If the CD compartment is not loaded with a CD or the CD is unreadable, "disc" flabsc on the disclass.

- flashes on the display.6. Press > II to start playback. Press again to
- Press ▶■ to start playback. Press again to pause playback and again to resume. If the song is a mp3 or WMA file, the mp3 or WMA icon lights on the display. During playback, elapsed playback time and current track number show on the disclay to the method.
- lisplay alternately Press et or be to select previous or next track / file. Press and hold to search through the disc while it is playing.
- 8. Press to stop playback.

Safety Information

If the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: This symbol means that your X inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which manufacturers are BROWN wire to the terminal coded L (Live) nsible

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused.

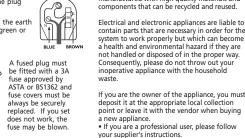

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying If you are a professional user, please follow your supplier's instructions.
If the appliance is rented to you or left in

your care, please contact your service provider Help us protect the environment in which we live!

Main plug is used as the disconnect device, it shall remain readily operable and should not be obstructed during intended used. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

SOURCE – Selects CD, tuner and AUX mode. Here I are a skips backward or forward track/ file; searches down or up radio frequency.

me Control Knob - Adjusts volume.

AUX IN - Remove the cover and insert external audio cables to L (left channel cable) and R

(right channel cable). Ω - Remove **AUX INPUT** cover for insertion of headphones.

OPEN - Press to open the CD compartment

III - Starts and pauses playback.

Stops playbacκ.
 BAND – Selects radio band.

Top View

Front View



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION

AND INTERLOCKS FAILED

*

AV KLASS

General Controls

Refer to the actual unit or remote control while you are reading below descriptions. **Remote Control**

ON/ECO – Turns on/off the unit. **ON/ECO** – Turns on/off the unit. Remember to unplug the power cord from the power outlet if you are not going to use the system for some

ON/ECO - Turns on/off the unit. Vol - Adjusts volume. ■ - Stops playback. >■ - Stops playback. >■ - Starts and pauses playback. >■ - Starts - Starts and prediction of the starts and set of

- Prog•Set Enters program mode; confirms Band-APP - Selects band in tuner mode; starts
- Band-APP Selects band in tuner mode, starts auto-preset programming. Source Selects CD, tuner and AUX mode. Repeat Selects repeat playback modes. © Turns on or off random playback. Intro. Turns on or off fards sampling. Alarm On/Off Turns on or off alarm function. Adj Time Enters clock time adjusting mode. Adj Alarm Enters alarm time adjusting mode.

OPEN – Press to open the CD compartment door. Push the door downward to close it. ALARM - Press once to check alarm time, press and hold to switch on or off alarm function. DISPLAY - Press once to select analogue or digital clock display. Press and hold to activate or deactivate dimmer function. ADJUST - Adjusts clock and timer. Press and hold to change display background colours. **Installing Batteries**

The remote control must be inserted with 2 "AAA" or "LR03" batteries prior use.

Notes on mp3/WMA Disc: • Use .mp3 as the extension when converting audio files into mp3 for saving onto CD-R(W) or CD-ROM, e.g. Abc08.mp3. Do not use any other extension e.g. .doc, .pdf. • Do not use the .mp3 extension for other text or non-audio data files as this may result in serious malfunction and harmful noise interference.

Setting Timer

- 1. Press ALARM and ADJUST together (or
- display.
 Press ➡ or ➡ to set the hour.

CD Playback

Sampling Tracks Creating and Playing Programs

During playback, press **Intro** on the remote control to turn on or off intro mode which plays the beginning 10 seconds of each track / file. "Intro" shows on the display when orthineted A maximum of 30 tracks can be programmed. In stop mode, press Prog-Set on the remote contorl. "Pr: 01" (first program position) shows on the display followed by "00".
 Press +ed or D+ to select a track / file to be stored into memory location 1.
 Press Prog-Set to confirm your selection and store that track into memory. The next available memory locations shows on the display. Repeat step 2 and this step to store additional tracks. In program mode, the PROG. icon lights on the display.
 When finished programming, press ►II to start playback of the program.

Clock / Playback Display

During playback, press **Display** on the remote control to select among analogue clock, digital clock and playback information displays.

serious main unclining and narmal in hoise interference. • For better quality in mp3 disc playback, the CD quality should be recorded 128kbps or above. • Disc data size > 650MB is not recommended. • Total files should not exceed 100. It also depends on the length of the file/folder names. • For mixed mode discs, only one mode will be selected for playback depending on the recording format. Selecting Folders (mp3 / WMA discs only)

 To ensure good performance, wait until the disc changer completely reads the disc before Press Folder / Preset (up / down) on the remote control to go to the next or previou non-empty folder.

Press Prog-Set repeatedly to view program list. To edit program location, press Prog-Set until the location you want to edit is displayed.
 Press H or D → to select the new track to be

View and Edit Program List

stored.
 Press Prog•Set to confirm.

Deleting Programs

Playback modes Clock functions

Record functions

AM or PM time

Sound sources

File formats

10. Radio bands

12. FM stereo

6

EQ and bass effects

lapsed playback time

3 Press ADJUST (or Adi Alarm on the remote Press ADJUST (or Adj Alarm on the renote control) to move to the minute digits.
 Press ADJUST (or Adj Alarm on the remote

control) to move to source selection. "SC" shows on the display for source selection. Press ⊯ or ▶ to select source (CD, Tuner or

Press Press for PPF to select source (CD, Tuner or Buzz). Corresponding source icon shows on the display (Buzz as "SC:bU")
 Press ADJUST (or Adj Alarm on the remote

control) to move to volume setting. 8. Press ➡ or ➡ to set the volume. If source is

selected as buzz, volume setting is not possible 9. Press ADJUST (or Adj Alarm on the remote


control) to confirm settings. • Timer will be activated automatically after

settings are finished.

11. Playback in progress

Radio frequency units Digital clock time, track or file number,

Press and hold
to clear program list and "clr"

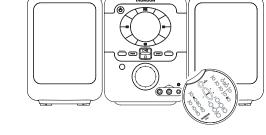

THOMSON

EN/F

Display

Two clock display modes are

available: analogue and digital. Press **DISPLAY** to

witch between the two

of the analogue clock, "P' stands for PM time, "A"

stands for AM time

display

X-Bass

display modes. At the center

It is important to read this instruction book prior to using your new product for the first time

Clock and Timer

Activating the Timer

Press and hold ALARM (or Alarm On/Off on You can select the time interval in minutes before the unit turns off automatically. rress and noid ALARM (or Alarm On/Off on the remote control) on the main unit to activate and deactivate the timer function. "ALARM" shows on the display when activated. Timer cannot be set or activated if clock time is not set. Follow instructions under "Setting Clock" to set clock.

Sleep Function


Press Sleep on the remote control to select among OFF, 90, 80, 70, 60, 50, 40, 30, 20, and 10 minutes. "SLEEP" icon flashes on the display when actiavted.
When sleep is activated, press Sleep once to view remaining sleep time in minutes.
Press Sleep again when the remaining sleep time is displayed to change sleep time.

user

CS66

manual

- **Analogue and Digital Clock**

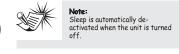

Special Features

Preset Equalizer Curves

Press **Preset EQ** on the remote control to toggle among FLAT, JAZZ, ROCK, POP and CLASSICAL. The selection is highlighted on the Press and hold **DISPLAY** on the top of the unit to change the brightness level of the display.

Changing Display Colors


Press and hold ADJUST on the top of the unit to


Changing Display Brightness


Press **X-Bass** on the remote control to turn on/ off the x-bass feature. The X-Bass icon is displayed.

CD Playback mp3/WMA Playback Sequence

- Refer to the diagram below for playback sequence details on multi-level folder structure. Songs are played before playing songs placed in folders at each level.
 - LEVEL 1 LEVEL 2 LEVEL 3 LEVEL 4 Song 1.1.1
 Song 1.1.2
 Song 1.1.3 Folder 1 Folder 1.1 6 Song 1.2.1.1 7 Song 1.2.1.2 8 Song 1.2.1.3 Folder 1.2.1 Folder 1.2 12 Song 2.1.1 13 Song 2.1.2 Folder 2 Folder 2.1 9 Song 2.2
 10 Song 2.3
 11 Song 2.4 Folder 3 (14) Song 3.1 (15) Song 3.2

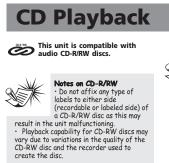

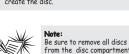

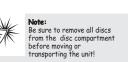

Repeat Playback

Display

THOMSON

92648 Bouloane Cedex FRANCE

5629 1530 (EN/F)


www.thomson.net

46, quai Alphonse Le Gallo

Prog Preset ALARM SLEEP Repeat 1 All Random Intro REC DEL 4 — Jazz Rock Pop Classical X-Bass mp3 WMA Stereo CD Tuner - 10

Clock and Timer

Setting Clock

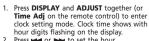

Press ADJUST (or Adj Time on the remote control) to shift to the minute digits. Press **ADJUST** (or **Adj Time** on the remote

control) to confirm the setting

Adj Alarm on the remote control) to enter timer setting mode. Timer on time shows with hour digits flashing on the

Random Playback

Basic Playback

Troub

Press (a) on the remote control to turn on or off random playback. "Random" shows on the display when activated

efer to "Quick Start" for basic playback.

Press Repeat repeatedly on the remote control to select, the corresponding icon shows on display when activated:

not be recognize

mp3 files in CD ROM EXTRA format disc

Repeat 1: repeat current song; Repeat All: repeat all songs No icon: normal playback

shooting Tips

shows on the display. The program list will also be cleared once the CD compartment door is opened



Note: • Folder playback sequence is indicated by the letters from A to G • Song playback sequence is indicated by the number 1 to 15 in front of the song name.

Radio

Basic Listening

Refer to "Quick Start" for selecting radio mode, band and searching channels

Auto Channels Preseting

Press and hold BAND (or Band-APP on the Press and hold **BAND** (or **Band-APP** on the remote control) to scan stations. A maximum of 30 stations can be stored. Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing the button. "Prog" icon flashes during programming. Press **Band-APP** to stop scanning.

Manual Channels Preseting

A maximum of 30 stations can be stored.

1. Press BAND (or Band • APP on the remote control) to select band.

3. Press **Prog-Set** on the remote control to enter pro iram mode

Auxiliary Input

Connecting External Device

Remove the AUX IN cover on unit front and insert audio cables (not included) to the L (left channel) and R (right channel) input jacks

4. Press Folder/Preset (up or down) to select a Problem So memory location (up to 30 memory locations). When you are selecting the preset location, the preset station number is flashing. 5. Press **Prog-Set** to confirm the setting. • C System will not turn on po، • Cl Listening to the Preset Channels plu Press **Folder/Preset** (up or down) on the remote control repeatedly to select your desired memory location. No sound **Suppressing Stereo Signal** Press **Stereo** on the remote control to switch between FM mono and stereo for FM broadcast. not If FM stereo reception is weak, select mono sound may reduce noise Poor radio reception

Selecting and Playing External

Press SOURCE to select AUX mode. Control playback

on your external device. Adjust volume by rotating the volume control knob on unit front.

Device

CD does not play • Ch faci • Ch not • Cł

sele • Us Clean the disc Try another disc

Diesnooting lips				
Solution	Problem	Solution		
 Check power cord for a secure connection. Unplug the unit for a moment, and then plug into power source again. Check the outlet by plugging in another device. Increase the volume setting. Check connection to 	a scratches, or other da ug into c.Check disc for warpi scratches, or other da or Check if something the system to vibrate move the system. • Make sure the speal least 3 feet away or o different surface from unit.	 Check disc for warping, scratches, or other damage. Check if something is causing the system to vibrate. If so, move the system. Make sure the speakers are a least 3 feet away or on a different surface from the mai 		
speakers. • Check that you have selected the appropriate function: CD, Tuner.	CD button will not respond	• Switch to another function (Tuner) and then back to CD.		
Make sure headphones are not plugged in.	Remote control does not work	 Check that the batteries are properly installed. Replace weak batteries. Check the system is plugged 		
Check antenna connection. Move antenna. Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights.		into power source. • Point the remote directly at the system's front panel. • Move closer to the system. Remove any obstacles between the remote and the system.		
Check that CD is in the tray. Check that CD label is facing up. Check that PAUSE mode is not on. Check that CD function is selected. Use CD lens cleaner.				
	 Solution Check power cord for a secure connection. Unplug the unit for a moment, and then plug into power source again. Check the outlet by plugging in another device. Increase the volume setting. Check connection to speakers. Check that you have selected the appropriate function: CD, Tuner. Make sure headphones are not plugged in. Check antenna connection. Move antenna. Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights. Check that CD is in the tray. Check that CD label is facing up. Check that CD label is facing up. Check that CD function is selected. 	Solution Problem • Check power cord for a secure connection. CD sound skips • Unplug the unit for a moment, and then plug into power source again. CD sound skips • Check the outlet by plugging in another device. Increase the volume setting. • Check connection to speakers. CD button will not respond • Check that you have selected the appropriate function: CD, Tuner. CD button will not respond • Check that poupriate function: CD, Tuner. Remote control does not work • Check that enanconnection. Move antenna. • Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights. Check that CD is in the tray. • Check that CD label is facing up. Check that CD label is facing up. • Check that CD label is facing up. Check that CD function is selected.		

	More Informa	atio
rping, damage. Ig is causing ite. If so, eakers are at	Disconnect the audio system from the power source before performing any maintenance. CD Player CAUTION! This system operates with a laser. It must be opened by only a qualified technician. Cleaning CDS Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.	 Safety Never circur adjust techn Never remoi Do no transp
r on a om the main r function ack to CD.		place malfu • Keep abnor • Do no any li playe • This c
atteries are teries. is plugged directly at panel. e system. acles te and the	CD Lens Care When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner.	the m corres record incorp comp direct Discs not u Do no inside collec
	Technical Specification Power supply: 230V-50Hz Dimensions (H x W x D mm): Unit size - 178 x 130 x 210 Speaker - 178 x 130 x 130 Net Weight - 3.6kg CD player: Response curve (+/- 2dB): 60Hz to 15 kHz Rating Plate: Look for it at the bottom of the set.	comp peric it wi desig • The a or sp liquid place • Minii suffic • The v cover

ty Precautions er open the cabinet under any umstances. Any repairs or internal ustments should be made only by a trained

nician. r operate this product with the cabinet ved. oved. not use your System immediately after sporting it from a cold place to a warm e, as condensation may cause the system to unction. your unit away from humid areas and prmally hot places. ormally hot places. not touch the player with wet hands. If liquid enters the player cabinet, take the rer to a trained technician for inspection. compact disc player uses a laser to read music on the disc. The laser mechanism esponds to the cartridge and stylus of a rd player. Although this product rporates a laser pick-up lens, it is pletely safe when operated according to pietery safe when operates the end of the start of the set of the

ned for camera lenses gned for camera lenses. apparatus shall not be exposed to dripping plashing and that no objects filled with ids, such as vases, shall be ed on the apparatus. imum distances around the apparatus for ident unatifician

ient ventilation. ventilation should not be impeded by

- covering the ventilation opening with item such as newspaper,table-cloths,curtains,etc. No naked flame sources,such as lighted candles,should be placed on the apparatus. Attention should be drawn to the

- environmental aspects of battery disposal.
 The use of apparatus in moderate climates

More Information

ESD Remark:

Headset Safety

• Do not play your headset at high volume. Hearing experts warn against extended highvolume play. • If you experience ringing in your ears, reduce volume or discontinue use. • You should use with extreme caution or temporarily discontinue use reductor of temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around In case of misfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

۲

Important Battery Information

 Remove the batteries to avoid leakage if you do not use your remote control for more than Discard leaky batteries immediately as leaking Discard reaky batteries infinitediately as leak batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local cargitation. ocal regulations Any battery may leak electrolyte under the following circumstances: - if mixed with a different battery type, if inserted incorrectly,
 if all batteries are not replaced at the same if disposed of in fire, or - if an attempt is made to charge a battery not intended to be recharged Don't Infringe

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages. This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for unintended purposes are unlawful and therefore not condoned by Thomson.

•

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com