### Connection:

### **Speaker Placement**

1 Center Speaker:

Positioned on top or below the TV

**2** Front Speaker:

Positioned on both sides of the TV with equal distances away from the

### **3** Rear Speaker:

your favorite viewing position. The height should be a little above your


4 Subwoofer:

Can be positioned anywhere but preferrably near a wall in the front.

Positioned beside or slightly behind For effective SURROUND effect, rear speakers need to be located beside or behind your listening position.


> **Advanced Set Up:** For more details on speaker placement, please refer to the manual chapter "Positioning Your Speaker".

For optimized performance, please follow the recommendations and illustration.

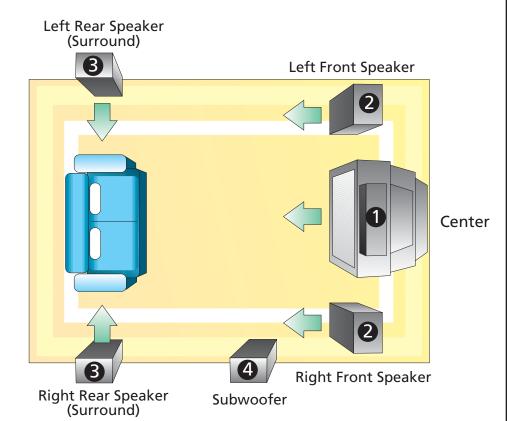

### Center Speaker Support Stand (Optional)

 . Secure the support rod in place using the screw and washer provided as illustrated below.



. Move the TV support rod up and down as illustrated to adjust the height of the stand. Tighten the screw to fix the support rod in



### **THOMSON**

**THOMSON** 46, quai Alphonse Le Gallo 92648 Boulogne Cedex FRANCE 55987210 (EN) www.thomson.net

# Quick Connect Guide

THOMSON

This guide will help you to set up your system through several illustrations.

DPL590HT

EN









K 🔷

## Connection: Speakers and FM Antenna

 
### Speaker

- Match the speaker wire color to the speaker / receiver terminals as shown on the illustration.
- Match the speaker to the correct terminal on the receiver (example: left speaker to left speaker terminal on receiver)


### NOTE:

- The color of the wire should be the same as that on the terminals.
- Connect the striped color wire to the "-" terminal (both speaker


For details, please refer to Instruction manual chapter "Connecting the Speakers".






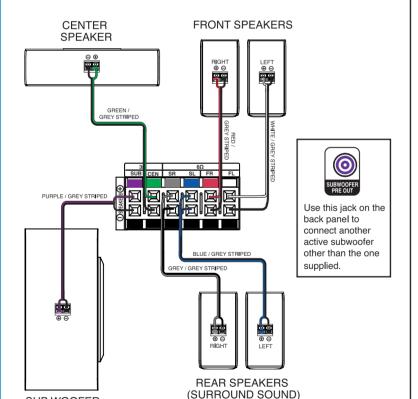

## ANTENNA HOOK-UP

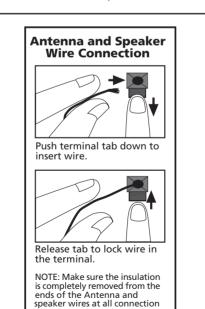

## Connection: Audio Components

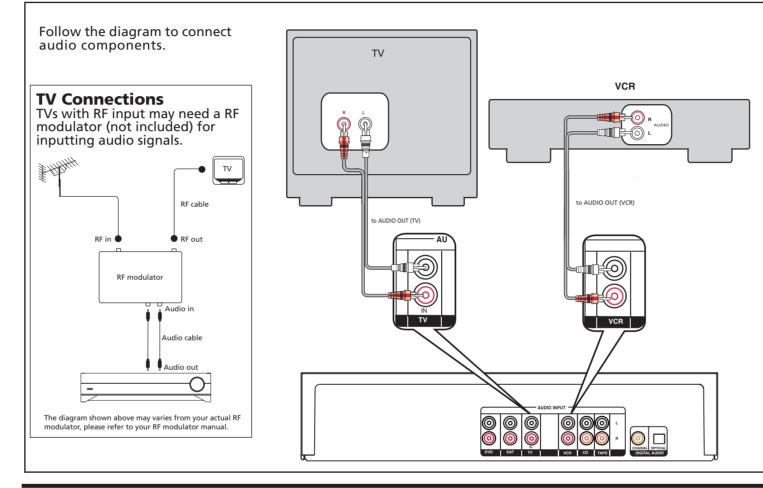

### Cables


To help you identify the cables used in audio, illustrations are provided below for your easy reference.

To help you rue that castes used in dudio, mustications are provided selow for your easy reference.			
	Audio cable	Optical Cable (Digital)	Coaxial Cable (75Ω / Digital)
	Not Included	Not Included	Not Included

### Onnection: DVD To Receiver

Connection described below is also applicable for any component having digital output (Cable, Satellite, MD, CDRW recorder, TV)

- By default, DVD is set to use Analog.
- After the connections are done. check the receiver and make sure it is set to the appropriate input. The input being used will be displayed after the source name. (DVD/OPT means DVD uses Optical Input)
- To change input connection, follow step 3 to 6 as described below.
- If a COAXIAL cable is used to connect DVD to the receiver, follow steps 3 to 6 and select COAXIAL.

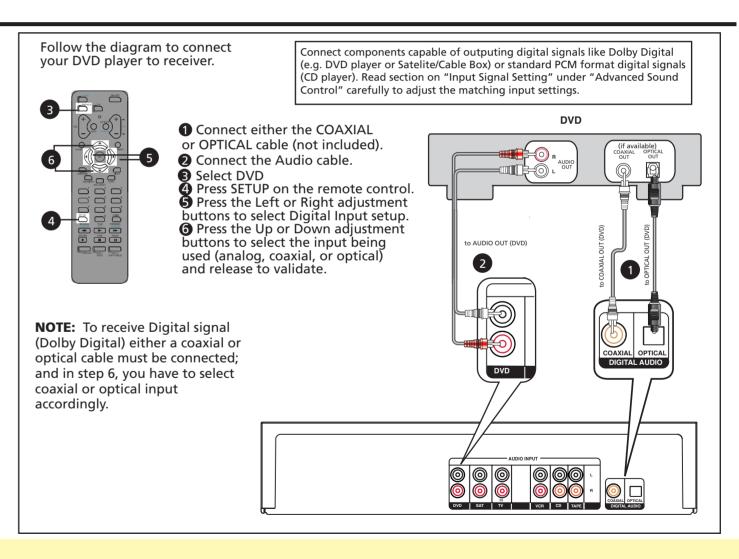











SUB WOOFER





Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com