

Strata[®] DK280

Digital Business Telephone System

Release 3

**Liquid Crystal Display
Digital Telephone User Guide**

Strata

General End User Information

The Strata Digital Business Telephone System is registered in accordance with the provisions of Part 68 of the Federal Communications Commission's Rules and Regulations.

Important Notice — Music-On-Hold

In accordance with U.S. Copyright Law, a license may be required from the American Society of Composers, Authors and Publishers, or other similar organization, if radio or TV broadcasts are transmitted through the music-on-hold feature of this telecommunication system. Toshiba America Information Systems, Inc., hereby disclaims any liability arising out of the failure to obtain such a license.

Publication Information

Toshiba America Information Systems, Inc., Telecommunication Systems Division, reserves the right, without prior notice, to revise this information publication for any reason, including, but not limited to, utilization of new advances in the state of technical arts or to simply change the design of this document.

Further, Toshiba America Information Systems, Inc., Telecommunication Systems Division, also reserves the right, without prior notice, to make such changes in equipment design or components as engineering or manufacturing methods may warrant.

© Copyright 1996

**Toshiba America Information Systems, Inc.
Telecommunication Systems Division**

All rights reserved. No part of this manual, covered by the copyrights hereon, may be reproduced in any form or by any means—graphic, electronic, or mechanical, including recording, taping, photocopying, or information retrieval systems—without express written permission of the publisher of this material.

Strata is a registered trademark of Toshiba America Information Systems, Inc.

Trademarks, registered trademarks, and service marks are the property of their respective owners.

Contents

Introduction

Organization	v
Conventions	vi
How to Use This Guide	vi

Chapter 1 - The Grand Tour

Liquid Crystal Display	3
LCD Function Overview.....	5
Condition Creating Display	5

Chapter 2 - Feature Operation

Date/Time/Day Adjustment	19
Call Forward Display	20
Call Forward—All Calls	20
Call Forward—Busy	20
Call Forward—No Answer	21
Call Forward—Busy/No Answer	21
Call Forward—Fixed	21
Call Forward—External	21
Call Forwarding From a Phantom Directory Number	22
Park/Park and Page	23
Parked Call Retrieval	24
Park Orbit List Display	25
Retrieve and Auto Dial Lost Calls	25
Station-to-Station Message Waiting	26

Chapter 2 - Feature Operation (continued)

Voice Mail (VM)	27
Assign a Voice Mail Message Mailbox	28
Assign Voice Mail Retrieval Digits	28
Retrieve Voice Mail Messages	28
Busy Field Display	29
Mode Exit.....	29

Chapter 3 - Soft Key Operation

How to Use Soft Keys	31
Using Soft Keys to Make a Conference Call	32
Soft Key Prompt Definitions	35
Soft Key Activation	36
Soft Key Deactivation	37

Chapter 4 - Messages and Memos

Storing a Message in Memory	39
Recording a Message	40
Recording a Message, Name, or Memo	40
Preprogramming System Messages	41
Adding to Preprogrammed Messages	41
Messaging	42
Calling Station Messaging	42
Canceling a Calling Station Message	42
Setting/Changing Calling Station Messages	43
Storing LCD Name/Number Display	43
Speed Dial Memo	46
Timed Reminders with Memo	48
Message Sending	49
Called Station Messaging	49
Group Called Station Messaging	50
Remote Calling Station Messaging.....	51
Busy Station Messaging	51
Return a Busy Station Message	52

Index	53
--------------------	----

Figures

1	Sample Page	vii
2	20-button Digital Speakerphone with Liquid Crystal Display	2
3	Mode, Page, and Scroll Buttons	3
4	Dial Pad Information	40

Table

1	Paging Group and Zone Codes	24
---	-----------------------------------	----

Introduction

This guide is for users of the 2000-series LCD telephones (models DKT2010-SD, DKT2020-SD, and DKT1020-SD), and 1000-series LCD telephones.

This guide only covers the LCD functions of the digital telephone. Use it with the Strata DK Digital Telephone User Guide.

Organization

This user guide is divided into the following chapters:

- **Chapter 1—The Grand Tour** explains the Liquid Crystal Display (LCD), including a summary of LCD functions and sample screens.
- **Chapter 2—Feature Operation** provides step-by-step instructions for using LCD-related features.
- **Chapter 3—Soft Key Operation** explains the operation and use of the Soft Key feature and includes a list of Soft Key prompt definitions.
- **Chapter 4—Memos and Messages** explains how to create LCD alphanumeric messages, names, and memos, and how to store them in memory. It also describes how to send, edit, and cancel LCD messages.

Conventions

Letters in [brackets] represent buttons which have Directory Numbers on them. For example:

[DN] = any Directory Number button (also known as an Extension or Intercom Number).

[PDN] = Primary Directory Number button (the Extension Number for your telephone).

[PhDN] = Phantom Directory Number button (an additional Directory Number).

Extra bold letters represent telephone buttons.

Your telephone may not have all of the buttons mentioned in this guide. See your Telephone System Administrator for more information on buttons and access codes.

~ means "through."

+ is used for multiple key entries.

Example: Press **Speed Dial** + **XX** + **Redial** + **Spkr** (XX=08~60 seconds).

➤ denotes the step in a one-step procedure.

Notes:

Elaborate specific items or reference other information. Within some tables,

IMPORTANT !

Calls attention to important instructions or information.

How to Use This Guide

The information in this user guide is divided into two distinct areas of content. Step-by-step instructions appear in the left-hand column of the page. Explanations of these procedures appear in the right-hand column. (See Figure 1).

Chapter Titles

First Level Headings

Action Text
Specific instructions on how to perform a procedure are numbered and entered in the left-hand column.

Notes and Warning Messages

Results or Details
Explanations or details of the Action Text.

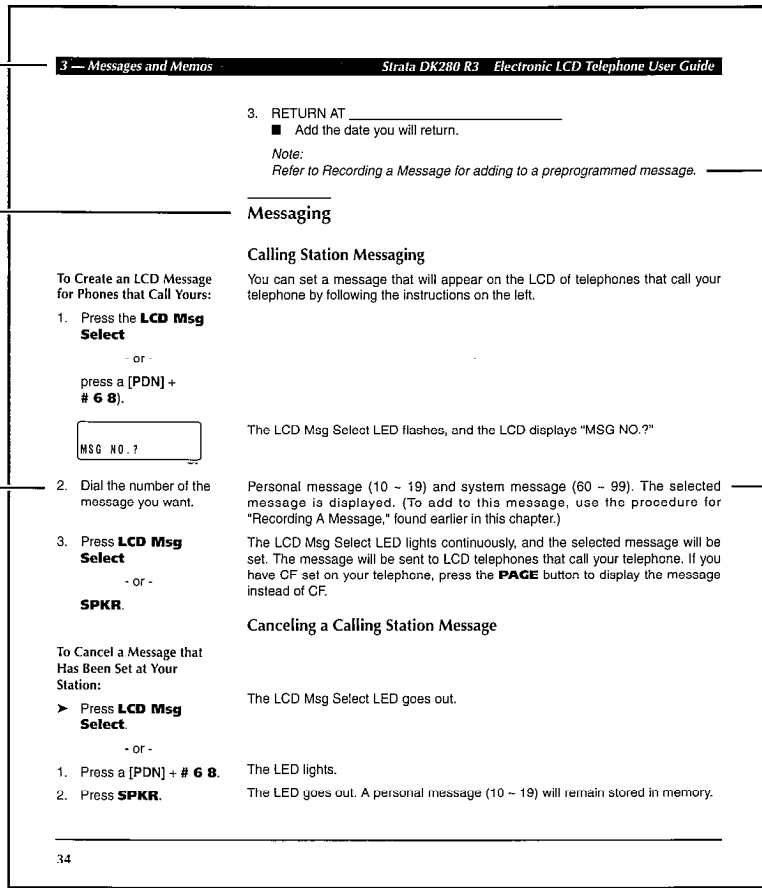 


Figure 1
Sample Page

The Grand Tour

1

The Grand Tour provides a detailed overview of the visual and operational features of your Toshiba phone system.

 
The Strata DK 2000-series Digital Liquid Crystal Display (LCD) telephone provides you with display information and feature prompting to make call handling more efficient.

The LCD Feature Prompting with Soft Keys provides an easy way to access frequently-used features. If this feature is activated at your station, abbreviated feature prompts guide you through the steps to performing specific tasks.

In addition, the LCD telephones provide you with Alphanumeric Messaging, Busy Lamp Field (BLF) Identification, Central Office (CO) Line Identification, Timed Reminders with Messaging, Speed Dial Memo Directory Dialing, User Name/Number Display, Call Duration Display, and Date/Time of Day Display.

Mode, Page, and Scroll functions of the LCD are summarized in addition to the hardware and button options of the phone itself.

This overview will quickly familiarize you with the various LCD and phone features that may best match your telephonic needs.

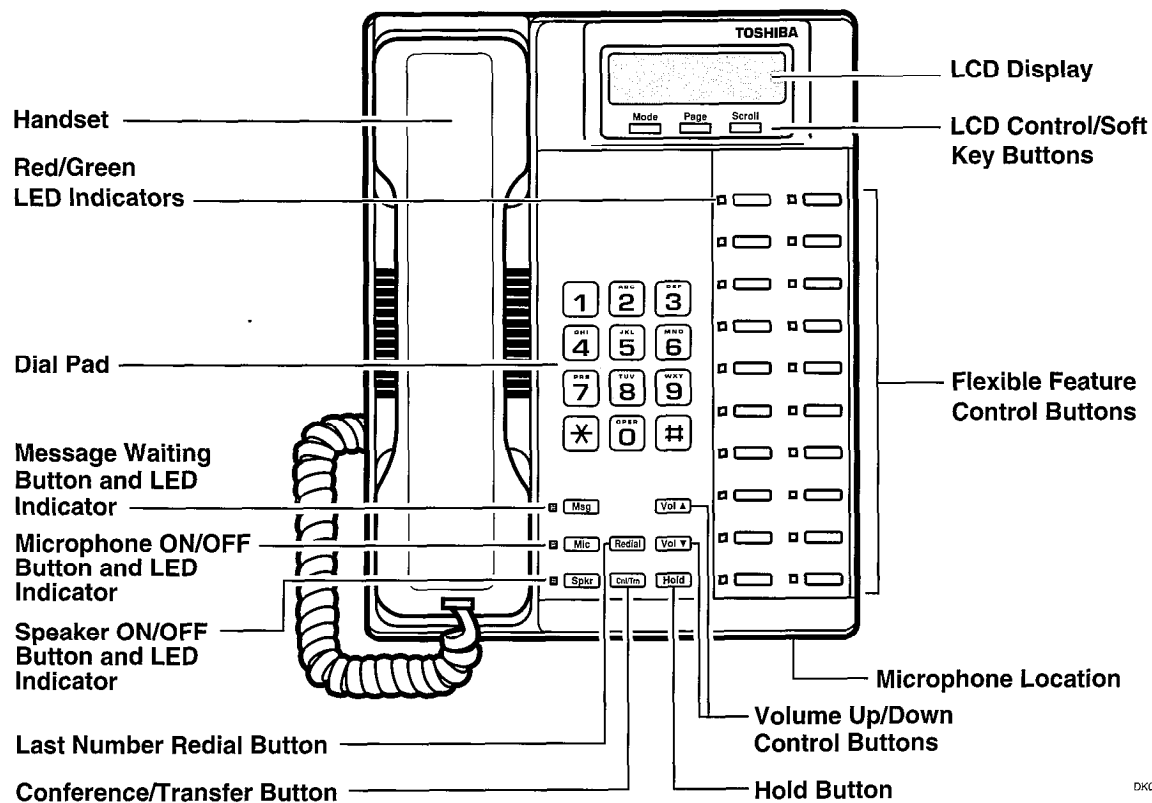


DK0539

Figure 2
20-button Digital Speakerphone with Liquid Crystal Display

Liquid Crystal Display

 In its idle state, the 32-character Liquid Crystal Display (LCD) feature on your digital telephone gives you an accurate desk clock and calendar combination. When you have an outside call in progress, an elapsed time display gives a constant reminder of the call duration. In addition, a variety of information displays and feature prompting makes your call handling more efficient. Alphanumeric messaging capability is also provided. All display functions occur automatically as call processing proceeds.

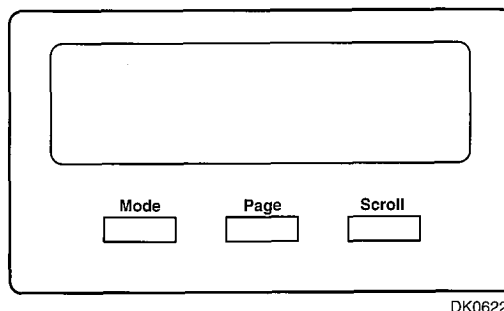

DK0622

Figure 3
Mode, Page, and Scroll Buttons

The uses of the three buttons shown above are:

Mode:

- To enter/exit various mode functions (see "Mode Definitions" later in this chapter).
- To cancel the beeping tone when using timed reminders.

Page:

- Changes Busy Field groups.
- Used by station 200 to record a user NAME/NUMBER for another station. Station 200 must be an LCD telephone to record a NAME/NUMBER display for any other station type.
- Changes displays (date/time, elapsed time, message, call forward, dialed number).
- Scrolls through speed dial numbers when in Mode 8.

Scroll:

- Scrolls through message waiting numbers.
- Scrolls through the speed dial digits (if more than 16 digits) when in Mode 8.

Note:

If your telephone has the Soft Key feature turned on (**Mode + 7 1**), the Mode, Page, and Scroll functions are not active when the telephone is busy on a CO line or internal call. Mode, Page, and Scroll are only used when the telephone is idle.

See Chapter 3—Soft Key Operation for more information on Soft Keys.

Mode Definitions

- | | |
|-----------------|--|
| Mode 0 | Used to exit another mode and return to clock/calendar display. |
| Mode 1 | Busy Field display. |
| Mode 2 | Busy station messaging. |
| Mode 4 | Called station messaging. |
| Mode 5 | Displays LCD message number NN, where NN can be personal messages (10 ~ 19) or system messages (60 ~ 99). Mode 5 only displays the selected message. It cannot be used to edit or create a new message. |
| Mode 8 | Speed dial number check and memo dialing. |
| Mode 6 0 | Caller ID/ANI/DNIS information mode OFF. |
| Mode 6 1 | Caller ID/ANI/DNIS information mode ON. |
| Mode 6 2 | Caller ID/ANI/Lost Call stored information display. |
| Mode 6 4 | View Call Park Orbit list. |
| Mode 7 1 | Soft key ON. |
| Mode 7 0 | Soft key OFF. |
| Mode 9 4 | Remote called station messaging. |
| Mode 9 5 | Remote calling station messaging. |

LCD Function Overview

IMPORTANT !

All Liquid Crystal Display (LCD) examples in this user guide are shown with soft keys turned OFF. If your telephone has soft keys turned ON, the displays may be different, but they will still allow you to follow the steps in this guide. When the soft keys are on, generally, the information on rows 1 and 2 will be reversed.

Note:

In the following examples:

NNN = the Directory Number of the party.

MMM = the called party.

Condition Creating Display

Account Codes:

NO. NNN
ENTER ACCT CODE

When you press a Central Office (CO) line that requires a forced (verified or nonverified) account code, or **Speed Dial + 5 0**, or **Account Code** to enter a voluntary (verified or nonverified) account code.

NO. NNN
CODE NOT VALID

When you dial a verified voluntary account code that is not valid.

NO. NNN
CODE VERIFIED

When you correctly dial a verified voluntary account code that is set in the system account code memory.

NO. NNN
DIAL RESTRICTED

When you dial a verified forced account code that is not valid.

NO. NNN
DIAL TEL NUMBER

After you dial a verified forced account code that is valid.

Automatic Number Identification (ANI) and Caller ID calls:

If your telephone has been programmed with ANI capability, you may:

- Activate ANI and/or Caller ID display mode by pressing **Mode + 6 1**. (System default is ON.)
- Deactivate ANI and/or Caller ID display mode by pressing **Mode + 6 0**.

Note:

*ANI information cannot co-exist on the same telephone LCD with Dialed Number Identification Service (DNIS) information. (See DNIS.) If your system is programmed to receive both ANI and DNIS information on incoming calls, then when an ANI/DNIS call is ringing, press **Page** to alternate between DNIS and ANI LCD displays.*

ANI Example

CN: 7145876782
LINE 3 RINGING

If your telephone has been programmed with ANI capability and you have activated the ANI display feature, the calling party's telephone number (up to 10 digits) will be displayed when the call arrives at your station.

Notes:

1. *The following examples show ANI. If Caller ID was activated, then the caller's name or number would appear on the first line.*
2. *If **CN:** is displayed, the calling number is an (ANI) number; **CN:** does not precede Caller ID numbers.*

CN: 7145876782
ANSWERED LINE 3

When you answer the incoming call. After you answer a call, call duration will display on LCD.

HOLD LINE 3
SEP 9 TUE 18:30

When you place the call on hold.

CN: 7145876782
LINE 3 RECALL

Held call automatically recalls your station after a programmed period of time.

CN: 7145876782
ANSWERED LINE 3

The display changes to indicate calling status.

NO. 200
201 CALLING

Station 201 is transferring an ANI (or Caller ID) call to you (station 200). For the purpose of demonstration, following screens depict different displays of your station.

CN: 7145876782
LN 3 TRANS 201

After the transferring station (station 201) hangs up.

CN: 7145876782
ANSWERED LINE 3

When you answer the transferred call.

CN: 7145876782
L 3 RECALL 201

If you do not answer the transferred call within a programmed period of time, the held call will automatically recall the transferring station (i.e., station 201). This screen shows the display of the transferring station (i.e., station 201) as the call recalls.

Caller ID Example

MR. JONES
LINE 3 RINGING

If your telephone is programmed with Caller ID capability and you have activated the Caller ID display feature, the telephone number (up to 10 digits) or name (up to 15 characters) of the calling party will be displayed when the call arrives at your station.

Auto Busy Redial (ABR):

NO. 202
ABR SET

After setting Auto Busy Redial, your display prompts you that it has been set.

NO. NNN
P 583 3700

When the system dials the call, your display shows the dialed number. The system inserts a pause (P) before redialing the number.

When the called telephone is ringing, your station's CO Line LED (or **[DN]** LED) and **Spkr** LED will flash, and a warning beep will sound 30 seconds after the call is completed. You must go off-hook or press **Spkr** to prevent disconnection.

Automatic Callback (ACB):

NO. NNN
INT NNN ACB SET

When you set Automatic Callback at a busy station, its number is displayed.

NO. NNN
NNN ACB

When you receive an Automatic Callback, the station number you called is displayed.

NO. NNN
INT XXX ACB SET

When you set ACB at a busy line group, its access code number is displayed.

```

NO. NNN
LINE NNN ACB

```

When you receive an automatic callback for a CO Line, the seized line's number is displayed.

Automatic Line Selection:

1. [DN]

```

NO. NNN
INT

```

If your station automatically accesses a [PDN] when you go off-hook, the three character designation, "INT" (Internal Dial Tone), displays to confirm this status.

2. CO Line

```

NO. NNN
USING LINE 11

```

If your station automatically accesses a CO line when you go off-hook, the number of the seized CO line is displayed.

3. Dial Access Code

```

NO. NNN
USING LINE 20

```

When you access a CO line by dialing a CO line group access code, the accessed CO line number is displayed.

Alphanumeric Messages:

```

BACK AT 2PM-CALL
MEETING FOR 3PM

```

Messages up to 32 characters can be used in alphanumeric messaging. Messages can either be programmed or set as one-time messages. (Messages can also be used with a timed reminder.)

Busy Field:

```

200 0 . . . . 5 . . . .
210 . . . . . 7 . . . .

```

The Busy Field (BLF) display indicates, in groups of 10, the last two digits of the station Primary Directory Numbers that are busy on any type of [DN] ([PDN], [SDN], or [PhDN]) or set for Do Not Disturb (DND). Also, if a telephone's [PDNs] are busy because they are in use on other telephones, the telephone will show busy on the BLF, even though it may be idle. The top display indicates that stations 200, 205, and 217 are either in use or in DND mode; the bottom display indicates the same for stations 217, 222, 224, and 229.

```

210 . . . . . 7 . . . .
220 . . 2 . 4 . . . . 9

```

If **Page** is pressed, the 200/210 group will change to 210/220, and the busy/DND states of that group of stations will be displayed. The station groups will increment each time **Page** is pressed, thereby eventually displaying all stations.

Call Forward for [DNs]:

In the Call Forward examples:

LLL = the calling [DN]

PPP, TTT, VVV = the "Call-Forward-From" Directory Number.

 
RRR, SSS, UUU = the "Call Forward Destination" Directory Number.

Call Forward for



NO. NNN
CALL FORWARD TO

This LCD display appears when you begin to set any type of call forward.




CF-BN:PPP-RRR

After you set Call Forward, the "forwarded" Directory Number (PPP) and the "forwarded to" Directory Number (MMM) is displayed, along with one of the following abbreviations:

"CF-A"	(Call Forward-All Calls)
"CF-B"	(Call Forward-Busy)
"CF-NA"	(Call Forward-No Answer)
"CF-BN"	(Call Forward-Busy/No Answer)
"CF-F"	(Call Forward-Fixed)
"CF-EXT"	(Call Forward External)


Note:

 *The CF-EXT display has priority over all other Call Forward displays. Press **Scroll** to display other Call Forward settings.*



NO. NNN
PPP

 When you call a [DN] that is forwarded (PPP), the [DN] you called is shown first.



RRR

It then changes to the [DN] to which your call was forwarded (MMM).



NO. NNN
LLL CALL PPP

When a call is forwarded to your [DN], the calling [DN] (LLL) is displayed on the left and the [DN] called is displayed on the right (PPP).

Call Forward for [PhDNs]:

If your telephone has more than one Directory Number, you can assign Call Forward destinations for each [DN] on your telephone (up to one [PDN] and four [PhDNs]). After setting different Call Forward Destinations, you can confirm them by pressing **Scroll**. A "+" sign indicates more than one [DN] has Call Forward on your telephone.

CF-A : PPP-RRR +

“CF-A” denotes Call Forward-All Calls from PPP to RRR.
Press **Scroll**.

CF-B : PPP-SSS

“CF-B” denotes Call Forward-Busy from PPP to SSS.
Press **Scroll**.

CF-NA : TTT-UUU

“CF-NA” denotes Call Forward-No Answer from TTT to UUU.
Press **Scroll**.

CF-BN : VVV-UUU

“CF-BN” denotes Call Forward-Busy/No Answer from VVV to UUU.
Press **Scroll**.

Caller ID Calls:

See *Automatic Number Identification* on page 6.

Call Pickup:

NO. NNN
200 CALL 201

When you pick up an internal ringing call, the calling station's **[PDN]** is displayed on the left and the station number called is displayed on the right.

NO. NNN
WWW PICKUP MMM

Your LCD telephone displays information noting that your call to station (MMM) was picked up by station (WWW).

Calling Number-Internal:

NO. NNN
LLL CALLING

When you receive an internal call, the calling station's **[PDN]** (LLL) is displayed, even if you were called from a **[PhDN]** on that station.

CO Line Identification:

TOSHIBA TELECOM

The Central Office (CO) lines can be programmed to display an identifying name of up to 16 characters. The name will be displayed on outgoing and incoming calls.

WATS LINE 3

CO Line Number:

1. Incoming Call

NO. NNN
LINE 10 RINGING

Incoming CO call—the system station line number—displays if your station is programmed for incoming ringing on that CO line, as long as no CO identification is programmed.

Transferred CO call—CO line is transferred to your station in the ringing state by another station.

Camped-on CO call—CO line was camped-on to your busy station and rings your station when you hang up.

NO. NNN
CAMP-ON 4

2. When Call Is Answered

NO. NNN
ANSWERED LINE 3

The display changes to indicate calling status.

3. Hold

HOLD LINE 10
JAN 01 SUN 12:19

You have put a CO line call on hold at your station.

4. Hold Recall

HOLD LINE NNN
LINE 10 RECALL

Held call automatically recalls your station after a programmed period of time.

5. Outgoing

NO. NNN
USING LINE 6

When you manually select a CO line, it is displayed. This display is replaced by the dialed number.

6. CO Line Queuing
(Callback)

NO. NNN
LINE 3 ACB

When the CO line queuing feature rings back to your station with an available CO line, that line number will be displayed.

Date/Time:

 


NO. NNN
MAY 24 MON 12:05

1. Press **Page** to display date/time when talking on a Central Office (CO) line (Soft Keys must be off before the call is started).
2. The date/time is adjusted on a system-wide basis by the station located in port 00 (usually station 200).
3. Continued pressing of **Page** toggles the display in succession among: Date/Time, Number Dialed, and Elapsed Time of the present call.


Dialed Number:

1. CO Line



NO. NNN
5551374

 2. Internal [DN]



NO. NNN
201

The digits are displayed as you dial when connected to either a CO Line or the [DN] using:

- Manual dialing
- Automatic dialing
- Repeat Last Number Dialed
- Saved Number Redial

Note:

If you are calling on a CO line, the display automatically changes from dialed number to elapsed time after a programmed period.

Dialed Number Identification Service (DNIS) Calls:

Incoming DNIS telephone numbers can be correlated in the system database with assigned DNIS names. These names can have up to 16 alphanumeric characters, and will display on your telephone's LCD. This allows incoming calls to be instantly identified and appropriately answered.

Note:

*DNIS information cannot co-exist on the same telephone LCD with Automatic Number Identification (ANI) information. (See ANI.) When an ANI/DNIS incoming call is ringing, press the **Page** button to alternate between ANI and DNIS displays when both types of information is received on an incoming call.*

To activate the DNIS display mode, press **Mode + 6 1**.

To deactivate the DNIS display mode, press **Mode + 6 0**.

For ACD calls.



TOSHIBA TSD
LINE 3 RINGING

TOSHIBA TSD
LINE 3 CALLING

For DNIS calls.

TOSHIBA TSD
LN 3 CALL 201

When the call was forwarded to your station.

TOSHIBA TSD
LN 3 TRANS 201

When the call is transferred.

TOSHIBA TSD
ANSWERED LINE 3

When the call is answered.

TOSHIBA TSD
L 3 RECALL 208

For calls that recall the transferring station.

TOSHIBA TSD
LINE 3 RECALL

Held call automatically recalls your station after a programmed period of time.

Directory Number Display:

DN = NNN

To find out the actual Directory Number of a **[DN]** button if it does not appear on your display or telephone keystrip label, press the **[DN]** you want to display and dial **# 4 0 7**. The number will display.

To find out the Primary Directory Number **[PDN]** of a telephone, press a **[DN]** + **# 4 0 1**. "INT=" will display, followed by the **[PDN]**.

Door Phone/Monitor:

NO. NNN
DOOR PHONE 1A

When you are called from a door phone, its designating characters are displayed.

NO. NNN
DOOR PHONE 1A

When you make call to a door phone, its designating characters are displayed.

Note:

The door phone designators are NA, NB, and/or NC (N = 1 ~ 4, and indicate which of the 12 possible door phones is calling or is being called).

Elapsed Time:

NO. NNN
00:13:23

While you are making an outgoing Central Office (CO) line call, the call's elapsed time is displayed. Elapsed time automatically replaces the dialed number on the display after a programmed period of time. (Timing begins when a **Line** button is pressed.)

Notes:

1. On a CO line call, the display can be alternated between date/time, elapsed time, and dialed number by pressing **Page** (Soft Keys must be off before the call is started).
2. Elapsed time is displayed for 15 seconds after you hang up, and then changes automatically to date/time.

LCD Name/Number Display:

1. Idle Station

NAME / NUMBER
DATE DAY TIME

A name or title can be set in memory for each station. When an LCD station is idle, the name displays on the top line of the LCD. When a station calls an LCD station, the name of the calling station displays on the bottom line of the called station's LCD.

2. Called Station

NO. NNN
NAME / NUMBER

Least Cost Routing (LCR):

NO. NNN
DIAL TEL NUMBER

When you are making a call via Least Cost Routing (LCR), your display will prompt you to dial a number by displaying "Dial Tel Number".

NO. NNN
5833700

As you dial the number, it is shown on your display.

Message Waiting:

NO. NNN
INT NNN MW SET

When you set message waiting at another station, the number of that station is displayed.

SENT NNN
JAN 01 SUN 12:19

When you hang up after setting Message Waiting at another station, a reminder is shown on the top row of your display. A "+" indicates there are more messages in memory. Press **Scroll** to rotate through more messages.

NO. NNN
CALL 203-201

The display will show the numbers of up to three stations that have left messages for you. Four numbers may be stored in message memory (see Recalling Station). The corresponding LCD display example shows: Station 201 has left a message for station 203. A "+" indicates there are more messages in memory. Press **Scroll** to rotate.

Message Waiting/Voice Mail:

NO. NNN
CALL 200 216V+

When a message waiting voice mail is displayed, a "V" will follow the station number. A "+" indicates there are more messages in memory. Press **Scroll** to rotate through more numbers. To answer the message, press **Msg** to call the station which is displayed.

Off-hook Call Announce:

NO. NNN
MMM BUSY OVR

When you off-hook call announce to a busy station (MMM), your LCD displays the number of that station.

NO. NNN
MMM BUSY OVR

When another station (MMM) off-hook call announces to your station, your LCD displays the number of that station.

Overrides:**1. Busy Override**

NO. NNN
MMM BUSY OVR

When you activate the Busy Override feature after calling a busy station, the station number and the feature are displayed.

2. Executive Override

NO. NNN
MMM EXEC OVRD

DK0787

Your LCD telephone displays the number of a station (MMM) initiating executive override when you are on the telephone. The number will remain displayed until override is disconnected.

NO. MMM
NNN EXEC OVRD

DK0790

When you initiate Executive Override, your LCD telephone displays the number of the station that is overridden (MMM). The station that receives the override displays your station number. The number will remain displayed until the call is ended.

3. Do Not Disturb (DND) Override

NO. NNN
INT MMM DND

CF0791

The station you have called (MMM) is in the Do Not Disturb (DND) mode.

NO. NNN
MMM DND OVR

DK0792

When you initiate DND override, the station number (MMM) you have overridden is displayed.

NO. NNN
MMM DND OVR

DK0793

When another station (MMM) overrides DND at your station, its number is displayed. (The display remains until the end of override.)

NO. NNN
DND OVR DENY

CF0794

When DND override is not allowed, "DND OVR DENY" is displayed.

4. Privacy Override

NO. NNN
NNN PRV OVRD

DK0795

When a station presses a busy **Line** button to enter an existing conversation, the station that initiates the override displays the CO line identification on the LCD. The overridden station's LCD displays the initiating station's number. (The display remains until the end of the call.) Privacy override does not apply to **[DN]** buttons.

Recalling Station:

HOLD LINE 2
LN 2 RECALL NNN

DK0796

When a transferred call goes unanswered, it will recall to the station that transferred it. The display shows the CO line number and the station number to which it was originally transferred.

Speed Dial Memo:

```
*11 TOSHIBA
7145833700
```

When using Speed Dial Memo (**Mode + 8** + the speed dial number), the name and number are displayed. Press **Page** to display more.

TOSHIBA is the memo (up to 12 characters).

714 583 3700 is the number (up to 16 digits).

Toll Restriction and
Traveling Class Override
Codes:

```
NO. NNN
OVERRIDE CODE
```

After you access a CO Line and press **Cnf/Trn + # 4 7** to dial a complete toll restriction override or traveling class code, your LCD display will prompt you to dial a code.

Two-CO Line Calls:

1. Tandem

```
TRK-TRK N1 N2
JAN 10 THU 11:57
```

After you establish a two-Central Office (CO) line conference call and then release, N₁ and N₂ identify the connected CO lines.

2. Conference

```
NO. NNN
CONF LINE N1 N2
```

When you are talking with two external parties on two CO lines, N₁ and N₂ identify the connected CO lines.

Feature Operation

2

This chapter provides instructions for LCD telephone features. Consult the *Strata DK280 Digital Telephone User Guide* for instructions about features that apply to both non-LCD and LCD telephones.

Date/Time/Day Adjustment

To Set the Date:

1. Place handset on-hook.
2. Press a [DN] + # **6 5 1**.
3. Enter the date.
4. Press **Redial**.
5. Press **Spkr**.

This operation is possible from port 00 (usually station 200) or attendant consoles, and enables you to set the date, time, and day.

Dial year/month/day in the format YYMMDD. Enter a leading 0 for any single-digit month or day.

You will hear a confirmation tone.

To Set the Time:

1. Place handset on-hook.
2. Press a [DN] + # **6 5 2**.
3. Enter the time.
4. Press **Redial**.
5. Press **Spkr**.

Dial hour/minute/second in the 24-hour clock format HHMMSS. Enter a leading 0 for any single digit entered.

You will hear a confirmation tone.

To Set the Day:

1. Place handset on-hook.
2. Press a [DN] +
6 5 3.
3. Enter the day (see codes on the right).

- 1** = Sunday
- 2** = Monday
- 3** = Tuesday
- 4** = Wednesday
- 5** = Thursday
- 6** = Friday
- 7** = Saturday

4. Press **Redial.**
5. Press **Spkr.**

You will hear a confirmation tone.

Call Forward Display

When any type of call forward is initiated, the "CALL FORWARD TO" prompt displays on the lower row of the LCD. When your station has call forward set, the LCD appears as shown in the following examples. For instructions on setting call forward, refer to the *Digital Telephone User Guide*.

In the following examples,

NNN = Directory Number which is being forwarded.

MMM = the forward-to number.

Call Forward Displays:

1. Call Forward—All Calls

```

CF - A NNN - MMM +
JAN 26 TUE 01:43
  
```

2. Call Forward—Busy

```

CF - B : NNN - MMM
JAN 26 TUE 01:43
  
```

Call Forward—All Calls

If your station is idle or busy and has this feature activated, all calls to it will forward immediately. The station will not ring. A "+" indicates more than one [DN] is forwarded on your telephone, press **Scroll** to rotate through all Forwarded [DN] displays.

Call Forward—Busy

Calls to your telephone while you are busy on another call or in the Do Not Disturb mode will forward immediately if this feature is set. Calls will ring as normal if your telephone is idle.

3. Call Forward—No Answer

CF - NA : NNN - MMM
JAN 26 TUE 01:43

Call Forward—No Answer

All calls to your station when set with this feature will forward to a selected station if you fail to answer within a time that you designate.

4. Call Forward—Busy/No Answer

CF - BN : NNN - MMM
JAN 26 TUE 01:43

Call Forward—Busy/No Answer

All calls to your station set with this feature will forward immediately to a selected station whenever you are busy on another call or in the Do Not Disturb mode. Calls will also forward if you do not answer the call within a time that you designate.

5. Call Forward—Fixed

CF - F : NNN - MMM
JAN 26 TUE 01:43

Call Forward—Fixed

If you activate this feature, all internal, private or Direct Inward Dialed CO line calls to your station will forward immediately to a station set in system programming. Your station must be assigned with the **Call Forward to** ___ button in system programming to activate this feature.

6. Call Forward—External

CF - EXT
JAN 26 TUE 01:43

Call Forward—External

This feature enables you to forward new incoming calls to a destination outside of the system. Internal calls and transferred calls to your [PDN] will not forward with Call Forward-External, and only incoming calls over CO lines dedicated to immediate or delay ring only at your station ([PDN], private CO **Line**, and/or Direct In Dial line calls) will forward. Any of the other Call Forward modes can be set for your [PDNs] or [PhDNs] simultaneously with Call Forward-External.

Notes:

1. Central Office (CO) lines that ring at your station only will forward. (CO lines that ring into more than one station will not forward.)
2. CO line calls transferred to your station will forward (except Call Forward-External).
3. Auto Attendant calls to your station will forward (except Call Forward-External).
4. Call forward redirects the station hunt feature.

Call Forwarding a Primary and/or Phantom Directory Number

Your telephone has a Primary Directory Number **[PDN]** which can only be call forwarded from your telephone.

To set call forward for a Phantom **[DN]**, your phone must be programmed as the owner of **[PhDNs]**.

Your telephone can be programmed to have up to eight **[PhDNs]**. Up to eight **[PhDNs]** can be set to Call Forward by entering a specific access code, but only four of them can have dedicated message waiting buttons/LEDs. **[PDNs]** and **[PhDNs]** can be independently set for Call Forward-All Calls, Call Forward-Busy, Call Forward-No Answer, and Call Forward-Busy/No Answer. Calls to your **[PDN]** or **[PhDN]** will be forwarded to the destination phone number according to the call forwarding mode you have chosen.

Call Forwarding a Primary or Phantom Directory Number:

1. Press the **[PDN]** or **[PhDN]** that you want to Call Forward.

DIAL STATION NO.
OR ACCESS CODE

2. Enter a Call Forward Access Code (**# 6 0 1 ~ # 6 0 4**).

CALL FORWARD TO

3. Dial the number to which calls will forward.
4. Press **Speed Dial** and then **Spkr**.

CF-A:603-203
JAN 01 SUN 12:19

You will hear a steady dial tone and see a steady LED.

# 6 0 1	Call Forward—All Calls
# 6 0 2	Call Forward—Busy
# 6 0 3	Call Forward—No Answer
# 6 0 4	Call Forward—Busy/No Answer

The dial tone will go silent, and the LED will flash intermittently.

The screen will display the number you are forwarding to and you will hear a short, steady confirmation tone followed by a pulsing Re-order tone. The LED will continue to flash intermittently.

The dial tone will go silent and the LED will go off. The LCD will display a message indicating call forwarding, the call forward type, the Phantom Directory Number that the call is being forwarded from, and the destination number to which the call is forwarded.

To Cancel a Call Forward:

1. Press the **[PDN]** or **[PhDN]** you want to cancel Call Forwarding on.
You will hear a steady dial tone and see a steady LED light.
2. Dial **# 6 0 1**.
The dial tone will go silent, and the LED will flash intermittently.
3. Press **Spkr**.
The LED will go off. Call forwarding for the selected **[PDN]** or **[PhDN]** is now canceled.

Park/Park and Page

If you have an LCD telephone, you can use code **9 9 9** to let the system automatically select an available orbit when you park a call. The selected orbit number will be shown on your LCD. You can use the Park feature with the Page feature.

To Park and Park/Page**(Automatic Orbit Selection):**

1. While connected to a calling party, press **Park and Page**.
If your telephone does not have a **Park in Orbit** button, press **Cnf/Trn + # 3 3 2** to park the call. If your telephone does not have a **Park and Page** button, press **Cnf/Trn + # 3 3 1** to park and page.


ENTER ORBIT NO.

2. Enter **9 9 9** and the system will park the call on an Orbit (**9 0 0 ~ 9 1 9**).
When you press **9 9 9**, the system will automatically select the lowest vacant Orbit Number for your parked call.
 - If you pressed **Park in Orbit** in Step 1, your telephone LCD will display the orbit number in which the call is parked.
 - If you pressed **Park and Page** in Step 1, you will hear a short burst of dial tone to prompt you to enter the Page access code. Your telephone LCD will display the orbit number in which your call is parked.
3. To Page, enter a Page Zone access code (see Table 1) or Directory Number.

Table 1
Paging Group and Zone Codes

Paging Group Codes		Paging Zone Codes
# 3 1 1—Group A	# 3 1 5—Group E	# 3 5—Zone A
# 3 1 2—Group B	# 3 1 6—Group F	# 3 6—Zone B
# 3 1 3—Group C	# 3 1 7—Group G	# 3 7—Zone C
# 3 1 4—Group D	# 3 1 8—Group H	# 3 8—Zone D

 Enter code # 3 0 to page stations assigned to the **All Call Page** group.
Enter code # 3 9 to page stations assigned to the **All Call Page** group and possibly **external page zones**, depending on system programming.



The LCD will show the **9 9 9** Auto Park entry plus the entered Page Zone number.



The LCD shows the line number which is being held on a particular orbit number. In this example, Line 2 is held on orbit number 900.



If you do not retrieve the parked call within a specified amount of time, the call will ring back to your phone. When a parked call recalls and rings back to your phone, the LCD will show the line or **[DN]** that is recalling and the orbit number.

To Retrieve a Parked Call:

1. Press the parked **Line** or press **Park in Orbit** or **Park and Page**.
2. Enter the Orbit Number or valid **[PDN]** on which the call is parked.

Parked Call Retrieval

The Orbit Number is usually provided in the paging announcement. The CO line LED or **[PDN]** LED will flash at the in-use rate when the call is picked up or retrieved.

Park Orbit List Display

To Display Parked Calls:

1. Press **Mode**.

MODE NO.

2. Press **6 4**.

LN NN ORBIT XXX

3. Press **Scroll** to monitor the next parked call.

LN 3 ORBIT 900+

4. Press **Scroll** to monitor the next parked call.

LN 8 ORBIT 901+

This feature enables you to monitor (view) the calls that are parked at your station.

If your telephone has an **Orbit List** button, press it and go to Step 3.

Your telephone must be idle to use the **Mode** button when displaying the Park Orbit List.

The display shows that Line N N (where N N represents the Line number) is parked by you on Orbit XXX (where XXX represents the orbit number). The “+” sign indicates that there is more than one parked call at your station.

This display indicates that CO Line 003 is parked by you at Orbit 900 (where 900 represents a different Orbit number).

The first parked call is displayed again, indicating there are only two parked calls at your station.

To Retrieve Lost Calls:

1. Press **Mode + 6 2**.

ANI Display

06/02 17:46
CN: 7145876782

Caller ID Display

MR. JONES
7145833000

Retrieve and Auto Dial Lost Calls

The system automatically saves the number for all ANI and Caller ID calls that ring at your telephone, but are unanswered (abandoned calls). You may view and Auto Dial the saved numbers by following the steps for retrieving lost calls.

The Caller ID lost call displays the telephone number and name (if provided by the Central Office). To see what date and time the Caller ID lost call was received, press the **Page** button. This will change the display to the date and time of the call. If desired, press the **Page** button again to return to the telephone number display.

2. Press **Scroll** to view the saved information on the LCD display.

06/05 16:42
CN:7145833700

- Press **#** to delete information on the LCD display.
- Press ***** to go back to previous LCD screen.

3. Press **Lost Call Auto Dial**.

If your telephone is equipped with a **Lost Call Auto Dial** button, you may auto dial a saved number by performing any of the following:

- Enter Class/ANI Information display **Mode + 6 2**, and choose the number or name of the lost caller you want to contact.
- Press **Pooled Line Grp²**, and then **Lost Call Auto Dial**.
- Press a **[DN]** button, enter the appropriate CO or LCR access code², then press **Lost Call Auto Dial**.
- Press the CO **Line** button², and press **Lost Call Auto Dial**.

Note:

1. *The ANI/Caller ID received telephone numbers always include area codes on local calls as well as long distance calls. The DK280 system will always auto dial the digit "1" before the saved, outgoing telephone number.*
2. *If your telephone requires an account code be entered before dialing outside telephone numbers, enter the account code after access LCR or a CO line, then press the **Lost Call Auto Dial** button.*

Station-to-Station Message Waiting

If there is no answer (or if the telephone is busy or DND), press the **Msg** button (or **7**). This causes the Msg LED on the called station to flash. The called station's LCD displays the calling station's number. When the returned call is answered, the flashing Msg LED will turn off

To Use Station-to-Station Message Waiting:

1. Lift the handset or press a **[DN]** to receive internal dial tone.
2. Dial the desired station number.
3. The calling station user presses the **Msg** (or **7**) to set the Msg LED on the called station.

SENT 201 501
JUN 05 MON 05:00

The **[DNs]** after **SENT** are the **[DNs]** which received your message waiting indication signal, if you set a message waiting indication signal.

4. To answer the Msg LED indication from the called station, press the flashing **Msg** button.

Note:

*Up to five message waiting displays may be stored on the LCD per each [DN] owned by the telephone ([PDNs] and [PhDNs]). The station [DN] in the display will be called when the flashing Msg (fixed) or [PhDN] Msg (flexible) button is pressed. To rotate the station numbers, press **Scroll**. The fourth message for each [DN] is reserved for the Message Center. The "+" sign on the LCD indicates that more than one message waiting signal was sent to your telephone.*

NAME	NO: 201
CALL	201-500+

CALL XXX-YYY+: Indicates which [DN] on your telephone received a message waiting signal (XXX) and which [DN] sent the message waiting signal (YYY). In this example, [201] received a message signal from [500].

5. To clear the Msg LED that you set on some other telephone's [DN] from the [DN] that sent the Message Waiting signal, press the [DN] button, dial the Directory Number that you set the MW signal on and press **Msg** twice (or **7 7**).
6. To clear the Msg LED from the [DN] that received the Message Waiting signal, press the [DN] + # **4 0 9**.

This clears all messages recorded to this station.

Voice Mail (VM)

Whenever your station is call forwarded to voice mail, certain digits will automatically be sent to the voice mail unit to direct the call to your mailbox. These codes require storage one time since they remain in memory until changed. They do not have to be stored each time you Call Forward your telephone. Your Primary Directory Number [PDN] and up to four Phantom Directory Numbers [PhDNs] can be independently Call Forwarded to unique or to the same voice mailboxes from your telephone.

Telephones must be programmed as the owners of a [PhDN] to be able to call forward the [PhDN] to a voice mailbox number.

Assign a Voice Mail Message Mailbox

Assigning a mailbox to store messages:

1. Press a **[DN]**.
2. Press **# 6 5 6**.

656 ID CODE SET

3. Dial the digits (up to 16) and pauses to be sent.
4. Press **Redial** to store data.

DATA PROGRAMED

Assigning a mailbox for message retrieval for a Directory Number:

1. Press a **[DN]**.
2. Dial **# 6 5 7**.
3. Dial the required digits and pauses to be sent.
4. Press **Redial** to store data.

To Retrieve Messages:

- Press the flashing **Msg** button assigned to the **[DN]**.

Press the **[DN]** that you want to assign a mailbox number. When you assign a mailbox for a **[DN]**, calls to that **[DN]** will be able to forward directly to the **[DN]**'s voice mailbox on the Toshiba voice mail system.

The LCD displays the digits and pauses. These digits include special voice mail codes and the **[DN]** voice mailbox number. For example, for Toshiba voice mail systems dial 91NNN, where NNN is the mailbox number of the **[DN]** you pressed in Step 1.

You will hear a confirmation tone.

Assign Voice Mail Retrieval Digits

When you want to retrieve your messages from voice mail, certain digits will automatically be sent to the voice mail unit to play back your messages.

Press the **[DN]** for which you want to retrieve messages.

The LCD displays "6 5 7 ID CODE SET".

The LCD displays the data as it is entered. These digits include special voice mail codes and the **[DN]** mailbox number. For example, for Toshiba Systems dial 92NNN, where NNN is the **[DN]** mailbox number.

You will hear a confirmation tone—the LCD displays "DATA PROGRAMMED".

Retrieve Voice Mail Messages

When a voice message is received for a **[DN]**, the voice mail system will cause the **Msg** button/LED to flash.

To Clear All Digits:

1. Press a [DN].
2. Dial # **6 5 6** or # **6 5 7**.
3. Press **Redial**.

Busy Field Display

Your telephone must be idle to use the Mode button when Soft Keys are turned ON.

Note:

The Busy Lamp Field (BLF) mode will stop all other displays from appearing on your telephone LCD.

To Display Busy Field Status:

1. Press **Mode**.



MODE NO.?

2. Press **1**.



BLF NO.?

3. Enter the first 1 or 2 digits of a [DN]. Press #.

Enter the first digit of a 3-digit [DN] (e.g., 2 for 200) or the first two digits of a 4-digit [DN] (e.g., 21 for 2100).



200



210

4. Press **Page** to rotate Busy Field groups.

To Exit Any Mode:

1. Press **Mode**.
2. Press **0**.

Mode Exit

The LCD displays "MODE NO.?" Your telephone must be idle to use the **Mode** button when Soft Keys are turned ON.

The LCD displays date/day/time.

Soft Key Operation

3

The Soft Key feature provides a quick and easy way to access frequently-used features. If the Soft Key feature is activated at your station, abbreviated feature prompts will appear on the LCD above the **Mode**, **Page**, and **Scroll** keys while you are on a call (or you are ringing another station or outside telephone number). You can access the feature represented by the feature prompt just by pressing the **Mode**, **Page**, and **Scroll** key beneath the prompt.

If the Soft Key feature is activated at your station, you can still access features with feature buttons (fixed or flexible) or with access codes.

 
When your telephone is idle, Soft Keys do not display and the **Mode**, **Page**, and **Scroll** keys function as normal. If your telephone is in use, Soft Key functions replace the **Mode**, **Page**, and **Scroll** functions.

How to Use Soft Keys

This section provides an example of how to use Soft Keys to make a Conference call by adding a station to an outside call. Other features that can be accessed with Soft Keys include Transfer, Paging, and more.

Using Soft Keys to Make a Conference Call

1. While on an outside call with CO line (line 3 for this example) your LCD will display the following prompts:

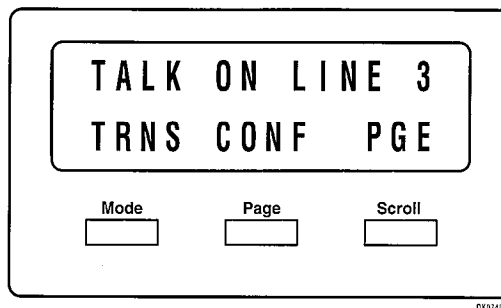

Note:

Once the Soft Key prompts appear (in this case, the Soft Keys are **TRNS**, **CONF**, and **PGE** for Transfer, Conference, and Page), the buttons below them now stand for Transfer, Conference, and Page instead of **Mode**, **Page**, and **Scroll**. In the following steps of this example, only the Soft Key displays will be shown since **Mode**, **Page**, and **Scroll** no longer apply while Soft Keys are active.

- If you initiated the call, the "TRNS" prompt will appear 30 seconds after the first digit of the telephone number is dialed—the "ABR" prompt for Automatic Busy Redial (ABR) will appear during this first 30 seconds (if it does not appear, then this feature was not assigned in system programming). If the call is an incoming call, the "TRNS" prompt will appear immediately when you answer the call.
2. Press the **CONF** Soft Key to initiate the Conference.



- The outside call will be placed on hold and the LCD will appear as follows after you press the **CONF** Soft Key in Step 2.

3. To transfer to a station, press the **STA** Soft Key.

LINE OR STATION?
LINE STA. RTRN

DK6742

- Whenever the **RTRN** Soft Key appears, you can terminate the operation and return to the outside call by pressing the **RTRN** Soft Key.

4. Dial a station number when the following LCD appears:

DIAL STATION NO.
RTRN

DK6743

5. After you dial the station number (203 in this example), you will see one of the displays below for about three seconds. The display will then change to the display in Step 6.

CALLING
203

or

CALLING
TOM BROWN 203

DK6744

Called Station (203) has "user name" turned off.

Called station (203) has "user name" turned on.

6. After three seconds the user's name (or number) is replaced with the following display and you can voice announce to station 203:

ANNOUNCE TO 203
TRNS RING RTRN

DK0745

or, when in TONE mode the following is displayed:

RINGING 203
MESG TALK RTRN

DK0745


- You could stop the called station voice announce and make station 203 ring by pressing the **RING** Soft Key.
 - Instead of proceeding with the Conference, you could transfer the call by pressing the **TRNS** Soft Key.
 - You could terminate the operation and return to the outside call by pressing the **RTRN** Soft Key.
7. The LCD will appear as follows after the called station answers. Your station is connected to Station 203 and the outside call remains on hold. Press the **JOIN** Soft Key to join all parties in a Conference.

TALK WITH 203
TRNS JOIN RTRN

DK0741

- Instead of proceeding with the Conference, you could transfer the call by pressing the **TRNS** Soft Key.
- You could terminate the operation and return to the outside call by pressing the **RTRN** Soft Key.

 - The LCD will appear as follows after you press the **JOIN** Soft Key in Step 5 and all parties will be conferenced.

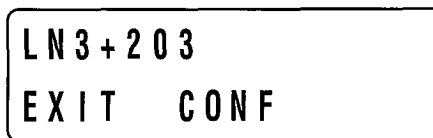

- "LN 3 + 203" indicates that you are in a Conference with CO line 3 and Station 203.
- You can exit the Conference and the other parties will remain connected if you press the **EXIT** Soft Key.
- You can add another station or CO line by pressing the **CONF** Soft Key.

Note:

If the Soft Key feature is activated at your station, incoming call information will not display on your LCD while your station is busy. To display this information, you must either disconnect the existing call or place it on hold.

Soft Key Prompt Definitions

The following list provides definitions of all of the Soft Key prompts that could appear on your LCD.

TRNS—Press to initiate or complete a Transfer while on an outside call. **TRNS** can cause an immediate or announced transfer, depending on how the feature is set in system programming. After initializing transfer, pressing **TRNS** again will complete the transfer.

CONF—Press to initiate or complete a conference.

PGE—Press to park an outside call and to gain access to a menu of page options.

RING—Press to make a called station ring when making a voice announce call to the station.

TALK—Press to make a voice announcement to a called station that is ringing.

MESG—Press to set a message waiting indication at a busy or unanswered station.

OVRD—Press to gain access to override options or to override a station that is busy or in the Do Not Disturb mode.

BUSY—(Busy Override) Press to send a call-waiting tone to a busy station.

EXEC—(Executive Override) Press to break into the conversation of a busy called station.

ACB—Press to activate Automatic Callback after reaching a busy station, CO line, or CO Line group.

ABR—Press to activate Automatic Busy Redial after dialing a busy outside telephone number.

RLS—Press to disconnect a call and to return to the idle state.

RTRN—Press to terminate a feature operation and to return to a previously displayed state.

LINE—Press to add a CO line to an existing call while in the Conference mode. The LCD will prompt you to access a CO line after you press this key.

STA.—Press to add a station to an existing call while in the Conference mode. The LCD will prompt you to dial a station number after you press this key.

JOIN—Press while on a conference call to join all parties to a conference.

EXIT—Press to exit from a conference and to leave the remaining parties connected.

Soft Key Activation

To activate Soft Keys at your station:

1. Make sure your telephone is idle. Do not lift the handset.
2. Press the **Mode** key below the LCD.
3. Press **7 1**.

Your telephone must be idle before you follow the steps on the left to activate or deactivate the Soft Key feature at your station.

Soft Keys are now activated and the appropriate feature prompts will display when your phone is in use. The Soft Key feature will remain on until you turn it off. In short, you can perform numerous telephone functions and the Soft Keys will not be cancelled unless you deactivate them.

Soft Key Deactivation

To deactivate Soft Keys at your station:

1. Make sure your telephone is idle. Do not lift the handset.
2. Press the **Mode** key below the LCD.
3. Press **7 0**.

Your telephone must be idle before you follow the steps on the left to activate or deactivate the Soft Key feature at your station.

Once you deactivate the Soft Keys, the feature prompts will no longer appear on the telephone display.

Messages and Memos

4

The LCD on your telephone can be used to send or receive messages to or from other LCD telephone users. It can also display the names/numbers of the person calling your telephone or the name of the person you are calling. Names and memos can also be set to display with speed dial numbers and timed reminders.

To Store a Message in Memory:

1. Press **LCD Msg Select**

- Or -

a [PDN] + # **6 8**.



MSG NO. ?

Storing a Message in Memory

The LCD Msg Select LED flashes.

2. Enter the two-digit message number to be stored.
3. Use the Recording a Message procedure to enter the message characters.
4. Press the **LCD Msg Select** (or **Spkr**).

Personal message (10 ~ 19); system message (60 ~ 99 port 00 only). The current message, if any, will be displayed.

The LCD Msg Select LED lights steadily, and the LCD displays the message. The message will now be stored in system memory.

 
Recording a Message

Recording a Message, Name, or Memo

Use this procedure to enter the characters of a personal message (10 ~ 19) or system message (60 ~ 99, Station 200 only), to add to a preprogrammed message, or to edit and set a new message. After calling up a message on your display (see Storing a Message in Memory, Steps 1 and 2 on the previous page), perform one of the following procedures:

To Record a Message:

1. Press the **#** button to access alpha characters. Refer to Figure 4 for an explanation of the dial pad buttons.
2. Press ***** or **1** to move the cursor (—) to the desired position (the left edge of the display for a new message, or two spaces to the right of the preprogrammed message to add information).
3. Press the button that has the letter you want to enter. Use the **0** button to shift from letter to letter on the button.
4. If you want to enter a number, press the **#** button to change to numeric characters. Press the **#** button again to return to alpha characters.

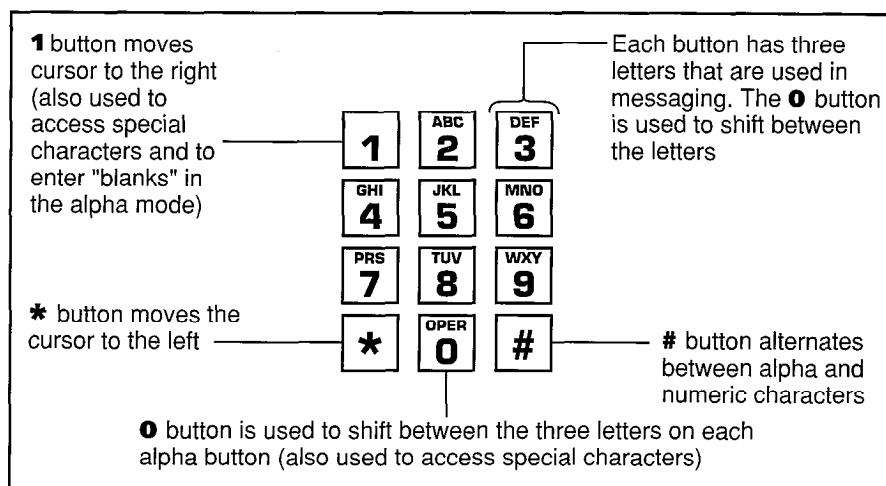

DK0575

Figure 4
Dial Pad Information

For example: If you press **3**, a "D" is displayed. By pressing **0**, the "D" is changed to "E". By pressing **0** again, the "E" is changed to "F". Press **0** again and the "F" changes to "D". To enter a space, press **1**.

Numbers are also entered on the dialpad.

5. The following special characters are set by pressing **1** and then pressing **0** to step through the available characters:
Q, Z, :, -, +, /.

Preprogramming System Messages

System messages can only be programmed or permanently changed at port 000, station number _____ (usually 200). Five preprogrammed messages are automatically stored in memory when the Alphanumeric Messaging with LCD feature is initialized.

- 60) OUT TO LUNCH
- 61) IN A MEETING
- 62) CALL _____
- 63) BACK AT _____
- 64) RETURN ON _____

You can use these messages and add 35 more messages designed specifically for your system, or you can overwrite the initialized messages and program up to 10 of your own. Any messages programmed at port 000 will remain in memory until canceled from port 000 or until the system is reinitialized. After reinitialization, only the original five messages will remain in memory. System messages are written and stored in memory as explained in *Storing a Message*.

Adding to Preprogrammed Messages

When you select a message, it appears on your station display. A cursor (–) also appears immediately to the right of the last letter in the message. You can now input additional information (up to a total of 32 digits for each message). Some system messages may expect you to add more information. For example:

- 1. CALL _____
 - Add a station or outside telephone number.
- 2. BACK AT _____
 - Add the time you will return.
- 3. RETURN AT _____
 - Add the date you will return.

Note:

Refer to Recording a Message for adding to a preprogrammed message.

Messaging

Calling Station Messaging

 
You can set a message that will appear on the LCD of telephones that call your telephone by following the instructions on the left.

To Create an LCD Message for Phones that Call Yours:

1. Press the **LCD Msg Select**

- or -

press a [PDN] +
6 8).



The LCD Msg Select LED flashes, and the LCD displays "MSG NO.?"

2. Dial the number of the message you want.

Personal message (10 ~ 19) and system message (60 ~ 99). The selected message is displayed. (To add to this message, use the procedure for "Recording A Message," found earlier in this chapter.)

3. Press **LCD Msg Select**

- or -

Spkr.

The LCD Msg Select LED lights continuously, and the selected message will be set. The message will be sent to LCD telephones that call your telephone. If you have CF set on your telephone, press the **Page** button to display the message instead of CF.

Canceling a Calling Station Message

To Cancel a Message that Has Been Set at Your Station:

- Press **LCD Msg Select**.

- or -

1. Press a [PDN] + **# 6 8**.
2. Press **Spkr.**

The LCD Msg Select LED goes out.

The LED lights.

The LED goes out. A personal message (10 ~ 19) will remain stored in memory.

Setting/Changing Calling Station Messages

You can set a completely new, personalized message by overwriting any of the existing preprogrammed messages. To do this, simply call up one of the messages as explained previously. When the cursor appears to the right of the message, shift it to the left margin and write your new message over the preprogrammed one. The new message will remain on your station until canceled. It will then be erased and the original preprogrammed message will be restored.

Notes:

1. Refer to *Recording a Message for leaving a new message at your station.*
2. *Messages will remain in memory until changed. The preprogrammed messages are never erased; only the user-added messages are erased.*

Storing LCD Name/Number Display

This feature allows you to use your telephone to store a title (such as your name, telephone number, location, etc.) in system memory. This title (e.g., LOBBY) will display on your station's LCD while it is idle, and it will appear at other stations' LCDs when they are called from your station. Your name will display on other telephone LCDs when they are used to call your telephone (Soft Keys must be turned on).

Name display information for non-LCD telephones or voice mail/auto attendant devices may be stored from station 200. When name/number is recorded for non-LCD telephones or other devices, their name/number is displayed on LCD telephones when called.

To Enter Name/Number Information:

1. Press a [DN] + **# 6 2 1**.

Current information will appear on the lower line of the LCD.



USER NAME?

2. Enter the new information via the dial pad.

Refer to "Recording a Message" earlier in this chapter for dialpad instructions. Up to 16 characters can be recorded. It is recommended that you enter the station number along with the user's name (as shown in Step 3).

3. Press **Spkr**.

TOSHIBA EXT. 200
DATE DAY TIME

The new information is stored and will appear on the top line of the display. For example, if you entered "TOSHIBA EXT. 200", that will appear above the date/day/time on the display.

To Clear Name/Number Display:

1. Press a **[DN]** + **# 6 2 0**.
2. Press **Spkr**.

During clear:

NO. NNN
USER NAME RESET

After clear:

NO. 200
DATE DAY TIME

You will hear a confirmation tone, then a busy tone.

Notes:

1. When user name is set, your title will appear on the LCD during direct, forwarded, and hunted calls. On override or OCA calls, the LCD will not display the title.
2. After a name is cleared, it may be redisplayed at any time by pressing a **[DN]** + **# 6 2 1**.
3. A name is displaced by message and call forward settings if they are set.

To Erase Name/Number Information:

1. Press a **[DN]** + **# 6 2 1**.

USER NAME ?

Current information will appear on the lower line of the LCD.

2. Press **1** in the alpha mode to enter blanks.
3. Press **Spkr**.

To erase name/number information from memory, enter blanks at the "User Name" prompt. Refer to "Recording a Message" earlier in this chapter for more information.

The erased name/number information should be gone.

To Enter Name/Number Information for Other Stations/Devices

1. Turn off Soft Keys by pressing **Mode + 7 0**, when your telephone is idle.

Entering Name/Number information for other stations or devices is only allowed from Station 200.

2. Press a [DN] + **# 6 2 1**.

USER NAME?

Current information for station 200 will appear on the lower line of the LCD.

3. Press **Page**.

DEST EKT NO.?

In this particular display, "EKT" stands for the Primary Directory Number of the digital, electronic or standard telephone.

4. Dial the [PDN] of the station for which the name/number information is to be recorded.

DEST EKT NO.NNN

5. Press **Page**.

USER NAME?

"USER NAME?" will appear on the upper line of the LCD, and current information for station NNN will appear on the lower line of the LCD.

6. Enter the new information via the dial pad (refer to Recording a Message for method).

Up to 16 characters can be recorded. It is recommended that you enter the station number along with the user's name.

7. Press the **Spkr** button.

The new information is stored and appears on the top line of station NNN's LCD. Station 200's LCD returns to the normal idle display.

8. Repeat Steps 2 ~ 7 to enter more names/numbers.
9. To turn Soft Keys on again, press **Mode** + **7 1** when your telephone is idle.

Notes:

1. To erase the name/number information of another station from station 200, repeat Steps 1 ~ 6 above and enter blanks in Step 5. Blanks are entered by pressing 1 in the alpha mode.
2. Station NNN may set and clear the NAME/NUMBER feature anytime:
 - **Set:** Press a [DN] + # **6 2 1**.
 - **Clear:** Press a [DN] + # **6 2 0**. "Clear" eliminates the display when calling, but does not erase it from memory.

To Erase Other Station's Name/Number Display:

- From station 200, repeat Steps 1 through 6 of the previous procedure and press **1**, in the alpha mode in Step 5.

Speed Dial Memo

This feature allows you to program a 12-character name for each of his/her 40 personal speed dial numbers. The memo pad of names may be stepped through to select the appropriate party. Memos may also be added to the 40 or 100 system speed dial codes, depending on your system's size, via the station connected to port 000, station number _____ (usually 200).

To Program Speed Dial Names and Numbers:

1. Press **Redial**, then press **Speed Dial**.
2. Dial the desired speed dial code.



* NN SPEED DIAL

3. Press **Mode**.



* 10 NAME
SPEED DIAL

Press **SDS** or * if your telephone is not equipped with a **Speed Dial** button.

NN or NNN = Speed Dial Code. (10 ~ 49 from any station) or (60 ~ 99 or 600 ~ 699, depending on your particular system size, from station 200 only)

If a name was previously stored on this code, it will display on the top line of the LCD.

4. Enter the name or memo (refer to Recording a Message for method).
The name will appear on the bottom line of the LCD as you enter it.
5. Press **Mode**.
The number will appear on the top line of the LCD as you enter it.
6. Enter the desired telephone number (16 digits maximum).
7. Press **Redial** to record data in memory.
The name can be up to 12 characters.

To Dial a Speed Dial Number:

1. Press **Mode** when telephone is idle.
The LCD displays "MODE NO.?".
2. Dial **8** NN or NNN.
The speed dial number appears with name or memo. NN or NNN = personal or system speed dial codes. Personal speed dial code numbers are 10 ~ 49, and system numbers, stored from station 200 only, are 60 ~ 99 or 600 ~ 699, depending on your system size.
3. Press **Page** to scan the directory for the appropriate number/memo.
4. Press any available **Line** button
- or -
press **[DN]** and press the CO line access code.
5. The number is dialed.

To Check a Speed Dial Number:

1. Press **Mode + 8** when telephone is idle.
2. Dial a two-digit speed dial number.
3. Press **Page** to scan the directory for the appropriate number/memo.

Note:

The station must be enabled via system programming for LCD message memory.

Personal speed dial number (10 ~ 49) or system number (600 ~ 699).

If the number is longer than 16 digits, a "+" will appear in the far right corner of the display. Press **Scroll** to display the remaining digits.

Timed Reminders with Memo

This feature allows five separate messages to be set at each LCD station. These messages will be displayed at the times (hour and minute) set by the station user. They can either be displayed just once or repeated on a daily basis.

To Set a Timed Reminder with Memo:

1. Press a **[DN]**.
2. Dial a three-digit reminder number (**# 605 ~ # 609**).
3. Enter the desired time for the message to be displayed.
4. Dial **0** if the message is to be repeated every day, or **1** if it is a one-time message only.
5. Enter the desired message number, or 00 if no message should be stored.
6. Press **Redial** to record the data in memory.

The message time must be in 24-hour clock format (i.e., HHMM).

Personal message (10 ~ 19) and system (60 ~ 99). The message does not display when setting a timed reminder—it displays when the reminder activates. Messages are set using the Record a Message method.

The LCD displays "DATA PROGRAMMED". You will hear a confirmation tone. The message will be displayed at the specified time, and a beeping tone will be heard for 30 seconds (or until it is canceled by pressing **Mode + 0**).

Message Sending

The Alphanumeric Messaging feature on your LCD digital telephone enables you to set short text (up to 32 characters) at your station to ensure that you do not miss important calls. Any station may record a message; however, only stations with the LCD are able to display messages. Stations that do not use Soft Keys (Soft Keys Off: **Mode + 7 0**) may send messages “live” to other LCD station users. To record messages, see the Recording a Message section in this guide.

Your system has up to 40 preprogrammed messages that may be sent to other LCD digital or electronic telephones. In order to leave a personalized message at your station, you can temporarily add or change any of these messages.

Some stations may record and save up to 10 personal messages to be used for all types of station messaging. This is a station option that is enabled in system programming.

Called Station Messaging

Your station number and a message indication may be sent to another LCD station. When that station responds, it will receive the message. Soft Keys must be off (**Mode + 7 0**) at the sending station for this feature to operate.

To Set a Called Station Message:

1. Press **MODE + 7 0** to ensure that Soft Keys are off.
2. Dial the station Directory Number (station does not answer or is busy).
3. Press **Mode**. The LCD displays “MODE?”.
4. Press **4**. The LCD displays “MW TO STNNN MSG NO?”.
5. Enter the desired message number. Personal message (10 ~ 19), system message (60 ~ 99). The LCD displays the message.
6. Press **Msg**.
7. Press **Spkr** or hang up to release. “CALL XXX-YYYY” is displayed at the called station and the Msg LED flashes; “SENT MMM” is displayed at your station. XXX = the called **[DN]**, YYY = the **[PDN]** of the station that sent the message, M indicates that a message has been sent.

To Receive a Called Station Message:

- Press the **Msg** button. Press these buttons when your telephone Msg LED is flashing

Group Called Station Messaging

This feature allows a station to set a Called Station Message for a group of stations.

To Set a "Called Station" Message for Another Station or Group of Stations:

1. Press **Mode**. The LCD displays "MODE?"
2. Press **9 4**. The LCD displays "MODE 94 DEST EKT NO. NNN?".
3. Dial the "destination" Directory Number (or enter **# 3 0** for all stations, or **# 3 1 ~ # 3 8** for groups). The LCD displays "MODE 94 DEST EKT NO.NNN" or the Station Group number. Enter #30 for all call page stations, or #31 ~ #38 to send the message to a group of stations. Station groups correspond to the same stations that are in respective Page groups assigned in system programming.
4. Press **Page**. The LCD displays "MODE 94 ORG EKT NO.?"
5. Dial the "originating" [PDN]. Your number or another station number. The LCD displays "MODE 94 ORG EKT NO.NN".
6. Press **Page**. The LCD displays "MSG NO.?"
7. Enter the desired message's number. The LCD displays the message.
8. Press **Page**. The LCD displays "MSG NO.?"
9. Press **Mode**. The LCD displays "MODE NO.?"
10. Press **0**. At originating station, the LCD displays date/day/time, and then displays "SENT NNNM". At the destination station, the LCD displays the originating station number and a message indication.

To Receive a Called Station Message:

- Press **Msg**.

Remote Calling Station Messaging

To Set a Calling Station Message for Another Station:

1. Press **Mode** when your telephone is idle. The LCD displays "MODE?".
2. Press **9 5**.
3. Dial the destination **[PDN]**. The LCD displays "MODE 95 DEST EKT NO.NNN." This is the **[PDN]** to which the Calling Station message will be set.
4. Press **Page**. The LCD displays "MSG NO.?".
5. Enter the desired message number. The LCD displays the message.
6. Press **Page**. The LCD displays "MSG NO.?".
Note:
Remote calling station messaging allows you to set a calling station message for only one station at a time.
7. Press **Mode**. The LCD displays "MODE NO.?".
8. Press **0**. Your LCD shows the time and date. The message is displayed at the "destination" station. Any station calling the "destination" station receives the message.

Busy Station Messaging

When reaching a busy LCD station, a message can be sent to that station (an audible tone will be heard). The busy station may also return a message to the calling station's LCD. The two stations may continue this procedure to carry on a "silent" conversation. Soft Keys must be off (**Mode + 7 0**) at the sending and receiving stations for this feature to operate.

To Send a Message to a Busy Station:

1. Call the desired station. Listen for a busy tone.
2. Press **Mode**. The LCD displays "MODE NO.?".
3. Press **2**. The LCD displays "OVER TO STNN MSG NO?".
4. Enter the desired message number. Personal message (10 ~ 19) and system message (60 ~ 99). The LCD displays the message.

5. Press **Page**. The LCD displays "MSG SEND". The destination station beeps four times and the message is displayed for 30 seconds, or until the originating station hangs up.

Return a Busy Station Message

You can return a Busy Station message after receiving a Busy Station message by following the steps on the left.

To Return a Busy Station Message:

1. Press **Mode**. The LCD displays "MODE NO?".
2. Press **2**. The LCD displays "OVER TO STNN MSG NO?".
3. Enter the desired message number. Personal message (10 ~ 19) and system message (60 ~ 99). The LCD displays the message.
4. Press **Page**. The LCD displays "MSG SEND".

Index

20-button digital speakerphone
with liquid crystal display, 2

A

account codes, 5
alphanumeric messages, 8
ANI, 4, 6, 12, 25~26
auto dial lost calls, 25
auto busy redial, 7
automatic callback, 7~8, 36
automatic line selection, 8

B

busy field, 3~4, 8, 29
busy lamp field, 1, 29
busy override, 15, 35
busy station messaging, 4, 51
return a busy station
message, 52

C

call forward, 3, 9, 20~23, 27, 44
all calls, 9~10, 22
for [DNs], 9
for [PhDNs], 9
busy, 9~10, 22
busy/no answer, 10, 21
call forward-external, 21

call forward-fixed, 9
call forwarding a primary
and/or phantom directory
number, 9, 21, 22
cancel a call forward, 23
no answer, 9~10, 21
settings, 9, 44

call park/park and page, 23~24
paging group and zone codes,
24
parked call retrieval, 24

call pickup, 10
caller ID, 4, 6~7, 10, 25~26
calling number-internal, 10
calling station messaging, 4, 42,
51
camped-on CO call, 11
CO line identification, 1, 10, 16
CO line number, 8, 11, 16
conference, 17, 32
conventions, iv

D

date/time, 12
date/time/day adjustment, 19
dialed number, 3, 6~7, 11~12, 14
DNIS, 4, 6, 12~13
dialpad information, 40

directory number display, 13
[DN], 7~9, 12~13, 16, 19~20, 22,
24, 26~29, 43~49
Do Not Disturb (DND) override, 16
door phone/monitor, 13

E

elapsed time, 3, 12, 14
executive override, 16, 36

G

group called station messaging,
50

I

incoming CO call, 11

L

LCD function overview, 5
condition creating display, 5
LCD name/number display, 14
least cost routing, 14
liquid crystal display, 5
lost call, 4, 25~26

M

message sending, 49
busy station messaging, 4,
51

- called station messaging, 4, 49~50
 - group called station messaging, 50
 - remote calling station messaging, 4, 51
 - return a busy station message, 52
 - message waiting, 4, 15, 22, 26~27, 35
 - messages and memos, 39~52
 - adding to preprogrammed message, 41
 - calling station messaging, 4, 42, 51
 - canceling a calling station message, 42
 - group called station, 50
 - preprogramming system messages, 41
 - recording a message, 39~45, 47, 49
 - remote calling station messaging, 4, 51
 - setting/changing calling station messages, 43
 - storing a message in memory, 39~40
 - storing LCD name/number display, 43
 - system messages, 4, 41
 - mode, 1, 3~4, 6, 8, 12, 16~17, 20~22, 25~26, 29, 31~32, 34~37, 44~52
 - definitions, 3~4
 - msg, 15, 26~28, 39, 42, 49~52
- O**
- off-hook call announce, 15
 - override, 15~17, 35~36, 44
- P**
- Page** button, 3, 6, 8, 12, 14, 17, 23~25, 29, 31~32, 35, 40, 42, 45, 47~48, 50~52
 - paging group and zone codes, 23~24
 - park/park and page, 23~24
 - parked call retrieval, 24
 - park orbit list display, 25
 - [PDN]**, 8~10, 13, 21~24, 27, 39, 42, 45, 49~51
 - [PhDN]**, 8, 10, 22~23, 27
 - preprogramming system messages, 41
 - adding to preprogrammed messages, 41
 - privacy override, 16
- R**
- redial, 7, 12, 19~20, 28~29, 32, 36, 46~48
 - recalling station, 15~16
 - recording a message, 39~45, 47, 49
 - recording a message, name, or memo, 40
 - retrieve and auto dial lost calls, 25
 - retrieve voice mail messages, 28
- S**
- scroll, 1, 3~4, 9~10, 15, 20, 25~27, 31~32, 48
 - [SDN]**, 8
 - SDS** button, 46
- soft keys, 1, 4~5, 12, 14, 29, 31~32, 36~37, 43, 45~46, 49, 51
 - soft key prompt, 35
 - activation, 36
 - deactivation, 37
 - definitions, 3~4, 35
 - speed dial, 1, 3~5, 17, 22, 39, 46~48
 - speed dial memo, 1, 17, 46
 - Spkr**, 7, 19~20, 22~23, 39, 42, 44~45, 49
 - station-to-station message waiting, 26
 - storing a message in memory, 39~40
- T**
- timed reminders, 1, 3, 39, 48
 - toll restriction, 17
 - transferred CO call, 11
 - traveling class override codes, 17
 - two-CO line calls, 17
- V**
- verified forced account code, 5
 - verified voluntary account code, 5
 - voice mail, 15, 27~28, 43
 - assign a voice mail message mailbox, 28
 - assign voice mail retrieval digits, 28

TOSHIBA

**Toshiba America Information Systems, Inc.
Telecommunication Systems Division
9740 Irvine Boulevard, Irvine, CA 92718**

**Item Number: 4 0 1 6 1 1 0
D 2 8 - U G - D K T L C D R 3**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>