

Uniden®

**QUICK
EASY
STEPS**
for setting
up your
phone!

SEE YOUR
QUICK REFERENCE
GUIDE SECTION



2.4
GIGAHERTZ
WITH EXTENDED RANGE

DXI 3286-2 SERIES

OWNER'S MANUAL

EASILY REGISTER THIS
PRODUCT ONLINE AT
WWW.UNIDEN.COM

Step 1 Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact the Uniden Parts Department.

- Base unit (1)
- AC adapter (2)
- Telephone cord (1)
- Charging cradle (1)
- This owner's manual
- Other printed materials
- Handset (2)
- Rechargeable battery (2)
- Beltclip (2)

Uniden Parts Department at (800) 554-3988
Hours: M-F 8:00 a.m. to 5:00 p.m. CST.
We can also be reached on the web at
www.uniden.com

 
Step 2 Install and Charge the Handset Batteries

TO INSTALL THE HANDSET BATTERIES

A Remove the cover.




B Connect the battery pack connector with the correct polarity.



C Replace the cover.



 
D Plug the AC adapter cord into the base unit and charging cradle and then into a 120V AC outlet.



E Place the handset in the base and place the other handset in the charging cradle. It does not matter which handset is placed in the base and charging cradle.

Step 3 Connect to Phone Line

When the handset battery pack is fully charged, after 15-20 hours of charging, plug the telephone cord into the base unit and then into a telephone wall jack.

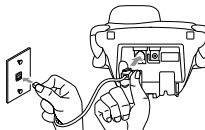

Your phone is set for tone dialing. If your local network requires pulse dialing, please see "Choosing the dialing mode" on page 18.

Step 4 Before Using, Register Second Handset to Base

A After fully charging the handsets, remove the handset from the charging cradle and place it in the base. (Base LED light will begin to flash indicating registration is occurring.)

B Wait for at least 5 seconds before removing the second handset from the base.

Congratulations, the registration has been completed, and your dual handset cordless phone is ready for use!

Step 5 Setting Display Options



Note: Three Caller ID options are available: AutoTalk, Caller ID on Call Waiting (CIDCW), and Area Code.

TO SET CALLER ID, LANGUAGE AND DIALING OPTIONS

- A** Press and hold the *cid/menu* key in the standby mode.
- B** Press the *vol/ring/ ^* or *vol/ring/ v* key to move the pointer to an option.
- C** Press the *select/channel* key to change the option setting.
- D** Press the *end* key to exit, and return the handset to the base.

OPTIONS INCLUDE

- | | |
|--------------------|---------------------------------------|
| A Auto Talk | On/Off |
| B CIDCW | On/Off
(Caller ID on call waiting) |
| C Area Code | Enter/Remove |
| D Dial | Pulse/Tone |
| E Language | English/French/Spanish |

Contents

Quick Reference Guide	3	Making Calls with Memory Dialing	28
Welcome/Features	5	Chain Dialing	29
Controls and Functions	6	Editing a Stored Name and/or Phone Number	30
Getting Started	6	Erasing a Stored Name and Phone Number	32
Setting up the Phone	8	RocketDial	
Before Using, Register Second Handset to the Base Unit	13	RocketDial	33
When to Re-register Handsets	14	Storing and Editing the RocketDial	33
Call Transfer Feature	14	Making Calls with the RocketDial	33
Mounting the Base Unit on a Wall	15	Deleting the RocketDial	34
Setting Menu Options	17	Caller ID Features	
Basics		Caller ID	35
Making and Receiving Calls	20	When the Telephone Rings	35
Adjusting the Handset Ringer and Earpiece Volume	21	Viewing the Caller ID Message List	36
Redial	22	Deleting Information from the Caller ID List	37
Tone Dialing Switch over	22	Using the Caller ID List	39
Traveling Out-of-Range	22	Additional Information	
Selecting a Different Channel	23	Changing the Digital Security Code	41
Find Handsets	23	Installing the Beltclip	41
Flash and Call Waiting	23	Headset Installation	41
Voice Mail Waiting Indicator	24	Note on Power Sources	42
Memory Dialing		Maintenance	42
Storing Phone Numbers and Names	25	Troubleshooting	43
Steps for Entering Names and Special Characters	27	General Information	46
		Precautions & Warranty	47
		I.C. Notice	49
		Index	50

Welcome

Congratulations on your purchase of the Uniden Cordless Telephone. This cordless phone is designed and engineered to exacting standards for reliability, long life, and outstanding performance.

Note: Some illustrations in this manual may differ from the actual unit for explanation purposes. The color of your cordless telephone may vary.

Features


- Dual Handsets
- 2.4GHz Extended Range Technology
- 3 Line Backlit Display
- Caller ID and Call Waiting Caller ID (each handset)
- RocketDial (each handset)
- 20 Number Memory Dialing (each handset)
- 32 Digit Redial
- Flash and Pause
- English, French or Spanish Display Option
- The Keypad Facing Forward Charging
- Tone/Pulse Dialing
- Page/Find handset
- Earpiece Volume Control
- Ringer Volume Control (High-Low-Off)
- Hearing Aid Compatible
- 20 Channel Autoscan
- Call Transfer

Be sure to visit our web site: www.uniden.com

Uniden® and RocketDial® are registered trademarks of Uniden America Corporation. AutoTalk, AutoStandby, UltraClear Plus, Random Code and AutoSecure are trademarks of Uniden America Corporation.



Controls and Functions

Dual Handsets

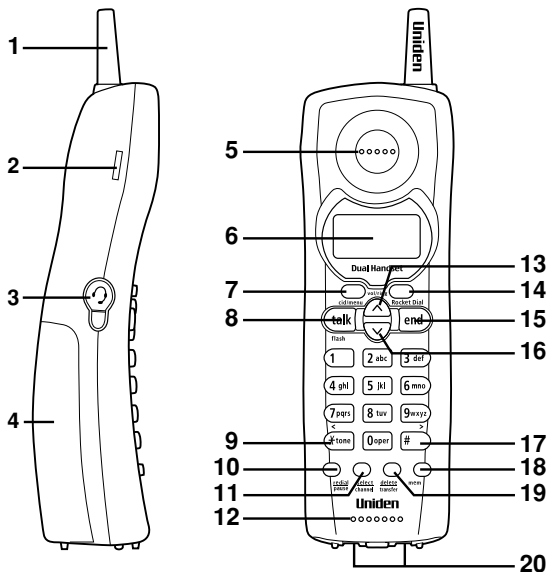


1. Handset antenna
2. Beltclip hole
3. Optional headset jack
4. Handset battery compartment
5. Handset earpiece
6. LCD display
7. cid/menu (Caller ID) key
8. talk/flash key
9. * /tone / < (left cursor) key
10. redial/pause key
11. select/channel key
12. Handset microphone and ringer speaker
13. vol (volume)/ring / ^ (up) key
14. RocketDial key
15. end key
16. vol (volume)/ring / v (down) key
17. # / > (right cursor) key
18. mem (memory) key
19. delete/transfer key
20. Handset charging contacts

Base

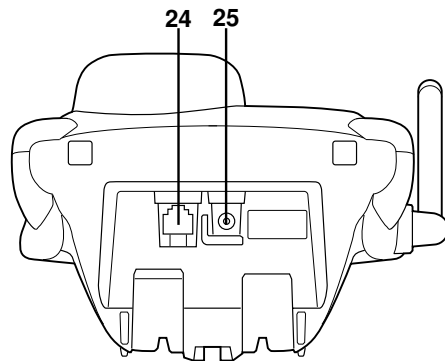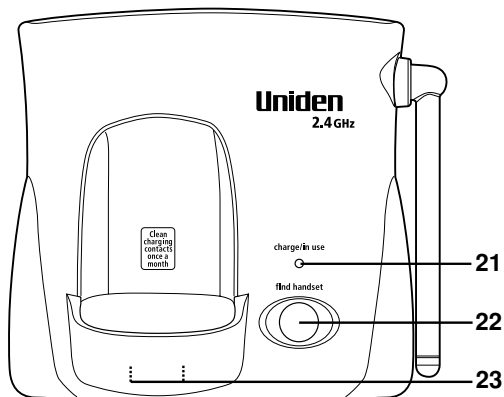

Charging Cradle

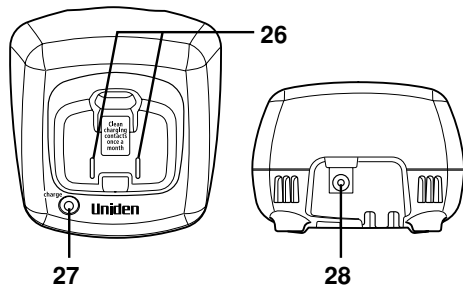

- 21. charge/in use LED
- 22. find handset key
- 23. Base charging contacts
- 24. Telephone line jack
- 25. DC IN 9V jack
- 26. Charging contacts
- 27. Charge LED
- 28. DC IN 9V jack



If your home has specially wired alarm equipment connected to the telephone line, be sure that installing the system does not disable your alarm equipment.

If you have questions about what will disable your alarm equipment, contact your telephone company or a qualified installer.

Setting up the Phone

Do the following steps:

- A. Choose the best location
- B. Install the rechargeable battery packs into both handsets
- C. Connect the base unit and charging cradle


A. Choose the best location

Before choosing a location for your new phone, read the INSTALLATION CONSIDERATIONS included in the PRECAUTIONS. Here are some important guidelines you should consider:

Avoid heat sources, such as radiators, air ducts, and sunlight

Avoid television sets and other electronic equipment

Choose a central location

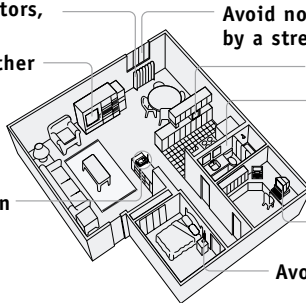

Avoid noise sources such as a window by a street with heavy traffic

Avoid microwave ovens

Avoid excessive moisture, extremely low temperatures, dust, mechanical vibration, or shock

Avoid personal computers

Avoid other cordless telephones

- The location should be close to both a phone jack and a continuous power outlet which is not switchable.
- Keep the base and each handset away from sources of electrical noise such as motors, microwave ovens, and fluorescent lighting.
- Be sure there is sufficient space to raise the base antenna to a vertical position.
- The base can be placed on a desk, tabletop, or mounted on a standard wall plate.


B. Install the rechargeable battery packs into both handsets

Both handsets are powered by rechargeable battery packs. The battery recharges automatically when the handset is placed in the base unit or charging cradle.

Charge the handset battery packs for at least 15-20 hours before using your new cordless telephone for the first time!

To maximize the charge capacity of your battery pack, DO NOT plug the telephone cord into the base unit and wall jack until the battery is fully charged.

- 1) Press down on the handset battery case cover (use the finger indentation for a better grip) and slide the cover downward to remove.
- 2) Plug the battery pack connector (red & black wires) into the small jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one-way.) Match the wire colors to the polarity label in the battery compartment, connect the battery and listen for a click to insure connection.
- 3) Make sure you have a good connection by slightly pulling on the battery wires. If the connection is secure, the battery jack will remain in place.

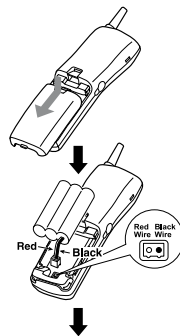


note

- Use only the Uniden (BT-905) rechargeable battery pack supplied with your cordless telephone.
- Replacement batteries are also available through the Uniden Parts Department at (800) 554-3988, Monday through Friday from 8:00 a.m. to 5:00 p.m. or on line at www.uniden.com
- Place the second handset in the charger with the keypad facing forward for 15-20 hours before use.

- 4) Place the battery case cover back on the handset by sliding it upwards until it clicks into place.
- 5) Place one handset in the base unit and one handset in the charging cradle for 15-20 hours without interruption. The base or charging cradle unit's LED light (labeled **charge/in use** or **charge**) illuminates once the handset is placed in the base or charging cradle. The LED light will illuminate whether the battery pack is connected or not.

If the base or charging cradle (**charge/in use** or **charge**) LED light does not illuminate:


- Check to see if the AC adapter is plugged into each charging cradle and the electrical wall outlet properly. (Use only the supplied AC adapter. Do not use any other AC adapter.)
- Check to see if each handset is sitting correctly in each charging cradle and making good contact with each charging contacts.

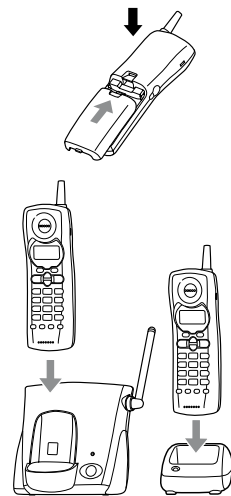

Low battery alert

When the battery pack is very low and needs to be charged, the phone is programmed to eliminate functions in order to save power. If the phone is not in use, "Low Battery" appears on the LCD and none of the keys will operate.

 If the phone is in use, "Low Battery" flashes and the handset beeps. Complete your conversation as quickly as possible and return the handset to either charging cradle for charging.




The last number dialed in the redial memory and the numbers stored in the memory locations are retained for up to 30 minutes while you replace the battery pack.

Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the charging contacts on the handsets, base unit and charging cradle once a month. Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth before returning the handset to the base to charge.

Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

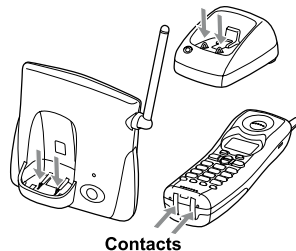

- Even when the battery pack is not being used, it will gradually discharge over a long period of time. For optimum performance, be sure to return the handset to either charging cradle after a telephone call.
- **Talk Mode** - The handset is off either charging cradle and the **talk/flash** key has been pressed enabling a dial tone.
- **Standby Mode** - The handset is not in use, off either charging cradle, and the **talk/flash** key has not been pressed. A dial tone is not present.



Place the handset in the base or charging cradle with the keypad facing forward for charging.



- Use only the supplied AD-0001 AC adapter. Do not use any other AC adapter.
- Place the power cord so that it does not create a trip hazard or where it could become chafed and create a fire or electrical hazard.

C. Connect the base unit and charging cradle

- 1) Connect each AC adapter to the **DC IN 9V** jack and to each standard 120V AC wall outlet.
- 2) Set the base and charging cradle on a desk or tabletop, and place one handset in the base unit and one in the charging cradle.
- 3) Raise the base antenna to a vertical position.
- 4) Make sure that the **charge/in use** and **charge** LED illuminate. If the LED does not illuminate, check to see that the AC adapter is plugged in and that the handset makes good contact with the cradle's charging contacts.



- Connect the AC adapter to a continuous power supply.
- Place the base unit and charging cradle close to the AC outlets so that you can unplug the AC adapters easily.

After installing the battery packs in the handsets, charge your handsets at least **15-20 hours before plugging into the phone line.**


 

- 5) Once the handset battery packs are fully charged, connect the telephone line cord to the **TEL LINE** jack and to a telephone outlet.



If your telephone outlet isn't modular, contact your telephone company for assistance.



Modular

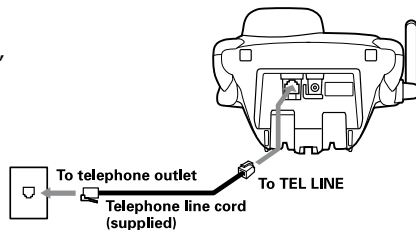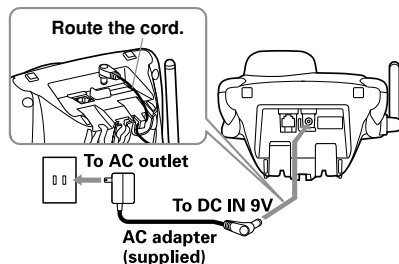

Before Using, Register Second Handset to the Base Unit

When the dual handsets are removed from the packaging, the handset that is placed in the base unit first (to charge battery for 15-20 hours), will automatically be registered to the base unit. (It does not matter which handset you choose to place in the base unit first.)

You will also need to register the second handset by placing it in the base cradle. The second handset WILL NOT operate properly until the registration has been completed. Once the handset is registered, it is ready for use.

 
Follow these simple steps to register:

- 1) First, install the battery packs in both handsets. Place either handset in the base, then place the second handset in the charging cradle. Charge both handsets **for 15-20 hours**.
- 2) After fully charging both handsets, remove the handset in the charging cradle, and place it in the base. The **charge/in use** LED light on the base will begin to flash, indicating that the registration is taking place between the second handset and the base.
- 3) Wait for at least 5 seconds before removing the handset from the base.

Congratulations, the registration has been completed, and your dual handset cordless phone is ready for use!



- When you charge the handset, Caller ID summary screen and the name of the handset, **HS1** appears. If **HS2** appears, you are charging the handset No. 2.



- The charging cradle can be used to charge either handset.



- If the second handset's battery becomes very low, the handset must be recharged for 15-20 hours and re-registered to the base unit.
- Make sure to return the handsets to the charging cradles after each phone call.
- **Call transfer** allows you to transfer outside calls from handset to handset, only one handset at a time can talk with an outside caller.
- If you transfer the call and it is not picked up after 5 minutes, the call will be disconnected.

When to Re-register Handsets

 
- 1) You'll need to re-register the second handset (follow steps on page 13) each time the digital security code is changed. Refer to page 41 for details regarding the Digital Security Code.
- 2) When there is a power failure for more than one hour:
If power failure occurs (e.g. due to electrical storm or if the unit is unplugged during a move), both handsets will need to be re-registered. To re-register, follow the same registration process on page 13.

Call Transfer Feature

Conveniently, your cordless phone allows you to transfer outside calls from handset to handset, simply by pressing the **delete/transfer** key. Not to worry, conversations will not be interrupted; only one handset at a time can talk with an outside caller. The second handset cannot go off hook to listen to conversations or make an outgoing call while the other handset is in use.


To transfer a call (to the second handset)

- 1) Press the **delete/transfer** key during a call. The call will automatically be placed on hold and the transfer tone sounds.
- 2) When the other handset receives the call, the transfer tone stops. To cancel the transfer, press **delete/transfer** or **talk/flash** on the handset.



To receive a transfer call (from the second handset)

 Pick up the handset (when AutoTalk is set to On), or pick up the handset and press the **talk/flash** key to answer the transferred call. Additionally, you can answer the transferred call by pressing any number key, the ***/tone/<**, or **#/>** key (when AutoTalk is set to On).




Mounting the Base Unit on a Wall

Standard wall plate mounting

This phone can be mounted on any standard wall plate.

- 1) Plug the AC adapter into the **DC IN 9V** jack.
- 2) Wrap the AC adapter cord inside the molded wiring channel as shown.
- 3) Plug the AC adapter into a standard 120V AC wall outlet.
- 4) Plug the telephone line cord into the **TEL LINE** jack. Wrap the cord inside the molded wiring channel as shown.
- 5) Plug the telephone line cord into the telephone outlet.
- 6) Raise the antenna to a vertical position.
- 7) Align the mounting slots on the base with the mounting posts on the wall. Then push in and down until the phone is firmly seated.

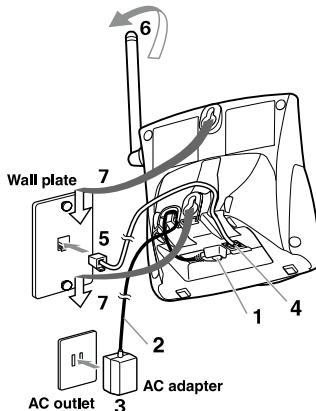

DO NOT use an AC outlet controlled by a wall switch.


Direct wall mounting

If you don't have a standard wall plate, you can mount your phone directly to the wall. Before doing this, consider the following:

- Avoid electrical cables, pipes, or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Try to mount your phone within 5 feet of a working phone jack to avoid excessive lengths.
- Make sure the wall material is capable of supporting the weight of the base and handset.
- Use #10 screws (minimum length of 1-3/8 inches) with anchoring devices suitable for the wall material where the base unit will be placed.

1) Insert two mounting screws into the wall, (with their appropriate anchoring device), 3-15/16 inches apart. Allow about 1/8 of an inch between the wall and screw heads for mounting the phone.

2) Refer to steps 1 through 7 on page 15 to mount the telephone.

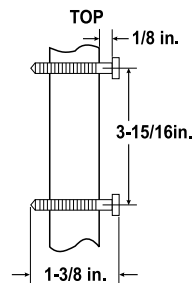

Setting Menu Options

There are five setup options available. They are Caller ID options [AutoTalk, CIDCW (Caller ID on Call Waiting), Area Code], Dial Mode and Language.

AutoTalk allows you to answer the phone without pressing the **talk/flash** key. If the phone rings when AutoTalk is On, simply remove the handset from the base or charging cradle and the phone automatically answers the call. If the phone rings when AutoTalk is Off, you must press the **talk/flash** key to answer the call.

CIDCW and Dial Mode options can only be set by using Handset 1. If you try to set by using Handset 2, you will not see these options listed on the LCD screen. To confirm which handset is HS1, refer to the display indicating "HS1" or "HS2".

AutoTalk, Area Code and Language options can be set by using either Handset 1 or Handset 2.

```
▶Auto Talk   :Off
Area Code   :
Language    :Eng
```

Caller ID options

To change your AutoTalk and CIDCW:

- 1) Press and hold the **cid/menu** key. The following screen appears.
- 2) Use the **vol/ring/∧** or **vol/ring/∨** key to move the pointer to the selection that you would like to change.
Press the **select/channel** key to toggle between "On" and "Off" for each setting.
- 3) Press the **end** key and return the handset to the base unit to complete the setting.
The handset returns to standby mode.

```
▶Auto Talk   :Off
CIDCW       :On
Area Code   :
```



The Cordless phone features include **AutoTalk™** and **AutoStandby™**. AutoStandby allows you to hang up by simply returning the handset to the base or charging cradle.



- If your calling area requires 10-digit dialing, do not program this option.

To enter your Area Code

If you enter a 3-digit area code number in the **Area Code** option, your local area code does not appear in Caller ID messages. Do not program this option, if your calling area requires 10-digit dialing. When reviewing Caller ID messages, you will see only the local seven digit number. For calls received from outside your local area code, you will see a full 10-digit number.

- 1) When the phone is in standby mode, press and hold the **cid/menu** key. The Caller ID setting screen appears.
- 2) Press the **vol/ring/√** key to move the pointer to "Area Code".
- 3) Press the **select/channel** key.
- 4) Use the number keys (**0 - 9**), or the **delete/transfer** key to enter the 3-digit area code.
- 5) Press the **select/channel** key. A confirmation tone sounds and the displayed area code is entered.
- 6) Press the **end key** or return the handset to the base unit or charging cradle to complete the setting. The handset returns to the standby mode.

```

▶Auto Talk   :Off
CIDCW       :On
Area Code   :
  
```

```

Auto Talk   :Off
CIDCW       :On
▶Area Code  :
  
```

```

Auto Talk   :Off
CIDCW       :On
Area Code   :■
  
```



When the area code has already been stored in memory, the stored area code will be displayed. To change it, use the **delete/transfer** key and number keys to enter the new area code. Then press the **select/channel** key. A confirmation tone sounds. To complete the setting, press the **end key** or return the handset to the base unit or charging cradle.

```

Auto Talk   :Off
CIDCW       :On
Area Code   :817
  
```

- Make sure your battery pack is fully charged before choosing the dialing mode.

Choosing the dialing mode

Most phone systems use tone dialing which sends DTMF tones through the phone lines. However, some phone systems (such as those in rural areas) still use pulse dialing. The default setting is tone dialing. Depending on your dialing system, set the mode as follows:

1) When the phone is in the standby mode, press and hold the **cid/menu** key. The following screen appears.

```

▶Auto Talk   :Off
CIDCW       :On
Area Code   :
  
```

2) Press the **vol/ring/√** key to select "Dial".

```

CIDCW       :On
Area Code   :
▶Dial       :Tone
  
```

3) Press the **select/channel** key to toggle between "Tone" and "Pulse".

4) Press the **end** key and return the handset to the base unit to complete the setting. The handset returns to standby mode.

Setting the language

1) When the phone is in standby mode, press and hold the **cid/menu** key. The following screen appears.

```

▶Auto Talk   :Off
CIDCW       :On
Area Code   :
  
```

2) Press the **vol/ring/√** key to select "Language".

```

Area Code   :
Dial        :Tone
▶Language    :Eng
  
```

3) Press the **select/channel** key to toggle between "Eng", "Fr.", and "Esp".

4) Press the **end** key or return the handset to the base unit or charging cradle to complete the setting. The handset returns to standby mode.



- Dialing mode can only be changed from handset 1. To confirm which handset is HS1, look at the display indicating "HS1" or "HS2".
- If you are not sure of your dialing system, set for tone dialing. Make a trial call. If the call connects, leave the setting as is, otherwise set for pulse dialing.
- If your phone system requires pulse dialing and you need to send the DTMF tones for certain situations during a call, you may "switch over" to tone dialing. (Refer to "Tone Dialing Switch over" on page 22.)



Refer to page 17
"Setting Menu Options"
to turn On the AutoTalk
feature if desired.

Making and Receiving Calls

	Handset On Base or Charging Cradle	Handset Off Base or Charging Cradle
To receive a call	Pick up the handset (AutoTalk: On) or pick up the handset and press the talk/flash key (AutoTalk: Off).	Press talk/flash (AutoTalk: Off), or press the talk/flash , any number, the */tone/ < or */ > key (AutoTalk: On).
To make a call	<ol style="list-style-type: none">1) Pick up the handset.2) Press the talk/flash key.3) Listen for the dial tone.4) Dial the number. <p style="text-align: center;">OR</p> <ol style="list-style-type: none">1) Pick up the handset.2) Dial the number, then press the talk/flash key.	<ol style="list-style-type: none">1) Press the talk/flash key.2) Listen for the dial tone.3) Dial the number. <p style="text-align: center;">OR</p> <p>Dial the number, then press the talk/flash key.</p>
To hang up	Press end or return the handset to the base or charging cradle (AutoStandby).	
To redial	<ol style="list-style-type: none">1) Pick up the handset.2) Press the talk/flash key.3) Listen for the dial tone.4) Press the redial/pause key. <p style="text-align: center;">OR</p> <ol style="list-style-type: none">1) Pick up the handset.2) Press the redial/pause key, then press the talk/flash key.	<ol style="list-style-type: none">1) Press the talk/flash key.2) Listen for the dial tone.3) Press the redial/pause. <p style="text-align: center;">OR</p> <p>Press the redial/pause key, then press the talk/flash key.</p>


Adjusting the Handset Ringer and Earpiece Volume

Handset ringer tone and volume

Press the volume up key or volume down key (labeled as *vol/ring/∧* or *vol/ring/∨*) in standby mode to select one of five ringer tones and volume combinations.

Earpiece volume

Pressing the *vol/ring/∧* or *vol/ring/∨* key during a call will change the earpiece volume of the handset. This setting will remain in effect after the telephone call has ended.

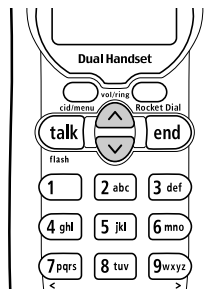

If you select "Ringer Off", "<Ringer Off>" appears on the display when you make or receive calls, or when charging the handset.



When you press the *vol/ring/∧* key in Maximum mode or the *vol/ring/∨* key in Low mode, an error tone sounds.

Temporarily Mute Ringer

If one handset is off the base or charging cradle, simply press the *end* key to temporarily mute the incoming ring only for that handset. The ringer will sound with the next incoming call.



- The tone feature only applies when the dial mode is set to pulse.
- This special number can be stored in a memory location. This is referred to as Chain Dialing. (See page 29.)


Redial

The *redial/pause* key redials the last number dialed. The redialed number can be up to 32 digits long.

Tone Dialing Switch over

Some telephone companies use equipment that requires pulse dialing (sometimes referred to as rotary dialing).

If you need to enter tone dialing digits, you can switch over to tone dialing during the call. This feature is useful when you need tone dialing to use automated systems, for example, entering your bank account number after you have called your bank.

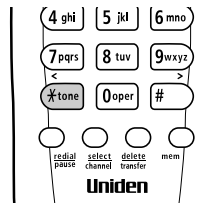

Initially make your call with the pulse dialing mode. Once your call connects, press the *** /tone/ <** key. Enter the desired number. These digits will be sent as tone dialing. Once the call ends, the tone mode is canceled and pulse dialing mode resumes.

Traveling Out-of-Range

During a call, as you begin to move your handset too far from your base unit, noise increases. If you pass the range limits of the base unit, your call will terminate within 1 minute.


Selecting a Different Channel

If you encounter interference while using your phone, you can manually change the phone's channel for clear operation. This function works only when the phone is in use. Press the **select/channel** key. "Scanning" appears on the display, indicating the phone is changing to another channel. For more information on interference, refer to "precautions" on page 47.


Find Handsets

To locate the handsets, press the **find handset** key on the base. Both handsets beep for 60 seconds.

Paging of both handsets is canceled when pressing any key on either handset or pressing the **find handset** key again.

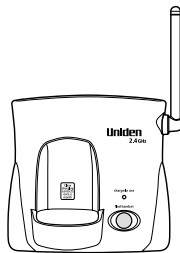

Flash and Call Waiting

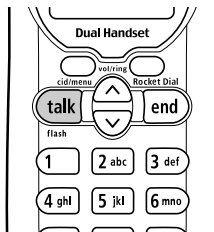

If you have "Call Waiting" service and a call waiting tone sounds while you are on a call, press the **talk/flash** key to accept the waiting call. There is a short pause, then you will hear the new caller. To return to the original caller, press the **talk/flash** key again.



You must subscribe through your local telephone company to receive Call Waiting service.

note

- The **UltraClear Plus™** true compander circuitry virtually eliminates background noise. This innovative technology, together with 20 different channels, provides you with the best possible reception during all your conversations.
- You can change the phone's channel by pressing the **select/channel** key on either handset.
- Paging is also canceled when the phone receives an incoming call.



You must subscribe to voice mail service from your telephone company in order to use this feature. The voice mail company will provide you with the access number.

Voice Mail Waiting Indicator

If you subscribe to voice mail service, you can use your cordless telephone to access your voice mailbox. The **charge/in use** LED light on the base of your phone flashes whenever you have messages waiting in your voice mailbox. Just program the **RocketDial** key with your access number and you can get your messages at the touch of a button. (The voice mail service provider will supply you with the access number. This number may be simply a phone number. Refer to the provider's literature.)

You may need to occasionally reset the indicator if it remains On after you have retrieved your messages. To reset the indicator, press and hold the **find handset** key for 5 seconds.

Storing Phone Numbers and Names

Memory Dialing allows you to dial a number using just a few key presses. Your cordless telephone stores up to 20 names/numbers in each handset.

- 1) Press the **mem** key in standby mode. "Select Memory" is displayed.
- 2) Press the **vol/ring/∧** or **vol/ring/∨** key, or enter a number (**01 - 20**) to select the memory location where you would like to store the number.
- 3) Press the **mem** or **select/channel** key.
- 4) Press the **mem** or **select/channel** key. The following screen appears and a cursor flashes indicating that the display is ready for the name to be entered.

If the Edit screen appears, the selected memory location is already stored. Then you must either edit the entry in this location, delete the entry in this location, or select "Go Back" to choose another location.

- 5) To enter a name (up to 13 characters), use the number keys.
 - See the "Steps for Entering Names and Special Characters". (See page 27.)
 - Use the **#/>** and *** /tone/ <** key to move the cursor to the desired location.
 - Use the **delete/transfer** key to delete characters as needed.
 - Press and hold the **delete/transfer** key to delete all the characters.
 - If a name is not required, go to step 6.

```
Select Memory
01▶
02 JOHN DOE
```

```
01: (Empty)
Press Select
to edit
```

```
Store Name
█
```

```
▶Edit Memory01
Delete Memory01
Go Back
```



- In memory dialing operation, you must press a key within 30 seconds or the phone will return to the standby mode. If you return the handset to the base, the phone will return to the standby mode also.
- You have 30 seconds after pressing the **mem** or **select/channel** key to enter the number you wish to store. Otherwise, an error tone will sound and the phone will return to standby mode.



- The pause feature is useful for long distance calling, credit card dialing, or sequences that require a pause between digits.
- The pause key counts as one digit. Pressing the **redial/pause** key more than once increase the length of a pause between numbers.

6) Press the **mem** or **select/channel** key. "Store Number" is displayed. The cursor flashes indicating that the display is ready for the number to be entered.

```
Store Number
█
```

7) Use the number keys to enter the phone number. The phone number cannot exceed 20 digits. Use the **redial/pause** key to enter a pause in the dialing sequence. The display shows a "P". Each pause counts as one digit and represents a two second delay of time between the digits. Use the **delete/transfer** key to delete digits as needed.

```
Store Number
8007303456█
```

8) Press the **mem** or **select/channel** key. You will hear a confirmation tone, and the following screen appears. Memory storage is complete. For example, if you store a name and number into memory location number 01, the display shows "Memory01 Stored". After about 2 seconds, the following screen is displayed. Repeat steps 2 - 8 to store more numbers.

```
Memory01 Stored
```

```
01▶ Movies
02 JOHN DOE
03 MOM AND DAD
```

9) Press the **end** key to return to standby mode.

Steps for Entering Names and Special Characters

Refer to the letters on the number keys to select the desired characters.

With each press of a numeric key, the displayed character appears in the following order: Upper case letters first, lower case letters next and finally the number corresponding to the key.

If you make a mistake while entering a name

Use the ***/tone/ <** or **#/>** key to move the cursor to the incorrect character.

Press the **delete/transfer** key to erase the wrong character, then enter the correct character.

To delete all characters, press and hold the **delete/transfer** key.

For example, to enter **Movies**.

- 1) Pick up the handset. Press the **mem** key.
- 2) Enter a number or press the **vol/ring/∧** or **vol/ring/∨** key to select a memory location.
- 3) Press the **mem** or **select/channel** key.
- 4) Press the **mem** or **select/channel** key. (When there is information already stored in the selected memory location, "Edit MemoryXX" is displayed. See page 30 for information on "Editing a Stored Name and/or Phone Number".)
- 5) Press **6** then press the **#/>** key to move the cursor to the right.
- 6) Press **6** six times.
- 7) Press **8** six times.
- 8) Press **4** six times.
- 9) Press **3** five times.
- 10) Press **7** eight times.
- 11) When finished, press the **mem** or **select/channel** key.

To continue to store the telephone number, proceed to step 7 on page 26.



If the next character uses the same number key, you must press the **#/>** key to move the cursor over. Otherwise the next time you press the number key, it changes the character that was previously set.

keys	Number of times key is pressed								
	1	2	3	4	5	6	7	8	9
T	I								
Zabc	A B C	a b c	2						
3def	D E F	d e f	3						
4ghi	G H I	g h i	4						
5jkl	J K L	j k l	5						
6mnop	M N O	m n o	6						
7pqrs	P Q R	p q r	s	?					
8tuvw	T U V	t u v	w	8					
9xyz	X Y Z	x y z	9						
0open	* #	- &	<	>	(blank)	0			



- If you press the **select/channel** key before the **talk/flash** key, you can confirm the name and the number stored in the selected memory location.
- Whenever you are using a memory menu screen, you must press a key within 30 seconds or the phone will return to the standby mode.

Making Calls with Memory Dialing

Memory dialing from Standby Mode

- 1) Press the **mem** key. The handset displays your programmed memory locations.
- 2) Press the **vol/ring/∇** or **vol/ring/∧** key, or enter the number (**01 - 20**) to select the memory location you would like to dial.
- 3) Press the **talk/flash** key. "Connecting" and the number you would like to dial appear on the display. Then the displayed number is dialed.

```
Select Memory
01▶Movies
02 JOHN DOE
```

```
>Connecting<
8007303456
```



To exit the memory function without dialing, press the **end** key. The handset returns to standby mode.

Memory dialing from Talk Mode

- 1) Press the **talk/flash** key. "Connecting" appears.
- 2) After the display changes from "Connecting" to "Talk", press the **mem** key.
- 3) Press the **vol/ring/∧** or **vol/ring/∇** key, or enter a number (**01 - 20**) to select the memory location of the desired phone number. If you press the **select/channel** key, the number is dialed.
- 4) To hang up, press the **end** key.

```
>Connecting<
```



```
Talk
Volume High
```

```
Select Memory
01▶Movies
02 JOHN DOE
```

```
Talk 0:35
8007303456
```

Chain Dialing

The memory locations on the handset are not limited to phone numbers. You can also store a group of numbers (up to 20 digits) that you need to enter once your call connects. This is referred to as Chain Dialing.

An example of this is a bank account number. Once you have called your bank, and are prompted to enter the account number, press the **mem** key and select the location number where the special number has been stored, then press the **select/channel** key.

Store your special number with an identifying name. (Refer to "Storing Phone Numbers and Names" on page 25.)

Editing a Stored Name and/or Phone Number

- 1) Press the **mem** key in standby mode. "Select Memory" is displayed.
- 2) Press the **vol/ring/∧** or **vol/ring/∨** key, or enter a number (**01 - 20**) to select the memory location you would like to edit, and press the **mem** or **select/channel** key.
- 3) Press the **mem** or **select/channel** key.
The following screen appears with the memory location number that you have selected in the display.
- 4) Press the **vol/ring/∧** or **vol/ring/∨** key to select "Edit MemoryXX", then press the **mem** or **select/channel** key. The following screen appears. The cursor flashes indicating that the display is ready for the name to be edited. When a name has not been stored, the cursor appears at the beginning of the second line.
- 5) Use the number keys, ***/tone/<**, **#/>**, or **delete/transfer** key to edit the name. (See page 27.) To edit only the phone number, skip this step.
- 6) Press the **mem** or **select/channel** key. The following screen appears. The cursor flashes indicating that the display is ready for the number to be edited.

```
Select Memory
01▶Movies
02 JOHN DOE
```

```
01:Movies
8007303456
```

```
▶Edit Memory01
Delete Memory01
Go Back
```

```
Store Name
Movies█
```

```
Store Number
8007303456█
```

- 7) Use the number key, **redial/pause** or **delete/transfer** key to edit the phone number. The phone number cannot exceed 20 digits. (See page 26.)

If you don't want to change the phone number, skip this step.

- 8) Press the **mem** or **select/channel** key. If you changed either name or phone number, a confirmation display shows up. If it is correct, press the **vol/ring/∧** key to move the pointer to "Yes" and press the **select/channel** key again. You hear a confirmation tone, and the following screen appears. The memory storage is complete.

For example, if you store a name and number into memory location number 01, the display shows "Memory01 Stored". After about 2 seconds, Select memory is displayed.

```
Replace Memory?  
  Yes  
▶ No
```

```
Memory01 Stored
```

```
01▶ Movies  
02 JOHN DOE  
03 MOM AND DAD
```

- 9) Press the **end** key to return to standby mode.

Erasing a Stored Name and Phone Number

- 1) Press the **mem** key in standby mode. "Select Memory" is displayed.
- 2) Press the **vol/ring/∧** or **vol/ring/∨** key, or enter a number (**01 - 20**) to select the memory location you would like to erase.
- 3) Press the **mem** or **select/channel** key.
- 4) Press the **mem** or **select/channel** key.
The following screen appears with the memory location number that you have selected in the display.
- 5) Press the **vol/ring/∨** key to move the pointer down to "Delete MemoryXX".
- 6) Press the **mem** or **select/channel** key. The following confirmation screen appears.
- 7) Press the **vol/ring/∧** key to move the pointer to "Yes".
- 8) Press the **select/channel** or **delete/transfer** key.
You hear a confirmation tone, and "MemoryXX Deleted" screen appears.
- 9) After about 2 seconds, the display returns to the Select memory screen. You may delete the information in another memory location (return to step 2) or press the **end** key to return to standby mode.

```
Select Memory
01▶Movies
02 JOHN DOE
```

```
02: JOHN DOE
5452930
```

```
▶Edit Memory02
Delete Memory02
Go Back
```

 
```
Delete Memory02?
Yes
▶No
```

```
Memory02 Deleted
```

```
01 Movies
02▶
03 MOM AND DAD
```


RocketDial

You can store your most frequently dialed number in the RocketDial location in each handset. The RocketDial allows you to dial a number with one key press. (There is no need to press the *talk/flash* key. The phone will automatically dial the number stored.) If you subscribe to voice mail service, store your access number in this location.



Storing and Editing the RocketDial

- 1) When the phone is in standby mode, press and hold the *RocketDial* key. The following display appears.

Store Number

▶ Edit Number
Delete Number
Go Back

If this screen appears, there is a number already stored. Press the *vol/ring/∧* or *vol/ring/∨* key to select "Edit Number". Then press the *select/channel* key.

- 2) Store the number by following step 7 under "Storing Phone Numbers and Names" on page 26.
- 3) Press the *select/channel* key.
You hear a confirmation tone, and the "Number Stored" appears. Memory storage is complete.

Store Number
800

Number Stored

Making Calls with the RocketDial

When the phone is in standby mode, simply press the *RocketDial* key. The number stored in the RocketDial memory location is instantly dialed.



- **RocketDial®** is a one touch speed dial key that automatically dials your most important or frequently called number. The number dialed, is a preset number stored by the user.
- Number stored in RocketDial is independent from the numbers stored in Memory Dial.
- If the RocketDial does not have a stored number, the handset will beep rapidly and the phone will not dial.

Deleting the RocketDial

- 1) When the phone is in standby mode, press and hold the **RocketDial** key. Following display appears.
- 2) Press the **vol/ring/∧** or **vol/ring/∨** key to select "Delete Number".
- 3) Press the **select/channel** key. The following display appears.
- 4) Press the **vol/ring/∧** key to move the pointer to "Yes".
- 5) Press the **select/channel** or **delete/transfer** key. You hear a confirmation tone, and the following display appears. After about 2 seconds, the handset returns to standby mode.

```
▶ Edit Number  
Delete Number  
Go Back
```

```
Delete Number?  
Yes  
▶ No
```

```
Number Deleted
```


Caller ID

You must subscribe to Caller ID service to use this feature.

When the telephone rings, the Caller ID feature allows you to view the caller's name and phone number on the display before you answer the phone. The handset displays the phone number of the incoming call, the name, and time. Additionally, you can dial the displayed number and store the information for memory dialing. Make sure you have turned on the Caller ID/Call Waiting feature. (See page 17.)

When the Telephone Rings

 - 1) When the Caller ID message is received, the display shows the caller's phone number along with the date and time. The incoming call information is stored in the Caller ID record. If the Caller ID service includes the caller's name, the caller's name appears on the display (up to 15 letters).



You may receive any one of the following messages:

- | | |
|------------------------------------|-------------------|
| When invalid data is received | "Incomplete Data" |
| When a private name is received | "Private Name" |
| When a private number is received | "Private Number" |
| When an unknown name is received | "Unknown Name" |
| When an unknown number is received | "Unknown Number" |



- If you answer a call before the Caller ID message is received (for example, before the second ring), the Caller ID message will not appear.
- When the call is received via a telephone company that does not offer Caller ID service, the caller's phone number and name do not appear. (This includes international calls.)
- When the call is via a private branch exchange (PBX), the caller's phone number and name may not appear.



- In Caller ID operation, if no key is pressed for more than 30 seconds, an error tone sounds and the telephone returns to the standby mode.
- If a call comes in via a telephone system that does not offer Caller ID service, no information is stored.
- Each message can be up to 15 characters for the phone number and the name.
- The number of calls from the same Caller ID appears next to the received time. Once you view the new message, the number will be cleared and disappear.

2) When you pick up the phone, the display changes to "Connecting".
(AutoTalk feature is set to on.)



Data errors appear as "■".

Viewing the Caller ID Message List

The Caller ID list stores information for up to 30 incoming calls in each handset - even unanswered calls.

- 1) Press the **cid/menu** key.
The summary screen appears. The screen shows the number of new messages and total messages.
- 2) Press the **vol/ring/∇** or **vol/ring/∧** key to display the latest or oldest Caller ID message.
- 3) Press the **vol/ring/∇** key to see the next message.
Or press the **vol/ring/∧** key to see the previous message.
- 4) Press the **end** key to return to standby mode.

```
Caller ID  
New :01  
Total:02
```

```
5/17 12:30PM 03  
Jane Smith  
214-555-1234
```

Deleting Information from the Caller ID List

The cordless phone stores up to 30 messages in each handset. If the phone receives the 31st message, the oldest one in the list is automatically deleted. Caller ID data can also be deleted manually.

Deleting a Caller ID message

1) Press the *cid/menu* key in standby mode. Display the message to be deleted from the Caller ID list by pressing the *vol/ring/∧* or *vol/ring/∨* key.

```
5/17 12:30PM 03  
Jane Smith  
214-555-1234
```

2) Press the *delete/transfer* key.

3) Press the *vol/ring/∧* or *vol/ring/∨* key to select "Yes" or "No".

```
Delete Message?  
▶ Yes  
No
```

4) Press the *select/channel* or *delete/transfer* key.

When the pointer is at "Yes":

You hear a confirmation tone and the Caller ID message is deleted. The next Caller ID message is then displayed.

When the pointer is at "No":

The display returns to the Caller ID message.

Deleting all Caller ID names/numbers

1) Press the *cid/menu* key in standby mode.

2) Press the *delete/transfer* key.

```
Caller ID  
New :01  
Total:02
```

note

- While using the "Delete All?" or "Delete Message?" screen if no key is pressed for more than 30 seconds, an error tone sounds and the telephone returns to the standby mode.
- If you get an incoming call, a transferring call or page, the deleting operation is canceled and you can answer the call or page.

3) Press the *vol/ring/∧* or *vol/ring/∨* key to select "Yes" or "No".

```
Delete All?  
Yes  
▶No
```

4) Press the *select/channel* or *delete/transfer* key.

When the pointer is at "Yes":

You hear a confirmation tone and all stored Caller ID messages are deleted.

```
Caller ID  
Total:00
```

When the pointer is at "No":

The display returns to the summary screen.

 
```
Caller ID  
New :01  
Total:02
```

Using the Caller ID List

Calling a party from the Caller ID list


You can place a call from the Caller ID list. The cordless phone stores up to 30 messages.

1) Press the **cid/menu** key. Select the phone number that you want to dial by pressing the **vol/ring/∧** or **vol/ring/∨** key.



5/17 12:30PM 03
Jane Smith
214-555-1234

 2) Press the **talk/flash** key. The displayed phone number dials automatically.



Connecting
2145551234



You can place a call from Talk Mode. Press the **talk/flash** key, then press the **cid/menu** key. Select the phone number that you want to dial by pressing the **vol/ring/∧** or **vol/ring/∨** key. Press the **select/channel** key. The displayed phone number will be dialed.

Long Distance calls and Area Code Setting/Cancellation

Pressing **1** while the incoming Caller ID information is displayed (in step 1) will place the prefix "1" in the display to set up for a long distance call. Pressing **3** will set or cancel an area code setting.



- You cannot make a call from the Caller ID list if your cordless telephone is connected to a private branch exchange (PBX).
- When a long distance call has been set, "1" appears in the display.



You cannot store a Caller ID message if no phone number appears in the message.

Storing Caller ID messages in Memory dialing

Messages (Caller ID names/numbers) shown in the Caller ID list can be stored in memory dialing.

- 1) Press the **cid/menu** key.

Select the phone number to be stored from the Caller ID list by pressing the **vol/ring/∧** or **vol/ring/∨** key.

```
5/17 12:30PM 03
Jane Smith
214-555-1234
```

- 2) Press the **mem** key.

```
Select Memory
01▶
02 JOHN DOE
```

- 3) Press the **vol/ring/∧** or **vol/ring/∨** key or enter a number (**01 - 20**) to select the memory location to be stored.

- 4) Press the **select/channel** key.

You hear a confirmation tone, and the number is stored in memory. The display returns to the Caller ID list.

```
5/17 12:30PM 03
Jane Smith
214-555-1234
```



If a message has already been stored in the selected memory number location, a confirmation screen is displayed. Press the **vol/ring/∧** key to select "Yes". Press the **select/channel** key to overwrite. The display returns to the Caller ID list.

```
Replace Memory?
Yes
▶No
```


Changing the Digital Security Code

The digital security code is an identification code used to connect each handset and the base unit. Normally, setting the code is not necessary. The first time you charge each handset in the base, the security code is automatically set.

In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code.

- 1) Remove the handset from the base unit. Press and hold ***find handset*** on the base.
- 2) While holding ***find handset***, place the handset in the base unit, and leave the handset on the base for more than 3 seconds. A new random security code is set.



You can change the phone's digital security code on either handset. However, you must re-register the other handset (not used to change the digital security code) back to the base unit. See registration on page 13.

Installing the Beltclip

To attach the beltclip

Insert the beltclip into the holes on each side of the handset. Press down until it clicks.

To remove the beltclip

Pull both sides of the beltclip to release the tabs from the holes.

Headset Installation

Your phone may be used with an optional headset, the Uniden HS910.

To use this feature, insert the headset plug into the headset jack.

Your phone is ready for hands-free conversations.

(Headset may be purchased by calling the Uniden Parts Department or visiting the web site, see QUICK REFERENCE GUIDE on page 3.)



- To protect you against misbilled calls which might result from your phone being activated by other equipment, the cordless phone provides ***AutoSecure™*** (which electronically locks your phone when the handset is in the base) and ***Random Code™*** digital security (which automatically selects one of over 262,000 digital security codes for the handset and base).
- If the handset battery pack is completely discharged or the battery pack is removed, the digital security code will be lost. If this happens, a new security code is set automatically the next time the battery pack is charged.

Note on Power Sources

Battery replacement and handling

When the operating time becomes short even after a battery is recharged, please replace the battery. With normal usage, your battery should last about one year. Please contact your place of purchase or the Uniden Parts Department for a replacement battery.

Warning: To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden battery model and Uniden adapter model specifically designated for this product.

Power Failure

During the period that the power is off, you will not be able to make or receive calls with the telephone.

Caution

- Use only the specified Uniden battery pack (BT-905).
- Do not remove the battery from each handset to charge it.
- Never throw the battery into a fire, disassemble it, or heat it.
- Do not remove or damage the battery casing.

Maintenance

To maintain a good charge, it is important to clean the charging contacts on both the handset and base unit once a month. Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth.

Caution

Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first.

Symptom	Suggestion
The charge/in use LED or charge LED won't illuminate when the handset is placed in the base or charging cradle.	<ul style="list-style-type: none">• Make sure the AC adapters are plugged into each charging cradle and wall outlet.• Make sure both handsets are properly seated in each charging cradle.• Make sure the charging contacts on both handsets and charging cradles are clean.
The audio sounds weak and/or scratchy.	<ul style="list-style-type: none">• Make sure that the base antenna is in a vertical position.• Move the handset and/or base to a different location away from metal objects or appliances and try again.• Press the select/channel key to help eliminate background noise.• Make sure that you are not too far from the base.
Can't make or receive calls.	<ul style="list-style-type: none">• Re-register both handsets (see page 13).• Check both ends of the base telephone line cord.• Make sure the AC adapters are plugged into both the base and wall outlet.• Disconnect the AC adapter for a few minutes, then reconnect it.• Make sure that you are not too far from the base.• Make sure that the base antenna is in a vertical position.
The handset doesn't ring or receive a page.	<ul style="list-style-type: none">• Re-register both handsets (see page 13).• The battery pack may be weak. Charge the battery for 15-20 hours.• The handset may be too far away from the base unit.• Place the base unit away from appliances or metal objects.• Check the battery pack to insure there is a secure connection.• Make sure the ringer volume isn't "off".

Symptom	Suggestion
Severe noise interference.	<ul style="list-style-type: none"> • Keep both handsets away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances. • Move to another location or turn off the source of interference.
The Caller ID does not display.	<ul style="list-style-type: none"> • The handset was picked up before the second ring. • The call was placed through a switchboard. • Call your local telephone company to verify your Caller ID service is current. • Charge the handset.
Handset No.1 or No.2 is not working.	<ul style="list-style-type: none"> • Make sure the battery pack is connected to the handset and fully charged.
"Unavailable" message is displayed on the LCD screen of the handset.	<ul style="list-style-type: none"> • Make sure the other handset is not already in use. Both handsets cannot be in talk mode at the same time. • Place the handset in the base for at least 5 seconds to re-register to the base. • Make sure the handset is not too far from the base when trying to use.
The handset doesn't communicate with the base or the other handset.	<ul style="list-style-type: none"> • Re-register both handsets (see page 13). • Make sure that you have registered the second handset.
No 3-way conversation.	<ul style="list-style-type: none"> • Only one handset at a time can talk with an outside caller. To allow the other handset to talk to the caller, transfer the call.
Voice Message Indication does not work.	<ul style="list-style-type: none"> • Contact your local telephone company to make sure that your telephone receives FSK message signaling.
If you still have a problem.	<ul style="list-style-type: none"> • Call our customer hotline at 1-800-297-1023.

Liquid Damage

Moisture and liquid can damage your cordless phone. In case of accidental submersion, please read the following steps.

Case	Action
If the handset or base is exposed to moisture or liquid, but liquid only affects the exterior plastic housing.	Wipe off the liquid, and use as normal.
If moisture or liquid has entered the plastic-housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base).	<p>Handset:</p> <ol style="list-style-type: none">1. Remove the battery cover and leave it off for ventilation.2. Remove the battery pack by disconnecting.3. Leave the battery cover off and the battery pack disconnected for at least 3 days.4. Once the phone is completely dry, reconnect the battery pack and the battery cover.5. Recharge the handset's battery pack for 20 hours in the base unit before using the phone. <p>Base:</p> <ol style="list-style-type: none">1. Disconnect the AC adapter from the base unit, cutting off electrical power.2. Disconnect the telephone cord from the base unit.3. Let dry for at least 3 days. <p>IMPORTANT: You must unplug the telephone line while recharging the battery pack to avoid charge interruption.</p> <p>CAUTION: DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.</p> <p>After following these steps, if your cordless telephone does not work, please send to: Uniden America Corporation Parts and Service Division 4700 Amon Carter Blvd. Ft. Worth TX 76155 1-800-554-3988. Monday through Friday 8 a.m. to 5 p.m. CST</p>

General Information

The phone complies with FCC Parts 15 and 68.

Operating temperature: -10°C to 50°C (+14°F to +122°F)

AC Adapter Information

AC Adapter part number: AD-0001
Input Voltage: 120V AC 60Hz
Output Voltage: 9V DC 210 mA

Battery Information

Battery part number: BT-905
Capacity: 600 mAh, 3.6V

Frequency

924.715789-926.704425 MHz
2,407.542305-2,413.508213 MHz



- **To avoid damage to the phone use only Uniden AD-0001 and BT-905 with your phone.**
- If each handset is left off of the base or charging cradle, the actual Talk mode duration will be reduced respective to the amount of time each handset is off the base or charging cradle.

Recharge your phone on a regular basis by returning the handset to the base or charging cradle after each phone call. When the operating time becomes short, even after the battery is recharged, please replace the battery. With normal usage, the battery should last about one year.

A replacement Uniden adapter and battery may be purchased at your local Uniden dealer or by contacting the Uniden Parts Department (800) 554-3988. Hours are from 8:00 a.m. to 5:00 p.m. Central Time, Monday through Friday. We can also be reached on the web at www.uniden.com.

Specifications, features, and availability of optional accessories are all subject to change without prior notice.

Precautions!

Before you read anything else, please observe the following:

Warning!

Uniden America Corporation DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock, or damage to the unit, DO NOT expose this unit to rain or moisture.

Rechargeable Nickel-Cadmium Battery Warning

- This equipment contains a rechargeable nickel-cadmium battery.
- Cadmium is a chemical known to the State of California to cause cancer.
- The rechargeable nickel-cadmium battery contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the battery.
- Do not charge the rechargeable nickel-cadmium battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

Rechargeable Nickel-Cadmium Batteries Must Be Recycled or Disposed of Properly



- Uniden voluntarily participates in an RBRC® industry program to collect and recycle nickel-cadmium batteries at the end of their useful life, when taken out of service within the United States. The RBRC® program provides a convenient alternative to placing used nickel-cadmium batteries into the trash or municipal waste stream, which is illegal in some areas.
- Through the RBRC® program, Uniden makes it easy for you to drop off the used battery at local retailers of replacement nickel-cadmium batteries. You may also contact your local recycling center for information on where to return the used battery. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area. Uniden's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.
- RBRC® is a registered trademark of the Rechargeable Battery Recycling Corporation.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Uniden works to reduce lead content in our PVC coated cords in our product and accessories.

WARNING: The cords on this products and/or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. *Wash hands after handling.*

Important Safety Instructions

When using your telephone equipment, these basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Use a dry cloth for cleaning without liquid or aerosol cleaners.
4. Do not use this product near water; for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The telephone may fall, causing serious damage to the unit.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect the product from overheating, these openings must not be blocked or covered. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
9. Do not overload wall outlets and extension cords, as this can result in the risk of fire or electrical shock.
10. Never push objects of any kind into this product through cabinet slots, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product. Take it to qualified service personnel when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally when following the operating instructions. (Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive repair work by a qualified technician.)
 - E. If the product has been dropped or the cabinet has been damaged.
 - F. If the product exhibits a distinct change in performance.
13. Do not use the telephone to report a gas leak in the vicinity of the leak.

Additional Battery Safety Precautions

Caution! To reduce the risk of fire or injury to persons by the battery, read and follow these instructions:

1. Use only the Uniden battery pack specified in the owner's manual.
2. Do not dispose of the battery pack in a fire. The cell may explode. Check the nickel-cadmium battery disposal package insert for disposal instructions.
3. Do not open or mutilate the battery pack. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling the battery in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the owner's manual provided for this product.
6. Observe proper polarity orientation between the battery pack and battery charger.

SAVE THESE INSTRUCTIONS!

Important Electrical Considerations

Unplug all electrical appliances when you know an electrical storm is approaching. Lightning can pass through your household wiring and damage any device connected to it. This phone is no exception.

The FCC Wants You To Know

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product. Your telephone complies with Part 68 of FCC Rules. You must, upon request, provide the FCC registration number and the REN to your telephone company. Both numbers are on the base unit.

- NOTE:**
- You must not connect your phone to:
 - coin-operated systems
 - most electronic key telephone systems

Range

Your new phone is designed to achieve the maximum possible range by transmitting and receiving according to the highest specifications set forth by the FCC. We have rated this phone to operate at a maximum distance with the qualification that the range depends upon the environment in which the telephone is used. Many factors limit range, and it would be impossible to include all the variables in our rating. The Maximum Range rating of this phone is meant to be used as a means of comparison against other range claims.

Telephone Line Problems

The FCC has granted the telephone company the right to disconnect service in the event that your phone causes problems on the telephone line. Also, the telephone company may make changes in facilities and services which may affect the operation of your unit. However, your telephone company must give adequate notice in writing prior to such actions to allow you time for making necessary arrangements to continue uninterrupted service.

If you are having trouble with your telephone service, you must first disconnect your phone to determine if it is the cause of your problem. If you determine that it is the cause, you must leave it disconnected until the trouble has been corrected.

Radio Interference

Radio interference may occasionally cause buzzing and humming in your cordless handset, or clicking noises in the base. This interference is caused by external sources such as TV, refrigerator, vacuum cleaner, fluorescent lighting, or electrical storm. Your unit is NOT DEFECTIVE. If these noises continue and are too distracting, please check around your home to see what appliances may be causing the problem.

In addition, we recommend that the base not be plugged into a circuit that also powers a major appliance because of the potential for interference. Be certain that antenna on the unit is fully extended.

In the unlikely event that you consistently hear other voices or distracting transmissions on your phone, you may be receiving radio signals from another cordless telephone or other source of interference. If you cannot eliminate this type of interference, you need to change to a different channel.

Finally, it should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR.

If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

More Than One Cordless Telephone

If you want to use more than one cordless telephone in your home, they must operate on different channels. Press the channel key to select a channel that provides the clearest communication.

Cordless Telephone Privacy

Cordless telephones are radio devices. Communications between the handset and base of your cordless telephone are accomplished by means of radio waves which are broadcast over the open airways. Because of the inherent physical properties of radio waves, your communications can be received by radio receiving devices other than your own cordless telephone unit. Consequently, any communications using your cordless telephone may not be private.

Installation Considerations

Selecting a Location

Before choosing a location for your new phone, there are some important guidelines you should consider:

- The location should be close to both a phone jack and continuous power outlet. (A continuous power outlet is an AC outlet which does not have a switch to interrupt its power.)
- Keep the base and handset away from sources of electrical noise such as motors or fluorescent lighting.
- Be sure there is sufficient space to fully extend the base antenna.
- The base can be placed on a desk or tabletop or mounted on a standard telephone wall plate.
- You should charge your new phone for 15-20 hours before completing the installation or using the handset.

Telephone Line Outlets

There are two types of phone outlets:

Modular Jack

Most phone equipment available now uses modular jacks. Phone cords are fitted with a molded plastic connector which plugs into this type of jack. If you do not have modular phone jacks, contact your local telephone company for information about their installation.

Hardwired Jack

Some equipment is wired directly to a phone jack, and these types of installations require a modular jack converter. This type of installation is not difficult; however, you should contact your Uniden telephone dealer or a telephone supply store for advice about the proper adapter or converter for your particular situation.

Connecting the Telephone Cords

Consider these safety guidelines before connecting the telephone cords:

Caution!

- *Never install telephone wiring during a lightning storm.*
- *Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected.*
- *Use caution when installing or modifying telephone lines.*

Applying Power to the Base

This phone requires an AC outlet, without a switch to interrupt power, and the included AC adapter. To relieve strain on the DC plug when the phone is placed on a desk or table, wrap the power cord around the strain relief notch on the back of the base.

NOTE: *Place the power cord so that it does not create a trip hazard, or where it could become chafed and create a fire or other electrical hazards.*

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by any other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Corporation

Parts and Service Division

4700 Amon Carter Blvd. Fort Worth, TX 76155

(800) 297-1023, 8 a.m. to 5 p.m. Central, Monday through Friday

I.C. Notice

TERMINAL EQUIPMENT

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

Index

A	
AC adapter information.....	46
Adjusting ringer and earpiece volume...	21
B	
Battery pack	
Information.....	46
Install	9
Maintenance	11, 42
Preparing and charging	12
Replacement and handling	42
Beltclip installation	41
C	
Caller ID	
Caller ID service.....	35
Call Waiting.....	23
Deleting	37
Setting Caller ID options	17
Using	39
Viewing	36
Call Transfer Feature.....	14
Channel	23
Cleaning contacts	11
Connection	12
D	
Dialing mode	18
Digital security code	41
E, F, G	
Earpiece volume	21
Find Handsets	23
General information	46
H	
Headset installation.....	41
I, J, K, L	
I.C. Notice	49
Interference	48
Language	19
M, N, O	
Maintenance	42
Making a call.....	20
Memory dialing	
Editing a stored name	
and/or phone number	30
Erasing a stored name	
and phone number.....	32
Making calls with memory dialing.....	28
Storing phone numbers and names	25

Mounting on a wall.....	15
-------------------------	----

P, Q	
Package contents	3
Precautions	47
Quick reference guide	3

R	
Receiving a call	20
Redialing a call.....	20, 22
Ringer tone and volume.....	21
RocketDial.....	33

S	
Second Handset	13
Setting menu options.....	17
Setting up the handset	9
Setting up the phone.....	8

T, U, V, W, X, Y, Z	
Technical information.....	46
Troubleshooting	43
Voice mail waiting indicator	24
Warranty	48

At Uniden, we'll take care of you!

If you need any assistance with this product, please call our Customer Hotline at **1-800-297-1023**

or visit our web site at **www.uniden.com**

PLEASE DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

Our Uniden representatives will be happy to help you with any matters regarding the operation of this unit, available accessories, or any other related matters.

Thank you for purchasing a Uniden product.

Hours: M-F 8:00 AM to 5:00 PM CST.



For information on the accessibility features of this product, please call

1-800-874-9314 (V/TTY)

Uniden®

May be covered under one or more of the following U.S. patents:

4,523,058	4,595,795	4,797,916	5,381,460	5,426,690	5,434,905
5,491,745	5,493,605	5,533,010	5,574,727	5,581,598	5,650,790
5,660,269	5,661,780	5,663,981	5,671,248	5,696,471	5,717,312
5,732,355	5,754,407	5,758,289	5,768,345	5,787,356	5,794,152
5,801,466	5,825,161	5,864,619	5,893,034	5,912,968	5,915,227
5,929,598	5,930,720	5,960,358	5,987,330	6,044,281	6,070,082
6,125,277	6,253,088	6,314,278	6,418,209		

©2003 Uniden America Corporation, Fort Worth, Texas
Custom manufactured in China.

Contains additional foreign articles.
UPZZ01028ZZ

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>