

Start Here! 1 2 3

*Quick Start Guide Next Page...*



# Quick Start Guide

# XS 910

900 MHz  
10 Number  
Memory  
*Plus*  
Rocketdial

**Uniden**

## INSTALLATION & SAFETY

Choosing the best location for your phone.

 
When choosing a location for your phone there are a number of appliances the phone should not be near, and areas you should avoid.



This symbol indicates important operating and servicing instructions.



The earcap of this telephone may attract and retain small metallic objects.

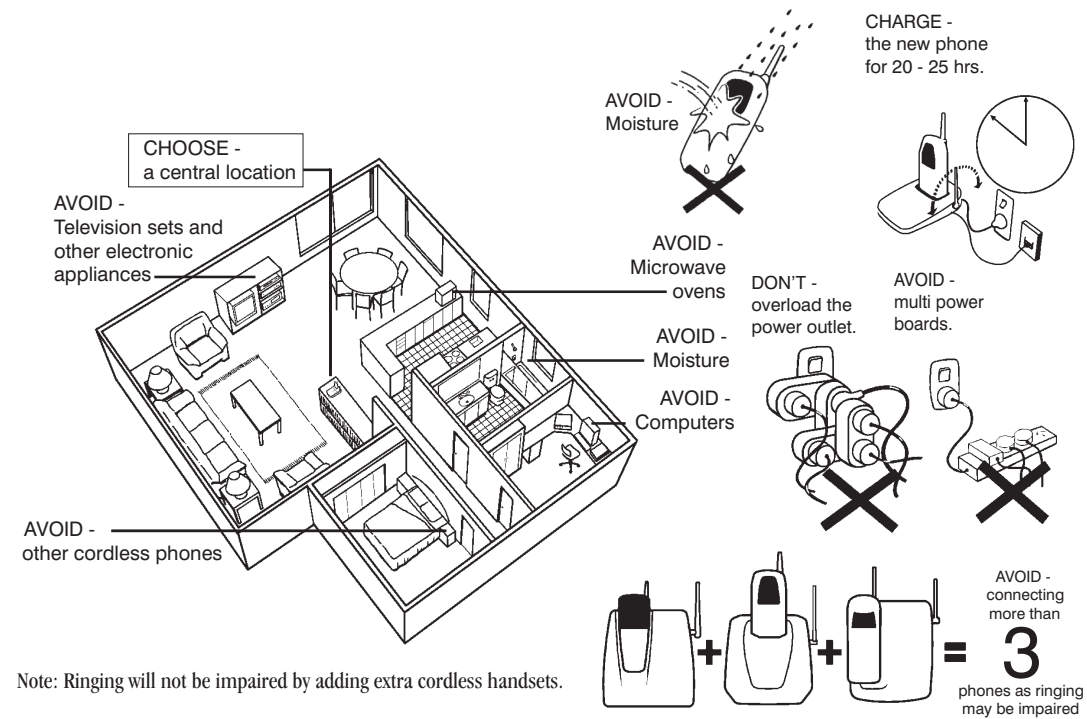


Note: Ringing will not be impaired by adding extra cordless handsets.

# Start Here!

 
## 1 Installing the Base Unit

- Plug the telephone cord into the Base Unit, then into the telephone socket on the wall.
- Plug the AC Adaptor cord into the Base Unit, then the AC Adaptor into the wall power point.
- Press the AC Adaptor cord into the curved recess under the Base Unit.

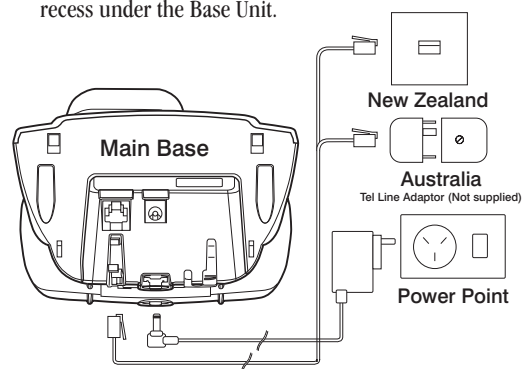

## 2 Installing the Handset Battery

 - Press the battery cover and slide it off.
- Connect the battery plug to the socket at the rear of the battery compartment. *Make sure that the plug is the right way round.* The RED and BLACK battery wires must match the RED and BLACK printed on the phone case for the plug to fit properly. Press firmly until it clicks into place.

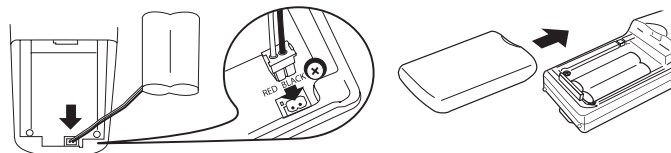

## 3 Making a Call      Answering a Call

- Pick up the handset and press **(talk)**
  - Dial the phone number
  - To hang up - press **(end)**
- OR
- Place the handset on the Base Unit.
- Handset on Base Unit: Remove the handset from the base and speak (Auto Talk).
  - Handset off the Base Unit: Pick up the handset, press **(talk)** and speak.
  - To hang up - press **(end)**
- OR
- Place the handset on the base unit.

## CONTENTS

<b>Installation &amp; Safety</b> .....	i	Travelling Out-of-Range .....	4
<b>Quick Start Guide</b>		Selecting a Different Channel .....	4
Installing the Base Unit .....	ii	Find Handset .....	4
Installing the Handset Battery .....	ii	Call Waiting/Flash .....	4
Making a Call .....	ii	<b>Memory Dialing</b>	
Answering a Call .....	ii	Storing Phone Numbers .....	5
<b>Contents</b> .....	iii	Making Calls with Memory Dialing .....	5
<b>Included in your Package</b> .....	iii	Chain Dialing .....	5
<b>Getting Started</b>		Erasing a Stored Phone Number .....	5
Controls and Functions .....	1	<b>Rocketdial</b>	
Mounting the Base Unit on a wall .....	1	Storing the Rocketdial .....	6
Battery Maintenance .....	2	Making Calls with Rocketdial .....	6
<b>Using your Phone</b>		Erasing a Rocketdial .....	6
Making and Receiving Calls .....	3	<b>Troubleshooting</b> .....	7
Adjusting the Ringer Tone and Earpiece Volume .....	3	<b>Warranty</b> .....	8
Redial .....	4		

 
 
## INCLUDED IN YOUR PACKAGE

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact your retailer or place of purchase.

1. Handset
2. Base Unit
3. Battery Cover
4. SuperChat Rechargeable Battery
5. AC Adaptor
6. Telephone Cord
7. Owners Manual

## CONTROLS AND FUNCTIONS

- |  |                               |
|--|-------------------------------|
| 1. Handset antenna                       | 11.  key                      |
| 2. Handset earpiece                      | 12.  volume key               |
| 3. Talk/batt low indicator               | 13.  key                      |
| 4.  key                                  | 14.  key                      |
| 5.  key                                  | 15. Handset charging contacts |
| 6.  key                                  | 16. Status light              |
| 7.  /pause key                           | 17.  key                      |
| 8. Handset microphone and ringer speaker | 18. Base charging contacts    |
| 9.  memory key                           | 19. Telephone line jack       |
| 10.  /call wait key                      | 20. AC adaptor input          |

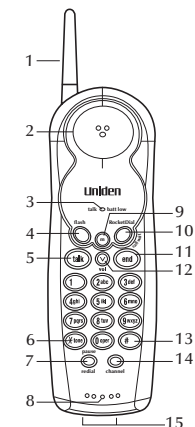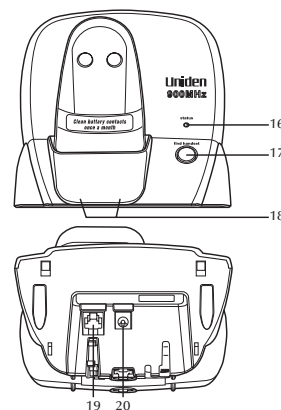


## MOUNTING THE BASE UNIT ON A WALL

You can mount your phone directly to the wall. Before doing this, consider the following:

- Avoid electrical cables, pipes or other items behind the mounting location that could cause a hazard when inserting screws into the wall.
- Mount your phone within distance of a working phone jack.
- Make sure the wall material is capable of supporting the weight of the base and handset.
- Use screws with anchoring devices suitable for the wall material where the base unit will be placed.

 1. Insert two mounting screws into a wall (with their appropriate anchoring device), 8.5cm apart. Allow about 3mm between the wall and screw heads for mounting the phone.
2. Plug the AC adaptor into the Base Unit and then into a power point.
3. Plug the telephone cord into the Base Unit and then into the telephone socket on the wall.
4. Align the mounting slots on the base with the mounting posts on the wall.
5. Then push in and down until the phone is firmly seated.

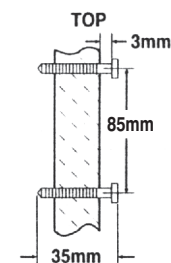



Use only the genuine Uniden Super Chat Battery supplied with your phone. Replacement Super Chat Batteries are available through the Uniden Parts Department.

## BATTERY MAINTENANCE

### Battery use time (per charge)

- 10 hours continuous use
- 20 days when handset is in the standby mode.

### When the Battery charge becomes low

If the phone is not in use, the 'batt low' indicator flashes and none of the keys will operate. If the phone is in use, the 'batt low' indicator flashes and the handset beeps. Complete your conversation as quickly as possible and return the handset to the base unit for charging.

- You cannot overcharge the battery.
- You may return the handset to the charger after each call or when the battery is low.

### Cleaning the charging contacts

To maintain a good charge, it is important to clean the charging contacts on the handset and base unit with a dry cloth or a pencil eraser about once a month. Do not use any liquids or solvents.



### Genuine Handset Batteries

The high quality rechargeable batteries supplied with your phone will perform for up to two years or more. In order to enjoy the best performance from your phone, we recommend you replace your batteries every two years with a genuine Uniden battery.

Simply visit our website to order a replacement battery:

**Uniden Australia Pty Limited**  
Service Division  
[www.uniden.com.au](http://www.uniden.com.au)

**Uniden New Zealand Limited**  
Service Division  
[www.uniden.co.nz](http://www.uniden.co.nz)

**MAKING AND RECEIVING CALLS**

	Handset on Base	Handset Off Base
To answer a call	Pick up the handset ( <i>Autotalk</i> ).	Press <b>(talk)</b> , any number <b>(*)</b> or <b>(#)</b> ( <i>Autotalk</i> ).
To make a call	<ol style="list-style-type: none"> <li>1. Pick up the handset.</li> <li>2. Press <b>(talk)</b>.</li> <li>3. Listen for the dial tone.</li> <li>4. Dial the number.</li> </ol>	<ol style="list-style-type: none"> <li>1. Press <b>(talk)</b>.</li> <li>2. Listen for the dial tone.</li> <li>3. Dial the number.</li> </ol>
To hang up	Press <b>(end)</b> , or return the handset to the base ( <i>AutoStandby</i> ).	Press <b>(end)</b> , or return the handset to the base ( <i>AutoStandby</i> ).
To redial	<ol style="list-style-type: none"> <li>1. Pick up the handset.</li> <li>2. Press <b>(talk)</b>.</li> <li>3. Listen for the dial tone.</li> <li>4. Press <b>(redial)</b>.</li> </ol>	<ol style="list-style-type: none"> <li>1. Press <b>(talk)</b>.</li> <li>2. Listen for the dial tone.</li> <li>3. Press <b>(redial)</b>.</li> </ol>

**ADJUSTING THE RINGER TONE AND EARPIECE VOLUME**

**Handset Ringer Tone**

Press **(V)** in standby mode to select between the two tones. To listen to and select second tone, press **(V)** a second time while the first tone is still ringing. The telephone will keep the last setting for all future calls.

**Earpiece Volume**

Press **(V)** during a call to select the required volume setting (low, medium, high) for the earpiece of the handset. The telephone will keep this setting for all future calls.

**Ringer Mute**

You can temporarily mute the ringer tone. When the handset is off the base and the phone is ringing, press **(end)**. The ringer tone will return to normal with the next incoming call.



You must subscribe through your local telephone company to receive Call Waiting services.

### REDIAL

The **(redial)** key redials the last number dialed. The redialed number can be up to 24 digits long.

1. Press **(talk)**.
2. Press **(redial)**. The last number dialed will be called.

### TRAVELLING OUT-OF-RANGE

During a call, noise will increase if you move your handset too far from your base unit. If the range limit of your base unit is exceeded, your call will terminate within five minutes.

### SELECTING A DIFFERENT CHANNEL

If you encounter interference while using your phone, you can manually change the phone's channel for clear operation. This function works only when the phone is in use. Press **(channel)**. The phone changes to another channel.

### FIND HANDSET

 
 
To locate the handset (while it's off the base), press **(find)** on the base. The handset beeps for 60 seconds. Paging is cancelled by pressing any key or when the handset is returned to the base.

### CALL WAITING - AUSTRALIA

If the call waiting tone sounds during a call:  
Press **(Rocket Dial)**/call wait to switch between callers.

### CALL WAITING/FLASH - NEW ZEALAND

If the call waiting tone sounds during a call:  
Press **(flash)** to switch between callers.

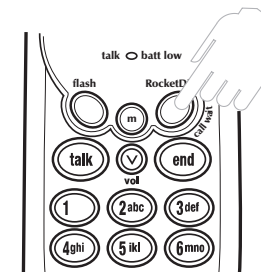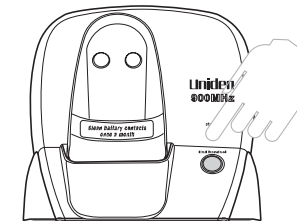





In memory dialling operation, you must press a key within 30 seconds or the phone will return to standby.



To exit memory dialling operations, press **end**.



The pause feature is useful for long distance calling, credit card dialling or sequences of numbers that require a pause between digits.

## STORING PHONE NUMBERS

Memory Dialing allows you to dial a number using just a few key presses. Your XS910 stores up to 10 numbers in the handset.

1. Press **m**. The 'talk/batt low' indicator flashes.
2. Use the number keys to enter the phone number. The phone number cannot exceed 20 digits.  
Use the **redial** /pause to enter a pause in the dialing sequence if required. Each pause counts as one digit and represents a two second delay of time between the digits.
3. Press **m**.
4. Enter a number ((**0**) - (**9**)) to select the memory location where you would like to store the numbers. A confirmation tone is sounded.

## MAKING CALLS WITH MEMORY DIALING

### Memory dialing from Talk Mode.

1. Press **talk**. Press **m**.
2. Enter a number ((**0**) - (**9**)) to select the memory location of the desired phone number. The number is dialed.
3. To hang up, press **end**.

## CHAIN DIALING

On certain occasions after dialing a number, you may be required to enter an access code such as your account number for phone banking. You can enter this number into a memory location for later use by doing the following:

1. Store the access code into one of the memory locations ((**0**) - (**9**)) following the above steps for Storing Phone Numbers.
2. Dial the party or service main number.
3. When you need to enter the special number, press **m** followed by the memory location ((**0**) - (**9**)).

## ERASING A STORED PHONE NUMBER

1. Press **m** twice.
2. Enter a number ((**0**) - (**9**)) to select the memory location you would like to erase.  
A confirmation tone is sounded.



**NOTE**

If the Rocketdial does not have a stored number, the handset will beep rapidly and the phone will not dial.

ROCKETDIAL

## ROCKETDIAL

You can store your most frequent dialed number in the Rocketdial location. The Rocketdial allows you to dial a number with one key press (there is no need to press **talk**). The phone will automatically dial the number stored).

## STORING THE ROCKETDIAL

1. Press **m**, the 'talk/batt low' indicator flashes.
2. Enter the phone number you want allocated to Rocket Dial.
3. Press **m**.
4. Press **Rocket Dial**.

## MAKING CALLS WITH ROCKETDIAL

When the phone is in the standby mode, simply press **Rocket Dial**. The number stored in the Rocketdial memory location is instantly dialed.

## ERASING A ROCKETDIAL

1. Press **m** twice.
2. Press **Rocket Dial**. A confirmation tone is sounded.

## TROUBLESHOOTING

The status light won't illuminate when the handset is placed on the base.	<ul style="list-style-type: none"> <li>• Make sure the AC adaptor is plugged into the base and wall outlet</li> <li>• Make sure the handset is properly seated in the base.</li> <li>• Make sure the charging contacts on the handset and base are clean.</li> </ul>
The audio sounds weak and/or scratchy	<ul style="list-style-type: none"> <li>• Move the handset and/or base to a different location away from metal objects or appliances and try again.</li> <li>• Press <b>(channel)</b> while on a call to change the operating channel.</li> <li>• Make sure that you are not too far away from the base.</li> </ul>
Can't make or receive calls.	<ul style="list-style-type: none"> <li>• Check both ends of the telephone line cord are plugged in firmly</li> <li>• Make sure the AC adaptor is plugged into the base and wall outlet.</li> <li>• Disconnect the AC adaptor for a few minutes, then reconnect it.</li> <li>• Make sure that you are not too far from the base.</li> <li>• Charge the handset.</li> </ul>
The handset doesn't ring or receive a page.	<ul style="list-style-type: none"> <li>• The battery pack may be weak. Charge the battery for 20-25 hours.</li> <li>• The handset may be too far away from the base unit.</li> <li>• Place the base unit away from appliances or metal objects.</li> </ul>
If you still have a problem.	Australia: <a href="http://www.uniden.com.au">www.uniden.com.au</a> New Zealand: <a href="http://www.uniden.co.nz">www.uniden.co.nz</a>

**THANK YOU**  
**FOR PURCHASING A UNIDEN PRODUCT**

## WARRANTY

### One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.  
Warrantor: Uniden Australia Pty Limited A.B.N. 58 001 865 498  
Uniden New Zealand Limited

**ELEMENT OF WARRANTY:** Uniden warrants to the original retail owner for the duration of this warranty, its XS910 (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original retail owner only, shall terminate and be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Warranty is only valid in original country of purchase.

**PARTS COVERED:** This warranty covers for one (1) year, the Base Unit and Handset only. All accessories (AC Adaptor etc) are covered for 90 days only.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts or service. **THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEE ACT.**

**PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY:** In the event that the product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (eg. a copy of the sales docket), to the warrantor at:

**UNIDEN AUSTRALIA PTY LIMITED**  
SERVICE DIVISION  
345 Princes Highway,  
Rockdale NSW 2216  
Fx (02) 9599 3278  
www.uniden.com.au

**UNIDEN NEW ZEALAND LIMITED**  
SERVICE DIVISION  
150 Harris Road,  
East Tamaki, Auckland  
Fx (09) 274 4253  
www.uniden.co.nz

Customers in other states should ship or deliver the Product freight pre-paid to their nearest Uniden Authorised Repair Centre (Contact Uniden for the nearest Warranty Agent to you).

Printed in China  
**UCZZ01388ZB**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>