



Model 07S1BP

Transmitter Programming Guide

This transmitter is designed for use with your upgrade remote start unit and is programmed by using the remote start's program switch in combination with the transmitter button. Although this transmitter can be programmed into any of the Audiovox remote start and or alarm, alarm remote start systems, it will offer limited use and should be used for the remote start upgrade only.


To program this transmitter into your remote start upgrade unit:

- 1) Turn the ignition to the on position
- 2) Press and release the programming switch 3 times
- 3) Press and hold, for 3 seconds, the button of the transmitter you wish to add until the parking light flashes indicating the transmitter has been learned.
- 4) Repeat step 3 for each transmitter up to a total of 4.
Turn the ignition off to exit the program mode.

NOTE: Do not allow more than 15 seconds to lapse between steps or the program mode will be automatically exited and you will have to start over.

Replacing The Batteries:

Using the edge of a coin, or a small flat screwdriver blade, carefully remove transmitter back cover keeping hold of the metal key ring to prevent it's loss.

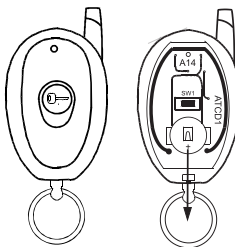


Carefully slide the two batteries out from under the clip in the direction indicated by the arrow

Carefully remove the discharged batteries by sliding them out from under the clip in the direction indicated by the arrow, Properly dispose of the exhausted battery and insert two new CR1220 taking care to arrange it so that the + is facing up away from the circuit board.

128-8208

 1 of 2



ORDER FORM FOR TRANSMITTER 07S1BP

Attention: Transmitter Ordering Department

Important: To help us expedite your order, please print all of the information legibly and mail this form and your payment according to the instructions below.

1) Name: _____

2) Address: _____

3) City: _____ State: _____ Zip Code: _____

4 Telephone Number:() _____

5) Total Number Of Transmitters Required: _____

Cost Per Transmitter is: \$65.00

Multiply By Number Of Transmitters X

6) Enter Total Amount Enclosed _____

(New York State Residents must include the appropriate sales tax)

7) Method of Payment:

Mastercard Visa Check or Money Order (do not send cash)
Make Checks Payable To Audiovox Corporation

Credit Card Number: _____

Credit Card Expiration Date: ___/___/___

8) Mail this form along with your payment to:

Transmitter Ordering Department
Audiovox Corporation 150 Marcus Blvd., Hauppauge N.Y.
11788



Credit card purchasers can order additional or replacement transmitters by phone. Simply dial 1 - 800 - 645 - 4994, and follow the instructions from the operator interface

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>