



## Model APS-15KB

Owner's Manual

### **2 Button Remote Security System With Shock Sensor**

**Congratulations!** Your purchase of this state-of-the-art security system expresses a deep concern for the security of your vehicle, its contents, and passengers. To fully appreciate the many functions and safeguards incorporated in this system, please spend a few minutes reading this manual. You may find unexpected features that could mean the difference between "protected" and "fully protected".

#### **FEATURES :**

- ◆ 2 Two Button Programmable RF Transmitters
- ◆ Two Channel Receiver ( capable of accepting 4 transmitters )
- ◆ Anti-scan Technology
- ◆ Remote Panic in all modes
- ◆ Protected Valet
- ◆ 7 Function LED - Arm / Disarm / Zones 1, 2, & 3 / Valet / Arming
- ◆ Intrusion Alert with Memory
- ◆ Audible Arm / Disarm / Defective Zone / Tamper Confirmation
- ◆ Instant Siren Activation
- ◆ True Last Door Arming ( hardwire only )
- ◆ Defective Zone By - Pass
- ◆ Hardwire or Voltage Sense Selectable
- ◆ Active or Passive Arming Selectable
- ◆ User Programmable Permanent Chirp Delete
- ◆ 6 Tone Multi-Tone Siren
- ◆ RF Inhibit with Ignition On
- ◆ Parking Light Flasher
- ◆ Plug In Shock Sensor

#### **OPTIONS :**

- ◆ Starter Disable (Relay Required)
- ◆ Remote Trunk Release
- ◆ Remote Keyless Entry
- ◆ Multiple Vehicle Capable
- ◆ Remote Starter
- ◆ Remote Power Window Roll Up
- ◆ Remote Garage Door Interface

#### **ARMING THE SYSTEM (CHANNEL 1): ACTIVE**

1. Turn off the engine, exit the vehicle, and close and lock all doors, hood, and trunk.
2. Press and release the ARMING button on the keychain transmitter. The siren will "chirp" once, the vehicle's parking lights will flash once, the doors will lock (optional), and the dash mounted LED will begin to slowly flash.

**WARNING!** Excessive pressure on the transmitter button will damage the internal components on the circuit board. All that is required is a light push to the button.

**NOTE:** If the siren "chirped" three times when ARMING, then one of the entry points (hood, trunk, doors) has been left opened. Closing the Hood, trunk, or door will correct the problem, and you **DO NOT** have to disarm the system to make the correction.

#### **ARMING THE SYSTEM (CHANNEL 1): PASSIVE**

1. Turn off the engine, exit the vehicle, close and lock all doors, hood and trunk.
2. The dash mounted LED will begin flashing rapidly, indicating that the system is automatically (passive) arming. As an added convenience, the automatic passive arming will not begin until all doors and trunk lid are closed, allowing passengers to exit the vehicle at their convenience.
3. In 30 seconds, you will hear a single, short "chirp" from the siren, and the vehicle's parking lamps will flash one time, indicating the system is ARMED. At this time, the dash mounted LED will begin to flash slowly, providing a visual indication that the system is fully ARMED.
- 3a. If the optional door lock interface has been installed, the doors **WILL NOT** automatically lock when the 30 second arming time expires.
4. If you wish to ARM the system immediately, simply press and release the button on the keychain transmitter. The siren will "chirp" once, the doors will lock (optional), and the dash mounted LED will begin to slowly flash.

#### **PROTECTION WHILE THE SYSTEM IS ARMED:**

1. Opening any door, hood, or trunk will cause the alarm to immediately sound. The siren will continue to sound for 30 seconds, then stop and automatically re-arm the vehicle. If the potential thief left a door opened, the siren will sound for six 30 second cycles, then re-arm and ignore the opened door.
2. Any strong vibration such that would be created by breaking a window or damage caused by a vehicle hitting your's will cause the alarm's shock sensor to trigger the system. The siren will continue to sound for 30 seconds.
3. Whenever the system is armed, the Red dash mounted LED indicator will slowly flash. This serves as a visual deterrent to the potential thief. The LED is a very low current bulb, and will not cause the vehicle's battery to drain, even when left unattended for extended periods.
4. If the starter cut relay (optional) is installed, whenever the system is armed, the vehicle's starter will be bypassed. If a thief should choose to ignore the siren, the vehicle can not be started.
5. Whenever the system is triggered, the vehicle's parking lights will flash for the 30 second alarm cycle, attracting added visual attention to the vehicle.

#### **DISARMING THE SYSTEM (CHANNEL 1):**

1. As you approach the vehicle, press and release the button on the key chain transmitter.

**WARNING!** Excessive pressure on the transmitter buttons will damage the internal components on the circuit board. All that is required is a light push to the button.

2. The siren will "chirp" 2 times and the vehicle's parking lamps will flash two times.

a) If the door lock interface (optional) is installed, the vehicle's doors will automatically unlock.

3A. ACTIVE: The dash mounted LED will turn off, and remain off until the system is armed.

3B. PASSIVE : Never attempt to disarm the system from a distance that prevents you from opening a door within 30 seconds. Since the system is programmed for passive arming, it will begin to re-arm until a door is opened. Opening the door will suspend the passive arming cycle.

#### **INTRUSION WARNING SIGNALS:**

The system will inform you if an intrusion attempt has occurred while you were away from the vehicle. If an intrusion attempt has occurred, the siren will "chirp" 4 times when disarming the system. Enter the vehicle and observe the dash mounted LED for further information.

1. If the LED is flashing one time...pause... one time...etc., then an intrusion attempt was made to a light activated entry point, or the plug in shock sensor was activated.

2. If the LED is flashing two times...pause...two times...etc., then an intrusion attempt was made to the hood, trunk, or any optional sensors that were added to the vehicle.

3. If the LED is flashing three times...pause...three times...etc., then an intrusion attempt was made through one of the vehicles doors.

These intrusion warning indicators are stored in the system's memory, and will only be erased from memory when the ignition key is turned on.

#### **VALET/SYSTEM OVERRIDE SWITCH:**

The "Valet" switch allows you to temporarily bypass all alarm functions, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in the valet mode, all alarm functions are bypassed, however, the remote panic feature and remote door locks (optional) will remain operational. To use the valet mode;

1. Enter the vehicle and turn the ignition key to the "on" position.

2. Move the valet toggle switch to the "on" position. The dash mounted LED will turn on solid, and remain on as long as the system is in the valet mode.

3. To return to normal operation, move the valet switch to the "off" position any time the ignition is on.

In the event you lose your transmitter, or if the transmitter fails to disarm the system, the valet switch can be used as a system override switch. Open the car door (the alarm **WILL** sound). Turn the ignition key on, and move the valet switch to the "on" position. The alarm will stop sounding, and the vehicle can now be started.

**NOTE:** Always remember to move the Valet Switch back to the "off" position. This will ensure that the vehicle remains protected at all times.

#### **ELIMINATING THE ARM/DISARM CHIRPS:**

The normal arming and disarming confirmation "chirps" can easily be turned on and off using the valet toggle switch. To do this...

1. The valet switch must be in "off" position.
2. Turn the ignition key on, and then off.
3. Within 10 seconds of turning the ignition key off, move the valet toggle switch to the on-off-on-off-on-then off position.
- 4a. If, before proceeding with step 1, the chirps were on, then you will hear 2 chirps to indicate that the chirps have been turned off.
- 4b. If, before proceeding with step 1, the chirps were off, then you will hear 1 chirp to indicate that the chirps have been turned on.
5. Whenever power to the system is disconnected (for repair or service of the vehicle), the chirps will be active when power is re-connected. To turn the chirps off, simply execute 1-3 above.

**Note:** Whenever the chirps are by-passed, the 3 chirp defect and 4 chirp intrusion indicator will always operate. This feature will always warn you if there is a defective sensor during the arming sequence or if the vehicle had been tampered with in your absence, even if the normal arming and disarming chirps have been turned off.

#### **REMOTE PANIC OPERATION (CHANNEL 1):**

The arming button on your key chain transmitter also functions as a "panic" switch for instant activation of the alarm in emergency situations. To use the remote panic switch;

1. Press and hold the button on the key chain transmitter for 3 seconds or more. The alarm will immediately sound.
2. To stop the alarm, press and release the button on the key chain transmitter. If the button is not pressed, the alarm will automatically stop after 30 seconds.

**WARNING:** Excessive pressure on the transmitter buttons will damage the internal components on the circuit board. All that is required is a light push to the button.

#### **TRUNK RELEASE (CHANNEL 2):**

This security system has an additional feature that can be wired to a number of different optional accessories. Some of the more common uses for this "channel" are:

Remote Trunk Release - available for any vehicle with factory installed electronic push-button trunk release.

Remote Car Starter - available for most automatic transmission, fuel injected vehicles.

Remote Window Roll Up - available for most vehicles equipped with power windows.

To activate the optional accessory:

1. Press and hold the 2nd button on the keychain transmitter for approximately 3 seconds.

**NOTE:** This feature will not operate when the vehicle's ignition key is turned "ON".

**APS-15KB  
SYSTEM FUNCTIONS AT A GLANCE**

**DASH LED INDICATORS**

RAPID FLASHING .....	PASSIVE ARMING
SLOW FLASHING .....	ARMED
OFF .....	DISARMED
ON - SOLID .....	VALET MODE
3 FLASH ... PAUSE .....	INTRUSION ZONE 3
2 FLASH ... PAUSE .....	INTRUSION ZONE 2
1 FLASH ... PAUSE .....	INTRUSION ZONE 1

**SIREN CHIRP INDICATORS**

1 CHIRP .....	ARM
2 CHIRPS .....	DISARM
3 CHIRPS .....	ARM / ZONE ACTIVE
4 CHIRPS .....	DISARM / INTRUSION

**PARKING LAMPS (Optional)**

1 FLASH .....	ARM
2 FLASH .....	DISARM
3 FLASH .....	DISARM / INTRUSION

**Your System Has These Features Activated:**

- |  |  |
|--|--|
| <input type="checkbox"/> Starter Cut-out     | <input type="checkbox"/> Motion Detector |
| <input type="checkbox"/> Door Lock Interface | <input type="checkbox"/> Hardwire        |
| <input type="checkbox"/> Shock Detector      |  |

Optional Channel 2 Device \_\_\_\_\_



## 60 MONTH LIMITED WARRANTY

*Applies to control modules, relays, transmitters, sensors  
and sirens.*

AUDIOVOX CORPORATION (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 60 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station or the Company at the address shown below.

This Warranty does not cover costs incurred for installation, removal or reinstallation of the product, or damage to vehicle electrical systems.

This Warranty does not cover batteries nor apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s).

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 72 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

The Company does not warrant that this product cannot be compromised or circumvented. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**U.S.A. :** AUDIOVOX CORPORATION, 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 • (516) 231-6051

**CANADA:** CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

Form No. 128-4117E

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>