



Model 09XR1Pr


This transmitter is designed for use with your upgrade remote start unit and is programmed by using the remote start's program switch in combination with the transmitter button. This transmitter can be used with any Audiovox unit color coded with an Orange LED in the receiver.

To program this transmitter into your remote start upgrade unit:

- 1) Turn the ignition to the on position.
- 2) Press and release the programming switch 3 times.
- 3) Press and hold, for 3 seconds, the button of the transmitter you wish to add until the parking light flashes indicating the transmitter has been learned.
- 4) Repeat step 3 for each transmitter up to a total of 4.
Turn the ignition off to exit the program mode.


NOTE: Do not allow more than 15 seconds to lapse between steps or the program mode will be automatically exited and you will have to start over.

If you notice decreased operating range or if the LED fails to light when activating the unit, the batteries will need replacement.

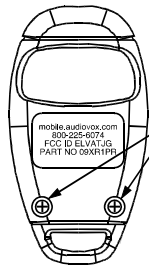

Battery Replacement

After removing the two #0 point phillips screws shown, pry apart case with the edge of a finger nail or a small common screwdriver. Keep hold of the metal key ring loop to prevent its loss as it will separate from the transmitter case.

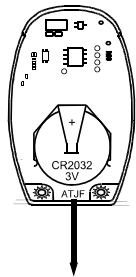


Carefully remove the discharged battery by sliding it out from under the clip in the direction indicated by the arrow in the diagram. Properly dispose of the exhausted battery and insert a new CR2032 battery, taking care to arrange it so that the + is facing up toward the + symbol on the battery clip. Reassemble in the reverse of above.

This device complies with FCC Rules Part 15 Operation and is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference that may be received, including interference that may cause undesired operation.

 NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



**ORDER FORM
FOR TRANSMITTER 09XR1Pr**

Attention: Transmitter Ordering Department
Important: To help us expedite your order, please print all of the information legibly and mail this form and your payment according to the instructions below.

- 1) Name: _____
- 2) Address: _____
- 3) City: _____ State: _____ Zip Code: _____
- 4) Telephone Number: () _____
- 5) Total Number Of Transmitters Required: _____
- Cost Per Transmitter is: \$65.00
- Multiply By Number Of Transmitters X

- 6) Enter Total Amount Enclosed: _____
- (New York State Residents must include the appropriate sales tax)
- 7) Method of Payment:

Mastercard Visa Check or Money Order (do not send cash)
Make Checks Payable To Audiovox Corporation


Credit Card Number: _____

Credit Card Expiration Date: ___/___/___

- 8) Mail this form along with your payment to:
Transmitter Ordering Department
Audiovox Corporation 150 Marcus Blvd., Hauppauge N.Y.
11788



Credit card purchasers can order additional or replacement transmitters by phone. Simply dial 1 - 800 - 645 - 4994, and follow the instructions from the operator interface.

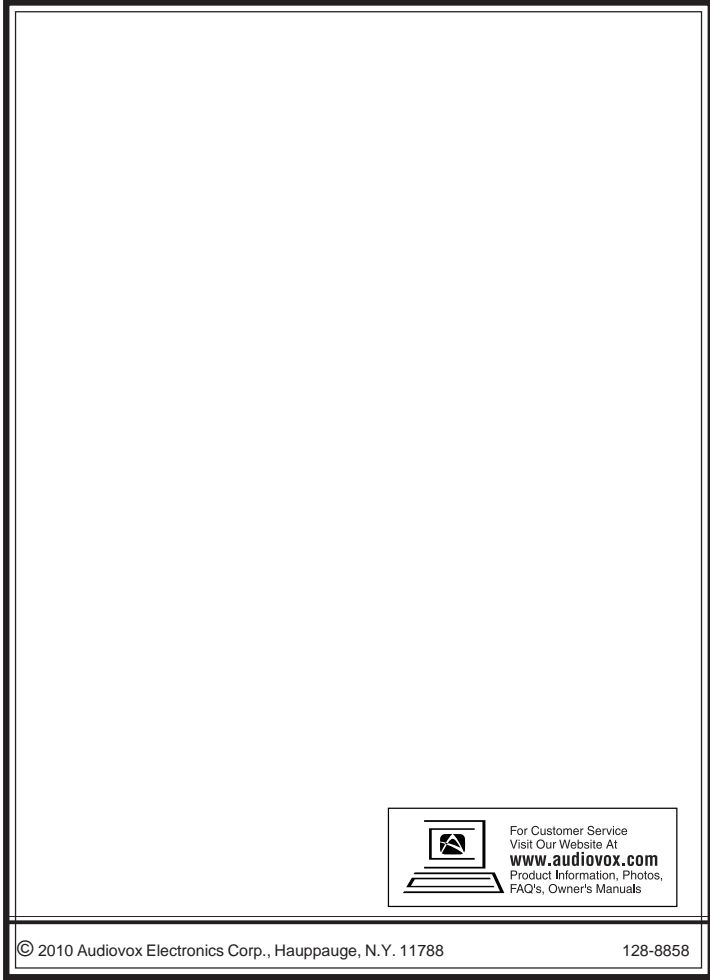

 For Customer Service
Visit Our Website At
www.audiovox.com
Product Information, Photos,
FAQ's, Owner's Manuals

© 2010 Audiovox Electronics Corp., Hauppauge, N.Y. 11788

128-8858

128-8858
4 of 4

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>