



Model PRO-94FR

Owner's Manual

Transmitter Programming Guide Transmitter Button Functions

The transmitters included in the security system kit are pre-programmed at the factory, with button # 1 assigned to channel one only. The suggested program arrangement is listed below. To program channel 2 and 3, please follow the programming instructions listed on pages two and three of this manual.

Factory Settings for Transmitter Buttons

| Button | Channel | System Function |
|--------------|---------|--|
| Button #1 | 1 | Remote Arm/Disarm Remote Emergency Panic Door Lock/Unlock (Optional) |
| Button #2 | 2 | Pulsed Output **(Optional Devices) |
| Both Buttons | *3 | Switched Output ** (Optional Devices) |

* Third channel may be RF output only on some models.

** Some of the more common accessories for these channels are;

- AS 9075 Remote Car Starter • AS 9256 Remote Trunk Release Relay
- AS 9154 Remote Garage Door Interface • AS 9153 Remote Window Roll Up

These factory programmed settings can be prioritized based on an individual's frequency of use, (i.e. pressing both buttons simultaneously to activate channel 1, arm/disarm etc.) by following the normal programming instructions below.

Please note when changing the button sequences of the factory settings, it is necessary to perform steps 5, 9, and 12 three times using "transmitter A", followed by one time using "transmitter B".

PROGRAMMING TRANSMITTERS:

It is important to remember that during programming, each individual step of the procedure must be executed within 15 seconds of the previous step. When the 15 second time limit is allowed to expire, the system will automatically exit program mode. This is indicated by a long "chirp" from the siren.

Additionally, any time the ignition key is turned off while programming, the system will immediately exit program mode. This is also indicated by a long "chirp" from the siren.

TO PROGRAM ADDITIONAL TRANSMITTERS:

1. Enter the vehicle, and turn the ignition key to the "on" position.
2. Move the valet/bypass switch on - off - on - off - on then off.
3. The dash L.E.D. will flash one time, and the siren will "chirp" one time, indicating the system is ready to accept programming for channel 1, or the arm/disarm and panic functions.
4. You can assign any of the three transmitter button functions listed below to channel 1.
 - a) Pressing button #1 on the keychain transmitter.
 - b) Pressing button #2 on the keychain transmitter.
 - c) Pressing both buttons simultaneously on the keychain transmitter.
5. Press and hold the selected choice a, b, or c above, until the siren emits a long "chirp" to confirm that programming of channel 1 was successful.

6. Move the valet/bypass switch on, then off again.
7. The dash mounted L. E. D. will flash 2 times, and the siren will "chirp" one time, indicating that the system is ready to accept programming for channel 2, or the pulsed ground output for remote trunk release, remote car starter, etc.
8. You can assign any one of the two remaining button functions listed in 4a, 4b, or 4c above to operate channel 2. You cannot use the button(s) that operate channel 1, selected in step 5, to operate channel 2.
9. Press and hold the selected choice. The siren will emit a long "chirp" to confirm that programming of channel 2 was successful.
10. Move the valet/bypass switch on, then off again.
11. The dash mounted L.E.D. will flash 3 times, and the siren will "chirp" one time, indicating that the system is ready to accept programming for channel 3.
12. Press and hold the remaining transmitter button function. The siren will emit a long "chirp" to confirm that programming of channel 3 was successful.
13. To exit program mode, either turn the ignition key to the off position, or move the valet switch on then off one additional time. This is indicated by a long "chirp" from the siren.

QUICK REFERENCE:

You can program any individual channel, without reprogramming all channels, by following the quick reference chart below.

| CHANNEL | VALET SWITCH | L.E.D. |
|---------|---------------------|-----------|
| 1 | ON then OFF 3 Times | 1 Flash |
| 2 | ON then OFF 4 Times | 2 Flashes |
| 3 | ON then OFF 5 Times | 3 Flashes |

After the desired channel is programmed, turn the ignition key to the off position to exit programming mode.

BATTERY REPLACEMENT:

The transmitter incorporates a small red L.E.D. built into the case. This L.E.D. can be used to indicate battery condition. You will notice a decrease in transmitter range as the battery condition deteriorates. To replace the battery...

1. Remove the transmitter cover by removing the small screw from the back of the transmitter case.
2. Remove the discharged battery, making note of the orientation of the + and - contacts, and dispose of properly.
3. Install the new (type GP23A) battery, taking care to orient the + and - contacts properly.
4. Replace the transmitter cover, taking care not to damage the L.E.D. or switches on the circuit board.

ORDERING ADDITIONAL or REPLACEMENT TRANSMITTERS:

Order Form for Additional 2 Button Transmitters

Model: PRO-94FR

IMPORTANT: Read instructions below and legibly print all required information.

1. Fill in the following information

NAME _____

ADDRESS _____

CITY _____ STATE _____ ZIP CODE _____

DATE PURCHASED _____ WHERE PURCHASED _____

2. Enter the number of transmitters required here _____

3. The cost per transmitter is \$65.00

4. Enter total amount enclosed here \$ _____
(N.Y. State residents only: Include appropriate state sales tax)

5. Enclose check or money order (do not send cash) payable to: Audiovox Corp.

6. Mail this form and your payment to: Audiovox Corporation
150 Marcus Blvd.
Hauppauge, N.Y. 11788
Attn: Key Ordering Supervisor

128-5491

5 of 6

© 1999 Audiovox Corporation 150 Marcus Blvd., Hauppauge, N.Y. 11788 128-5491

128-5491
6 of 6

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>