

GMR 2-way radios

THANK YOU FOR PURCHASING A UNIDEN PRODUCT  
**CHECK OUT THE LATEST ACCESSORIES**  
www.uniden.com


# GMR1048-2CK

- 15 GMRS / 7 FRS Channels
- 99 Sub Codes (CTCSS Tone and DCS Code)
- Up to 10 Mile Range\*
- Scramble
- Internal VOX Circuitry
- 5 Selectable Call Tone Alerts
- Backlit LCD Display
- Optional Headset Accessories
- Headset Jack
- Roger Beep
- Battery Charger
- Battery Level Meter
- Channel Monitor
- Channel Scan
- Keypad Lock
- NOAA Emergency / Weather Channels
- Emergency Weather Alert
- DC IN 9V Jack



\*Range may vary depending on environmental and/or topographical conditions.

## GMR1048-2CK RADIO

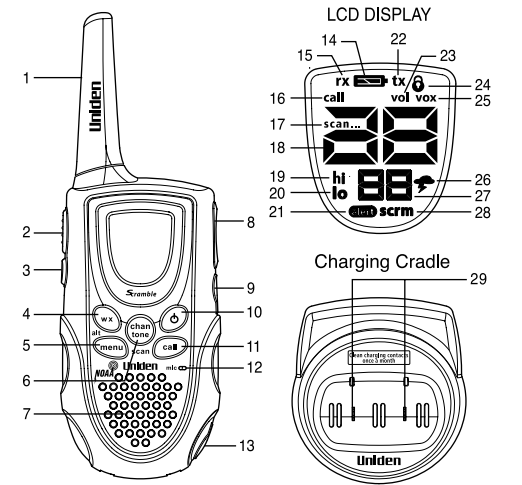

- |                             |                             |
|-----------------------------|-----------------------------|
| 1 Antenna                   | 16 Call Indicator           |
| 2 PTT (Push-To-Talk) Button | 17 Scan Indicator           |
| 3 Monitor Button            | 18 Channel Indicator        |
| 4 Weather/Alert Key         | 19 Hi Power Indicator       |
| 5 Menu Key                  | 20 Low Power Indicator      |
| 6 Channel Tone/Scan Key     | 21 Alert Indicator          |
| 7 Speaker                   | 22 Transmit Indicator       |
| 8 Up/Down Button            | 23 Volume Setting Indicator |
| 9 Headset Jack              | 24 Keypad Lock Indicator    |
| 10 On/Off Key               | 25 VOX Indicator            |
| 11 Call Key                 | 26 Weather Indicator        |
| 12 Microphone               | 27 Sub Code Indicator       |
| 13 DC IN 9V                 | 28 Scramble Indicator       |
| 14 Battery Level Meter      | 29 Charging Contacts        |
| 15 Receive Indicator        |                             |

Congratulations on your purchase of the Uniden GMR1048-2CK (General Mobile Radio Service) radio. This lightweight, palm-sized, radio is a state-of-the-art device, equipped with many valuable features. Use it at sporting events, to stay in contact with family and friends, hiking, skiing, outdoors, or in a neighborhood watch for vital communication.

## PACKAGE CONTENTS

Your package contains two GMR1048-2CK radios, two rechargeable NiMH battery packs (#BP40), two AC adapters (#AD-1004), two charging cradles (#RC1041), two belt clips and this reference guide. You can operate the unit using the rechargeable NiMH battery pack or 4 AAA alkaline batteries (not included). The following optional accessories can be purchased by calling the Customer Hotline at 1-800-297-1023 (Mon-Fri 7 am to 7 pm, Sat/Sun/holidays--except Thanksgiving and Christmas--9 am to 5 pm, CST). **Use only Uniden accessories.**

- NiMH Battery Pack - #BP40
- Charging Cradle - #RC1041
- Headset - #HS910/HS915
- AC Adapter - #AD-1004

## GMRS LICENSE

The GMR1048-2CK radio operates on the General Mobile Radio Service (GMRS) frequencies when using Channels 1-7 and channels 15-22. You must have a GMRS license issued by the Federal Communications Commission to legally use these channels. For licensing information and application forms, visit the FCC online at: [www.fcc.gov/wtb/uls](http://www.fcc.gov/wtb/uls) or call the FCC hotline at 1-800-418-3676. If you have any questions, you can contact the FCC direct at 1-888-225-5322. No license is required for operation on channels 8-14 or operation on any channel in Canada.

## INSTALL THE BATTERY

Your GMR1048-2CK radio uses a supplied NiMH battery pack or 4 AAA alkaline batteries (not included).

- To install the NiMH battery pack:
- 1) Make sure your radio is OFF.
  - 2) Remove the battery compartment door by pressing the tab at the bottom of the compartment door, and remove the cover.
  - 3) Install the NiMH battery pack into the battery

compartment. Be certain to follow the instructions written on the label on the battery pack. Installing the battery pack incorrectly will prevent the unit from operating.

- 4) Replace the battery compartment door.

## BATTERY LEVEL AND LOW BATTERY ALERT

This unit has a battery level meter on the display to indicate the status of the batteries. When the battery in the unit is low, the battery level meter icon flashes. Recharge the NiMH battery pack immediately or if you are using the alkaline batteries, you must replace the alkaline batteries in order to continue using the radio.

**Warning!** To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden accessories specifically designated for this product.

## CHARGING THE RADIO

If you use the rechargeable NiMH battery pack, two GMR1048-2CK radios can be charged directly or by using the supplied charging cradle.

## Charge by Using the Radio

- 1) Connect the AC adapter to DC IN 9V jack of the radio and to a standard 120V wall outlet.
- 2) Charge the battery pack for 16 hours until the battery indicator stop flashing.

## Using the Charging Cradle

- 1) Connect the AC adapter to DC IN 9V jack and to a standard 120V AC wall outlet.
- 2) Set the charging cradle on the desk or tabletop, and place the radio in the charging cradle with the keypad facing forward.
- 3) Charge the battery pack for 16 hours until the battery indicator stops flashing. Then remove the radio from the charging cradle after completing charging.

- Note:**
- DC IN 9V Jack of the radio is for charge only. Be sure to install the battery before charge.
  - Use only the supplied battery and AC adapter or approved accessories from Uniden.
  - Charge time may vary depending on the battery life remaining.
  - Do not recharge alkaline batteries. Doing so can create a safety hazard or damage the radio.
  - For fastest charging, turn off the radio before charging.
  - Battery must be installed for operation, even from external power.

## USING THE RADIO

In order to get the most out of your new radio, read this reference guide completely before attempting to operate the unit.

### Turning the Radio On and Adjusting the Volume

- 1) Press and hold the key to turn the radio ON, and increase the speaker volume by pressing the key. To decrease the volume, press the key.
- 2) Press and hold the key again to turn the radio OFF.

### Adjusting the Sound (Key Beeps)

Your radio emits a beep each time one of the keys (except for the **PTT** button and **call** key) is pressed. To turn this sound OFF, press and hold the **call** key while turning ON the radio. Repeat this step to turn the sound ON.

### Choosing a Channel

Your radio has 22 channels and 99 Sub codes you can use to talk to others. In order to speak to someone, each of you must be set to the same channel and Sub code.

To choose a channel:

With the radio in "Normal" operating mode press the **chan tone/scan** key and press the or key to increase or decrease the channel number displayed.

**Note:** Channels 1-7 have an typical range of up to 10 miles. Channels 8-14 have an typical range of up to 5 miles. Channels 15-22 have an typical range of up to 10 miles. You can know which GMRS or FRS channel is active by the icon. **hi** icon is displayed while scanning GMRS channels, and the **lo** icon is displayed while scanning FRS channels.

### Choosing a Sub Code

Each of the channels 1-22 may have any one of the codes, OFF or 1-99 selected. Code **oF** (OFF) indicates no Sub code selected and your radio can receive a signal regardless of the code settings of the transmitting radio.

- 1) Press **chan tone/scan** in channel select mode. The subcode indicator will flash.
- 2) Press the or key to increase or decrease the code number displayed. You can also select **oF** (OFF) at this stage.
- 3) Exit the Menu.

## Channel Scan Feature

Your GMR1048-2CK radio has a channel scan feature that allows you to easily scan all 22 channels. When an active channel is detected, the radio pauses on that channel until the channel is clear. Then after a 2 second delay, the radio continues scanning. Pressing the **PTT** button while the scan is paused on a channel allows you to transmit on that channel.

To turn ON channel scan:

Press and hold the **chan tone/scan** key until the **scan...** icon is displayed. The channel number on the display changes as the radio rapidly cycles through the channels.

To turn OFF channel scan:

Press the **call**, **PTT**, **wx/alert** or **menu** key, or press and hold the **chan tone/scan** key for 2 seconds.

## Talking on Your Radio

To talk to others using the radio:

- 1) Press and hold the **PTT** button and speak in a clear, normal voice about 2-3 inches away from the microphone. While you are transmitting, the **tx** icon appears on the display. To avoid cutting off the first part of your transmission, pause slightly after pressing the **PTT** button before you start talking.
- 2) When you have finished speaking, release the **PTT** button. You can now receive incoming calls. While receiving, the **rx** icon appears on the display.

## Monitor Mode Feature

Your GMR1048-2CK radio allows you to listen for weak signals on the current channel at the press of a key.

To turn ON the Monitor Mode:


- For brief listening, press **mon** button. The **rx** icon blinks.
- Press and hold **mon** button for 2 seconds until two beeps sound for continuous listening. The receiver circuit stays open, letting both the noise and weak signals to be heard.

To turn OFF Monitor Mode:

Press **mon** button to return to "Normal" mode, and the **rx** icon stops blinking and disappears.

## Navigating through the Menu

To access the advanced features of the GMR1048-2CK, your radio has a Menu function.

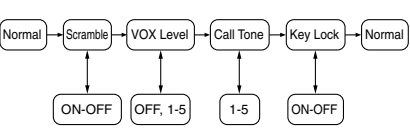

- 1) To enter the Menu, press the **menu** key.
- 2) Additional presses of the **menu** key advances you through the Menu until exiting to "Normal" operating mode.
- 3) Other methods of exiting the Menu function are:
  - a. Press and hold the key again.
  - b. Press the **PTT**, **mon**, **call**, **wx/alert**, or **chan tone/scan** key
  - c. Wait 10 seconds until the unit automatically returns to "Normal" mode.

## Setting Scramble

Scramble feature allows you to make a private conversation. No one listening to your conversation can understand what you are talking about. Be sure that your party also sets their radio to the scramble feature.

To set Scramble:

- 1) Enter the Menu.
- 2) Select on using or .

## Voice Operated Transmission

Your GMR1048-2CK radio is equipped with a user selectable Voice Operated Transmitter (VOX) that can be used for automatic voice transmissions. The VOX feature is designed to be used with a headset with a microphone. Transmission is initiated by speaking into the remote microphone instead of pushing the **PTT** button.

To select the VOX level:

- 1) Enter the Menu. Advance through the Menu until the **vox** icon appears on the display. The current level (OFF, 1-5) will be indicated. Level **oF** (OFF) disables VOX, while levels 1-5 set the sensitivity of the VOX circuit.
- 2) Press either the or key to the desired VOX sensitivity level. Use level 1 for increased sensitivity to voice in normally quiet environments, and use a higher level to reduce undesired activation in very noisy environments.

## Transmitting a Call Tone

Your GMR1048-2CK radio is equipped with 5 selectable call tones that are transmitted when the **call** key is pressed.

To select a call tone:

- 1) Enter the Menu. Advance through the Menu until the **call** icon is shown on the display. The current call tone number (1-5) is indicated.
- 2) Press the or key to increase or decrease the number to the desired call tone. Each tone will be heard through the speaker.

To transmit the selected call tone, press the **call** key. The selected tone will automatically be transmitted for a fixed length of time. Call Tone will be cancelled when the **PTT** button is pressed.

## Key Lock

To lock the keypad:

- 1) Enter the Menu. Advance through the Menu until the icon appears on the display. The current Key Lock status **oF** (OFF) blinks on the display.
- 2) To switch the Key Lock mode from **oF** (OFF) to **on**, press the key.
- 3) To confirm the setting, press the **menu** key. The radio returns to the "Normal" mode.

**Note:** If you exit the setting mode before confirming your selection by pressing the **menu** key, the **Key Lock setting will be set to oF** (OFF).

To unlock the keypad:

- 1) Press and hold the key to turn the radio OFF.
- 2) Press and hold the key again to turn the radio ON. The keypad is unlocked.

## Automatic Power Save Feature

Your GMR1048-2CK radio has a unique circuit designed to dramatically extend the life of the batteries. If there is no transmission nor an incoming call within 3 seconds, your radio switches to the Power Save mode. The radio is still able to receive transmissions in this mode.

## LCD Backlight

The LCD Backlight automatically turns ON when any key (except the **PTT** button) is pressed. The LCD display illuminates for 10 seconds before turning OFF.

## Roger Beep

Roger Beep is a BEEP that is sent to notify the end of transmission (both PTT and VOX transmission). Roger Beep can be heard through the speaker when both Roger beep and Key Beep are set to ON. When Roger beep is set to ON and Key Beep OFF, Roger Beep will not be heard from the speaker but it will be transmitted to your party. When Roger Beep is set to OFF, Roger Beep neither be heard nor transmitted.

To turn ON Roger Beep:

Press and hold the key while turning ON the radio.

To turn OFF Roger Beep:

Press and hold the key while turning ON the radio.

Please do not send products or other correspondence to this address.

039 Q

**Uniden®**  
PRODUCT REGISTRATION DEPARTMENT  
PO BOX 44486  
DENVER CO 80201-4486  
USA

# Uniden® PRODUCT REGISTRATION CARD

Complete the attached registration card and return today to receive these 3 important benefits:

- **CONFIRM YOUR WARRANTY:**  
Your prompt product registration confirms your right to the protection available under the terms and conditions of your Uniden warranty.
- **PROTECT YOUR PRODUCT:**  
We will keep the model number and date of purchase of your new Uniden product on file to help you refer to this information when necessary.
- **HELP US DEVELOP NEW PRODUCTS:**  
We value your input! Your responses will help us bring you new products specifically designed to meet your needs.

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

PLACE  
FIRST-CLASS  
STAMP  
HERE

Please fill-out and return this card within 10 days!



039 Q

**1 First name:** \_\_\_\_\_ **Initial:** \_\_\_\_\_ **Last name:** \_\_\_\_\_  
**Address:** (number and street) \_\_\_\_\_ **Apt number:** \_\_\_\_\_  
**City:** \_\_\_\_\_ **State:** \_\_\_\_\_ **Zip code:** \_\_\_\_\_

**2 E-mail address:** (EXAMPLE: yourname@yourhost.com) \_\_\_\_\_  
 Yes! I want to receive offers or communications from Uniden via e-mail.  
 Yes! I want to receive offers or communications that may interest me from other companies via e-mail. I understand this e-mail address may be shared with and/or combined with information from other sources.

**3 Date of purchase:** \_\_\_\_\_  
 Month \_\_\_\_\_ Day \_\_\_\_\_ Year \_\_\_\_\_

**4 Purchase Price:** \$ \_\_\_\_\_ .00 (excluding tax)

**5 Serial Number:** (Located on the back of each unit)  
 \_\_\_\_\_  
 (Applies to FRS/GMRS only)

**6 Model Number:** (Example: GMRS540-2, WX500)  
 \_\_\_\_\_

**7 Which Uniden product did you purchase?**  
 1. FRS/GMRS Radio  2. Weather Radio

**8 Store Name:**  
 \_\_\_\_\_

**9 Check the two (2) most important reasons influencing your purchase of this Uniden Product:**  
 1. Uniden reputation  6. Style/appearance  
 2. Previous experience  7. Warranty  
 3. Features  8. Received as a gift  
 4. Value for price  9. Other \_\_\_\_\_  
 5. Quality/durability

**10 Check the two (2) most important features to you on this Uniden product:**  
 1. Range  6. Color  
 2. Low battery alert  7. Design  
 3. Clarity  8. Channel scan  
 4. Number of channels  9. LCD backlight  
 5. Auto squelch

**11 How did you first become aware of this product?**  
 1. Previous Use  7. Recommendation of Salesperson  
 2. Comparison Shopping  8. Recommendation of Friend/Family  
 3. In-Store Display  9. Direct Mail  
 4. Newspaper Ad  
 5. Magazine Ad  
 6. TV Ad

**12 Your gender:**  1. Male  2. Female

**13 Your marital status:**  1. Married  2. Single

**14 Date of your birth:** \_\_\_\_\_  
 Month \_\_\_\_\_ Day \_\_\_\_\_ Year \_\_\_\_\_

**15 Including yourself, how many people live in your household?**  
 (Examples: 01, 02, etc.) **Children** (18 and younger) \_\_\_\_\_ **Adults** \_\_\_\_\_

**16 Date of birth of children in your household 18 years of age and younger:**

Child #	Gender		Birth Date	
	Male	Female	Month	Year
Child #1	<input type="checkbox"/> 1	<input type="checkbox"/> 2	____	____
Child #2	<input type="checkbox"/> 1	<input type="checkbox"/> 2	____	____

**17 For your primary residence, do you:**  
 1. Own  2. Rent

**18 Education:** (Please check which category applies to you):  
 1. Some high school  3. College degree  
 2. Completed high school  4. Graduate degree

**19 I/we buy these things through the mail, over the Internet, or from television:**

	A. Mail	B. Internet	C. TV
1. Books/magazines	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2. Checks (not from a bank)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3. Children's products	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4. Clothing	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5. Computer products	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6. Cosmetics/jewelry	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7. Crafts/hobbies	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8. Gardening supplies	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9. Gifts	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10. Housewares/furnishings	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11. Insurance/financial products	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12. Music/video/DVD	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13. Sports equipment	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14. Travel	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15. Other	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**20 I/we have these credit cards:**  
 1. American Express/Diners Club  4. Visa/MasterCard  
 2. Discover  5. Other  
 3. Retail/Gas  6. None

**21 Someone in my home enjoys:**

<input type="checkbox"/> 1. Astrology	<input type="checkbox"/> 21. Gourmet food/cooking
<input type="checkbox"/> 2. Auto racing	<input type="checkbox"/> 22. Grandchildren
<input type="checkbox"/> 3. Automotive work	<input type="checkbox"/> 23. Home decorating
<input type="checkbox"/> 4. Books	<input type="checkbox"/> 24. Hunting/shooting
<input type="checkbox"/> 5. Camping/hiking	<input type="checkbox"/> 25. Investing
<input type="checkbox"/> 6. Casino gambling	<input type="checkbox"/> 26. Lottery/sweepstakes
<input type="checkbox"/> 7. Cigars	<input type="checkbox"/> 27. Pets-cats
<input type="checkbox"/> 8. Collecting	<input type="checkbox"/> 28. Pets-dogs
<input type="checkbox"/> 9. Computers/Internet	<input type="checkbox"/> 29. Pets-other
<input type="checkbox"/> 10. Cooking/recipes	<input type="checkbox"/> 30. Photography
<input type="checkbox"/> 11. Crafts/needlework	<input type="checkbox"/> 31. Play sports
<input type="checkbox"/> 12. Cultural art/events	<input type="checkbox"/> 32. Self improvement
<input type="checkbox"/> 13. Cycling	<input type="checkbox"/> 33. Skiing/snowboarding
<input type="checkbox"/> 14. Dieting/weight control	<input type="checkbox"/> 34. Travel-Foreign
<input type="checkbox"/> 15. Do-it-yourself	<input type="checkbox"/> 35. Travel-U.S.
<input type="checkbox"/> 16. Donating to charity	<input type="checkbox"/> 36. Vacation cruises
<input type="checkbox"/> 17. Fishing	<input type="checkbox"/> 37. Vitamins/natural foods
<input type="checkbox"/> 18. Fitness/exercise	<input type="checkbox"/> 38. Wines
<input type="checkbox"/> 19. Gardening	<input type="checkbox"/> 39. Woodworking
<input type="checkbox"/> 20. Golf	<input type="checkbox"/> 40. Worship/Bible

**USING THE WEATHER RADIO**

Your GMR1048-2CK radio can receive weather broadcasts from the NOAA National Weather Service. When in the Weather Radio Alert mode, the system functions as it does in GMRS mode but also monitors the selected weather channel for alerts when not communicating. While using the Weather Radio, you are not able to receive GMRS communications.

- To turn ON the Weather Radio Broadcast mode, press the **wx/alert** key. The icon appears on the display.
- Press the **chan tone/scan** key, and press the **▲** or **▼** key to increase or decrease the number to the desired Weather Channel.
- To exit the Weather Radio Broadcast mode, press the **wx/alert** key. The icon disappears from the display.

- To change the channel continuously, press and hold the **▲** or **▼** key for more than 1 second.

- When in the Weather Radio Broadcast mode, you can only set the Key Lock from the Menu mode.

**Choosing an Emergency/Weather Channel**

There are 7 NOAA channel frequencies available and these frequencies are common between the US and Canada. You will need to know what frequency is being transmitted in your location.

- Press and hold the **wx/alert** key. The **alert** icon appears on the display.
- When the unit receives a warning signal, it beeps for 5 seconds. The **alert** icon, the icon and channel indicator blinks.
- To turn OFF Weather Alert, press and hold the **wx/alert** key. The **alert** icon disappears from the display.

- When Weather Alert is activated, the highest priority is given to this function. It checks the weather alert signals every 7 seconds and switches to the warning receive mode automatically.

- Weather Alert is activated even if key beep is turned off.

**NOAA Weather Radio Frequency List**

Channel 1 162.550 MHz	Channel 5 162.450 MHz
Channel 2 162.400 MHz	Channel 6 162.500 MHz
Channel 3 162.475 MHz	Channel 7 162.525 MHz
Channel 4 162.425 MHz	

**SPECIFICATIONS**

Channels	15 GMRS/7 FRS/7 Weather
Sub Codes	38 Sub-Audible Tones 61 DCS Codes
Operating Frequency	
GMRS/FRS:	462.5500 - 467.7125 MHz
WX:	162.4000 - 162.5500 MHz
Power Source	NiMH Battery Pack (BP40) or 4 AAA Alkaline Batteries
Range	Channel 1-7 up to 10 miles Channel 8-14 up to 5 miles Channel 15-22 up to 10 miles
Battery Life	12 Hours typ. - Alkaline Batteries (5/5/90 duty cycle) 12 Hours typ. - NiMH Battery Pack

**Frequency Chart**

Ch.	Freq.	Cross Ref.	Ch.	Freq.	Cross Ref.
1	462.5625	FRS & GMRS 1	12	467.6625	FRS 12
2	462.5875	FRS & GMRS 2	13	467.6875	FRS 13
3	462.6125	FRS & GMRS 3	14	467.7125	FRS 14
4	462.6375	FRS & GMRS 4	15	462.5500	GMRS 11
5	462.6625	FRS & GMRS 5	16	462.5750	GMRS 8
6	462.6875	FRS & GMRS 6	17	462.6000	GMRS 12
7	462.7125	FRS & GMRS 7	18	462.6250	GMRS 9
8	467.5625	FRS 8	19	462.6500	GMRS 13
9	467.5875	FRS 9	20	462.6750	GMRS 10
10	467.6125	FRS 10	21	462.7000	GMRS 14
11	467.6375	FRS 11	22	462.7250	GMRS 15

**CTCSS Chart (Hz)**

Code	Freq.	Code	Freq.
oF	OFF	20	131.8
1	67.0	21	136.5
2	71.9	22	141.3
3	74.4	23	146.2
4	77.0	24	151.4
5	79.7	25	156.7
6	82.5	26	162.2
7	85.4	27	167.9
8	88.5	28	173.8
9	91.5	29	179.9
10	94.8	30	186.2
11	97.4	31	192.8
12	100.0	32	203.5
13	103.5	33	210.7
14	107.2	34	218.1
15	110.9	35	225.7
16	114.8	36	233.6
17	118.8	37	241.8
18	123.0	38	250.3
19	127.3		

**DCS Code List**

Tone No.	Octal Code	Tone No.	Octal Code	Tone No.	Octal Code
39	23	61	152	83	343
40	25	62	155	84	346
41	26	63	156	85	351
42	31	64	162	86	364
43	32	65	165	87	365
44	43	66	172	88	371
45	47	67	174	89	411
46	51	68	205	90	412
47	54	69	223	91	413
48	65	70	226	92	423
49	71	71	243	93	431
50	72	72	244	94	432
51	73	73	245	95	445
52	74	74	251	96	464
53	114	75	261	97	465
54	115	76	263	98	466
55	116	77	265	99	503
56	125	78	271	-	-
57	131	79	306	-	-
58	132	80	311	-	-
59	134	81	315	-	-
60	143	82	331	-	-

**REGULATORY INFORMATION**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

**Important:** Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustments to your radio must be made by qualified technicians.

**To be safe and sure:**  
 • Never open your radio's case.  
 • Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by moving your radio away from the receiver. If you cannot eliminate the interference, the FCC requires that you stop using the radio.

**Hazardous Environments:** Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps. Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio OFF to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

**Care and Safety:** To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage. Use a dry, lint-free cloth to clean the battery contacts. Do not submerge the unit in water. If the unit gets wet, turn it off and remove the batteries immediately. Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying. Do not use the radio until the unit is completely dry.

**RF EXPOSURE INFORMATION**

**WARNING!** Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards. Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

**WARNING!** It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following:  
 Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio, or result in violation of FCC regulations. Do not use the radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for a replacement antenna.

**Body-worn Operation**  
 This device was tested for typical body-worn operations using the supplied belt-clip. To maintain compliance with FCC RF exposure requirements, Body-worn operations are restricted to the supplied belt-clip. For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC web site at [www.fcc.gov](http://www.fcc.gov).

**ONE YEAR LIMITED WARRANTY**

Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below. WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is: (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OVERPAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you. LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty

is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service  
 4700 Amon Carter Blvd. Fort Worth, TX 76155  
 (800) 297-1023, 7:00 a.m. to 7:00 p.m. CST,  
 Monday through Friday: 9:00 a.m. to 5:00 p.m. CST,  
 Saturday, Sunday and Holidays (except  
 Thanksgiving and Christmas).

Covered under one or more of the following U.S. patents:  
 4,684,870 4,734,049 5,203,015 5,214,789  
 5,491,745 5,497,508 5,517,677 5,557,606  
 5,574,994 5,610,946 5,613,201 5,625,870  
 5,627,876 5,628,059 5,634,196 5,634,205  
 5,678,176 5,697,096 5,717,312 5,722,070  
 5,787,345 5,901,341 6,021,326 6,084,861  
 6,163,691 6,195,415 6,353,730 6,839,550



© 2006 Uniden America Corporation  
 All rights reserved Printed in China  
 UTZZ01016ZA(0)

Thank you for completing this questionnaire. Your answers will help us and other companies reach you with offers that may interest you. If you prefer not to receive these offers, please check here [ ].

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>