
 


Using Headphones

Your PC uses digital CD audio. The headphone connector on the front of your DVD Writer drive is disabled by the operating system.

To use headphones, connect them to the connector labeled *Out* (Line Out or Speaker) on the back of the PC. You may need to disconnect your speakers to connect your headphones.

 OUT	Line Out icon
	Speaker icon

Note: *Some PC models do not include a speaker connector.*

COMPAQ



5 9 9 0 - 5 3 3 8

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>