

**FCC STATEMENT**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FurReal**friends.com

Questions? Call 1-800-844-3733

Product and colors may vary.

© 2010 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

U.S. Pat. Nos. 6811461, 7641535 and 7695341.



**FurReal**  
friends





**x4**

**TEMPORARY  
BATTERIES  
INCLUDED**

For try-me feature

**REPLACEMENT  
BATTERIES  
NOT INCLUDED**

Works best with fresh batteries

Replace with 4 x 1.5V "C" or LR14 size alkaline batteries. Phillips/cross head screwdriver (not included) needed to replace batteries.



The switch is currently in TRY ME position.

Please slide to **ON** position to activate your toy's play features.

## Getting to Know Your Pet

### Head sensor

When you pet Cookie here, she will bark, move her head and wag her tail!

### Cheek sensors

When you pet Cookie on either of her cheeks, she will turn her head toward your hand!

(● both cheeks)

### Mouth sensor

When you put her bone in her mouth, Cookie will "chew" it!

### Back sensor

When you pet Cookie on her back, she'll make happy puppy sounds!

### Poseable front legs

You can move her front legs so Cookie is either sitting up or lying down.

### ON/OFF/TRY ME

Switch and battery door on tummy.

A sensor is a part of the toy that responds to your touch!

## Let's Play



Before you start playing with Cookie, you'll need to move her ON/OFF/TRY ME switch to **ON**. Look for the label on her tummy — this will show you where her fur opens to access the ON/OFF/TRY ME switch and battery door. After you've switched her ON, be sure to completely close the fabric fastener.

Your Cookie puppy responds to your touch, your voice, and the sound of her squeaky bone. She barks, wags her tail, moves her head, and makes puppy “talk” back when you speak to her.

### Pet Cookie on her head

- Each time you switch Cookie to ON, be sure to pet her head to “wake” her up!
- She gets excited when you pet her head — she barks and wags her tail to show she's ready to play!
- If you hold your hand on her head for about 3 seconds, Cookie will close her eyes and go to sleep. Careful — she snores!

### Pet Cookie on her left or right cheek

- She turns her head toward your hand so you will pet her some more!
- She makes happy puppy sounds!

### Pet Cookie on her back

- Cookie loves this and will make happy puppy sounds!
- If you pet her a lot on her back, she might close her eyes and fall asleep!

## Give Cookie her squeaky bone

- If you squeeze her bone to make it squeak, Cookie will turn her head toward the sound! You can also clap, whistle or make another loud sound to get Cookie to turn her head toward you.
- If you put her bone in her mouth, Cookie will start “chewing” on it and making crunching noises!
- If you take her bone away too soon, Cookie might “ask” for it back!

## Talk to Cookie

- When she hears you talking to her, Cookie babbles back with puppy sounds!
- If you're talking to Cookie and she makes a whining sound and stops “talking,” pet her on her head to encourage her to start “talking” again.
- If Cookie is barking when you talk to her, she may not hear you. Try again when she stops making sounds!

## Sleepy puppy

- If you stop playing with your Cookie puppy, she will bark and try to get your attention.
- After about a minute, she will go into “daydreaming” mode and won't move or make any sounds.
- You can “wake” Cookie up again by petting her head!



**NOTE:** This toy uses battery power whenever its switch is in the ON position. When you're not playing with the toy, move its switch to the OFF position to help conserve battery life.

## Grooming Your Pet

Just like a real animal, it's normal for your FURREAL FRIENDS toy to shed a little when you groom it.

Just like a real puppy, your Cookie puppy likes to stay clean. But make sure she doesn't get wet! Gently brush her fur with a cloth or soft brush to loosen any dirt. You can use a slightly damp cloth to remove stains, but don't use any cleaners on your Cookie puppy.

## Troubleshooting


- If Cookie is turned ON but doesn't respond to your touch, she might be in "daydreaming" mode. Pet the back of her head to "wake" her up.
- If Cookie doesn't babble back when you talk to her, try talking in a louder voice. You might also need to pet the back of her head to encourage her to "talk."
- If Cookie still doesn't seem to be responding properly, first try sliding the ON/OFF/TRY ME switch to OFF, then back to ON. If that doesn't work, you may need to replace the batteries.



**NOTE TO UK CONSUMERS:** This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

## To Replace Batteries

1. Locate battery compartment on Cookie's tummy.
2. Loosen screw on battery door.
3. Remove and discard old batteries.
4. Replace with fresh 4 x 1.5V "C" or LR14 size alkaline batteries.
5. Replace door and tighten screw.

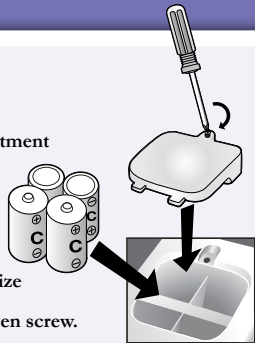

## IMPORTANT: BATTERY INFORMATION

### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>