



### CAUTION:

 
Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.

Thank you for choosing this **PLAYSKOOL** product!


09949/09942 Asst.

ages & stages®

OVER  
**18**  
months

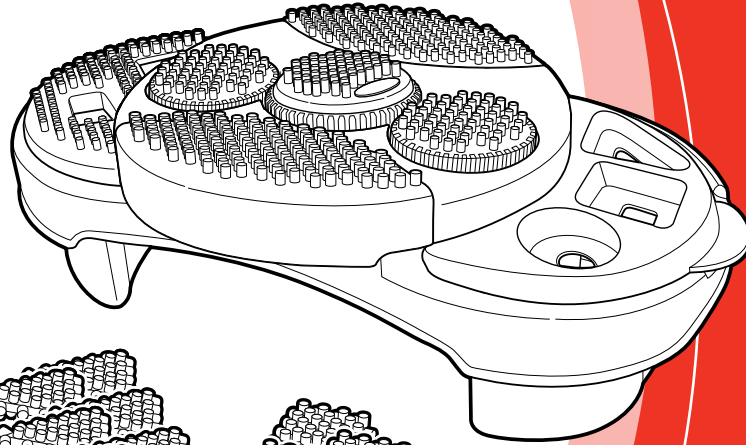

Adult assembly required.

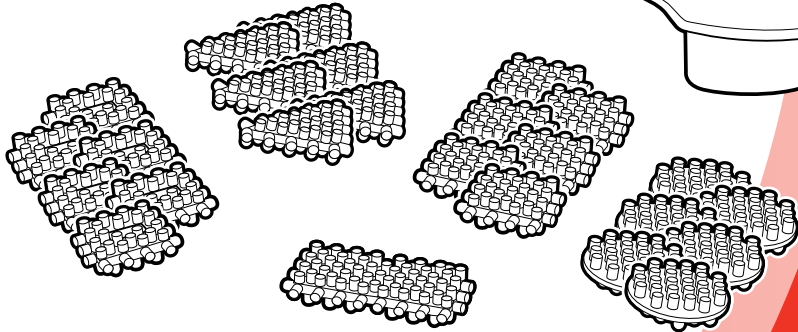 

Includes: Table base, 2 storage buckets, 2 peg plates, 2 lids, motorized gear unit and 25 Clipo™ pieces (24 in box and 1 on handle).

**NOTE:** Adult should remove and discard rope handle and keep CLIPO™ piece.

**x2** 1.5VAA or LR6 size  
**ALKALINE BATTERIES REQUIRED**  
**NOT INCLUDED**

Phillips/cross head screwdriver (not included) needed to insert batteries.


clipo™  
creativity  
table

**PLAYSKOOL**

 believe in PLAY™

### TO INSTALL BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door (screw remains attached to cover). Remove door. Insert 2 x 1.5V fresh "AA" or LR6 size alkaline batteries. Fit door into unit (tab into notch). Tighten screw.

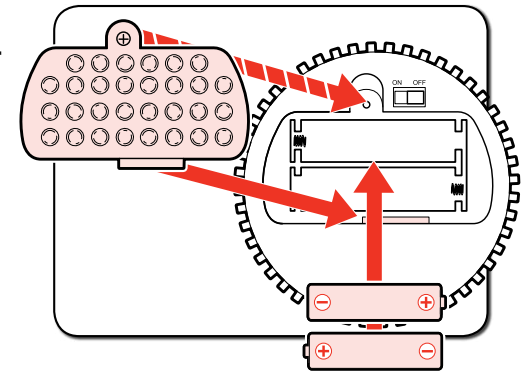

### CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

### IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

 
 
 


### CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

## TO ASSEMBLE

1. Remove table from packaging.
2. To insure proper, one-time assembly: Place storage buckets on a flat surface (such as the floor). Align base over storage buckets. Press down on base on one side and carefully use body weight from above to apply pressure straight down until you hear an audible snap. Repeat on other side.

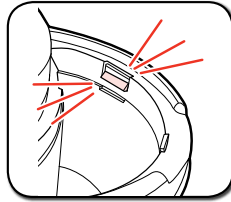
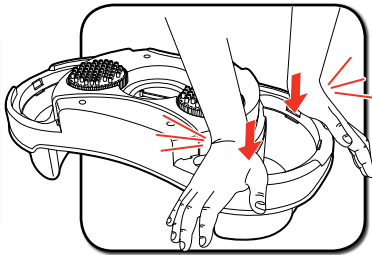
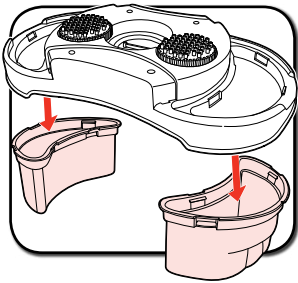


**NOTE:** Check to insure tabs are fully inserted in slots.

3. Snap top two peg plates onto the top, in front and in back.


4. Set the two lids into the recesses over the storage buckets.

   5. Drop motorized gear into center, button side up, after installing batteries.

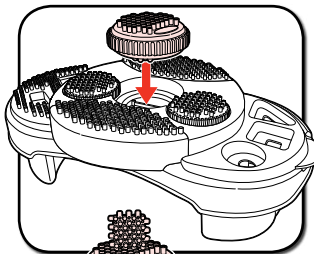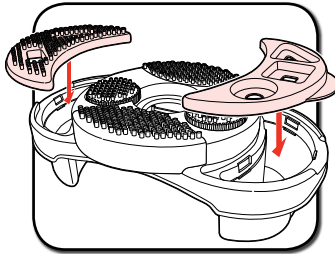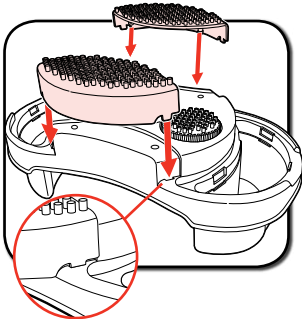

Check to insure tabs are in slots.

 
**NOTE:** To remove motorized gear, use CLIPO™ piece and lift up.

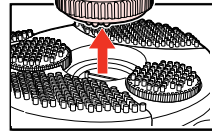

## TO PLAY


The CLIPO™ CREATIVITY TABLE toy features (2) spinning turntables. Center is stationary when assembled into table for stacking fun and display platforms!

 1. Slide ON/OFF switch located on the bottom of the motorized gear unit to "ON" position.
  - Press the button on top of the motorized gear to run the motor. This will start the center gear and turn the two outside turntables. The spinning continues for approximately 10 seconds, then stops. Push the button again to re-start the spinning action.

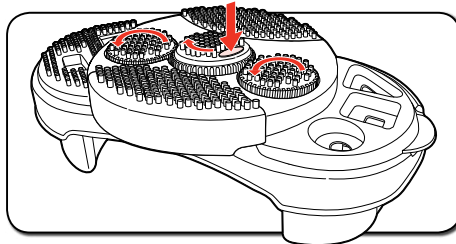

Continued on next page

 2. Each storage compartment's lid incorporates an activity: one lid is a shape sorter, the other one is a drop slot.

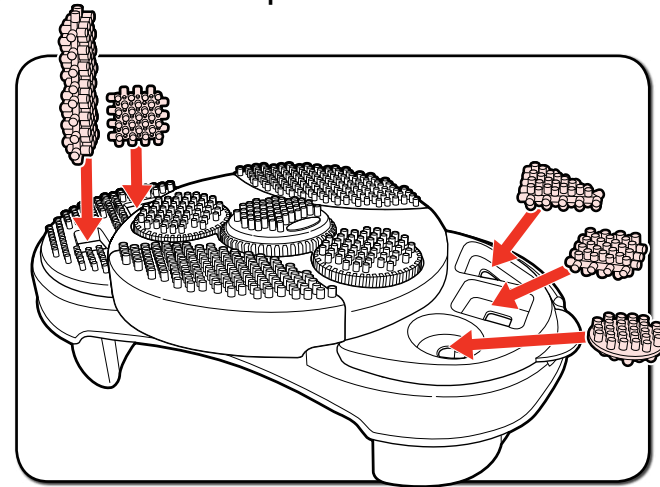

3. 25 CLIPO™ pieces included to create a variety of designs. Table surface acts as a platform to build CLIPO™ creations.
4. Works with all CLIPO™ products! Each sold separately. Add them on for more CLIPO™ fun.

**NOTE:** When storing toy, turn the ON/OFF switch to OFF to prevent accidental activation. If batteries begin to lose power, gears will turn at a slower rate and it will be less powerful. For best results, replace batteries when this starts to happen.

## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Product and colors may vary.  
© 2008 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks.  
09949 PN 6769550000



Questions? Call 1-800-PLAYSKL

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>