






## TO REATTACH HALTER

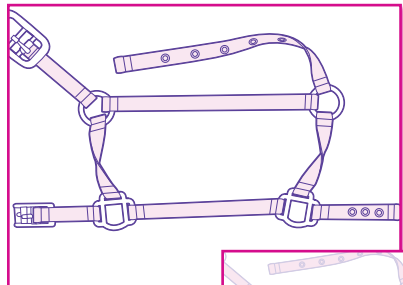


1. The assembled halter looks like this.

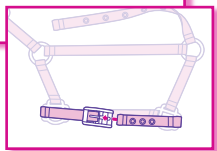


1a. Buckle this part of halter.

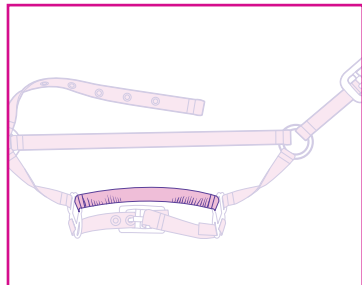

2. Turn halter over with the buckle underneath.

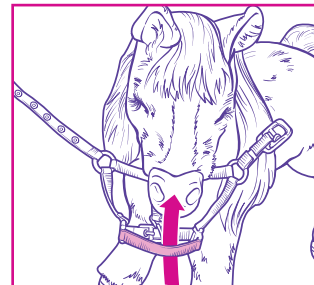

3. Place halter over pony's muzzle as shown.

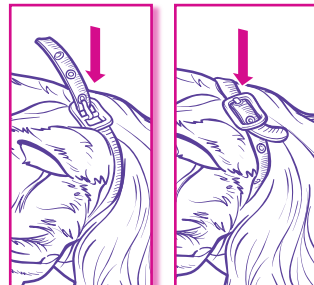

4. Buckle behind the pony's ears (using second or third hole).

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

© 2006 Hasbro. All Rights Reserved.  
TM & ® denote U.S. Trademarks.  
U.S. Pat. No. 6811461 and Patents Pending  
76471 PN 6686530000

Questions?  
Call 1-800-327-8264

**TIGER**  
ELECTRONICS™  
Where Technology Comes to Play!™

Visit



FurRealFriends.com

AGES 4+  
76471



### CAUTION:

Keep small parts necessary for assembly out of children's reach.

ADULT ASSEMBLY REQUIRED.  
Tool needed: Phillips/cross head screwdriver (not included).

**FurReal**  
friends®

**Butterscotch**  
Pony®

### PONY CARE GUIDE

Thank you for purchasing this FURREAL FRIENDS® toy! Be sure to read and follow instructions carefully, so you and your pony can have lots of fun together! Remember, BUTTERSCOTCH® is like a real pony in many ways. The more you take care of her and love her, the happier she'll be!



Pony comes with carrot, brush, halter and special adoption certificate.

For indoor use only.

**x6 ALKALINE BATTERIES REQUIRED**  
1.5V D or LR20 size  
NOT INCLUDED


Phillips/cross head screwdriver (not included) needed to insert batteries.

MAXIMUM WEIGHT 80lbs/36kg

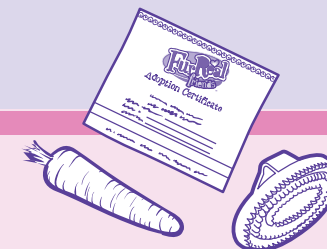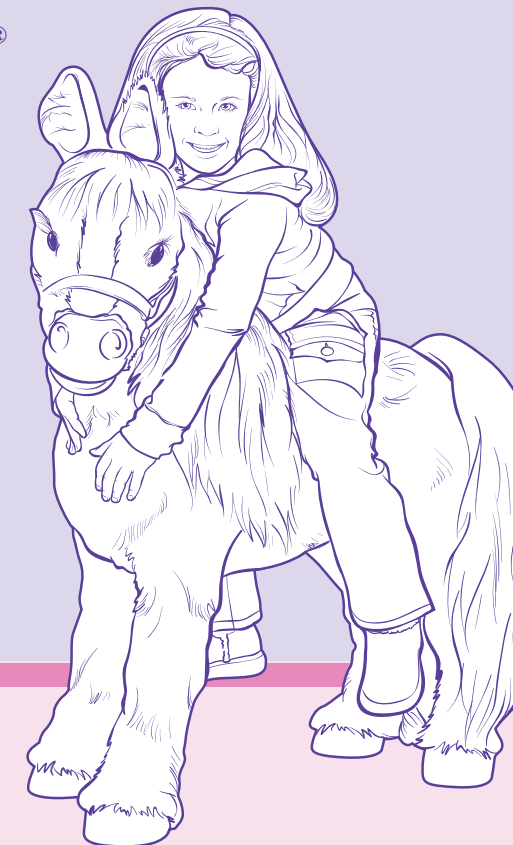




## ASSEMBLY

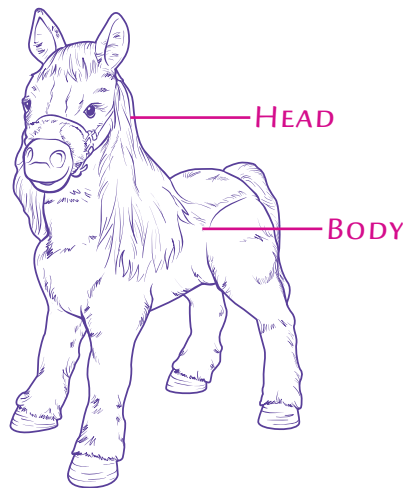


### STEP 1

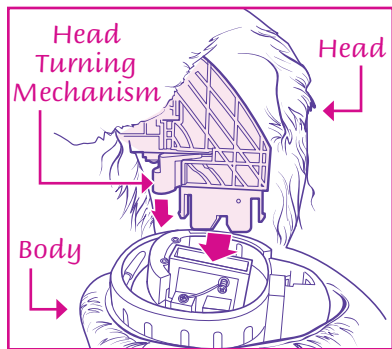

Pull back head plush. Snap head onto body.


**STEP 1A - VERY IMPORTANT** – this step helps ensure that your pony's head and neck have adequate support.

### STEP 1A

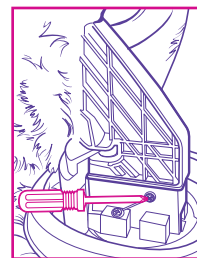


Fasten screw to left side of head-turning mechanism.

### STEP 2

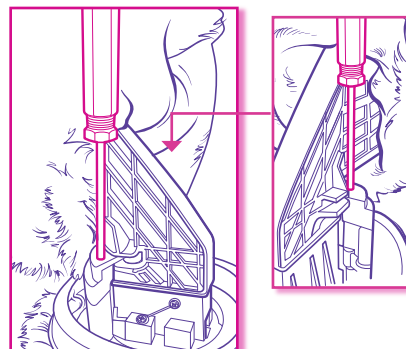


Fasten 2 screws onto the top of the head-turning mechanism.

### STEP 3

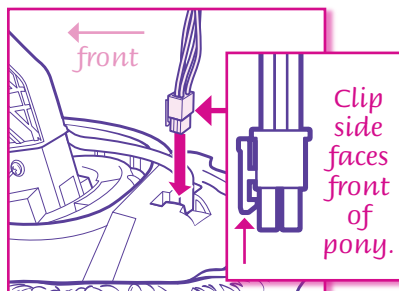


Snap in electrical connector clip from head into body. **Make sure clip side of connector faces toward front of pony.**

### STEP 4

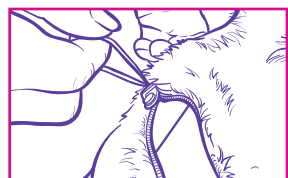

**A.** Zip head and body plush together.

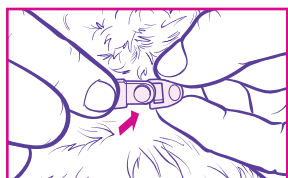

**B.** Snap zipper pull into clip at end of zipper.

### NOTE

To unfasten zipper, press button on zipper clip to release.

Watch an assembly demo online at [www.furrealfriends.com](http://www.furrealfriends.com). For questions on assembly, call Hasbro Consumer Affairs at 1-800-327-8264.




## "RIDING" YOUR PONY

Your pony can tell when you're sitting on her to have a "ride"! When you sit on your pony, she will move her head up and down, blink her eyes and twitch her ears while making soft sounds.

Wait for your pony to stop moving before you take her into "riding mode."

When sitting on your pony, tap her hindquarters with your hand and she'll go into "riding mode". She will make walking sounds and also move her eyes, ears and head. After a few seconds, she'll stop. Just tap her hindquarters to get her going again!

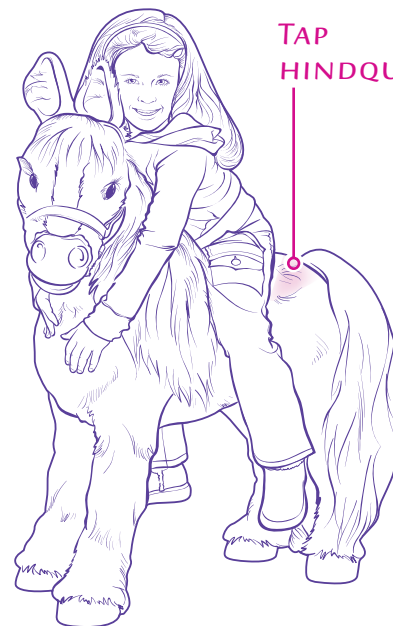


**Note:** If you have any concerns or questions about this toy, please do not return it to the store. Instead, call Hasbro Consumer Affairs at 1-800-327-8264 for expert advice and answers.



## GROOMING YOUR PONY

Brush your pony with her special grooming brush to keep her coat healthy.

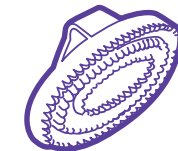

To clean your pony, gently brush her with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.


- To prevent staining, wipe off dirt immediately.
- Do not get wet; to remove stains use only a slightly damp cloth.
- Do not use detergent or stain removers.
- If pony gets wet, remove batteries and let dry; once pony is completely dry, replace batteries.
- Avoid spilling food or beverages on the pony.
- Do not throw or kick the pony, and do not push sharp objects through the speaker openings.
- Do not leave pony in direct sunlight; high temperatures will destroy the mechanism.



## FEEDING YOUR PONY

When you “feed” your pony her carrot, she will open her mouth and start to “eat”. If you “feed” her the carrot more than 6 times in a row, she will shake her head because she feels full.

If you lose her carrot, you can put other pretend food in her mouth and she will “eat”. Don’t put your fingers in her mouth, and **never** give real food to your pony.

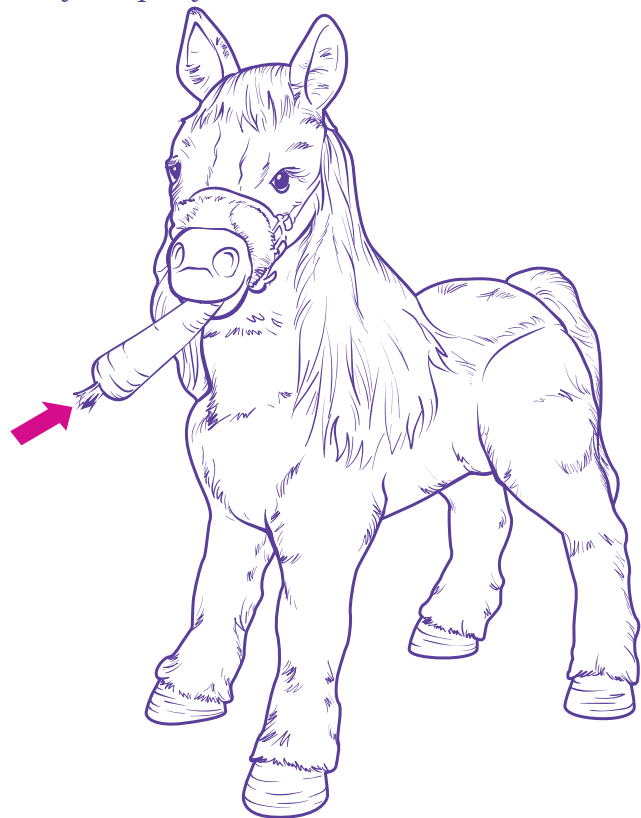

## TAKING CARE OF YOUR PONY

Your pony will move her head and twitch her ear toward the loudest sound she hears. Call her name when you are standing at her side, and she will move her head/neck in your direction! (If there is a lot of background noise, your pony may not respond when you call its name.)

If the room suddenly becomes dark, your pony will get sleepy and go to sleep.

If it is dark in the room and the lights come on suddenly while your pony is asleep, she’ll lift her head and open her eyes.

If your pony is left alone for a while, she will go into “hangout” mode. She will move her head a little, blinking and twitching her ears. She will whinny and neigh a bit to get your attention!

After a few minutes in hangout mode, pony will go into “power save” mode. In this mode, pony will rest with her eyes open if the room is light, and will go to sleep if the room is dark (or starts to darken).



## TO INSERT BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment (screw remains attached). Slide compartment toward the rear of the pony, then remove. Insert 6 x 1.5V “D” or LR20 size alkaline batteries. Push compartment back in, then slide forward until it’s in place; tighten screw.

### ⚠ CAUTION: TO AVOID BATTERY LEAKAGE




1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers’ instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

### IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

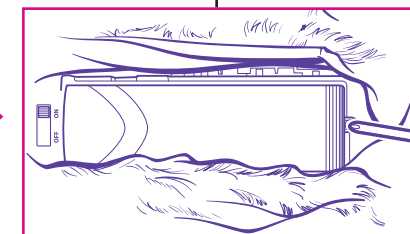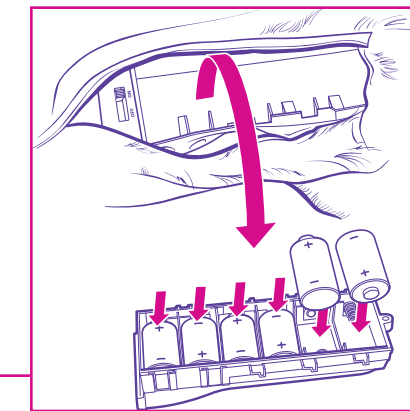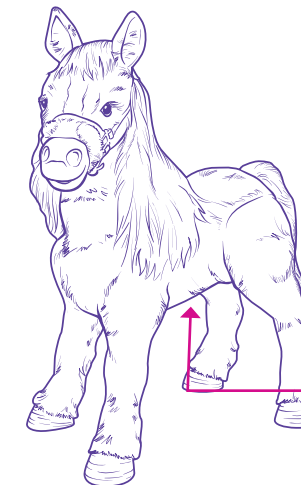

OFF/ON


**Note:** The toy uses battery power whenever switch is in the “ON” position. To conserve batteries, move switch to “OFF” position when you’re not playing with your pony.





## ABOUT YOUR PONY

BUTTERSCOTCH has 11 sensors that sense either touch, light or sound:

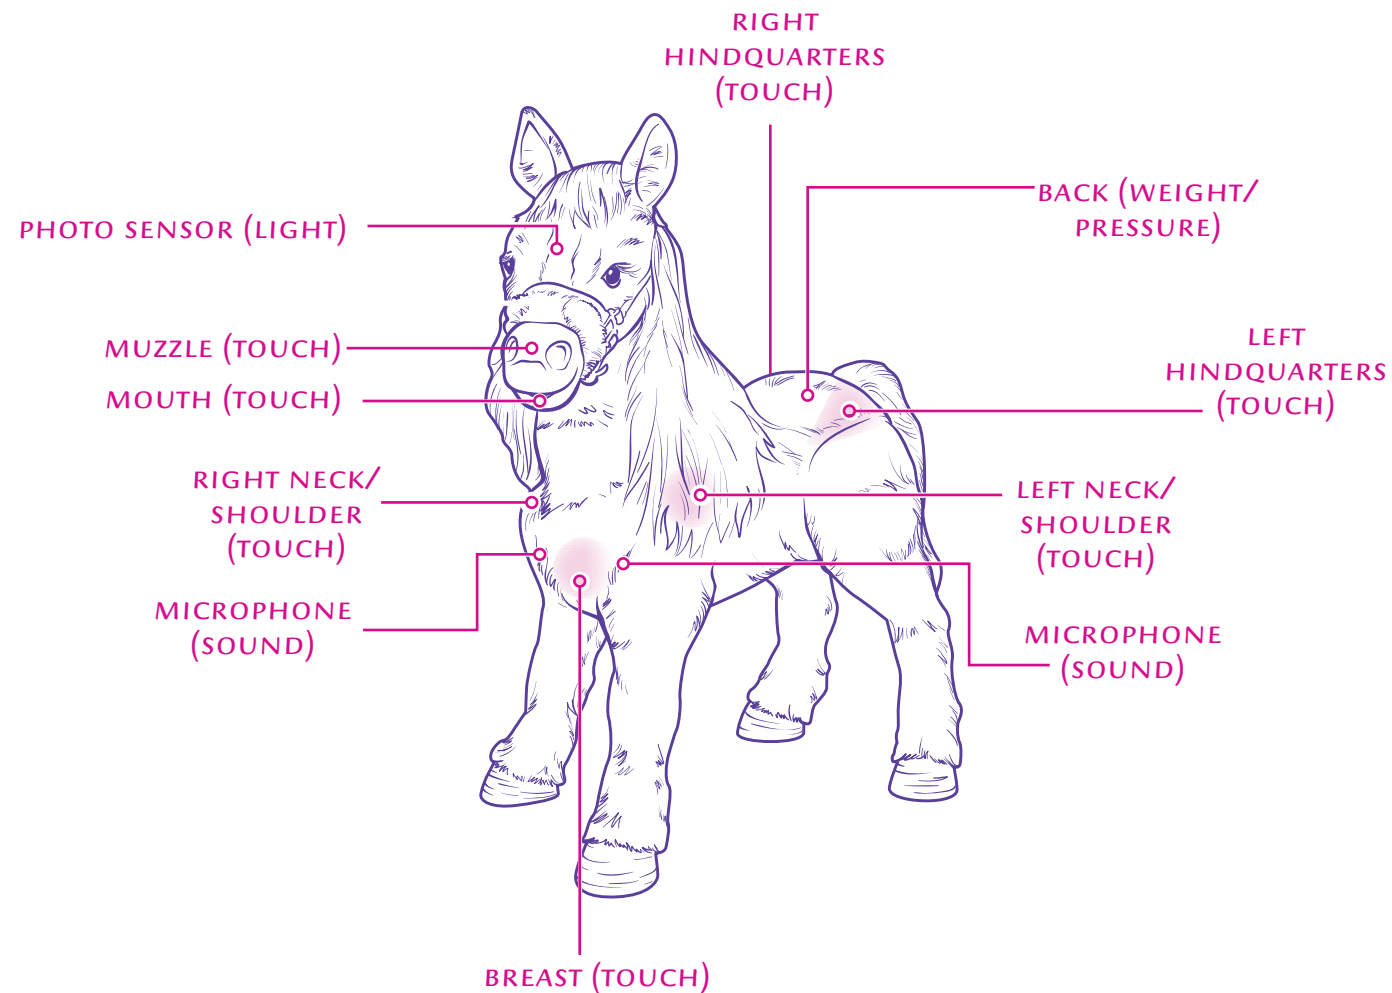


## PLAYING WITH YOUR PONY



To activate, slide OFF/ON switch to the “ON” position, and your pony will wake up and be ready to play with you!

BUTTERSCOTCH responds when you pet her!

- A.** When you pet your pony on her neck/shoulder, or start to groom her mane, she will move her head and neck toward you, and her head will tilt from side to side (she really likes it when you pet her!).
- B.** When you pet her on her left/right hindquarters, she will lift her head and her left/right ear will twitch. She may even whinny or snort!
- Pet her again on the same side and she will tilt her head to that side, then turn her neck further in that direction.
  - Keep petting her on that side and she’ll continue to move her head back and forth in that direction.
- C.** When you pet your pony’s muzzle, she will lift her neck/head and sniff.

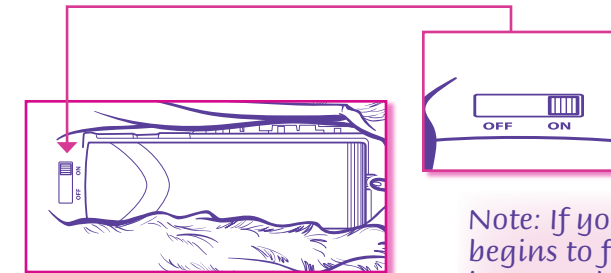

Note: If your pony begins to function improperly, restart by moving the OFF/ON switch to the “OFF” position for a moment, then back to “ON”.

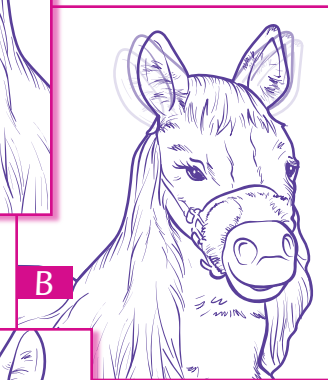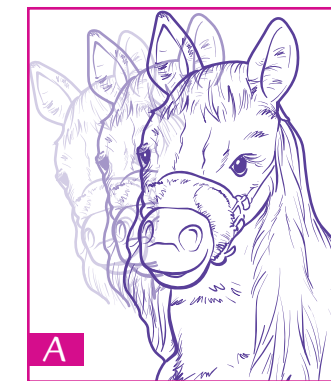

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>