

TROUBLESHOOTING

IBM E74 COLOR MONITOR

For Models 6332-x7x series

Before contacting technical support, refer to this section.

Problem	Check & Adjust
Blank screen	Monitor power switch, power cord, signal cable, or connector Computer power switch Brightness & contrast controls
Display position off- center	Vertical centering & horizontal phase controls
Display too small or too large	Vertical & horizontal size controls
Display too bright or too dim	Brightness & contrast controls

Refer to the operation instructions of your computer/video adapter to ensure that you have the correct signal output source for the monitor. Ensure that the switches on the video adapter are set correctly for operation with this monitor. If the above steps fail to correct the problem contact your dealer for servicing by qualified service personnel.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>