802.11g Wireless Router

Quick Installation Guide



Connect the 802.11g Wireless Router

Before you begin, ensure that the Wireless Router, the

DSL/Cable modem and PC are turned off.





Connect an Ethernet cable to one of the LAN ports on the back of the Wireless Router to the Ethernet port on your PC.

Turn on the DSL/Cable modem first.





Then turn on your wireless router.

Check the LEDs:

- The Power, Internet, and WLAN LEDs should be ON.
- For each active LAN (PC) connection, the LAN Activity LEDs (1-4) should be ON.
- Turn on your PC.

Notes

Before setting up the Wireless Router, make sure your PCs are configured to "Obtain an IP (or TCP/IP) address automatically".

For Windows 98/ME/Macintosh

Please refer to the User's Guide found on the CD.

For Windows 2000 & XP

- Go to Start \rightarrow Control Panel \rightarrow Network and Internet 1. Connections→ (Right-click on) Local Area Connection Properties.
- 2. Make sure the box next to Internet Protocol (TCP/IP) is checked. Click the Internet Protocol (TCP/IP) and click the Properties button.
- 3. Select "Obtain an IP address automatically". Select "Obtain DNS server address automatically". Then click OK to complete the PC configuration.
- 4. Restart your computer.



Router Configuration (for Internet Access)

After you've done the above steps and restarted your computer, for Windows 2000 & XP users, your computer should obtain an IP Address automatically from the Wireless Router's DHCP Server.



Start your WEB browser. In the Address box, enter HTTP://192.168.1.254

Address 📳 http://192.168.1.254





enter OK.

*	Please type your user name and password			
	Sile	192.1681.254		
	Ream	NeedParoword		
	UserName	admin		
	Password			
	Save this password in your password list			
			riorit.	

802.11g Wireless Router

Quick Installation Guide



Select the Setup Wizard to configure the router.



You will be prompted to configure the LAN Interface Configuration. Enter the required information. Click Next.

WIRELESSROU	TER		
STATUS STATUS	MANAGEMENT ADVANCED	PREMALL WREL	ESS 🔪 USS 🔪 FTP
	LAN Interfac	e Configuration	,
	P Address Bytnet Mask DHCP Server Datus DHCP Server IP Pool Start IP DHCP Rever	192 168 1 255:255:255.0 Enable 192 168 1	354
		Dedo Cancel	20

Select your case from one of the following conditions. The quick setup wizard will guide you through the installation procedure.

Static IP : Select Static IP. Click Next.



Enter the IP address, Subnet Mask, Default Gateway and DNS provided by your ISP. Click Save.



DHCP:

Select DHCP. Click Next.



For your ISP (Internet Service provider) to check your user identification, you will need to provide your MAC address. **Click Save.**

WIRELESSROUTER	
STATUS MANAGEMENT ADVANCED FREWALL WIRELE	15 <u>USB</u> FTP
DHCP Cilent	
Clure MAC 🖬 Use 🛛 20 🛛 20 🖉 20	00
THE GIN MAD CARE	i i

PPPoE: Select PPPoE. Click Next.



Enter the Login ID, Password (Enter the password again to confirm the password), and Service Name. Click Save.

WIRELESSROUTER	
STATUS MANACIMINT	L VOANNEED LAAEMMATT MAASTERS 1289 LED
nd word	PPPoE Configuration
	Up to 22 characteres) (p to 22 characteres) Up to 22 characteres) Up to 22 characteres) 1452 Status Status Customent Customent Customent Customent Customent
	NAT Sent Gude Game

M73-APO01-880

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com