

ACCUSPLIT[®]

STOPWATCH COMPANY of AMERICA

The Stopwatch Company of America and You...#1 Since 1972.

EAGLE

 
STOPWATCHES

**DIGITAL QUARTZ STOPWATCH
WITH SPLIT AND LAP TIME MEASUREMENT
COUNTDOWN / COUNTUP TIMER
NORMAL TIME , PACER , FUNCTIONS**

FEATURES


The Quartz Stopwatch is a digital stopwatch featuring memory countdown / timer and pacer functions. In addition, the stopwatch is water resistant. Therefore, it is suitable for aquatic sports or use in rainy weather.

- **Stopwatch**
The stopwatch can measure up to 10 hours in 1/100 seconds.
- **Split Time/Lap Time Measurement**
Up to split times and lap times can be measured.
- **Large - Sized Three - Row Display Panel**
Total elapsed time, split time or lap time are display at the same time in separate rows, and they can be measured successively without releasing split or lap time measurement.
- **Memory Function**
Up to 30 measurements can be stored in memory, and they can be recalled with fastest split / lap time : slowest split / lap time and average split / lap time.
- **Time / Calendar Display**
Year, month, date, hour, minutes and seconds can be displayed while the stopwatch is not used.
- **Timer Mode**
2 types of operation : * Repeat Count Down * and * Count Down Up *
Maximum setting time : 9 Hour, 59 Minute and 59 Second.
- **Pacer Mode**
The pacer value can be adjusted from 05 to 240 counts per minute.
- **Battery Life Indicator**
Battery life indicator (left upper corner) on the display will be on when the battery needs to be replaced. Lithium battery CR 2032 or equivalent is used.
- **SHOULD THERE IS ANY IRREGULAR SEGMENTS OR MALFUNCTIONS, PLEASE HOLD THE 4 BUTTONS TOGETHER TO RESET THE STOPWATCH.**

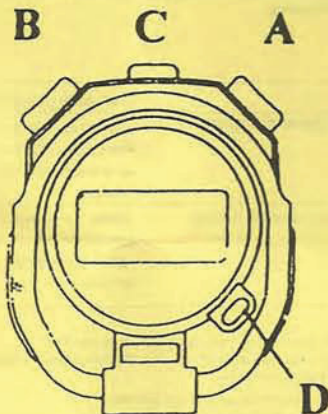

AE625M35

 There are four buttons as indicated in the illustration below.
(Time / Calendar Display)

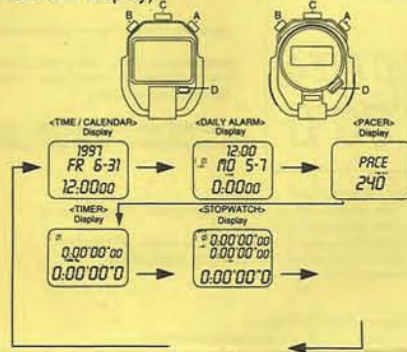

TIME / CALENDAR MODE



 
After enter this mode, display will show Year, Month, Date, Hour, Minute and Second. The "TIME" mark will appear, Daily Alarm flag will turn on if enabled.

1. Press "A" : No Function
2. Press "B" : Select 12/24 hour display format
3. Press "C" : Hold for 2 second will enter the Time / Calendar setting mode
4. Press "D" : Change to next mode

Time / Calendar Setting Mode

After enter the setting mode:

1. Press "B" * to select the digits (flashing) to be adjusted in the following order:



2. Press "A" * to set the flashing digits or reset the Seconds to "00"
* The digits move quickly if "A" * is kept pressed over 2 seconds.
3. After all the adjustment are completed, press "C" *.

Notes:

1. The HOUR digits are display in 12 or 24 - hour indication (optional).
2. The YEAR digits can be set from 1990 to 2029. The date adjusts automatically for odd and even months including February of leap years.

DAILY ALARM MODE



 
Show Alarm time at the top of the display and show normal time at the lower display (cannot show year, month, or date at the mode) The 12 / 24 hour format of Alarm Time should follow the setting format of the Time / Calendar mode.

1. Press "B" * : Enable / Disable Alarm
2. Press "C" * : Hold for 2 second will enter the Daily Alarm Setting Mode
3. Press "D" * : Change to next mode

Daily Alarm Setting Mode

After enter the setting mode:

1. Press "B" * to select the digits (flashing) to be adjusted in the following order:



2. Press "A" * to set the flashing digits.
* The digits move quickly if "A" * is kept pressed over 2 seconds.
3. After all the adjustment are completed, press "C" *.

Notes:

1. When alarm is on, it will last for 60 seconds.

PACER MODE



After enter this mode* Pacer * icon,PACE will display on the upper row, while lower row will show the pacer value from 05 to 240 counts / minute.

1. Press "A" * : Start / Stop the Pacer
2. Press "B" * : Set the pacer value, the digits move quickly if it is kept pressed over 2 seconds.
3. Press "C" * : No function
4. Press "D" * : Change to next mode

 
ACCUSPLIT, Inc., 3090 Independence Drive, Suite 148, Livermore, CA 94551 USA
800-935-1996 • 925-290-1900 • FAX 925-290-1930 • www.ACCUSPLIT.com • support@ACCUSPLIT.com

COUNTDOWN / COUNTUP TIMER MODE

There are 2 types of operation in this Time Mode.
*Repeat Count Down "and" Count Down and Up" mode.

Repeat Count Down mode:

The maximum setting time is 9 Hour, 59 Minute and 59 Second. If start from zero, counting time is 10 Hour.

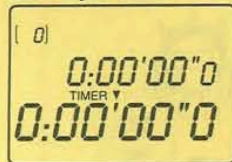

Upper left corner show the repeat counter

Middle Row show the setting time :Hour, Minute and Second. (Initial value : 0:00'00"0)
TIMER icon will display

Lower Row show the running time :Hour, Minute and Second. (Initial value :0:00'00"0)

- Press "A" : Start / Stop the Timer
- Press "B" : If Timer is stop : reload the Timer Run value to Timer Set value
If Timer is running : No function.
Hold for 2 sec. will change to "Count Down and Up" operation
- Press "C" : Hold for 2 second will enter into Timer Setting Mode
- Press "D" : Change to next mode

Repeat Count Down Setting Mode

(Repeat counter will clear to zero when enter this setting mode)



Hour digits will be set first

The running time will be clear to zero

After enter the setting mode:

- Press "B" to select the digits (flashing) to be adjusted in the following order:



- Press "A" to set the flashing digits/
* The digits move quickly if "A" is kept press over 2 seconds
- After all the adjustment are completed, press "C".

Notes:

- The Timer Alarm Format is different with the Daily Alarm Format.
- After exit setting, the Lower Row will load the set value of the Middle Row.
- "STOP" icon will on if press "A" while the timer is running

Count Down and Up Mode

The maximum setting time is 9 Hour, 59 Minute and 59 Second. If start from zero, counting time is 10 Hour.

 


Upper Row show the setting time :Hour, Minute and Second. (Initial value : 0:00'00"0)
TIMER icon will display

Low Row show the running time :Hour, Minute and Second. (Initial value: 0:00'00"0)

- Press "A" : Start / Stop the Timer
- Press "B" : If Timer is stop : reload the Timer Run value to Timer Set value
If Timer is running : No function.
Hold for 2 sec. will change to Repeat "Count Down" operation
- Press "C" : Hold for 2 second will enter into Timer Setting Mode
- Press "D" : Change to next mode

Count Down and Up Setting Mode

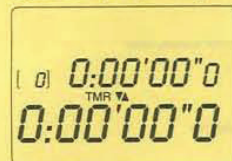

Hour digits will be set first

The running time will be clear to zero

After enter the setting mode:

- Press "B" to select the digits (flashing) to be adjusted in the following order:



- Press "A" to set the flashing digits/
* The digits move quickly if "A" is kept press over 2 seconds
- After all the adjustment are completed, press "C".

Notes:

- After exit setting, the Lower Row will Load the set value of the Middle Row.
* TIMER icon will turn on to indicate the Count Down First.



- After count down to zero, Alarm sound will turn on and last for 30 seconds and count up from zero.



After Timer count up, it will not stop until press the STOP key. If count up overflow (over 9:59'59"9), count up again from zero.

- "STOP" icon will on if press "A" while the timer is running.

STOPWATCH MODE

The Stopwatch can measure up to 10 hours in hours, minutes, seconds and 1/100 seconds.

 


Press "D" to enter this mode


After enter this mode, display will show "STW" icon.

- Before using the stopwatch, be sure to reset the digits to "0:00'00"00".
When the stopwatch is stopped, press "B".
When the stopwatch is counting, press "A" to stop the measurement and then press "B".


- "Split time" refers to an elapsed time required to cover a distance from the start to a given point.
"Lap time" refers to an elapsed time required to cover a given section of the whole distance.



 2. Accumulated Elapsed Time Measurement

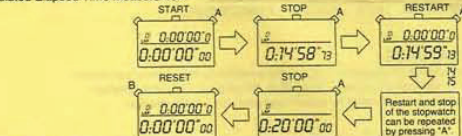

 
3. Split Time /Lap Time Measurement

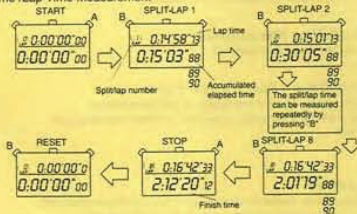

How To Use The Memory Function.

The stopwatch can store up to the first 30 split / lap times and the total elapsed time. They are automatically entered into the memory. In additional, the fastest lap, and the slowest lap can also be recalled

 - With each press of "C", the time stored is recalled. The time can be recalled successively by keeping the button pressed.

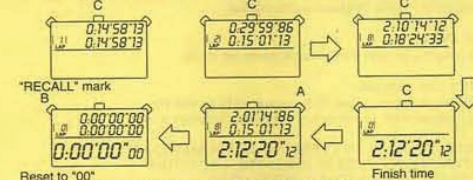

Reset to "00"

- To stop the recall of the stored data, press "A", "B" or "D". The measurements when the stopwatch was stopped will be shown. Then press "B" to reset the digits to "00".

The time stored in the memory can be recalled even while the stopwatch is measuring.

With each press of "C"	
When the stopwatch is stopped	Fastest Lap, Slowest Lap, and that, Average Lap, after that, Split time and lap time are recalled starting with the first ones.
When the stopwatch is running	Fastest Lap, Slowest Lap, and that, Average Lap, after that, Split time and lap time are recalled starting with the last ones.

Notes :

- If press "C" for over 2 seconds, fast recall will be activated.
- To measure the lap time and split time while the stored data are recalled, operate the buttons as follows.
Press "B" to measure new lap time and split time
Press "A" to stop or start the measurement.
- When memory is full, extra split / lap times will not store into memory but the memory counter will still show extra split/lap times. Any fastest, slowest and average laps will not store into the memory.

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check

<http://support.ACCUSPLIT.com>

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>