

# ACCUSPLIT® AX625

## OPERATING INSTRUCTIONS

**Twin Button Feature:** The Left and Right buttons on new ACCUSPLIT stopwatches operate interchangeably, so both are labeled “A” for these instructions.



### Dual Split with Split Counter

A – Start (Shows Running DUAL Time)

A – Split\* (Top shows CUM 1, Bottom shows LAP 1)

A – Split\* (shows CUM 2, Bottom shows LAP 2)

A – Split\* (Top shows CUM 3, Bottom shows LAP 3)

A – Split\* (Top shows CUM 4, Bottom shows LAP 4)

A (2sec) – Reset

\*Split Counter always shows Current Split

Push C to return to Running Time

**Note:** See ACCUSPLIT models AX725 (16 memory), or AX725 (50 memory) for dedicated split timing with memories.

### BATTERY CHANGING

If the display becomes dim or goes blank, you can replace the battery using “X3V” case battery changing instructions posted at [www.accusplit.com/support](http://www.accusplit.com/support). The watch uses a five-year CR2032 Lithium battery.

### Master Reset

Remove battery as shown above. Wait 5 seconds and reinstall.

#### NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check  
<http://support.ACCUSPLIT.com>

ACCUSPLIT, Inc. • 3090 Independence Drive, Suite 148 • Livermore, CA 94551 USA  
800-935-1996 • 925-290-1900 • FAX 925-290-1930  
[www.ACCUSPLIT.com](http://www.ACCUSPLIT.com) • [support@ACCUSPLIT.com](mailto:support@ACCUSPLIT.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>