

ACCUSPLIT® AX725

OPERATING INSTRUCTIONS

BASIC STOPWATCH OPERATIONS

Twin Button Feature: The Left and Right buttons on new ACCUSPLIT stopwatches operate interchangeably, so both are labeled “A” for these instructions.

Event

- A – Start
- A – Stop (Display shows “SPLIT”)
- A (2sec) – Reset

Dual Split Memory with Split Counter

- A – Start (Shows Running DUAL Time)
- A – Split* (Top shows CUM 1, Bottom shows LAP 1)
- A – Split* (shows CUM 2, Bottom shows LAP 2)
- A – Split* (Top shows CUM 3, Bottom shows LAP 3)
- A – Split* (Top shows CUM 4, Bottom shows LAP 4)
- A (2sec) – Reset

*Split Counter always shows Current Split
Push C to return to Running Time

Memory Review (before Resetting)

- C (2sec) – Review* (Shows last DUAL Split)
 - C – Review (Shows next DUAL Split, in reverse order)
 - C (2sec) – Exit Memory Review to last DUAL Split.
- *Reviews at any time in reverse numerical order.



BATTERY CHANGING

If the display becomes dim or goes blank, you can replace the battery using “X3V” case battery changing instructions posted at www.accusplit.com/support. The watch uses a five-year CR2032 Lithium battery.

Master Reset

Remove battery as shown above. Wait 5 seconds and reinstall.

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check
<http://support.ACCUSPLIT.com>

ACCUSPLIT, Inc. • 3090 Independence Drive, Suite 148 • Livermore, CA 94551 USA
800-935-1996 • 925-290-1900 • FAX 925-290-1930
www.ACCUSPLIT.com • support@ACCUSPLIT.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>