

# WINAUTO



(044)361-05-06

ICQ:495-089-192

(067)469-02-12

ICQ:613-211-859

(099)048-99-03

(093)672-77-76

## User's Manual

CD/USB receiver Alpine CDE-120R

In the online store Winauto you also can [buy car receiver Alpine CDE-120R](http://winauto.ua) . Delivery in Kiev and throughout Ukraine with payment upon receipt!

<http://winauto.ua>



Car Receivers - Facia Plates - Head Units - TV and Monitors - Car Antennas - Car Audio - Car DVRs - GPS Navigation - Trip Computers - Security Systems - Mechanical Locking - Car Park Systems - Cameras - Optic and Light - OE Lighting - Car Tuning - Car Heating - Marine Audio and Electronics - Car Accessories - Car Isolation - Car Installation Components - Car Batteries - Liquid and Oil -



FOR CAR USE ONLY/NUR FÜR AUTOMOBIL GEBRAUCH/POUR APPLICATION AUTOMOBILE UNIQUEMENT/PARA USO EN AUTOMÓVILES/SOLO PER L'UTILIZZO IN AUTOMOBILE/ENDAST FÖR BILBRUK/ALLEEN VOOR GEBRUIK IN DE AUTO/ ТОЛЬКО ДЛЯ ИСПОЛЬЗОВАНИЯ В АВТОМОБИЛЯХ/DO UZYSKA TYLKO W SAMOCHODZIE/ΓΙΑ ΧΡΗΣΗ ΜΟΝΟ ΣΕ ΑΥΤΟΚΙΝΗΤΟ



EN

MP3 CD Receiver

# CDE-120R / CDE-120RM / CDE-120RR

MP3



USB  
PLAYBACK

- OWNER'S MANUAL  
Please read before using this product.
- BEDIENUNGSANLEITUNG  
Lesen Sie diese Bedienungsanleitung bitte vor Gebrauch des Gerätes.
- MODE D'EMPLOI  
Veuillez lire avant d'utiliser cet appareil.
- MANUAL DE OPERACIÓN  
Léalo antes de utilizar este equipo.
- ISTRUZIONI PER L'USO  
Si prega di leggere prima di utilizzare il attrezzatura.
- ANVÄNDARHANDLEDNING  
Innan du använder utrustningen bör du läsa igenom denna användarhandledning.
- GEBRUIKERSHANDLEIDING  
Lees deze aanwijzingen aandachtig alvorens dit toestel te gebruiken.
- РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ  
Прочтите настоящее руководство перед началом использования оборудования.
- INSTRUKCJA OBSŁUGI  
Prosimy zapoznać się z tą instrukcją przed przystąpieniem do użytkowania urządzenia.
- ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ  
Παρακαλούμε διαβάστε το πριν χρησιμοποιήσετε τη συσκευή.

ALPINE ELECTRONICS GmbH  
Wilhelm-Wagenfeld-Strasse 1-3,  
80807 München, Germany  
Phone 089-32 42 640

ALPINE ELECTRONICS OF U.K., LTD.  
ALPINE House  
Fletchamstead Highway,  
Coventry CV4 9TW, U.K.  
Phone 0870-33 33 763

ALPINE ELECTRONICS FRANCE S.A.R.L.  
(RCS PONTAISE B 338 101 280)  
98, Rue de la Belle Etoile, Z.I. Paris Nord II,  
B.P. 50016, 95945 Roissy Charles de Gaulle  
Cedex, France  
Phone 01-48638989

ALPINE ITALIA S.p.A.  
Viale C. Colombo 8, 20090 Trezzano  
Sul Naviglio (MI), Italy  
Phone 02-484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.  
Portal de Gamarra 36, Pabellón, 32  
01013 Vitoria (Alava)-APDO 133, Spain  
Phone 945-283588

ALPINE ELECTRONICS (BENELUX) GmbH  
Leuvensesteenweg 510-B6,  
1930 Zaventem, Belgium  
Phone 02-725 1315

## Operating Instructions

### WARNING



This symbol means important instructions. Failure to heed them can result in serious injury or death.

**DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.**

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

**KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING.**

Excessive volume levels that obscure sounds such as emergency vehicle sirens or road warning signals (train crossings, etc.) can be dangerous and may result in an accident. LISTENING AT LOUD VOLUME LEVELS IN A CAR MAY ALSO CAUSE HEARING DAMAGE.

**MINIMIZE DISPLAY VIEWING WHILE DRIVING.**

Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

**DO NOT DISASSEMBLE OR ALTER.**

Doing so may result in an accident, fire or electric shock.

**USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.**

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

**KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN.**

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

**USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.**

Failure to do so may result in fire or electric shock.

**DO NOT BLOCK VENTS OR RADIATOR PANELS.**

Doing so may cause heat to build up inside and may result in fire.

**USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.**

Use for other than its designed application may result in fire, electric shock or other injury.

**DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.**

Doing so may result in personal injury or damage to the product.



This symbol means important instructions. Failure to heed them can result in injury or material property damage.

**HALT USE IMMEDIATELY IF A PROBLEM APPEARS.**

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Centre for repairing.



**Product Cleaning**

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

**Temperature**

Be sure the temperature inside the vehicle is between +55°C (+131°F) and -10°C (+14°F) before turning your unit on.

**Moisture Condensation**

You may notice the CD playback sound wavering due to condensation. If this happens, remove the disc from the player and wait about an hour for the moisture to evaporate.

**Damaged Disc**

Do not attempt to play cracked, warped, or damaged discs. Playing a bad disc could severely damage the playback mechanism.

**Maintenance**

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

**Never Attempt to**

 
Do not grip or pull out the CD player by the automatic eject button. Do not attempt to insert a disc off.

**Inserting Discs**

Your player accepts only standard CDs. Do not attempt to load more than one disc at a time. Make sure the label side of the disc is facing up. Playing a disc while the player is stopped will skip, but this will not damage the disc.

**New Discs**


To prevent the CD from skipping, do not use discs with irregular surfaces. If a disc is loaded incorrectly. When a disc is loaded, use your fingers to hold the disc by the inside and outside edge of the disc. Do not touch the irregularities, this could cause the disc to skip. To remove the bumps, rub the disc with a ball of cotton. Do not use a ball of cotton to remove the bumps, rub the disc with a ball of cotton.



**Irregular Shaped**

Be sure to use round discs. Do not use any special shape discs. Use of special shape discs may damage the disc.
 
## Sound Setting

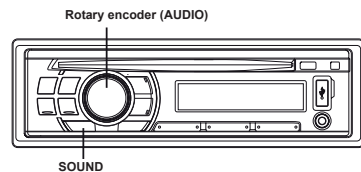

### Adjusting Bass Level/Treble Level/ Balance (Between Left and Right)/ Fader (Between Front and Rear)

#### 1 Press Rotary encoder (AUDIO) repeatedly to choose the desired mode.

Each press changes the mode as follows:

BASS → TREBLE → BALANCE → FADER → Return to normal mode

Bass: -12 ~ +12dB  
Treble: -12 ~ +12dB  
Balance: L15 ~ R15  
Fader: R15 ~ F15

- If no operation is performed for 5 seconds after selecting the BASS, TREBLE, BALANCE or FADER mode, the unit automatically returns to normal mode.

#### 2 Turn the Rotary encoder until the desired sound is obtained in each mode.

## Equalizer Presets (Factory's EQ)

 
6 typical equalizer settings are preset at the factory for a variety of musical source material.

Press **SOUND** repeatedly until the desired Factory's EQ type is displayed.

With each press of the button, the equalizer mode will display the selected equalizer characteristic.

FLAT(OFF) → ROCK → POP → JAZZ → VOCAL → CLUB  
→ FLAT(OFF)

## Other Functions

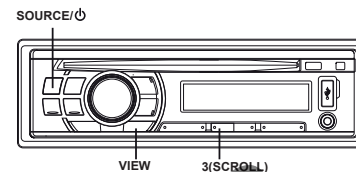

### Displaying the Text

Text information, such as the disc name and the track name, will be displayed if playing a CD text compatible disc. It is also possible to display the folder name, the file name and the tag, etc., while playing MP3 files.

#### Press VIEW.

The display will change every time the button is pressed.

- To scroll text, press 3(SCROLL).

#### The display in Radio mode:

If there is PS (Programme Service Name)  
PS (Programme Service Name)<sup>\*1</sup> → RADIO TEXT →  
PS (Programme Service Name)

If there is no PS (Programme Service Name)  
FREQUENCY → RADIO TEXT → FREQUENCY

#### The display in CD mode:

TRACK NO./ELAPSED TIME → TEXT (DISC NAME)<sup>\*2</sup> →  
TEXT (TRACK NAME)<sup>\*2</sup> → TRACK NO./ELAPSED TIME

#### The display in MP3 mode:

FOLDER NO./FILE NO. → ELAPSED TIME → FOLDER NAME  
→ FILE NAME → ALBUM NAME<sup>\*2</sup> → SONG NAME<sup>\*2</sup>/ARTIST  
NAME<sup>\*3</sup> → FOLDER NO./FILE NO.

- <sup>\*1</sup> If VIEW is pressed and held for at least 2 seconds in the PS display mode, frequency will be displayed for 5 seconds.
- <sup>\*2</sup> Displayed during playback of a disc with CD text.
- <sup>\*3</sup> ID3 tag

If an MP3 file contains ID3 tag information, the ID3 tag information is displayed (e.g., song name, artist name, and album name). All other tag data is ignored.

#### About "Text"

##### Text:

Text compatible CDs contain text information such as the disc name and track name. Such text information is referred to as "text."

- Some characters may not be displayed correctly with this device, depending on the character type.
- "NO TEXT" is displayed if text information cannot be displayed on this unit.
- The text or tag information may not be correctly displayed, depending on the contents.

## Using the Front AUX Input Terminal

 
Connect a portable music player, etc. by simply connecting it to the input on the front panel. An optional adapter cable is required (standard RCA to 3.5φ mini-phonos plug or 3.5φ to 3.5φ mini phono plug).

Press **SOURCE/φ**, and select the AUX mode to listen to the portable device.

RADIO → CD<sup>\*1</sup> → USB<sup>\*2</sup> → AUX → RADIO


<sup>\*1</sup> Displayed only when a disc has been inserted.

<sup>\*2</sup> Displayed only when USB memory is connected.

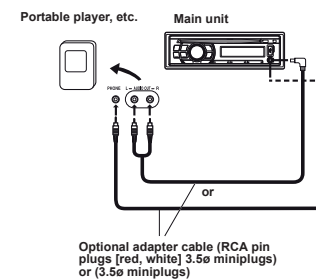

Optional adapter cable (RCA pin plugs [red, white] 3.5φ miniplugs) or (3.5φ miniplugs)

## USB memory

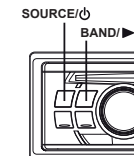 

### Controlling (Optional)

A USB memory device can be connected to this unit.

- The controls on this unit only when a USB memory device is connected.

### Playing MP3 memory (Optional)

If you connect a USB memory device to this unit.

#### 1 Press SOURCE mode.

The mode will change.

RADIO → CD<sup>\*1</sup>

- <sup>\*1</sup> Displayed only when a disc has been inserted.
- <sup>\*2</sup> Displayed only when USB memory is connected.

#### 2 To pause playback

Pressing **BAND**.

- The root folder is displayed.
- This unit plays back MP3 files. For details on controls and modes, refer to "CD/MP3".
- Before disconnecting the source or set to pause playback, press **BAND**.
- The playback time may vary (Variable Bit Rate).

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>