



SPECIFICATIONS

Operating Mode	Dedicated DDS (leased line)
DDS Interface	Supported Standards: AT&T TR 62310 4-wire, full-duplex Receiver Sensitivity: -45 dB, all rates Data Rates: 56K, 64K, and auto Connector: RJ-48C
Clock Source	Network, internal
Diagnostics	CSU and DSU loopbacks
Compliance	FCC Part 15 Class A, EN 55022 Class A ACTA/FCC Part 68 UL/CUL 60950, IC CS-03
Physical	Dimensions: 2.75-inch W x 4.25-inch D Operating Temperature: 0°C to 50°C Storage Temperature: -20°C to 70°C Relative Humidity: Up to 95 percent, noncondensing

INSTALLATION INSTRUCTIONS

1. Remove power from the unit.
2. Slide the option module into the option slot until the module is firmly seated against the chassis.
3. Secure the pins at both edges of the module.
4. Connect the cables to the associated device(s).
5. Complete the installation of the base unit.
6. Restore power to the unit.

WARNING

For NetVanta modules with outside plant connections, ensure that all cables are removed from the module before installing or removing it from the NetVanta chassis.



NetVanta modules should be installed only in NetVanta Series products.

WAN-DDS (RJ-48C) CONNECTION PINOUTS

Pin	Name	Description
1	R1	Transmit data to Network—Ring 1
2	T1	Transmit data to Network—Tip 1
3-6	—	Unused
7	T	Receive data from Network—Tip
8	R	Receive data from Network—Ring



An optional Dial Backup Interface Module (DIM) is required for dial backup applications. For a description of the DBU pinouts, refer to the Quick Start Guide included with your DIM shipment.



Important: *For additional details on product features, specifications, installation, and safety, refer to the appropriate Hardware Installation Guide on the ADTRAN OS System Documentation CD shipped with the base unit and available online at www.adtran.com.*

clock rate [auto* | bps56k | bps64k]

Configures the data rate used as the operating speed for the interface. This rate should match the rate required by the DDS service provider. Use the **no** form of this command to return to the default value.

auto*	Automatically detects the clock rate and sets to match.
bps56k	Sets clock rate for 56 kbps.
bps64k	Sets clock rate for 64 kbps.

clock source [line* | internal]

Configures the source timing used for the interface. The clock specified using the **clock source** command is also the system master clock. Use the **no** form of this command to return to the default value.

line*	Configures the unit to recover clocking from the circuit.
internal	Configures the unit to provide clocking using the internal oscillator.

data-coding scrambled

Enables the DDS OS scrambler to combine user data with pattern data to ensure user data does not mirror standard DDS loop codes. The scrambler may only be used on 64 kbps circuits without Frame Relay signaling (clear channel).

description <text>

Identifies the specified interface (for example, circuit ID, contact information, etc.) using up to 80 alphanumeric characters.

loopback [dte | line | remote]

Initiates a specified loopback on the interface. The **no** version of this command deactivates the loopback.

dte	Initiates a loop to connect the transmit and receive path through the unit.
line	Initiates a loop of the DDS circuit toward the network by connecting the transmit path to the receive path.
remote	Transmits a DDS loop code over the circuit to the remote unit. In response, the remote unit should initiate a line loopback.

remote-loopback

Configures the interface to respond to loopbacks initiated by a remote unit (or the service provider). Use the **no** version of this command to disable this feature.

shutdown

Disables the interface (both physical and virtual) so that no data will be passed through. Use the **no** form of this command to turn on the interface and allow it to pass data. By default, all interfaces are disabled.

snmp trap link-status

Controls the Simple Network Management Protocol (SNMP) variable `ifLinkUpDownTrapEnable` (RFC2863) to enable (or disable) the interface to send SNMP traps when there is an interface status change. Use the **no** form of this command to disable this trap.

* Indicates default values.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>