




Instrucoes PDF

Você pode ler as recomendações contidas no guia do usuário, no guia de técnico ou no guia de instalação para AEG-ELECTROLUX EMS26415X . Você vai encontrar as respostas a todas suas perguntas sobre a AEG-ELECTROLUX EMS26415X no manual do usuário (informação, especificações, recomendações de segurança, tamanho, acessórios, etc). Instruções detalhadas para o uso estão no Guia do Usuário.

Manual do usuário AEG-ELECTROLUX EMS26415X
Guia do usuário AEG-ELECTROLUX EMS26415X
Manual de instruções AEG-ELECTROLUX EMS26415X
Instruções de uso AEG-ELECTROLUX EMS26415X
Instruções de utilização AEG-ELECTROLUX EMS26415X

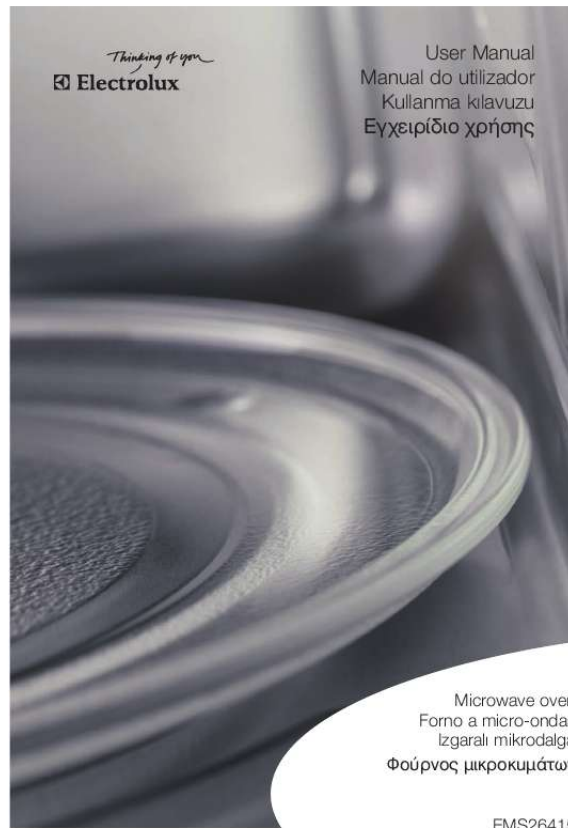

[Seu manual do usuário](#)
[AEG-ELECTROLUX EMS26415X](#)

Resumo do manual:

Power levels that are too high or cooking times that are too long may overheat foods resulting in a fire. The electrical outlet must be readily accessible so that the unit can be unplugged easily in an emergency. The AC power supply must be 230 V, 50 Hz, with a minimum 16 A distribution line fuse, or a minimum 16 A distribution circuit breaker. It is recommended that a separate circuit serving only this appliance be provided. Do not store or use the oven outdoors. If food being heated begins to smoke, **DO NOT OPEN THE DOOR**. Turn off and unplug the oven and wait until the food has stopped smoking. Opening the door while food is smoking may cause a fire. Only use microwave-safe containers and utensils. Do not leave the oven unattended when using disposable plastic, paper or other combustible food containers.

Clean the waveguide cover, the oven cavity, the turntable and turntable support after use. These must be dry and free from grease. Built-up grease may overheat and begin to smoke or catch fire. Do not place flammable materials near the oven or ventilation openings. Do not block the ventilation openings. Remove all metallic seals, wire twists, etc., from food and food packages. Arcing on metallic surfaces may cause a fire. Do not use the microwave oven to heat oil for deep frying. The temperature cannot be controlled and the oil may catch fire.

To make popcorn, only use special microwave popcorn makers. Do not store food or any other items inside the oven. Check the settings after you start the oven to ensure the oven is operating as desired. See the corresponding hints in this operation manual. To avoid the possibility of injury Warning: Do not operate the oven if it is damaged or malfunctioning. Check the following before use: a) The door; make sure the door closes properly and ensure it is not misaligned or warped. b) The hinges and door safety latches; check to make sure they are not broken or loose. c) The door seals and sealing surfaces; ensure that they have not been damaged. d) Inside the oven cavity or on the door; make sure there are no dents. e) The power supply cord and plug; ensure that they are not damaged.

Never adjust, repair or modify the oven yourself. It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy. Do not operate the oven with the door open or alter the door safety latches in any way. Do not operate the oven if there is an object between the door seals and sealing surfaces. Do not allow grease or dirt to build up on the door seals and adjacent parts. Follow instructions for "Care & cleaning". 6 electrolux safety information Microwave heating of beverages can result in delayed eruptive boiling, therefore care has to be taken when handling the container. To prevent sudden eruption of boiling liquid and possible scalding: 1.

Stir liquid prior to heating/reheating. 2.

It is advisable to insert a glass rod or similar utensil into the liquid whilst reheating. 3. Let liquid stand for at least 20 seconds in the oven at the end of cooking time to prevent delayed eruptive boiling. Do not cook eggs in their shells and whole hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave cooking has ended. To cook or reheat eggs which have not been scrambled or mixed, pierce the yolks and the whites, or the eggs may explode.

Shell and slice hard boiled eggs before reheating them in the microwave oven. Pierce the skin of such foods as potatoes, sausages and fruit before cooking, or they may explode. To avoid the possibility of burns Use pot holders or oven gloves when removing food from the oven to prevent burns. Always open containers, popcorn makers, oven cooking bags, etc., away from the face and hands to avoid steam burns.

To avoid burns, always test food temperature and stir before serving and pay special attention to the temperature of food and drink given to babies, children or the elderly..



[Seu manual do usuário](#)

[AEG-ELECTROLUX EMS26415X](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>