

Agilent N2620A FrameScope Pro Network Performance Analyzer

User's Manual

Version 1.1



Notices

© 2006 Agilent Technologies, Inc.

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Manual Part Number

N2620-90003

Edition

Fourth Edition, June 2006

Agilent Technologies, Deutschland GmbH
Herrenberger Straße 130,
71034 Böblingen, Germany.

Warranty

The material contained in this document is provided “as is”, and is subject to being changed without notice in future editions. Further, to the maximum extent permitted by applicable law, Agilent Technologies disclaims all warranties of merchantability and fitness for a particular purpose. Agilent Technologies shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any of the products to which it pertains. Should Agilent Technologies have a written contract with the user and should any of the contract terms conflict with these terms the contract terms shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If Software is for use in the performance of a U.S. Government prime contract or sub-contract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as

defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

In This Guide...

This user's guide contains information for using your FrameScope Pro handheld network performance analyzer.

Be sure to refer to any user's manual supplements or release notes that came with the unit or call your nearest technical support centre

Contents

1 Introducing the FrameScope Pro

- Safety Considerations 10
- The FrameScope Pro at a Glance 14
- The Main Menu at a Glance 17
- Getting Started 19

2 Network Testing with the FrameScope Pro

- Network Testing Overview 26
- Examining the Network 27
- Running an Autotest 29
- Changing the Autotest Metrics 32
- Using the Stations List 33
- Performing a Ping Test 38
- Performing a Trace Route 41
- Performing SNMP Queries 44
- Viewing Statistics 47
- Generating Network Traffic 50
- Performance Tests 53
- Locating a Port with Blink Port 72
- Viewing the Error Log 74
- WireMap Adapter Testing 76
- Using the Test Database 79
- Using the Network Database 80
- Locating Switch Ports 83

3 Voice Testing with the FrameScope Pro

- Voice Testing Overview 86
- How the FrameScope Pro Tests Voice Quality 87
- Running a Voice Test 88
- Interpreting Results 91
- Network Settings 93
- How to Save and Retrieve Results 94

4 System Operations

The Status Display Area	96
The System Menu	97
System Information	98
License Details	99
Storage Setup	100
Battery Status	101
Time and Date Setup	102
User Interface Setup	103
Boot Password	104
Touchscreen Calibration	105
Restore Default Settings	106
Network Settings	108
Restoring the Default MAC Address	113
Remote Control	114
Setting up the Optional Auxiliary Port	118
RFC 2544 Test	120
SNMP Settings	121
Demo Mode	122

5 Network Performance Analyzer Reference

Network Connection	125
Network Database	126
Network Performance Autotest	129
Statistics	154
Network Tools	157
Remote Control	161
Memory Requirements	163


6 Specifications

Physical	166
Environmental	167
Electrical	169
Ports	170

Display 171
172

7 Glossary

Glossary 174

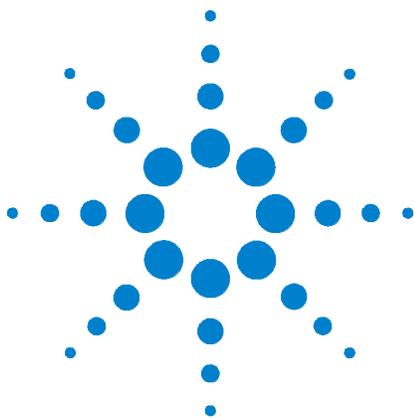

1 Introducing the FrameScope Pro

Safety Considerations	10
The FrameScope Pro at a Glance	14
Front View	14
Side Views	15
Controls	16
Ports	16
The Main Menu at a Glance	17
Getting Started	19
Switching the FrameScope On and Off	19
Checking Power and Charging the Battery	20
Connecting to the Network and Using the FrameScope Pro	22
Running a Test	22

The Agilent FrameScope Pro Network Performance Analyzer is a powerful handheld instrument that measures the performance of your key network resources and troubleshoots the active network equipments.

With the Voice Quality Analysis Option it allows to measure the performance of voice over VoIP network resources. The FrameScope Pro integrates network performance analyzer features such as auto discovery, network performance testing, traffic generator and fault finding; with wiremap testing feature.



Safety Considerations

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument.

Agilent Technologies Inc. assumes no liability for the customer's failure to comply with these requirements.

Before operation, review the instrument and manual, including the red safety page, for safety markings and instructions. You must follow these to ensure safe operation and to maintain the instrument in safe condition.

This instrument is intended for indoor use.

This product is a Safety Class 1 instrument. Product is powered by an AC/DC adapter.

The protective features of this product may be impaired if it is used in a manner not specified in the operation instructions.

All Light Emitting Diodes (LEDs) used in this product are Class 1 LEDs as per IEC 60825-1

Environmental conditions

Refer to the Specifications chapter, Environmental section.

Before applying power

Verify that the product is set to match the available line voltage, and all the safety precautions are taken.

Do not operate in an explosive atmosphere

Do not operate the instrument in the presence of flammable gases or fumes

Do not remove the instrument cover

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made only by qualified service personnel. Instruments that

appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel.

Laser Safety Information for optional Optical Transceivers

The laser sources specified by this user guide are classified according to IEC 60825-1 (2001)

The laser sources comply with 21 CFR 1040.10 except for deviations pursuant to Laser Notice No. 50, dated 2001-July-26.


Table 1 Initial Laser Safety Information

	HFBR-5701L/LP	HFCT-5710L/LP
• Laser Type	850nm VCSEL	Long wavelength
• Wavelength	830-860nm	1270-1355nm
• Max. average output power*	1mW	500µW
• Beam waist diameter	50-62.5µm	9 or 62.5µm
• Numerical aperture	0.2-0.275	0.2-0.275
• Laser class according to IEC 60825-1 (2001)	Class 1	Class 1
• Max. permissible average output power**	0.8 mW	15,6mW

* Max. average output power means the highest possible optical CW power that the laser source can produce at its output

** Max. permissible CW output power is the highest optical power that is permitted within the appropriate IEC laser class

Laser Class 1 Label

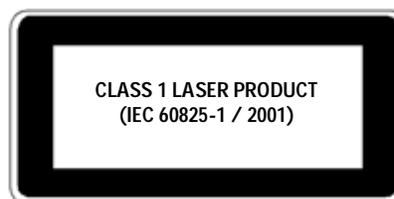

WARNING

Please pay attention to the following laser safety warnings:


1. Under no circumstances look into the end of an optical cable attached to the optical output when the device is operating. The laser radiation can seriously damage your eyesight
2. Do not enable laser when there is no fiber attached to the optical output connector.
3. The use of optical instruments with this product will increase eye hazard.
4. The laser module has a built-in safety circuitry which will disable the optical output in the case of a fault condition
5. Refer servicing only to qualified and authorised personnel.

AC Line Power Supply Requirements

The Agilent FrameScope Pro can operate through the supplied AC adapter between 100V and 240V \pm 10%, at a frequency in the range from 50 to 60Hz \pm 5%. The maximum power consumption is 30VA.

Line power cable

The type of power cable shipped with each instrument depends on the country of destination.

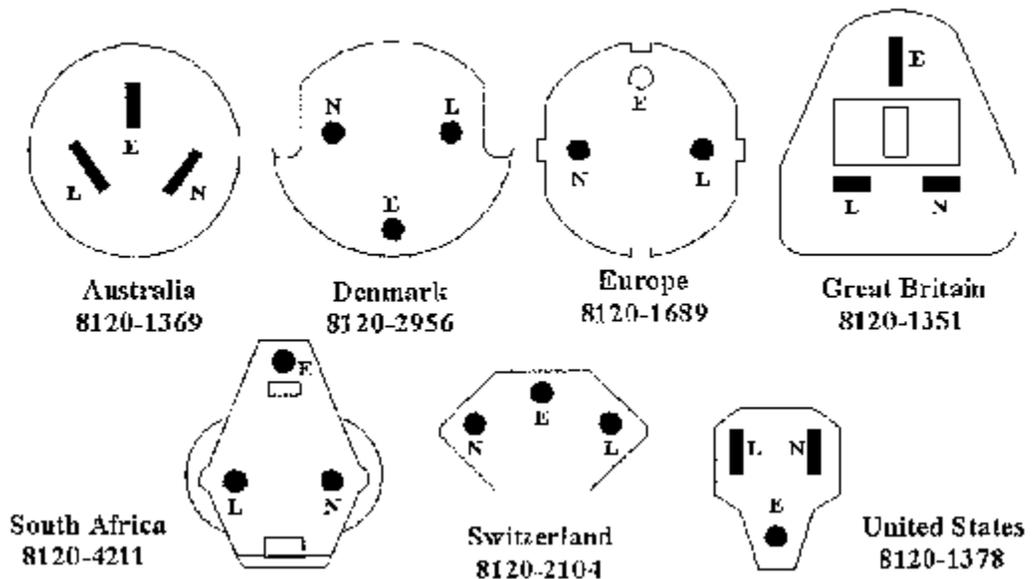

WARNING

To avoid the possibility of injury or death, you must observe the following precautions before switching on the instrument

1. If the instrument is to be energized via an autotransformer for voltage reduction, ensure that the common terminal connects to the earth pole of the power source.
2. Insert the power cable plug only into a socket outlet provided with a protective earth contact. Do not negate this protective action by using of an extension cord without a protective conductor.

DC Power Supply Requirements

Please refer to chapter Specifications.

Battery Requirements

Do not disassemble or attempt to open the battery under any circumstances

The battery can explode, leak or catch fire if heated or exposed to fire or high temperatures.

Do not short circuit the battery by directly connecting metal terminals. Be certain that no metal objects such as coins, paper clips and so on touch the terminals.

Do not drop the battery or subject it to mechanical shock.

NOTE

The battery is a consumable part and is not subject to the FrameScope Pro warranty.

Battery disposal

LiIon and NiMH Batteries must be disposed of in a responsible fashion according to the laws in the country where the product is used.

Operating and Storage Environment

Please refer to chapter Specifications.

The FrameScope Pro at a Glance

Front View

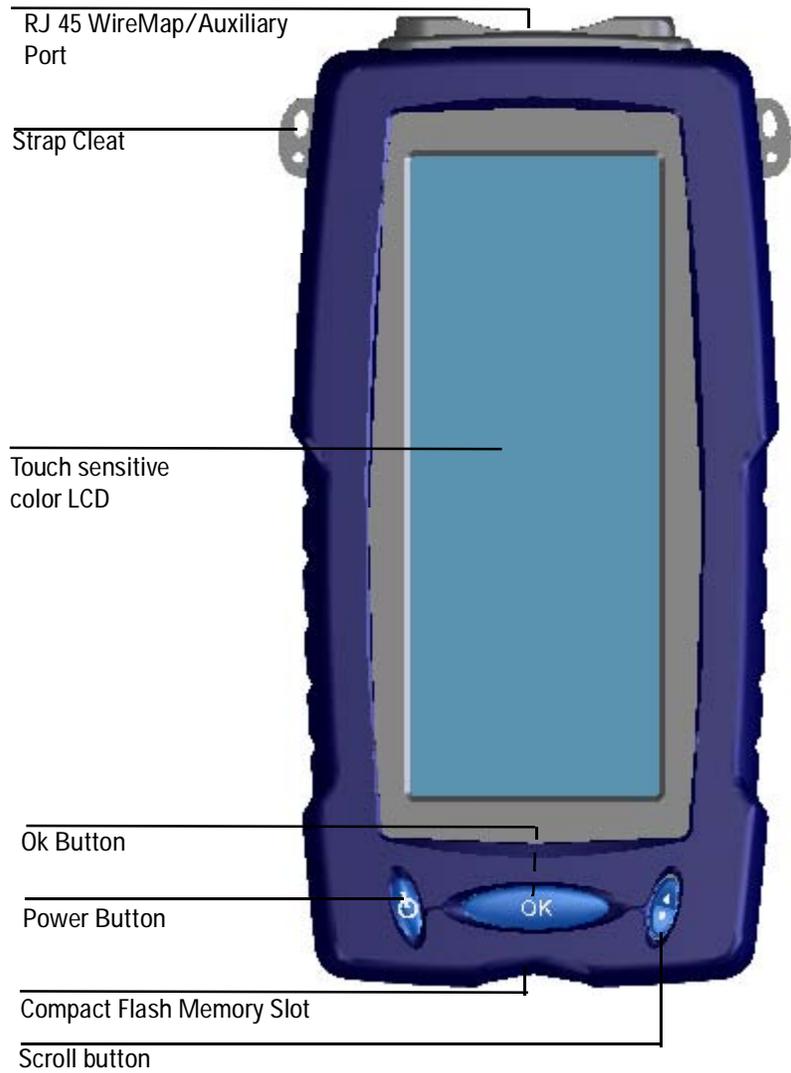


Figure 1 FrameScope Pro Front View

Side Views


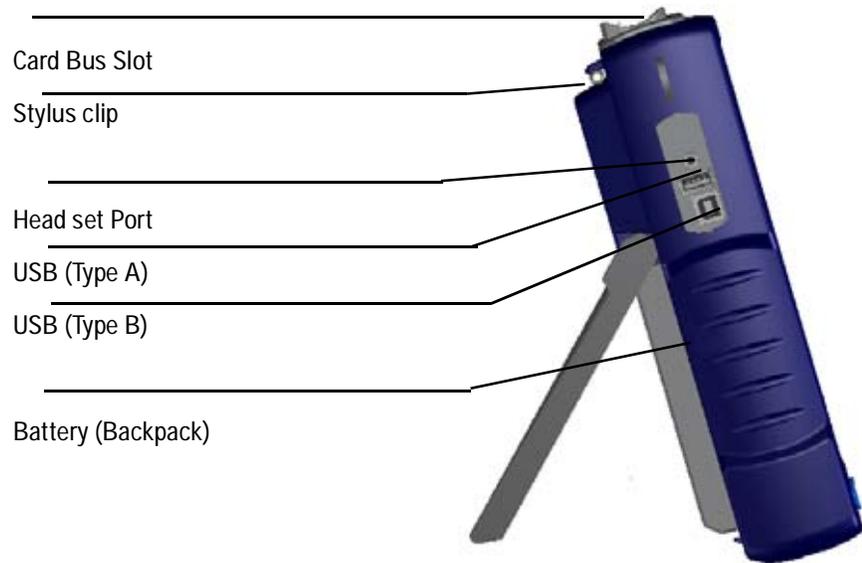


Figure 2 Left Side

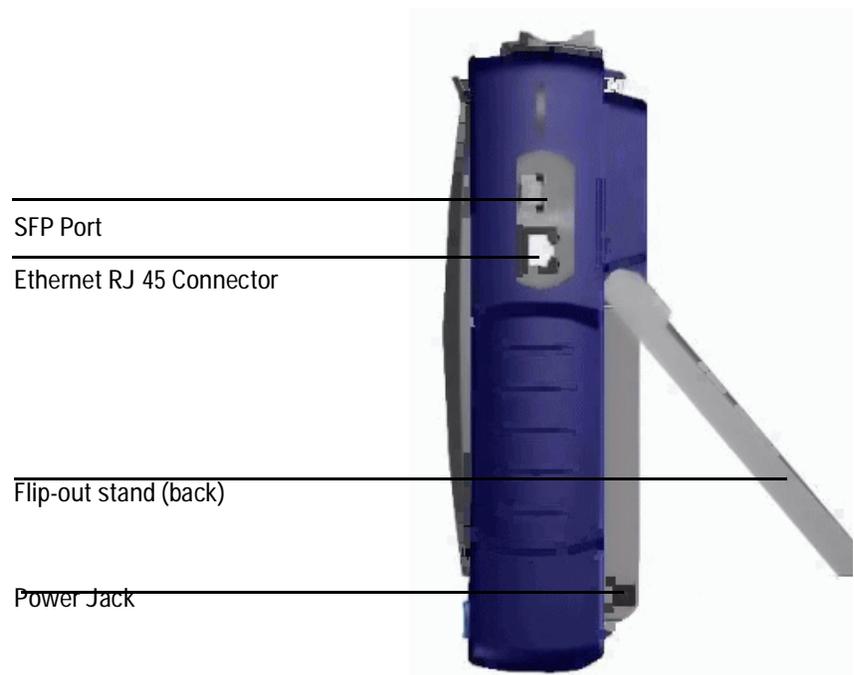

Controls

Color Touch Screen The FrameScope's touch screen is the main user interface. Test controls and results are shown here. Simply press the screen with your finger or a stylus to navigate through the menus and test controls.

Power Button Press the **Power** button briefly to switch the unit on. To switch the unit off, do one of the following:

- Press **Power** twice.
- Press **Power** once, wait 5 seconds and the unit powers off.
- Press **Power** once and hit the **Off** button on the screen.

OK Button Press the **OK** button to activate the currently selected item on the display. Use the OK button to confirm edits, enter values, and execute selected features.

Scroll Button The scroll rocker button moves the highlight cursor on the screen. Use this button to scroll through selected items on the display.

Ports

CompactFlash™ Slot This port on the bottom of the unit accepts standard CompactFlash™ cards for data storage.

USB Ports The FrameScope provides a universal serial bus (USB) interface port to connect with PCs and peripherals. The unit provides a USB Type A port and USB Type B (Hub) port.

Headset Port This port allows you to connect headset to the FrameScope Pro unit.

DC Power Input The DC power input accepts the Agilent 12 V DC power adapter/chargers that comes together with your FrameScope.

CAUTION

Use only the 12 V dc adapter/charger (Agilent part #N2620A-080) supplied with your FrameScope Pro . Using an incompatible adapter may violate FrameScope Pro warranty. FrameScope Pro draws varying amount of current depending on battery charge condition, accessories attached and type of test executed. Any inferior adapter may overheat and damage FrameScope Pro, or even injure the user.

The Main Menu at a Glance

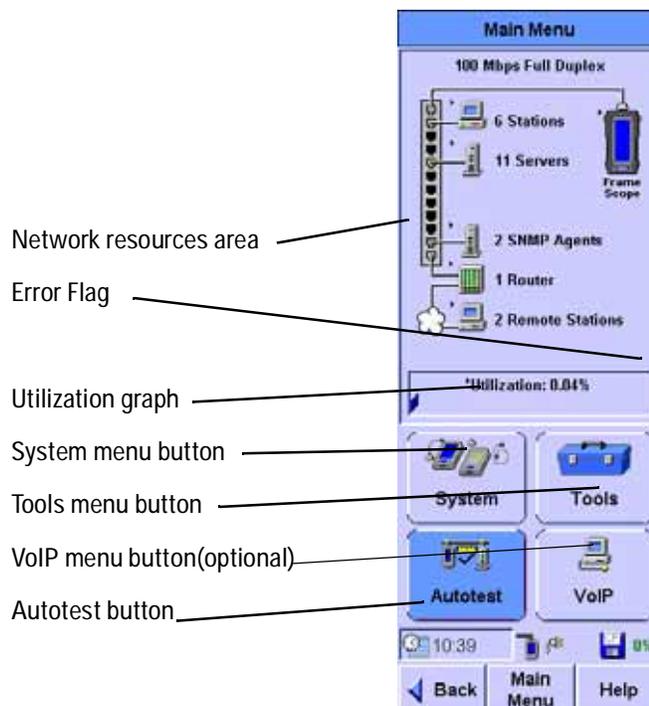


Figure 3 FrameScope Main Menu

Tab Title Displays the name of the tab.

Network Resource Area Shows all of the detected network resources. The FrameScope performs auto discovery of network resources. Resource icons shown with a black triangle (see below) can be pressed to display more information.

Press icon to view details



Error Flag Displayed when an unacknowledged error is in error log

Utilization Graph Displays current network usage. Press this graph to display more statistics.

System Menu Button Calls the System menu.

Tools Menu Button Calls the Tools menu.

1 Introducing the FrameScope Pro

The Main Menu at a Glance

VoIP Menu Button(optional) Calls the Voice Test menu.

Autotest Button Calls the Network Autotest Setup screen.

Getting Started

Switching the FrameScope On and Off

- 1 To switch the FrameScope on, briefly press the **Power** button on the front panel.



The screen will light and a brief tone will sound.

- 2 While the unit is on, briefly pressing the **Power** button will call the Sleep/Shutdown window.



- Press **Sleep** to put the unit in sleep mode. When the FrameScope is in sleep mode, briefly press the **Power** button or press the screen to reactivate it.
 - Press **Off** or wait five seconds to turn the unit off.
 - Press **Cancel** to go back to the Main Menu.
- 3 You can also turn the unit off by pressing the **Power** button twice.

Checking Power and Charging the Battery

The FrameScope's battery should provide enough power for a typical day of testing. The AC power adapter/charger can also be used to power the unit and to recharge the battery.

NOTE

To shorten the charging time, Agilent recommends switching off the FrameScope while charging.

To check the battery's charge level, perform these steps:

- 1 Switch on the FrameScope, if necessary, by pressing the **Power** button on the front of the unit.
- 2 Observe the battery icon in the Status display area on the Main Menu.



The battery icon will show how much charge remains in the battery (for example, 45%). If the battery is severely depleted, a low-battery message will be displayed.

WARNING

Do not operate the FrameScope while the battery is hot immediately after charging.

When the battery temperature exceeds 55°C (131°F), a warning message, for example, "FrameScope too hot", will appear to alert the user.

- 3 To recharge the battery or to power the FrameScope from an AC power source, plug the DC power connector on the adapter/charger into the 12 V DC connector on the side of the battery



- 4 Observe that the AC power icon is displayed in the Status area.



The AC icon will also indicate the battery's charge level (for example 72%).

Connecting to the Network and Using the FrameScope Pro

Follow these steps to connect your unit to the network and use it for testing:

- 1 Connect the cabling to the FrameScope's network port. If you want to perform testing on fiber link, connect the cable on the SFP port.
- 2 You operate the FrameScope using its front panel touchscreen and control buttons. When testing with the unit, use the following operating tips:
- 3 Select items on the display by pressing them with your finger or with a stylus or by scrolling the highlight bar with the scroll button. The touch screen may not detect a quick press; you should press firmly.
- 4 Many screens have lists of items that you can navigate using the Scroll button. Pressing this button up or down moves the selection highlight.
- 5 Selected items are highlighted in dark blue to indicate that they are selected. Most screens have a default selected item.
- 6 Execute a selected item by pressing it or by pressing the **OK** button.
- 7 To return the Main Menu at any time, press the **Main Menu** button on the bottom of the display.
- 8 To return to the previous screen, press the **Back** button on the bottom of the display.

Running a Test

The basic steps for performing a test with the FrameScope Pro are described below. For more information on network testing, see [Chapter 2](#), "Network Testing with the FrameScope Pro".

- 1 Switch the unit on. Connect power to charge the battery if necessary. See "[Checking Power and Charging the Battery](#)" on page 20.
- 2 Connect the FrameScope to the network under test. See "[Connecting to the Network and Using the FrameScope Pro](#)" on page 22.
- 3 Choose the type of test you want by pressing the Autotest, Tools or VoIP Button.
- 4 Make any needed configuration changes to match your testing environment.

Most basic FrameScope operations execute automatically and require very little setup. In most cases you can skip this step.

- 5 Press the **Autotest** button or **Start Test** button or **VoIP** button to begin the test.

See “[Viewing Details and Statistics](#)” on page 35 for information on reviewing network test results.

Operation

In order to store any test suites or test results on the FrameScope, it is necessary to insert the CompactFlash™ memory card into the CompactFlash™ card slot. The FrameScope will operate without it, but no storage is available.

About Help

The FrameScope Pro comes with a built-in help system, which helps you to operate the unit.

- 1 Press the Help button on Main menu to get to the main page of the help system.
- 2 Press the Index button to get all the help available on the FrameScope Pro.
- 3 From the Index menu, select the topic in which you are interested.

Before you call the technical support hotline, please refer to the online help system.

Software Upgrade

Agilent will continue to upgrade the FrameScope Pro’s software to meet your needs. You may obtain the latest software release from our website:

<http://www.framescope.com>

Use FrameScope Pro Software Upgrade Utility to download the software into FrameScope Pro. For details about this utility please refer to the FrameScope Pro Software Upgrade Utility Manual.

Caution: Do not interrupt the downloading process. Any interruption may cause corrupted software, and require repair at the Customer Service Center. To avoid power loss due to a low battery, the unit should be plugged into AC power during the upgrade.

Localization

The unit may be shipped with the local language already installed.

Software versions exist on the Utilities CD supplied which provide for the following languages for the FrameScope:

English

Korean

French

German


Chinese (simplified)

Italian

Spanish

Japanese

To install a language version other than English, use the FrameScope Pro Software Upgrade Utility to upgrade the FrameScope to the language desired, or using a USB cable.

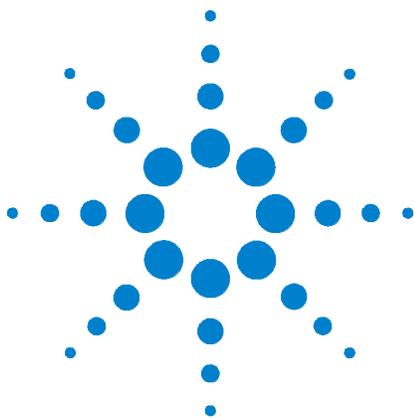

2 Network Testing with the FrameScope Pro

Network Testing Overview	26
Examining the Network	27
Network Overview	27
Detailed List	28
Running an Autotest	29
Changing the Autotest Metrics	32
Using the Stations List	33
Viewing Details and Statistics	35
Performing a Ping Test	38
Performing a Trace Route	41
Performing SNMP Queries	44
Viewing Statistics	47
Generating Network Traffic	50
Performance Tests	53
Performing RFC 2544 Tests	57
RFC 2544 Test Results	67
Locating a Port with Blink Port	72
Viewing the Error Log	74
WireMap Adapter Testing	76
Using the Test Database	79
Using the Network Database	80
Locating Switch Ports	83

This chapter describes how to use your Agilent FrameScope Pro as a network performance analyzer.

The FrameScope network testing features allow you to create a list of key network resources and evaluate their performance. Active discovery and detailed metrics allow you to troubleshoot problems and pinpoint network bottlenecks.



Network Testing Overview

The following steps describe the general procedure for performing network analysis testing using the FrameScope Pro.

- 1 Power the unit on. See [“Switching the FrameScope On and Off”](#) on page 19.
- 2 Connect to the network under test. See [“Connecting to the Network and Using the FrameScope Pro”](#) on page 22.

The FrameScope automatically begins to poll the network and locate devices. See [“Examining the Network”](#) on page 27.

- 3 View details about the detected network resources. See [“Detailed List”](#) on page 28.
- 4 Perform an Autotest on any or all desired resources. See [“Running an Autotest”](#) on page 29.
- 5 Select any devices on the network and perform additional testing, such as:
 - Ping test; see [page 38](#).
 - Trace Route test; see [page 41](#).
 - SNMP Queries; see [page 44](#).
- 6 Save results as desired, perform other tests or functions.

Examining the Network

Network Overview

FrameScope will start discovery process on the network as soon as it is switched ON.

The Network resources area of the display will show a list of detected network devices.



Detailed List

- 1 To view a detailed list of network resources, press on any category in the Network Resources area. A triangle indicates that a list is available for that category.

Press icon to view details



- 2 Use the Scroll button to select items in the list. The **Collapse List** and **Expand List** button is renamed **View** when the highlight is on a particular station. Press the **View** button to see details of the selected item. A red 'X' means that the device wasn't present the last time it was checked.
- 3 Press **Back** to return to the Network tab, or press **Main Menu** to return to the beginning screen.



Running an Autotest

This section describes how to run an Autotest on the network using the FrameScope Pro. The FrameScope can store Autotest *suites* that define which network elements to test.


- 1 From the Network Overview screen (see [page 27](#)) press the **Autotest** button. The Network Autotest Setup screen is displayed.



- 2 If you want to save this Autotest suite, or load a previously-stored suite, press the **Suite** button.
- 3 Select a stored suite from the list or select **Create New**, then press the **Next** button. You can select **<Default>** if you want to reload the default suite.
- 4 If you **Create New**, you will be prompted to enter a new name.



- a On the Network Autotest Setup window, press the **Iterations** button to select how many times the test is to be run.
 - b Enter the number of times you want the test to run in the number entry box.
 - c Enter the time in minutes to wait between tests in the Interval text box.
 - d When you have finished press **OK**.
- 5 On the Network Autotest Setup screen, use the **Delete** and **Add** buttons to remove or insert elements from the resources list. You can also use the **Add** button to enter new network resources.
 - 6 To change an item on the resources list, select the item and press the **Edit** button. You will be able to enter new details for that network resource.

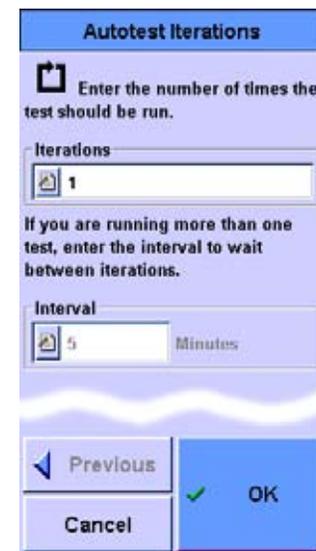

For more details, see “Network Performance Autotest” on page 129.

- 7 When you have finished setting up the test, press the **Start Test** button (or press **OK**) on the Network Autotest Setup screen. The test will begin.
- 8 To stop the test at any time press the **Stop Test** button.
- 9 To view information about a network element’s results, select the element from the list and press the **Details** button.
- 10 Press the **Save Results** button to store the test data on the CompactFlash™ card.

The rating numbers will range from 5 to 1, where 5 is best and 1 is worst. A red ‘X’ will be displayed if an error occurred during the test. See the next section for how to change the metrics used to derive the ratings.



Changing the Autotest Metrics

The FrameScope Pro provides a measure of service speed and efficiency by emulating a client device in the network. By making a request for service to a key device, and comparing the results to reasonable expectations, it provides a rating of the service. However, the default numbers used to determine the rating may not apply to the network under test.

For example, you may know that the connection to the available domain name server is over a slow link and this link cannot be upgraded.


Consequently, it may be more important to have a test that is less sensitive but provides meaningful results that can be compared over time. The FrameScope Pro rating can be changed. After you've run the test and received a result, such as that shown below on the left, you can highlight the server address and press **Details**. The screen shown in the middle provides the measured results of the test. If you double click on Name Lookup, you can change the rating scale to whatever values you choose. The screen on which you do that is shown below on the right. This can be done for all rated measurements. See [Chapter 5](#), "Network Performance Analyzer Reference".



Using the Stations List

When a network resource on the Network tab is shown with a black triangle, you can press the resource to display the Network Database screen, which includes the Stations List.

- 1 On the Network tab, press the resource you wish to view.

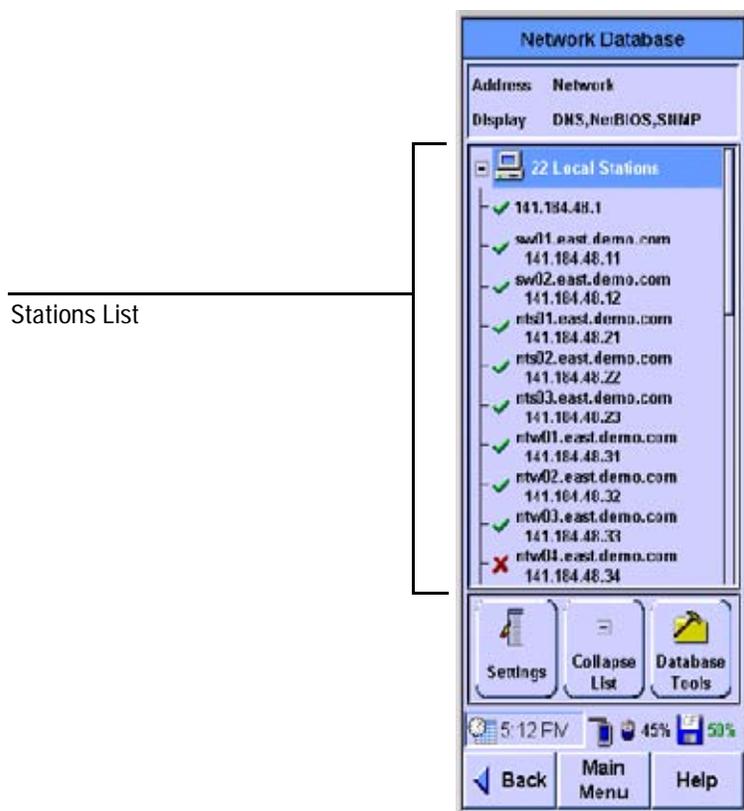

- 2 Use the Scroll button to navigate through the items on the Station List.
- 3 Expand or collapse the Station List by selecting a category and then pressing the **Expand** (or **Collapse**) button.




2 Network Testing with the FrameScope Pro

Using the Stations List

NOTE

The Collapse List, Expand List, and View buttons all appear in the same place on the screen, depending on the currently selected item in the Station List. See also [“Viewing Details and Statistics”](#) on page 35.

- 4 You can use the **Settings** button to reorder the Station List and select what information is displayed.

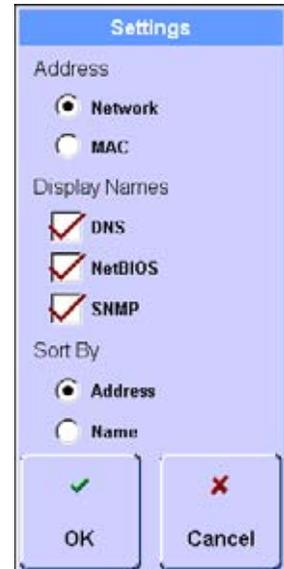

- 5 You can use the **Database Tools** button to update, erase, load or save the Stations List or delete a resource from the Stations List.



Viewing Details and Statistics

- 1 Select a station on the Station List and then press the **View** button.



2 Network Testing with the FrameScope Pro Using the Stations List

- 2 Press the **Statistics** button to view statistics about the station.




Statistics

Station Statistics	
Collected By FrameScope	
2 Unicasts (0.0%)	<input type="text"/>
0 Broadcasts (0.0%)	<input type="text"/>
0 Multicasts (0.0%)	<input type="text"/>
0 Errors (0.0%)	<input type="text"/>
Collected By Switch (Level 1)	
141.183.30.208	
Found on Switch Port: 7	
Unicasts	5965
Non Unicast	3579
Discards	0
Errors	0

- 3 On the Station Detail screen, press **Tools** to see a list of test tools that can be used on the selected station. These tools are describe in more detail in the following sections.

NOTE

The tools that are displayed on the Station Tools list will vary depending on what type of station you are viewing. Not all tools are available for every type of station.

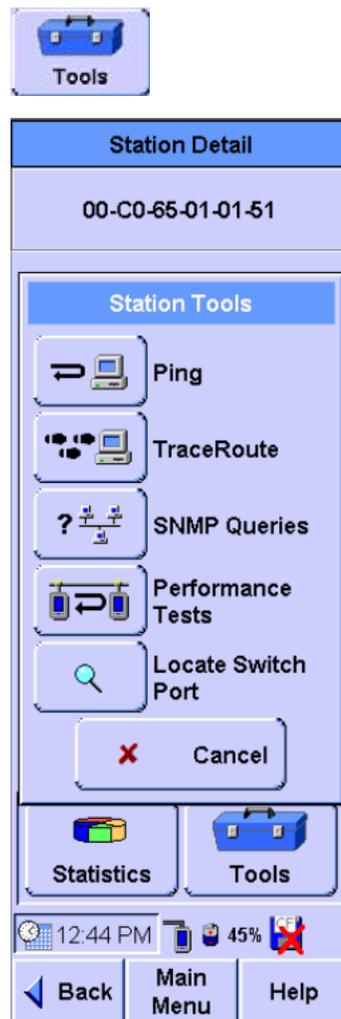


Performing a Ping Test

The Ping test allows you to check if communications can be established with a particular remote node. The FrameScope “pings” a remote node by sending it a request message. If the remote device is active and reachable it will respond.

Follow these steps to run a Ping test.

- 1 From the main Network tab or from a device’s display on the Station List, press the **Tools** button to display a menu of available network testing tools.

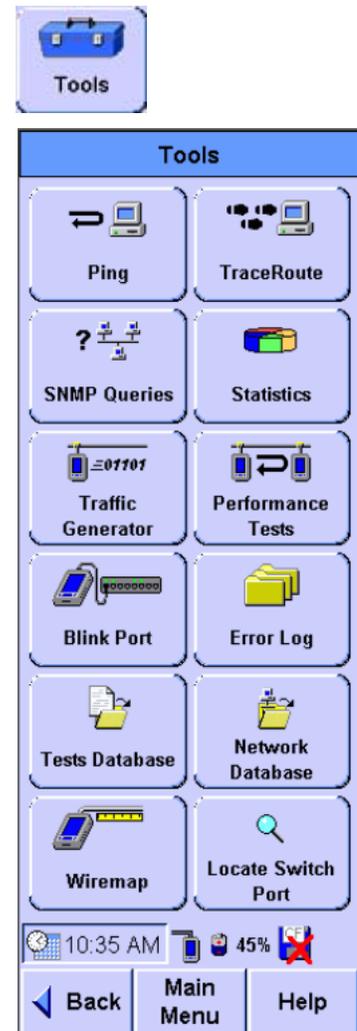


- 2 Press the **Ping** button to call the Ping screen.
- 3 Enter the device you want to ping in the Target box. You can enter the device name or address.
- 4 Select the ping options you want, selecting IP or IPX, length of the ping, and the number of iterations.
- 5 Enter the Time To Live and whether you want fragmentation in the IP Options area. Or if you selected IPX above, select the IPX request type: Diagnostic or PING.



2 Network Testing with the FrameScope Pro

Performing a Ping Test

- 6 Press the **Start** button to begin the ping test.
The Ping Results screen will be displayed.
- 7 Observe the results of the Ping test.
The screen will show the frame length you selected, the number of requests (pings) sent and the number of replies received. Data on the response times are also displayed.
- 8 To run the test again press the **Start** button.

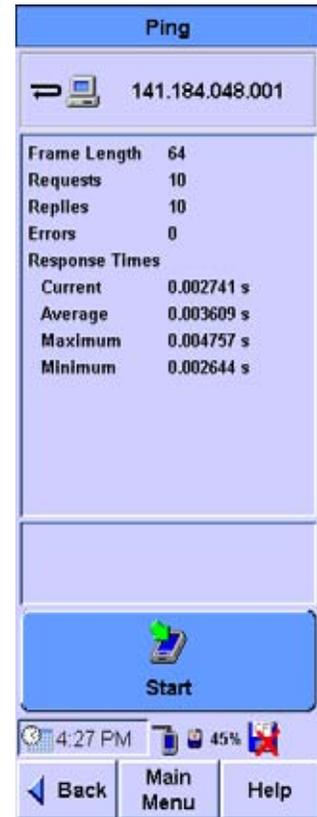


Performing a Trace Route

The Trace Route test allows you to determine the path through the network to a particular device. The FrameScope sends data packets over the network and returns the routers on the path and the time it took for each hop.

The following procedure describes how to run a Trace Route test.

- 1 From the main Network tab or from a device's display on the Station List, press the **Tools** button to display a menu of available network testing tools.

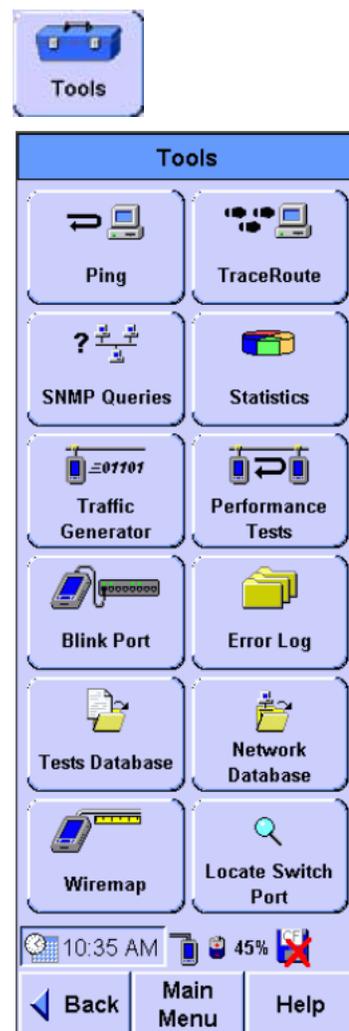

2 Network Testing with the FrameScope Pro

Performing a Trace Route

- 2 Press the **TraceRoute** button to call the TraceRoute screen.
- 3 Enter the device to which you want to trace in the Target box. You can enter the device name or address.
- 4 Select the maximum number of hops to be reported.




- 5 Press the **Start** button to begin the TraceRoute test.

The TraceRoute Results screen will be displayed.

- 6 Observe the results of the TraceRoute test.

The screen will show the number and address of each hop. In addition the delay (in seconds) to each hop is shown. The delay is cumulative, but since each termination is measured individually, an anomaly may exist where an intermediate time is greater than a subsequent time due to network performance.

- 7 To run the test again press the **Start** button.

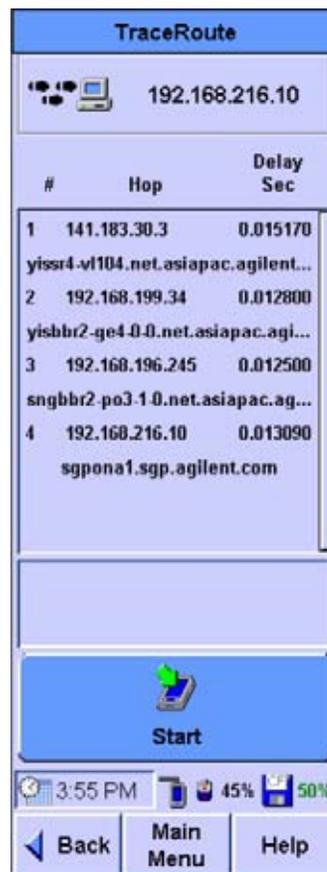


Performing SNMP Queries

The simple network management protocol (SNMP) query tool allows you to send a query to the management information database (MIB) and retrieve the available information for that host.

The following procedure describes how to run an SNMP Query using the FrameScope Pro

- 1 From the main Network tab or from a device's display on the Station List, press the **Tools** button to display a menu of available network testing tools.

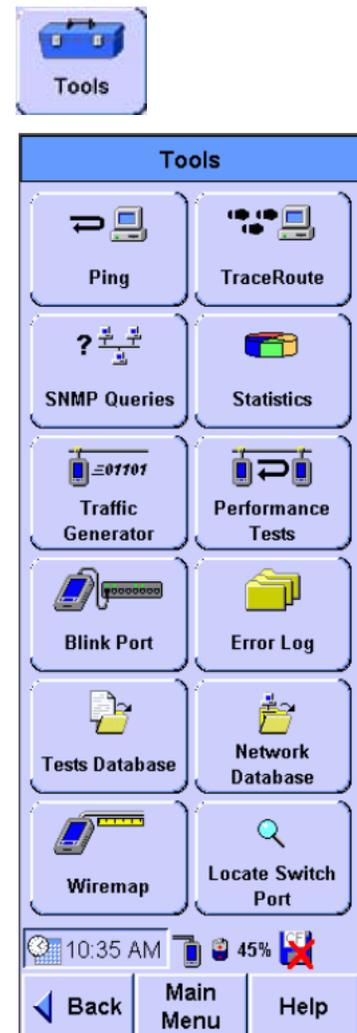

- 2 Press the **SNMP Queries** button to call the SNMP Query screen.
- 3 Enter the device to which you want to query in the Target box. You can enter the device name or address.
- 4 The **SNMP Settings** button allows you to add SNMP communities and ports to the default “public” community and default port 161 or to change those set up for auto discovery.




2 Network Testing with the FrameScope Pro

Performing SNMP Queries

- 5 Press the **Start** button to begin the SNMP Query test.
The SNMP Queries Results screen will be displayed.
- 6 Observe the returned information on the SNMP Queries results screen.


The screen will show the description, ID, and other information as returned by the remote host.
- 7 To run the test again press the **Start** button.

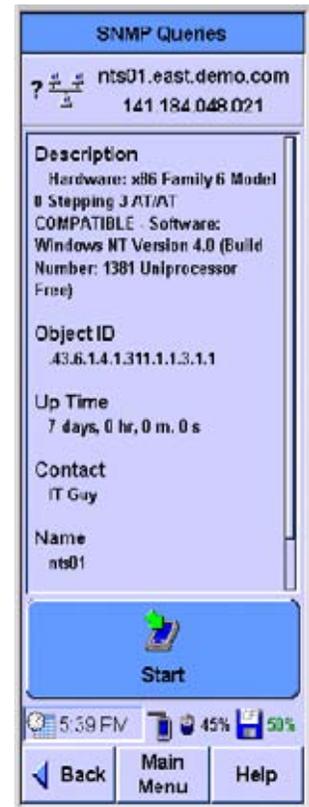

Viewing Statistics

You can use the FrameScope to view a variety network parameters, and see performance statistics for them. The following procedure describes how to use the FrameScope's Statistics tool.

- 1 Press the **Tools** button on the main Network tab to display the Tools menu or use the shortcut from the Network Main Menu by pressing the Utilization bar

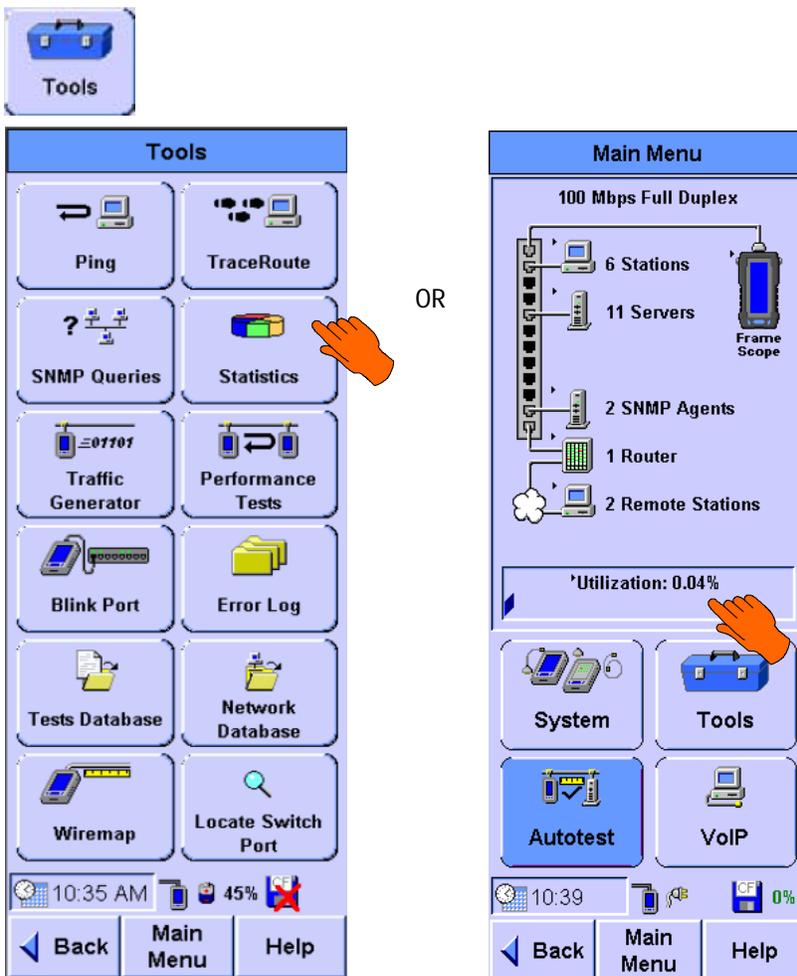

2 Network Testing with the FrameScope Pro

Viewing Statistics

2 Press the **Statistics** button to call the Statistics screen.

The screenshot shows the Statistics screen with the following data:


	Current (%)	Max (%)
Utilization	0	0.01

	Current (%)	Max (%)
Unicasts	53	63
Multicasts	20	57
Broadcasts	27	45
Errors	0	0
Collisions	0	0

Callouts indicate: "Press this to view or change the Statistics settings." (pointing to the Settings button) and "Press this to view the list of saved data or to delete saved data." (pointing to the Database button).


The screen shows network utilization and other traffic data such as frame counters, and protocol counters.

- 3 To view additional details, press any item shown with a black triangle.
 - Press **Unicasts**, **Broadcasts**, or **Multicasts** to view the top talkers for that frame type.
 - Press **Errors** to view a breakdown of the types of errors detected on the network.
- 4 Press the **Settings** button on the Statistics screen to switch between counts and percentages, protocols and frames.

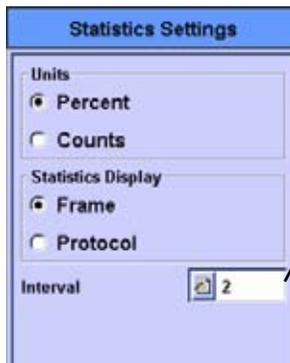

Set the **Interval** between 2 to 1080 seconds. The graphs display statistics of data captured within this time interval and refreshes every interval time.

- 5 Press **Utilization** on the Statistics screen to view the top talkers (most active devices) on the network.

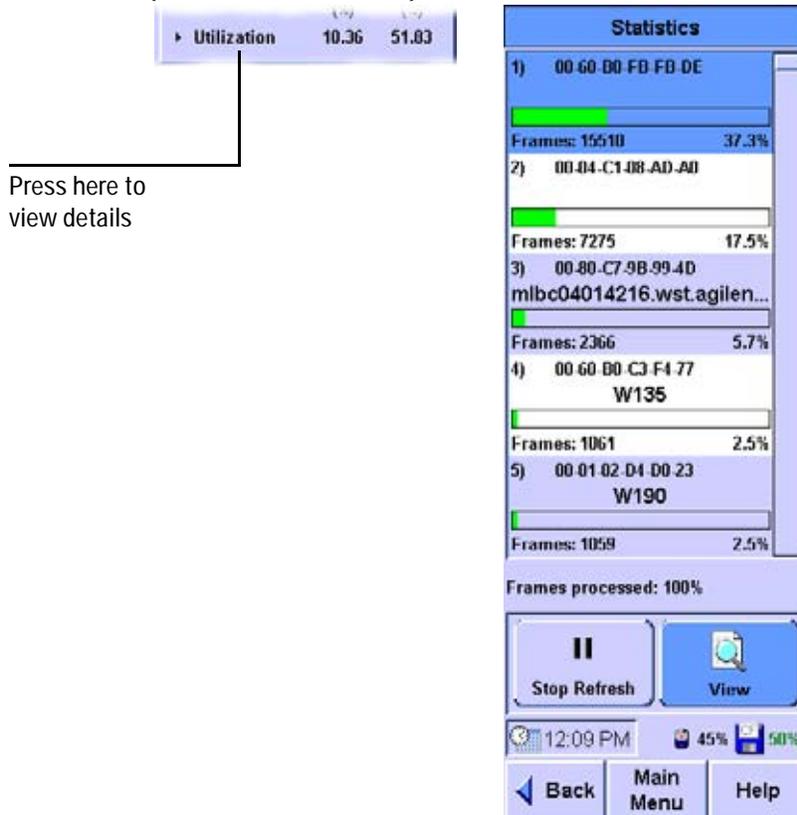

Saving and Retrieving Statistics Data

The Statistics Data can be saved on the main page of the statistics function. You can view a list of statistics data saved by clicking on the Database button.


To retrieve the saved data tables, you can either access the CF card using a card reader or via the FrameScope Pro configured as a web server. (Please refer to [“Remote Control”](#) on page 114).

Generating Network Traffic



You can use the FrameScope's **Traffic Generator** to create network traffic to stress the network and observe how it reacts under different loads.

The following procedure describes how to use the **Traffic Generator**.

- 1 Press the **Tools** button on the main Network tab to display the Tools menu.

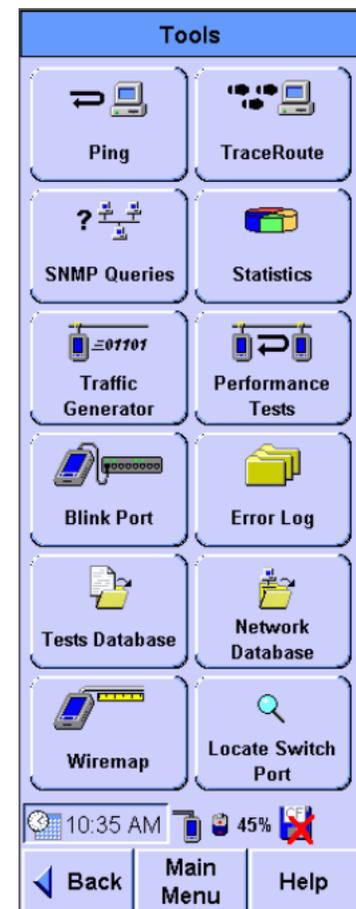


- 2 Press the **Traffic Generator** button. The Traffic Generator screen will be displayed. To add security to the use of the traffic generator, since it may disrupt your network, you may configure a password to prevent someone without the password from using the traffic generator.
- 3 On the Parameters tab, configure the traffic characteristics as you desire. Press each parameter (**Frame Length**, **Frame Rate**, and so on) and enter the value you want in the on-screen keypad. See “[Traffic Generation](#)” on page 158.
- 4 To inject errors in the generated traffic, press the check box for the type of error you want (CRC, short frame, or long frame). See “[Traffic Generation](#)” on page 158.
- 5 To configure the frame characteristics of the traffic, press the **Frame** tab.

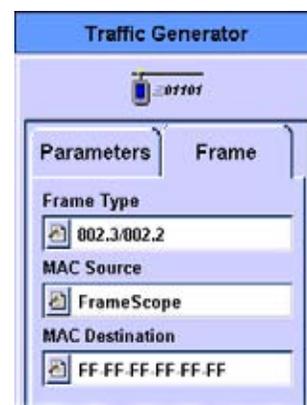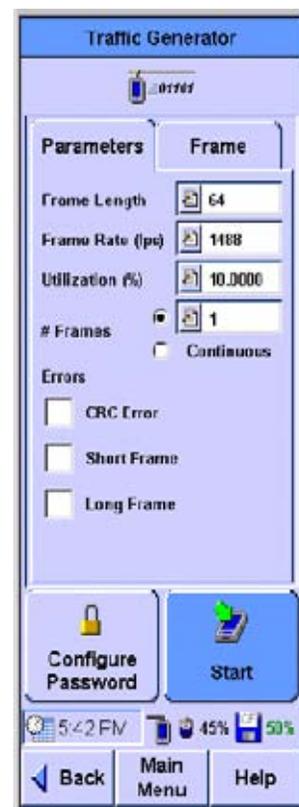


2 Network Testing with the FrameScope Pro Generating Network Traffic

- 6 Press the box buttons to enter the Frame Type, MAC source, and MAC Destination. See “[Traffic Generation](#)” on page 158. Note that if you select an IP type frame, you will get additional selections for IP Source and IP Destination.

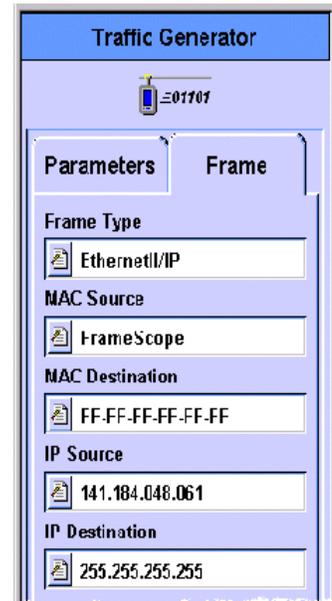

- 7 Press the **Start** button to begin generating traffic. The Traffic Generator activity screen is displayed.
- 8 Observe the traffic statistics. For more information on the results, see “[Traffic Generation](#)” on page 158.
- 9 If you want to change traffic parameters press the **Back** key to return to the Parameters and Frame tabs. To restart the test press **Start**.

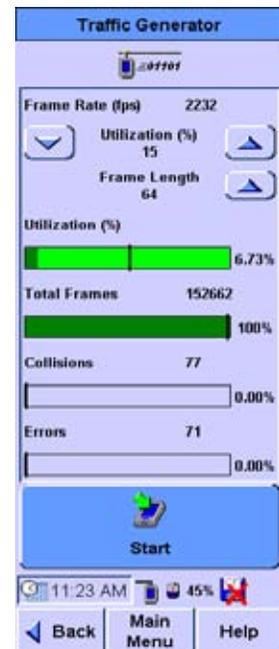

Performance Tests

Performance tests comprise of RFC 2544 tests and IP or MAC Loopback tests. These tests are used to verify the performance of network between two network points. Using this performance tests tool, you can perform the following:

- MAC or IP Loopback Test – go to [“Performing a MAC or IP Loopback”](#) on page 55.
- RFC 2544 Throughput Test – go to [“RFC 2544 Throughput Test”](#) on page 57.
- RFC 2544 Round-trip Latency Test – go to [“RFC 2544 Round-trip Latency Test”](#) on page 57.
- RFC 2544 Frame Loss Rate Test - go to [“RFC 2544 Frame Loss Rate Test”](#) on page 58
- RFC 2544 Back To Back Test - go to [“RFC 2544 Back to Back Test”](#) on page 58

NOTE

All performance tests require two FrameScope or a loopback device (for RFC 2544 test only); one at each end of the network circuit to be tested.


General settings for the master FrameScope

To start off any performance test, follow the steps below:


- 1 Connect two FrameScope or a FrameScope with loopback device (for RFC 2544 test only) to the network. Connect one at each end of the network circuit you want to test. See [“Connecting to the Network and Using the FrameScope Pro”](#) on page 22.

2 Network Testing with the FrameScope Pro Performance Tests

- 2 On the master FrameScope, press the **Tools** button on the main Network tab.

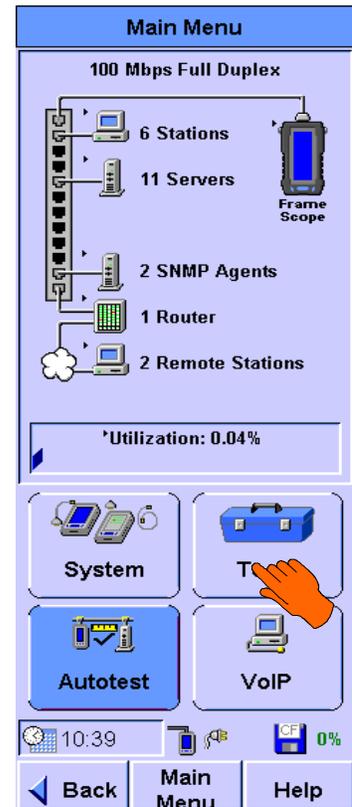

- 3 Press **Performance Tests** button on the Tools menu.

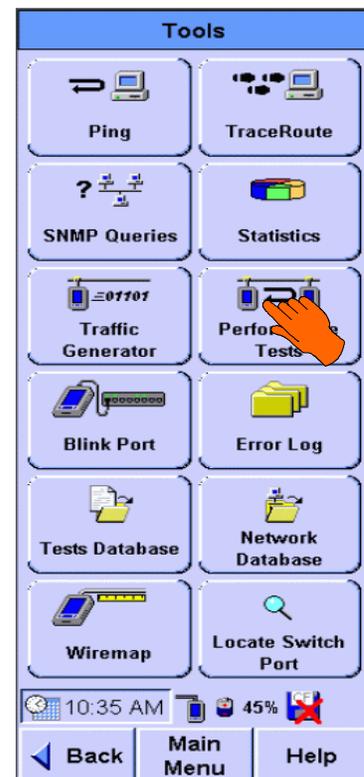

Performing a MAC or IP Loopback

NOTE

The MAC loopback test only works within the subnet (does not work across routers).

The master or target FrameScope sends periodic MAC-level or IP-level messages to the slave FrameScope with user-defined periodic interval. The slave FrameScope echoes back each of these messages. The FrameScope will record the number of transmitted, received and error frames, the current, average, minimum and maximum delays of frames.

To perform the tests, see the following steps:


- 1 From the Performance Tests menu, select **MAC Loopback** or **IP Loopback**
- 2 There are two options to search for the slave FrameScope:

Option 1: If you do not know the MAC or IP address/name of the slave FrameScope, select **Search for FrameScope**.

Option 2: For MAC Loopback, uncheck the **Search for FrameScope** check box and enter the MAC address of the slave FrameScope. For IP Loopback, enter the IP address or name of the slave FrameScope.

- 3 In the MAC or IP Loopback menu, press **Start** or press the **OK** button to begin the test.

The FrameScope will search the other FrameScope (which will be acting as slave) on the network and then report back the link results.

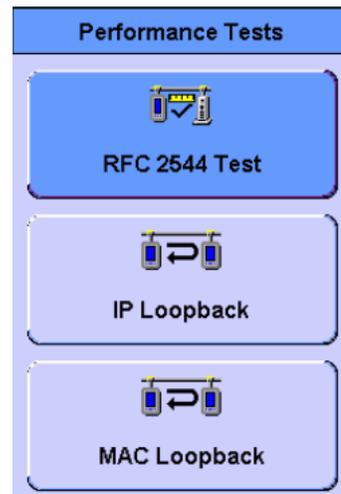


2 Network Testing with the FrameScope Pro Performance Tests

MAC Loopback

Option 1: Select **Search for FrameScope** to automatically locate the slave FrameScope within the subnet.

Option 2: Un Check **Search for FrameScope** and enter the MAC address of the slave FrameScope.

Press **Save** to save current test results.

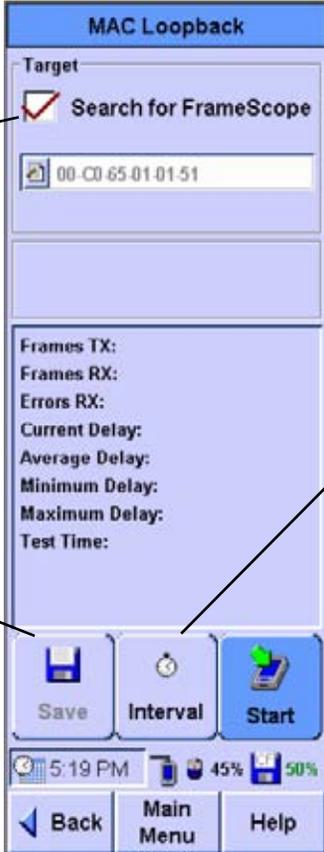




Search results displays the MAC address and current MAC loopback test results.

IP Loopback

Option 1: Use auto search to locate the slave FrameScope within the subnet.

Option 2: Key in the name or IP address of slave FrameScope.



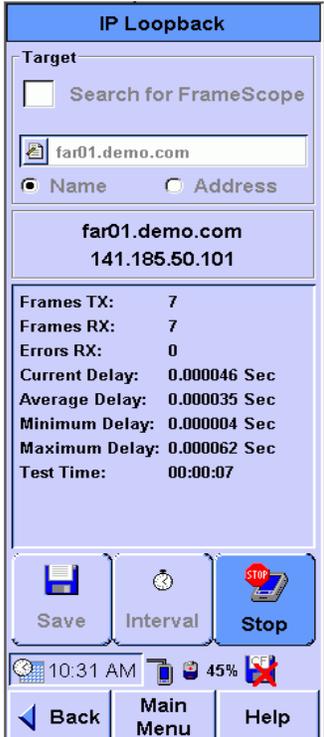

- 4 Press **Stop** to cancel the test or to review the transmission information on the MAC Loopback or IP Loopback screen.

Performing RFC 2544 Tests

RFC 2544 tests comprise of round-trip latency test, point-to-point throughput test, frame loss rate tests and back to back tests.

NOTE

For RFC 2544 tests, if the slave FrameScope unit is in use, for example, running a frame loss rate or back to back test, an auto-search from the master FrameScope unit will result in **Search Failed**. A specific search (keying in the IP address) on a FrameScope unit under test will result in **Remote Busy**.

RFC 2544 Throughput Test

This test is designed to determine the maximum throughput rate in frames per second, bits per second or percentages for different frame length between two network points with no frame loss.

The test sends frames at a constant rate in unidirectional or bi-directional, for a specified number of seconds. If the transmitted frame count does not match the number of frames received by the other side, the transmit level is reduced. A search is conducted to determine the maximum frame rate that can be forwarded by the network with no loss. The search is capped by the maximum data rate if it is specified by user, otherwise will be based on the media maximum rate. During Bi-directional symmetrical test or loopback mode if the frame is dropped, regardless of the direction the test will be re-run at a lower rate and the final result will be single throughput value. On the otherhand, bi-directional asymmetrical test will measure the throughput rate for each direction. The test procedure is repeated for a number of legal frame length to produce a table of maximum throughput versus frame length.

For better results, adjust the duration to load the device under test sufficiently.

RFC 2544 Round-trip Latency Test

This test measures the latency experienced by a frame passing and looping back through the network. A specially tagged frame is sent and the time that this frame exits and loops back to the FrameScope is recorded. Round trip latency is the difference

between the entrance and exit times of the tagged frame. The reported latency is an average of at least 20 trials. The test is conducted over a range of frame sizes.

For better results, adjust the duration to load the device under test sufficiently.

RFC 2544 Frame Loss Rate Test

This test measures the percentage of frames that are not forwarded by network devices due to lack of resources for entire range of frame length and data rates.

For a specific frame length, traffic is sent at the maximum rate (100% load). The number of frames received is compared against the number of frames transmitted and shown as a percentage of frames forwarded by the network. The data rate is reduced by step size of 10% (configurable) until two successive measurements, without single frame loss or till 10% traffic level(lowest step size) is reached.

The test is conducted over a range of frame lengths. The test can be performed either in loopback or unidirectional or bi-directional mode. Loopback mode is similar to bi-directional test, the only difference is the destination is a loopback device instead of another FrameScope.

For better results, adjust the duration to load the device under test sufficiently.

RFC 2544 Back to Back Test

This test measures the maximum number of back to back frames that the network can transfer without loss.

For a specific frame length, a burst of back to back frames is sent to a destination device through the network. Similar to the throughput test, a binary search of burst sizes is done to find the maximum burst size that can be forwarded by the network with no loss of frames. The trial length must be at least 2 seconds and the results of at least 50 trials should be averaged for the displayed value. The test is conducted over a range of frame lengths.

The test can be performed either in loopback or unidirectional or bi-directional mode. Loopback mode is similar to bi-directional test, the only difference is the destination is a loopback device instead of another FrameScope.

For better results, adjust the duration to load the device under test sufficiently.

Setting the network for RFC 2544 Tests

You may also have to adjust the network settings to ensure the test can run. In particular:

- NAT has to be disabled or should allow the IP and MAC addresses of the FrameScope™ Pro to pass through.
- Firewalls have to be disabled or should allow the IP and MAC addresses of the FrameScope™ Pro to pass through.
- ICMP ports need to be freed up for the network under test (for information request and reply).
- UDP ports 7 (slave UDP port) and 7777 (master UDP port) needs to be freed up for the network under test.
- During RFC2544 Test, the FrameScope Pro has a default timeout duration after a MAC reset. If the peer does not respond within the stipulated time, the RFC 2544 test will not start and will result timeout. Different switches may have different response time after a MAC reset. Users should select a suitable and appropriate timeout period for the switches under test with advise from their equipment supplier or vendor.

Setting the master FrameScope for RFC 2544 Tests



To perform a RFC 2544 test, you will need two FrameScope or FrameScope and loopback device, one as master and the other as slave. For initial settings on the master unit, see [“General settings for the master FrameScope”](#) on page 53 and then continue with the steps below:

- 1 If the destination is a FrameScope, ensure that the slave FrameScope is ready for RFC 2544 test. For slave FrameScope settings, go to [“Setting the slave FrameScope for RFC 2544 Tests”](#) on page 65.


2 Network Testing with the FrameScope Pro

Performance Tests

- 2 From the Performance Tests menu, select RFC 2544 Test.
- 3 Select **Throughput**, **Frame loss rate**, **back-to-back** and/or **Latency RFC 2544** test options.

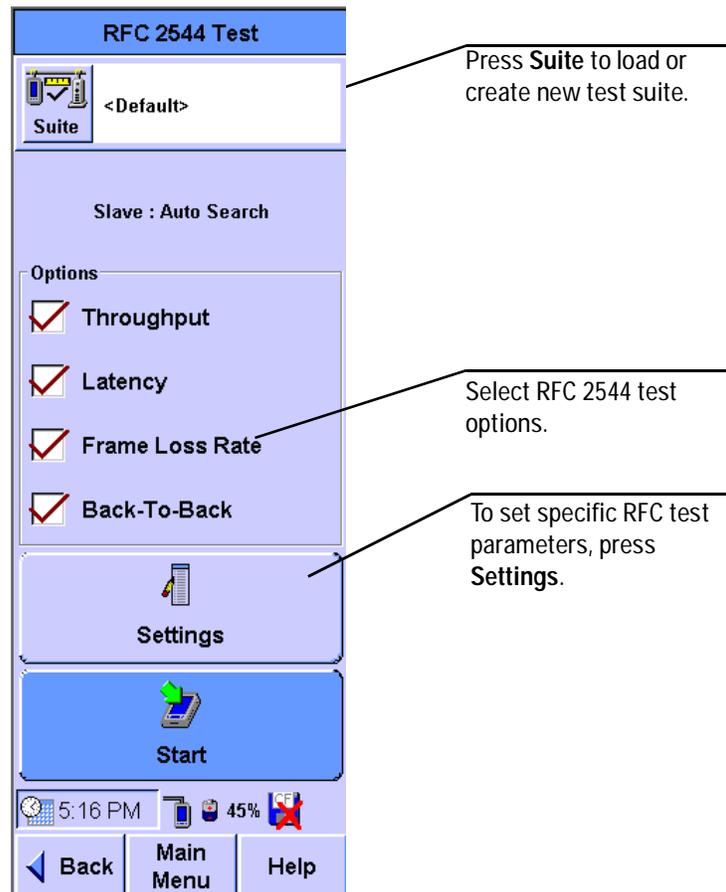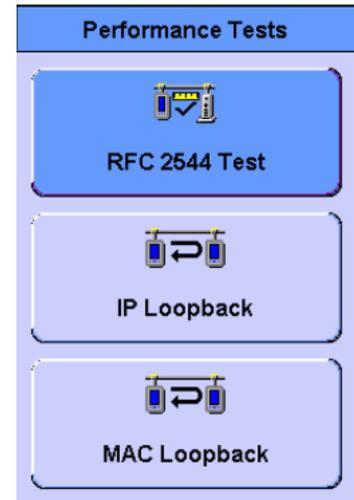

- 4 Optional: If you want to save this RFC 2544 Test suite, or retrieve a previously stored suite, press the **Suite** button.

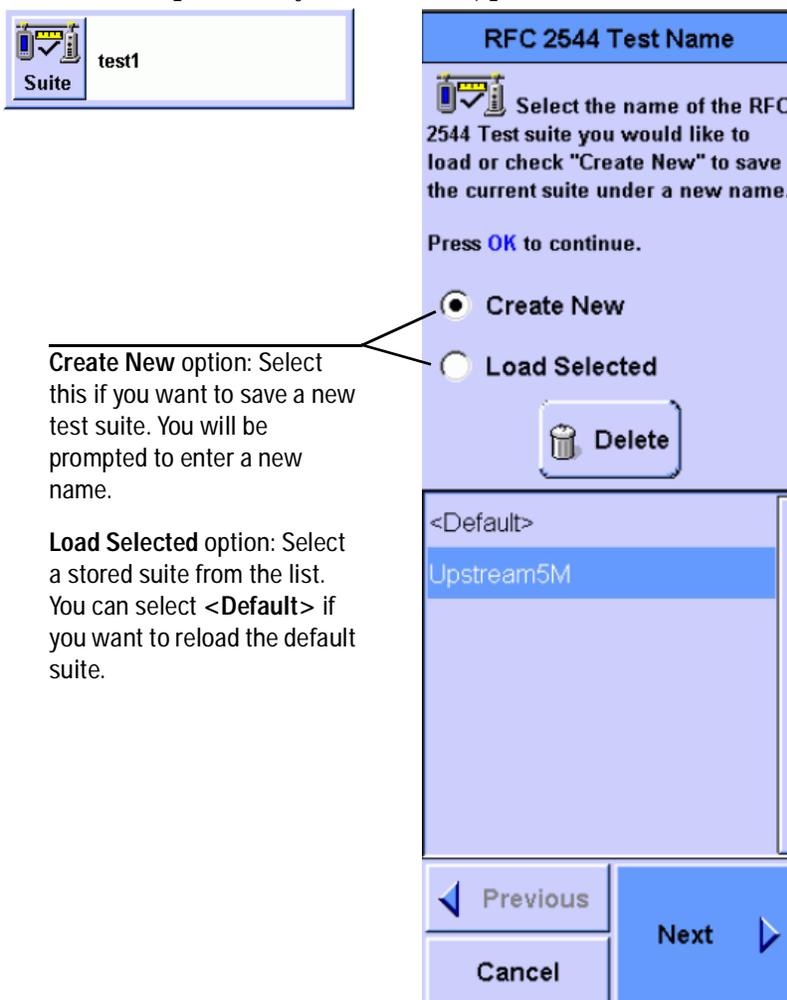

Create New option: Select this if you want to save a new test suite. You will be prompted to enter a new name.

Load Selected option: Select a stored suite from the list. You can select **<Default>** if you want to reload the default suite.

- 5 The initial setting screen is common for all the RFC testing, which allows user to enter destination device and password. The screen is shown below “[Slave Setup](#)” on page 62. In the RFC 2544 Test menu, the remote test device can be either another FrameScope or any loopback device. If loopback device is selected, user has two options:

Option 1: User can select IP layer loopback device, where he needs to specify the IP address or name of the device.

Option 2: User can select MAC layer loopback device, where mac address of the device needs to be entered.

Similarly for slave FrameScope also there are two options:

Option 1: If you do not know the IP address/name of the slave FrameScope, select **Search for FrameScope**.

2 Network Testing with the FrameScope Pro Performance Tests

Option 2: If you know the IP address/name, enter the corresponding IP address/name.


- 6 For specific Throughput, Latency, Frame loss rate, Back-to-Back test settings, press **Next**. For details on specific parameters, go to corresponding sections on “[The Throughput Settings screen.](#)” on page 63 “[The Latency Settings screen.](#)” on page 63, “[Frame loss rate settings screen](#)” on page 64, “[Back to Back settings screen](#)” on page 64 respectively.

Slave Setup



The 'Slave Setup' dialog box for a FrameScope target. It features a title bar 'Slave Setup' and a header with a computer icon and the text: 'Select FrameScope or Loopback for the remote device and respective target type. Enter password if slave FrameScope is password protected.' The 'Target' section has two radio buttons: 'FrameScope' (selected) and 'Loopback'. Under 'FrameScope', there are sub-radio buttons for 'Auto Search' and 'Manual'. Below this is a text field containing '111.104.40.51' and radio buttons for 'Name' and 'Address' (selected). There is a 'Password' field with a lock icon and a 'Timeout (sec.)' field with a spinner set to '60'. At the bottom are 'Previous', 'Next', and 'Cancel' buttons.

Or

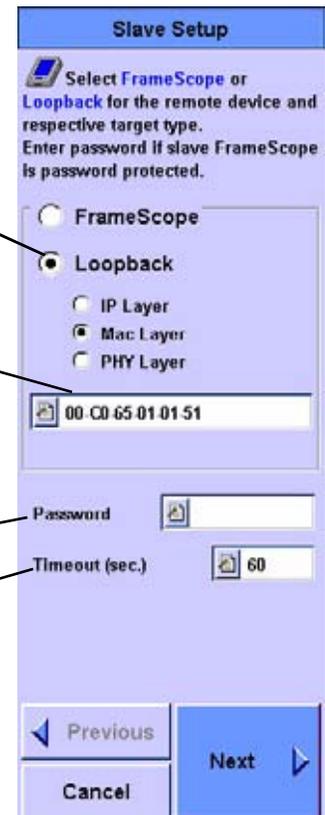

The 'Slave Setup' dialog box for a Loopback target. It features a title bar 'Slave Setup' and a header with a computer icon and the text: 'Select FrameScope or Loopback for the remote device and respective target type. Enter password if slave FrameScope is password protected.' The 'Target' section has two radio buttons: 'FrameScope' and 'Loopback' (selected). Under 'Loopback', there are sub-radio buttons for 'IP Layer', 'Mac Layer' (selected), and 'PHY Layer'. Below this is a text field containing '00 C0 65 01 01 51'. There is a 'Password' field with a lock icon and a 'Timeout (sec.)' field with a spinner set to '60'. At the bottom are 'Previous', 'Next', and 'Cancel' buttons.

Select FrameScope or Loopback for the test

IP Address (or name) of FrameScope or MAC address of the Loopback, depending on the selection

Password Entry

Timeout

The Throughput Settings screen.



Select the frame direction to measure. (if destination is loopback only bidirectional options is present)

Max Data Rate is used for initial frame speed and performance calculation. Enter the maximum data rate of the network under test. If not known, the link speed will be used.

Specify the frame length (minimum of 64 bytes to maximum of 1518 bytes) or select full range to collect all frames of lengths 64, 128, 256, 512, 768, 1024, 1280, and 1518).

Select to measure full range or specify the upstream and downstream rates.

Network connection speed

Duration is the time taken (in seconds) to transmit frames that could be of different length, at different rates.

For better results, adjust the duration to load the device under test sufficiently.

The Latency Settings screen.



The Latency test automatically uses values set for the Throughput test.

If a frame length is set for the throughput test, this cannot be changed for the latency test.

Specify the frame length or select full range to collect all frame lengths.

Specify the number of round-trips for the test.

For better results, adjust the duration to load the device under test sufficiently.

Specify the upstream and downstream utilization rates when performing the Latency test.

2 Network Testing with the FrameScope Pro Performance Tests

Frame loss rate settings screen

Frame Loss Rate Setup

Select direction and enter frame rate, frame length, max data rate, test duration and step size.

Direction

- Upstream
- Downstream
- Bi-Directional

Frame Rate (fps)

- Full Range
- Single

Step Size (%)

Frame Rate

Options
(Link Speed : 10 Mbps)

Max Data Rate

Length 64 Full Range

Duration

Previous

Select the frame direction to measure.(for loopback only bi direction is present)

Select full range to measure frame loss rate specified by step size or specific rate

Max Data Rate is used for initial frame speed and performance calculation. Enter the maximum data rate of the network under test. If not known, the link speed will be used.

Specify the frame length or select full range to collect all frames.

Duration is the time taken (in seconds) to transmit frames

For better results, adjust the duration to load the device under test sufficiently.

Back to Back settings screen

Back-To-Back Setup

Select direction and enter max data rate, frame length, burst duration and iteration.

Direction

- Upstream
- Downstream
- Bi-Directional

Options
(Link Speed : 10 Mbps)

Max Data Rate

Length 64 Full Range

Iterations

Duration

Select the frame direction to measure.(for loopback only bidirectional is present)

Specify the frame length or select full range to collect all frames.

Duration is the time taken (in seconds) to transmit burst frames

For better results, adjust the duration to load the device under test sufficiently.

7 If a password is preset in the slave FrameScope, press the **Slave Password** button on the master FrameScope to enter the

password. You will get a warning, "Permission Denied", if a password is set in the slave FrameScope and not entered correctly in the master FrameScope.

- 8 Press **Start** to begin test.

After pressing the Start button, the master FrameScope starts the activation and synchronization procedures with the target FrameScope by doing the following actions:

- 9 Search (if enabled) and check status of the slave FrameScope
- 10 Activate the slave FrameScope if in idle mode
- 11 Authenticate the master FrameScope if the password is enabled
- 12 Set up the slave FrameScope parameters by synchronizing the master and slave FrameScope for the test
- 13 Start test
- 14 Query test results at end of test
- 15 Stop test

If the target selected is loopback device, all the test setup is done in the master device. There will be no authentication synchronization setup.

Setting the slave FrameScope for RFC 2544 Tests

- 1 From the Network main menu, press **System**.




2 Network Testing with the FrameScope Pro Performance Tests


- 2 From the System Settings Network menu, press RFC 2544 Test.



- 3 Select the **Enable RFC 2544 Test** option. You may set a password in the slave FrameScope to enable the master FrameScope login. Press **OK**.

The slave FrameScope is now ready to perform RFC 2544 tests. Do not run other tests on the slave FrameScope while RFC 2544 tests are in progress.

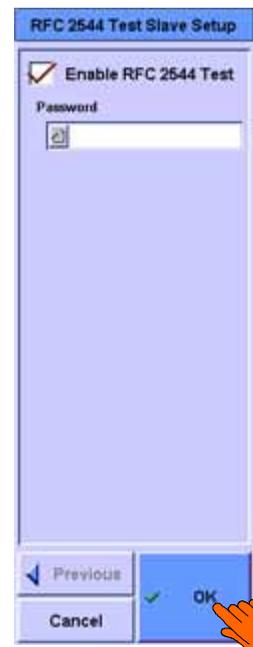

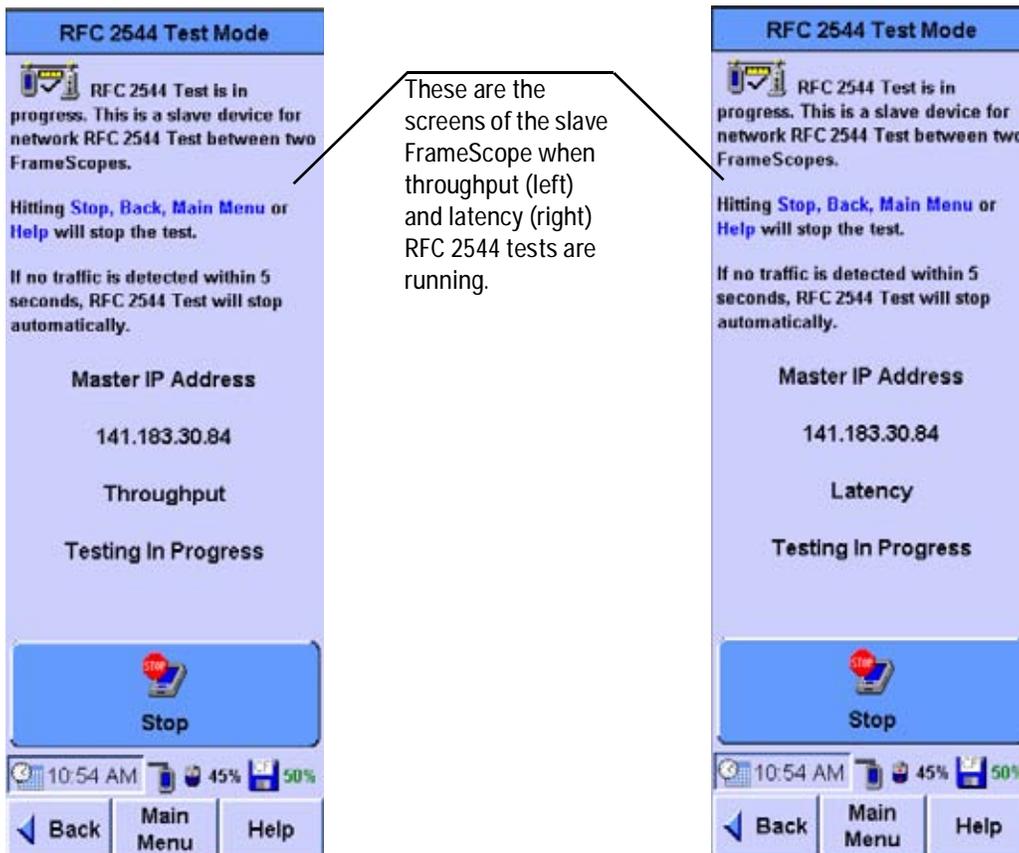

RFC 2544 Test Results

For full range frame length and frame rate throughput RFC 2544 tests, a graph can be plotted to display the RFC 2544 test results. The graph helps analysis of performance between two points in the network quickly and efficiently. These results can then be saved to the compact flash card for further analysis.

2 Network Testing with the FrameScope Pro
Performance Tests

The IP address of the FrameScope. If the name exists, it will be displayed. (for MAC Loopback, MAC address is displayed)

Throughput

141.184.48.51

Test Time: 00:00:11
Frame Length: 64 Bytes

Upstream

Program Rate: 14881 fps
Actual Rate: 14881 fps
Frames TX: 148810
Frames RX: 148810
Errors RX: 0

Plots Save Results Stop Test

Latency

141.184.48.51

Test Time: 00:00:03
Frame Length: 64
Iterations: 5
Current Delay: 0.001270 Sec
Average Delay: 0.005054 Sec
Minimum Delay: 0.001140 Sec
Maximum Delay: 0.009930 Sec

Plots Save Results Stop Test

Program Rate is the frame rate set by user.

Actual Rate is the real frame rate during the test. The rate may differ from Program Rate due to delay or collisions in the network.

The IP address of the FrameScope. If the name exists, it will be displayed. (for MAC Loopback, MAC address is displayed)

Frame Loss Rate

141.184.48.51

Test Time: 00:02:48
Frame Length: 1518 Bytes
Frame Rate: 732 fps
Step Size (%): 90

Upstream

Frames TX: 4392
Frames RX: 4392
Errors RX: 0
Frames Loss: 0

Plots Save Results Stop Test

2:16 PM 45% 50%

Back Main Menu Help

Upstream - frames sent from / received by the master FrameScope.

Back-To-Back

141.184.48.51

Test Time: 00:00:21
Frame Length: 64 Bytes
Iterations: 4
Frame Rate: 14881 fps
Burst Size: 29762


Upstream

Frames TX: 29762
Frames RX: 29762
Errors RX: 0

Plots Save Results Stop Test

2:39 PM 45% 50%

Back Main Menu Help

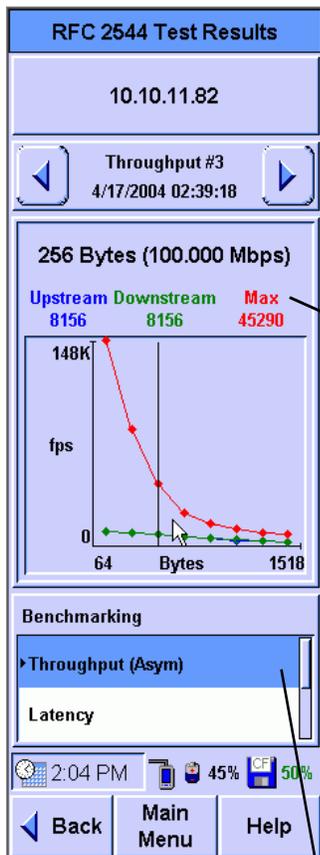

The IP address of the FrameScope (for loopback scenarios, MAC address). If the name exists, it will be displayed.

The throughput/ latency test set, according to frame size. Press the left or right button to go to the previous or next test set respectively.

Upstream - throughput rates of frames sent from master FrameScope.


Downstream - throughput rates of frames sent from slave FrameScope.

(For bidirectional, single throughput rates for both direction will be plotted.)

Max - maximum theoretical frame rate.

Below frame directions are frame throughput rates in frames per

Click this to change the Y axis in the chart display.eg., display changes in fps, bps,% (only for throughput results)

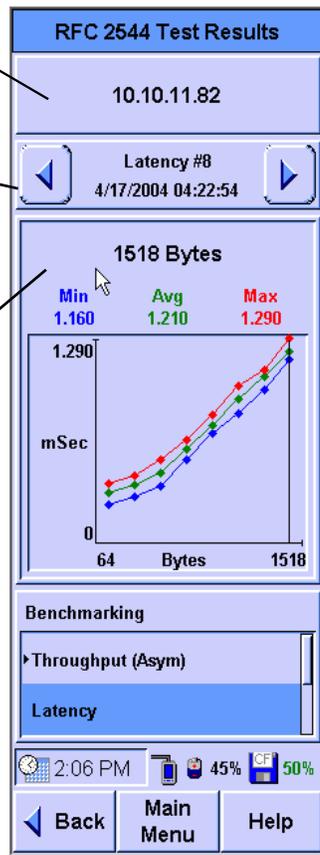

The minimum, average and maximum delay of frame obtained from an average of multiple measurements depending on the number of iterations set.

2 Network Testing with the FrameScope Pro Performance Tests

The IP address of the FrameScope. If the name exists, it will be displayed.(mac address for loopback)

Frame loss rate or back to back tests. For Frameloss rate, load percentage will be displayed along with maximum data rate.

Used to display the result screen for different frame length. The graph can be traced easily from the color of the frame length display.

Select to browse between graphs for upstream and downstream bi-directional test results(valid only for bi directional test)

RFC 2544 Test Results

10.10.11.82

Frame Loss Rate #6
60% (100.000 Mbps)

Frame Length
64 Bytes

Upstream
92.1

Loss(%)

Load(%)

Benchmarking

Frame Loss Rate

Back-To-Back

2:11 PM 45% 50%

Back Main Menu Help

RFC 2544 Test Results

10.10.11.82

Back-To-Back #1
4/17/2004 05:30:33

64 Bytes (100.000 Mbps)

Bi-Directional
1572

Frame Rate
148810

Frames

Bytes

Benchmarking

Frame Loss Rate

Back-To-Back

2:16 PM 45% 50%


Back Main Menu Help

Locating a Port with Blink Port

You can use the FrameScope's test port, located on the side, to locate a network connection's port on a hub or switch. The FrameScope will toggle the port's link indicator on and off causing it to blink.

This section describes how to use the Blink Port feature of the FrameScope Pro.

- 1 Connect the FrameScope to the remote end of the circuit whose hub you want to locate. For example, connect the unit at the network wall circuit.
- 2 Press the **Tools** button on the main Network tab to display the Tools menu.

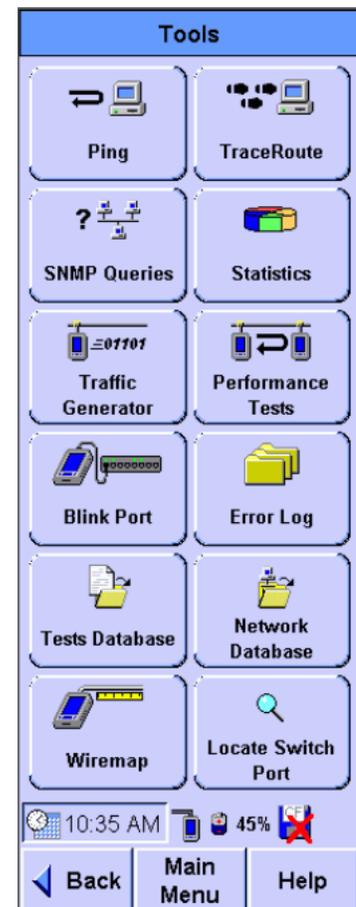


- 3 Press the **Blink Port** on the tools menu to call the Blink Port screen.
- 4 To begin blinking the port, press the **Start** button.
- 5 Observe the hub or switch and note which port's link indicator is blinking. That will be the port for the tested circuit.
- 6 To stop the blink, press the **Stop** button on the Blink Port screen.




Viewing the Error Log

This section describes how to view the FrameScope's error log. The error log tracks and displays any network problems that are detected by the FrameScope Pro.

- 1 From the main Network tab, press the **Tools** button to display the Tools menu.

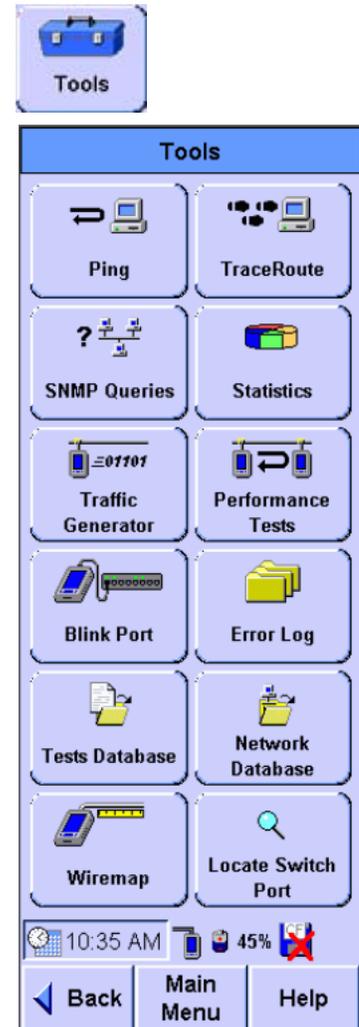


- 2 Press the **Error Log** button to call the Error Log screen. You can also click on the shortcut, in the Main Menu to get to this screen.
- 3 Observe the errors listed in the log.
- 4 Press the **Show All** button to expand the error list and view all errors that were previously acknowledged by using the **Ack** button.
- 5 Press the **Ack** button to acknowledge the errors without clearing the log.
- 6 Press the **Reset** button to clear the log.

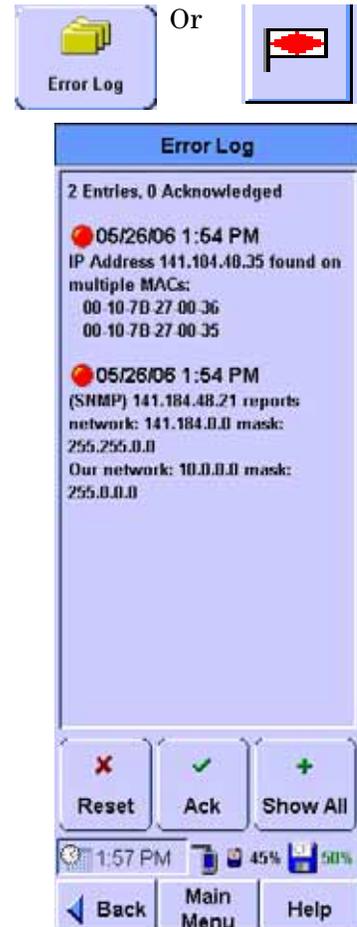


WireMap Adapter Testing

WireMap testing checks for proper continuity and termination of cables. It is used together with the WireMap Adapter .

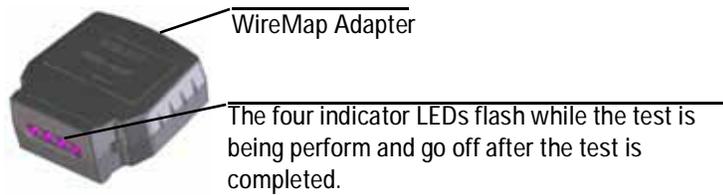

The wiremap adapter is connected at the far end of a link or channel to display and identify point-to-point four twisted pairs connection.

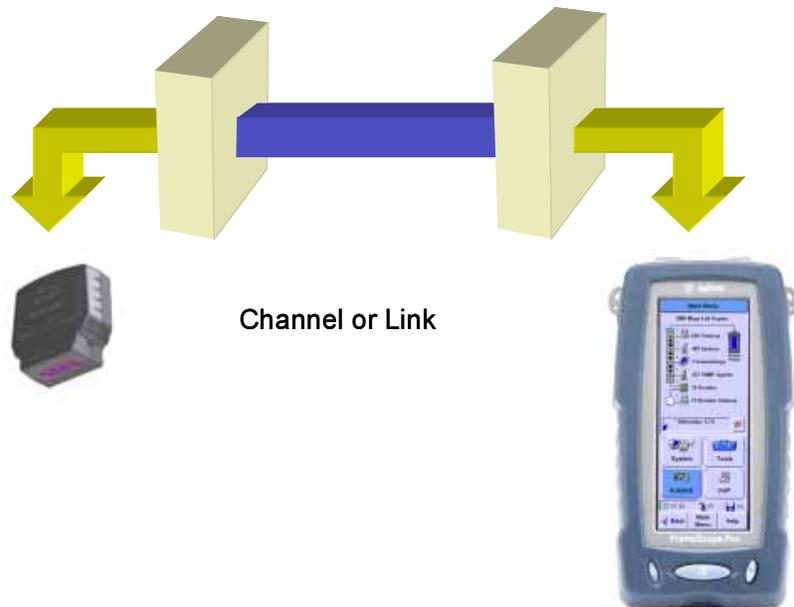

The test identifies the following faults:

- Short circuit
- Open circuit
- Reversed pairs
- Crossed pairs
- Shield continuity faults

WireMap Adapter Operation

When the wiremap adapter is connected to the FrameScope, the FrameScope sends a sequence of DC, TTL level signals through the wire pairs in order of a few 100 milliseconds. For each step of this sequence of signalling, the DC voltage is measured by the receiver of the FrameScope. The FrameScope software identifies wiremap information based on the readings.

LED Indicators

The wiremap adapter has four LEDs, each connected to a wire pair. The wiremap adapter has four LEDs, each connected to a wire pair. During the test, the LEDs flash. Once the test is completed, the LEDs turn off.

Procedure for WireMap Testing


- 1 Connect the FrameScope and cable under test to the WireMap Adapter.
- 2 From the Network Main Menu, press Tools, then press WireMap.
- 3 Click Start Test.



2 Network Testing with the FrameScope Pro

WireMap Adapter Testing

The test will run for a few seconds before displaying the results. If all tests pass, the results screen will display “Pass”, similar to the screen below.

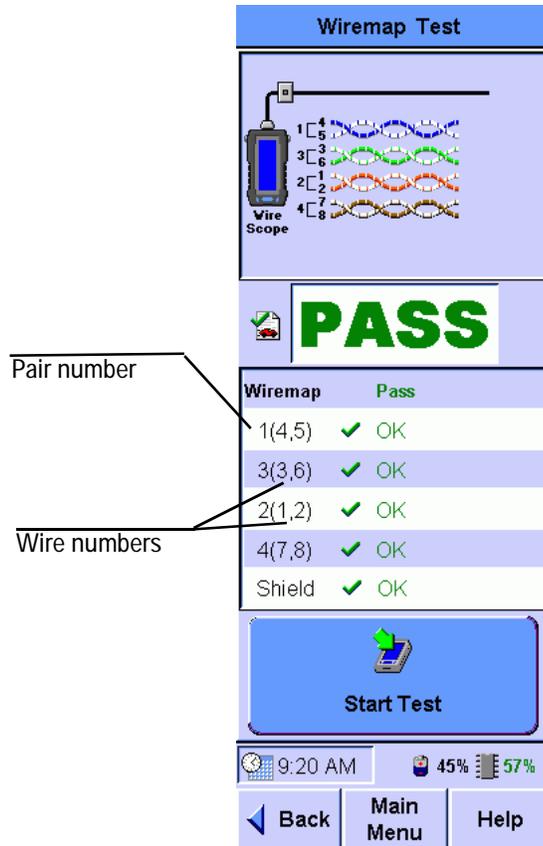

Otherwise, results will show “Fail” with details of error in red.

Using the Test Database

The FrameScope Pro allows you to store (you must have a CompactFlash™ card installed) Autotest and Performance Test results for later review and downloading. See [page 31](#) for saving Autotest results, [page 56](#) for saving loopback test results and [page 72](#) for RFC 2544 test results. You can recall previously stored test data using the Tests Database tool.


This section describes how to recall and delete stored tests.

- 1 Press the **Tools** button to call the Tools menu.
- 2 On the Tools menu, press the **Tests Database** button.

Three folders appear in the Network Test Database screen. Network Autotest results are stored in the **Network Autotest** folder. RFC 2544 throughput and latency test results are stored in the **RFC 2544 Test** folder. IP and MAC loopback test results are stored in the **Loopback Tools Results** folder.

The number before the folder names indicates the number of stored files in the folder.


- 3 Select the folder and press the + sign, or the **Expand List** button.
- 4 Select the test results file, then press the **View** button to display the detailed test results.
- 5 To delete a stored test, select the test results file and press the **Delete** button.

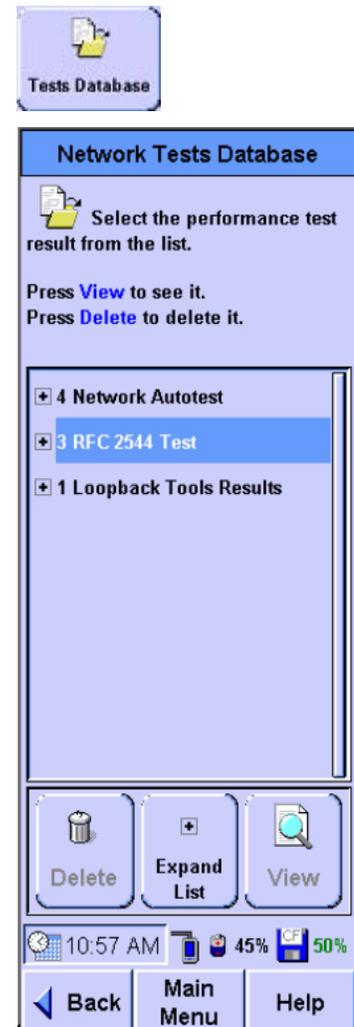

Using the Network Database

The FrameScope Pro allows you to store (only on a CompactFlash™) network topologies for later review and downloading (see “Using the Stations List” on page 33). You can recall previously stored network data using the Network Database tool. This section describes how to recall and delete stored network data.

- 1 Press the **Tools** button on the Network Main Menu to call the Tools menu.
- 2 On the Tools menu, press the **Network Database** button to call the Network Database screen.
- 3 Network resources are displayed in a list. Use the Scroll button or a stylus to select the resource you want.
- 4 Use the Expand and Collapse buttons to show the items under the selected resource type.
- 5 When a network resource is selected, press the **View** button to view detailed information about it.

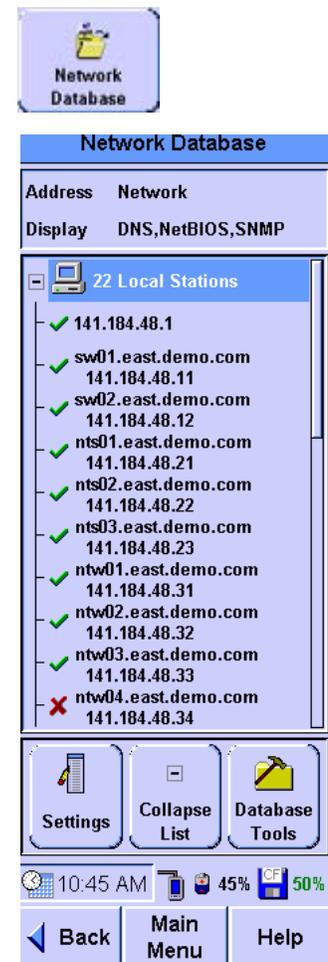

NOTE

The Expand, Collapse, and View buttons occupy the same spot on the screen. The button changes depending on what you have selected in the network list.

- 6 To access the Database Tools menu press the **Database Tools** button.



The screenshot shows the "Network Database" interface. At the top, there is a header "Network Database" in a blue bar. Below it, there are two rows of text: "Address Network" and "Display DNS,NetBIOS,SNMP". A "Database Tools" menu is open, showing several options: "Update Display" (with a refresh icon), "Erase Station List" (with a trash can icon), "Load/Save Station List" (with a floppy disk icon), and "Delete Selected Station" (with a trash can icon). A "Cancel" button with a red 'X' is at the bottom of the menu. Below the menu, there are three buttons: "Settings" (with a notepad icon), "Collapse List" (with a minus sign icon), and "Database Tools" (with a folder icon). At the bottom of the screen, there is a status bar showing the time "5:30 PM", battery level "45%", and CPU usage "50%". Below the status bar are three buttons: "Back" (with a left arrow icon), "Main Menu", and "Help".

2 Network Testing with the FrameScope Pro Using the Network Database

- 7 To save the current network, or to load previously stored network data, press the **Load/Save Station List** button.
- 8 Use the buttons on the Station List name screen to store the current network data, load stored data, or delete stored data. If you are storing data, you will be prompted to enter a name for the data file.



Locating Switch Ports

The FrameScope Pro allows you to identify the switch ports being accessed by the FrameScope or any address on the network.

The FrameScope will only locate switches in the same subnet. Knowledge of the correct community string and port is essential.

This section describes how to operate the Locate Switch Port tool.

- 1 Press the **Tools** button to call the Tools menu.
- 2 On the Tools menu, press the **Locate Switch Port** button to call the Locate Switch Port screen.
- 3 Select the target, either this FrameScope or enter the name or address of the device you want to locate.
- 4 The SNMP Settings button allows you to add SNMP communities and ports to the default “public” community and default port 161 or to change those set up for auto discovery.



Locate Switch Port

Select **This FrameScope** to find out where this FrameScope is located or enter the address or name of the station to locate.

Press **SNMP Settings** to change the SNMP community or ports.

Target

This FrameScope

Name Address

SNMP Settings

Start

4:28 PM 45% 50%

Back
Main Menu
Help


2 Network Testing with the FrameScope Pro


Locating Switch Ports

- 5 Press **Start** to see the results of the Locate Switch Port.
- 6 Use the **Scroll** button to scroll through the list if necessary.

NOTE

The order of the information presented is not useful and should not be used in interpreting the list.

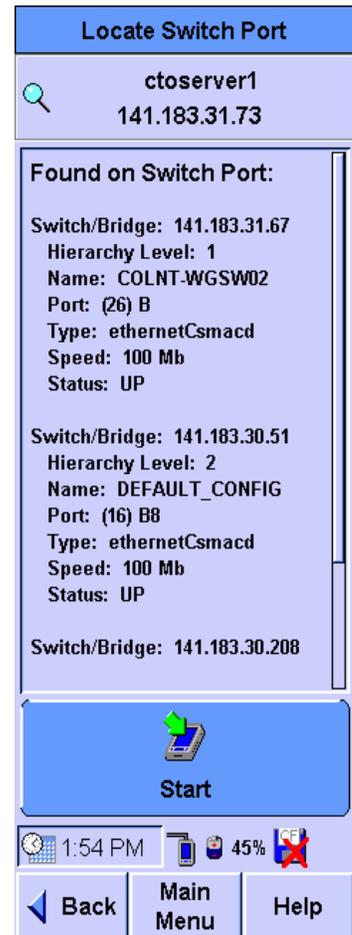

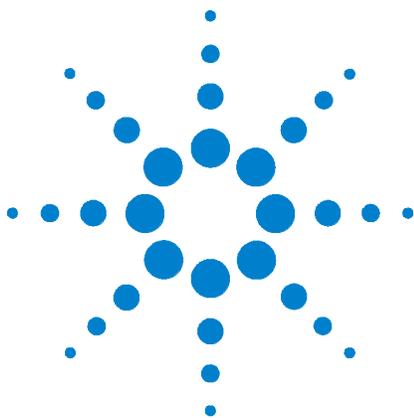

3 Voice Testing with the FrameScope Pro

Voice Testing Overview	86
How the FrameScope Pro Tests Voice Quality	87
Running a Voice Test	88
Interpreting Results	91
Network Settings	93
License Information	93
How to Save and Retrieve Results	94

The Agilent FrameScope Pro Voice Performance Analyzer is a powerful handheld instrument that measures the performance of voice over IP networks.

This chapter deals with voice testing.



Voice Testing Overview

The Voice Quality Analysis software for the Frame Scope Pro, gives you analysis options for voice-over-IP (VoIP) environments that traditional tests do not. Including:

- Access, manage, and run Voice Quality Tests end-to-end across widely deployed Voice networks.
- Test VoIP network components such as routers, gateways, PBXs, and switches.
- Compare VoIP quality directly with existing toll quality networks.
- Test VoIP systems to gather end-to-end voice quality information.
- Augment other traditional telephony test suites such as Transmission Impairment Measurement Set (TIMS).
- Measure fundamental voice quality metrics such as delay, Jitter and Mean Opinion Score (MOS).

How the FrameScope Pro Tests Voice Quality


To test voice quality and measure audio circuit characteristics, the FrameScope Pro VoIP does two things:

- It places and/or answers one telephone call at a time to establish voice connections. This voice connection (and the transmission media and equipment of which it is comprised) becomes the *network under test*. Think of the FrameScope Pro VoIP as a telephone or other telephony device positioned at the ends of voice circuits.
- Once the FrameScope Pro VoIP has established at least one telephone call, it transmits audio test packets onto that circuit and measures how those packets are affected by traveling through the network under test. The FrameScope Pro VoIP can send test packets in one direction at a time depending on how that circuit was established.

Running a Voice Test

This section describes how to run an VoIP Test on the network using the FrameScope Pro.

From Main Menu, **VoIP** button has to be pressed to enter the VoIP Test mode. Once you do so, SIP Settings window will appear with the configurable parameters.

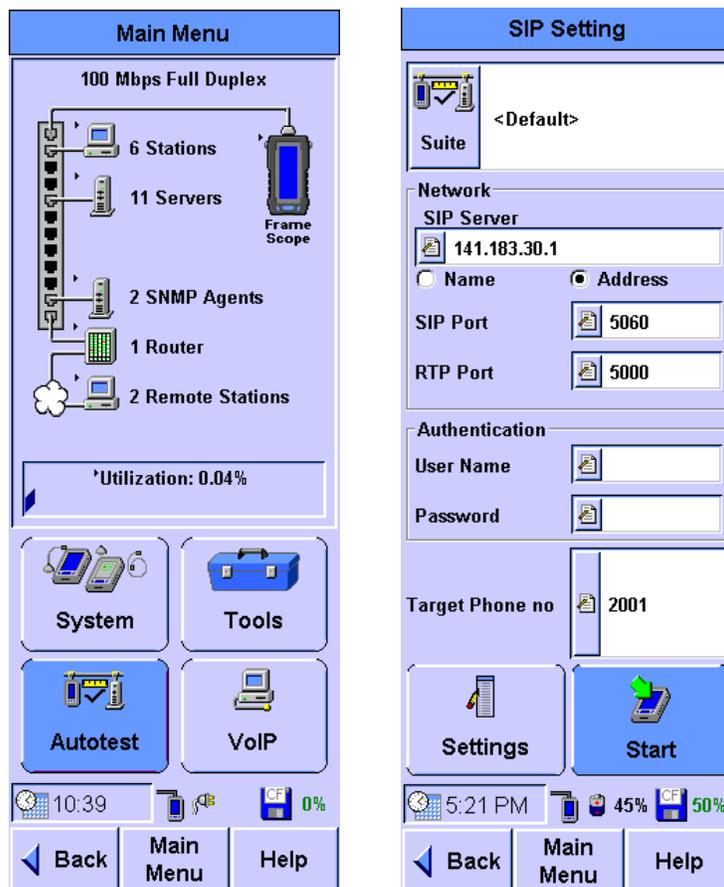

The settings can be saved and retrieved through the Suite window/button on the left hand top corner. For additional settings, click on the **Settings** button (refer the image on the next page for detailed description).

NOTE

The user name for authentication with the SIP server may not be the same unique ID or phone number used for the SIP phone call or test.

Codec to be used for data transfer:
G711 μ law or G711A law

If checked
FrameScope will auto
answer incoming call

The maximum allowed
time between session
refresh requests in a
dialog before the session
will be considered timed
out.

Minimum value that
can be set for the
session interval, this
value is called the
minimum timer

This has to be set to
the entity (UAC, UAS
etc.) which initiates
reinvite.

Domain name for SIP
server (which requires
name instead of IP),
when DNS is not
present in the
network.

Phone number that
FrameScope registers as its
own.

Headsets call for live audio.

This box, when checked, registers
with Registrars/SIP server.
Otherwise calls directly the IP
address specified in the SIP server
box in the SIP Setting window.

This box, when checked, allows
the end point to send or answer
reinvite and configure the
associated session interval,
min-SE interval and refresher.

Nickname for the mode/option as
determined by the user.

Drop down list allows selecting
different stack options.

3 Voice Testing with the FrameScope Pro

Running a Voice Test

When the **Start** button is pressed in the SIP Setting Window, The FrameScope Pro registers with the registrar/ SIP Server as per the options selected by the user in the SIP setting Window asks to do so, before placing a call or sending an Invite message.

Else, it calls directly to the IP address specified in the SIP Server window.

The SIP call is placed to the Target Phone number with either G711 a-LAW or G711 u-LAW as per user selection on the Settings screen. After SIP signaling is completed, data flows across the network and the measurement statistics appear in the Test Result Display Window. The user can save the test results to the CompactFlash™ using the **Save Results** button.

Once the test stops, the SIP signaling log can be seen when user clicks on **Details** button. Graphical plots of the VoIP test results with respect to time can also be viewed offline. For further information on this topic refer to the section below.

The screenshot displays the 'SIP Phone Test' window. It is divided into several sections:

- Signalling:** Shows 'Caller: 2005', 'Callee: 2001', and 'Duration:00:00:32'. Below this is a status bar that says 'Stopping Test Pls Wait...'
- Quality of Service:** A table of performance metrics:


R-Factor	0.00
Reference R-Factor	93.20
Mean Opinion Score	0.00
Reference MOS	3.84
Total Packets Sent	0
Total Packets Lost	0
Packet Loss Ratio	0%
Total Packets Discarded	0
Packet Discard Ratio	0%
Inter-arrival Jitter	0ms
Packet Round-trip Delay	0ms
- Buttons:** Three buttons are visible: 'Details' (with a magnifying glass icon), 'Save Results' (with a floppy disk icon), and 'Stop Test' (with a red stop sign icon).
- System Bar:** Shows the time as 2:05 PM, a battery level of 45%, and a CompactFlash (CF) icon.
- Navigation:** At the bottom, there are three buttons: 'Back' (with a left arrow), 'Main Menu', and 'Help'.

Interpreting Results

The statistics measured are plotted in graphical format. The graph is plotted offline with timing info displayed as iterations (the interval is 500 ms) in X-axis and R-Factor, MOS, Packet Loss Ratio, Packet Round Trip delay, Inter Arrival Jitter values in Y-axis.

Each iterations shown is based on the RTCP message exchange during the VoIP test.

- The Inter-arrival jitter, Total Packet Loss and Packet Loss Ratio are based on the received RTP packets. Round trip delay is based on other part RTCP packet information,
- R-FACTOR, MOS are based on Inter-arrival jitter, total packet loss and packet loss ratio and Round trip delay, if the other part has no RTCP packet sent, then the Round Trip Delay will set to zero.
- Total Packets Sent are counts packets sent from the FrameScope Pro which is displaying the results and not from the other party.
- Total Packet Lost. This is based on "Cumulative Number of Packets Lost" in RFC1889/3550.
- Packet Loss Ratio. This is based on "Fraction Lost" in RFC 1889/3550
- Total Packets DiscardedTotal Packets Discarded refers to the number of packet dropped at the receiving side if there are erros in RTP header information,
- Packet Discard Ratio.This refers to the interval Packet Discard Ratio, which is the discarded packet ratio for each RTCP interval.

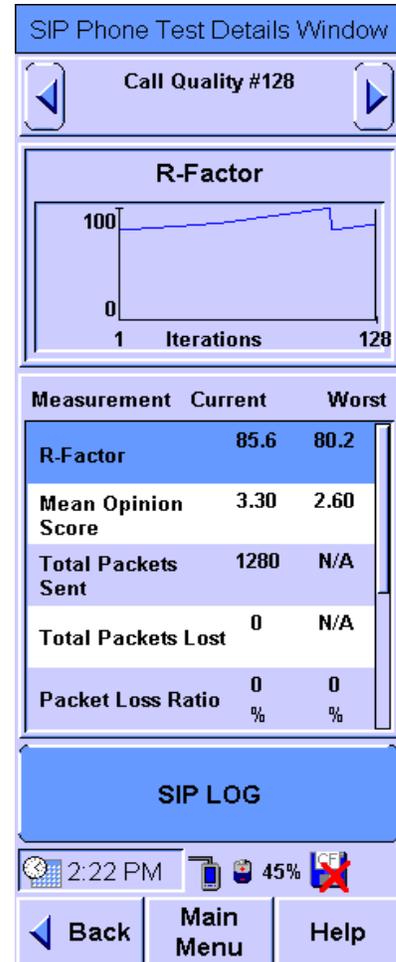

3 Voice Testing with the FrameScope Pro Interpreting Results

SIP Phone Test Details

Call Quality #10
10/26/2004 11:07:23

Mean Opinion Score

Measurement	Current	Worst
R-Factor	92.9	89.9
Mean Opinion Score	3.50	3.50
Packet Loss Ratio	2 %	2 %
Interarrival Jitter	200 mSec	200 mSec
Packet Round-trip Delay	900 mSec	900 mSec

SIP Log

2:38 PM 45% 50%

Back Main Menu Help

SIP Phone Test Details

Call Quality #12
10/26/2004 11:07:23

Packet Loss Ratio

Measurement	Current	Worst
R-Factor	92.9	89.9
Mean Opinion Score	3.50	3.50
Packet Loss Ratio	2 %	2 %
Interarrival Jitter	200 mSec	200 mSec
Packet Round-trip Delay	900 mSec	900 mSec

SIP Log

2:37 PM 45% 50%

Back Main Menu Help

SIP Phone Test Details

Call Quality #7
10/26/2004 11:06:58

Packet Round-trip Delay

Measurement	Current	Worst
R-Factor	90.7	89.9
Mean Opinion Score	4.90	3.50
Packet Loss Ratio	2 %	2 %
Interarrival Jitter	80 mSec	200 mSec
Packet Round-trip Delay	680 mSec	900 mSec

SIP Log

2:44 PM 45% 50%

Back Main Menu Help

SIP LOG Details

Duration:00:00:15
Callee:2005
Caller:2005

```

8/24/2005 14:48:25.0
| <== (Un)RegSuc... <==|
8/24/2005 14:48:25.0
| <==> Waiting <==>|
8/24/2005 14:48:53.0
| <== Invite <==|
8/24/2005 14:48:53.0
| ==> 100 Trying ==>|
8/24/2005 14:48:53.0
| ==> 180 Ringing ==>|

```

Previous OK

Cancel

Network Settings

The FrameScope Pro VoIP software can connect to the network using Point-to-Point-Protocol Over Ethernet (PPPoE) or IP Over Ethernet (IPoE). This setting is available in the Network Settings screen, described in “Network Settings” on page 108.

License Information

This shows the features available in the current version of the software. When user selects this from the Systems Menu and clicks Edit , License Details will be displayed with all the available features. User can enable new features by entering a license key. To purchase a license key, please contact your Agilent salesperson.

License Details

RFC 2544 Test

VoIP

License Key  *****

OK

1:03 PM 45% 50%

Back Main Menu Help

How to Save and Retrieve Results

The FrameScope Pro VoIP test results are saved to the CompactFlash™.

You can recall previously stored test data using the Tests Database tool. This section describes how to recall and delete stored tests. Press the **Tools** button to call the Tools menu. On the Tools menu, press the **Tests Database** button.


FrameScope Pro VoIP test results are stored in the FrameScope Tools Results folder. The number before the folder names indicates the number of stored files in the folder.

Select the folder and press the + sign, or the **Expand List** button.

Select the test results file, then press the **View** button to display the detailed test results.

To delete a stored test, select the test results file and press the **Delete** button.

The VoIP Test results can also be retrieved from the FrameScope Pro when its web server is enabled. The results are available in .CSV, HTML or JAVA format. (Please refer to “[Remote Control](#)” on page 114).

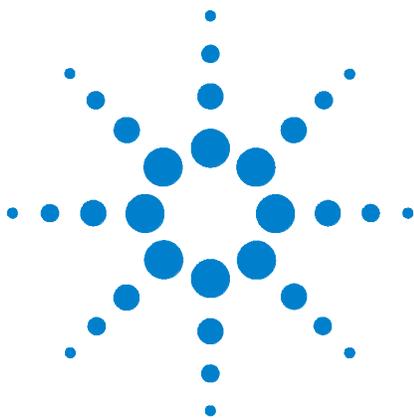


4 System Operations

The Status Display Area	96
The System Menu	97
System Information	98
License Details	99
Storage Setup	100
Battery Status	101
Time and Date Setup	102
User Interface Setup	103
Boot Password	104
Touchscreen Calibration	105
Restore Default Settings	106
Network Settings	108
Restoring the Default MAC Address	113
Remote Control	114
SNMP Settings	121
Demo Mode	122

This chapter describes the various system operations of the FrameScope Pro.



 The Status Display Area



The status display shows the current time set on the FrameScope Pro, talkset status, battery status, and storage status.

Clock Display

The clock shows the time of day. It can be set in the Time and Date section of the System settings menu.

Network Connection Status



FrameScope icon: When in the Network tab, the FrameScope icon appears. If a red X is shown on the connection, it means the FrameScope is not connected to the network.

Battery/Power Display



Ac Power icon: This icon appears when the ac power adapter is connected to the FrameScope and an ac power source. The number next to the icon is the percent of full battery charge.



Battery Charge icon: When the FrameScope operates using battery power, this icon shows the current battery state. The percentage figure is the amount of charge remaining in the battery.

Storage Status


Storage icon: The storage icon indicates the status of CompactFlash™ and the percentage of store available in it.



= CompactFlash™ Card is installed. In the example, the card is half full. A red X on the icon means that the CompactFlash™ card is not installed.


The System Menu

The FrameScope Pro System Menu is displayed by pressing **System** in Network Main Menu.

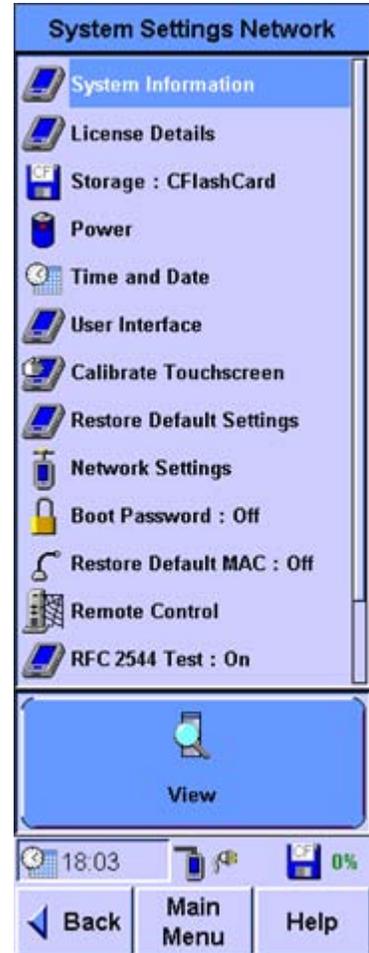

System Information

Pressing **System Information** then pressing **View** on either System Settings menu displays the FrameScope serial number, software and hardware revision numbers.

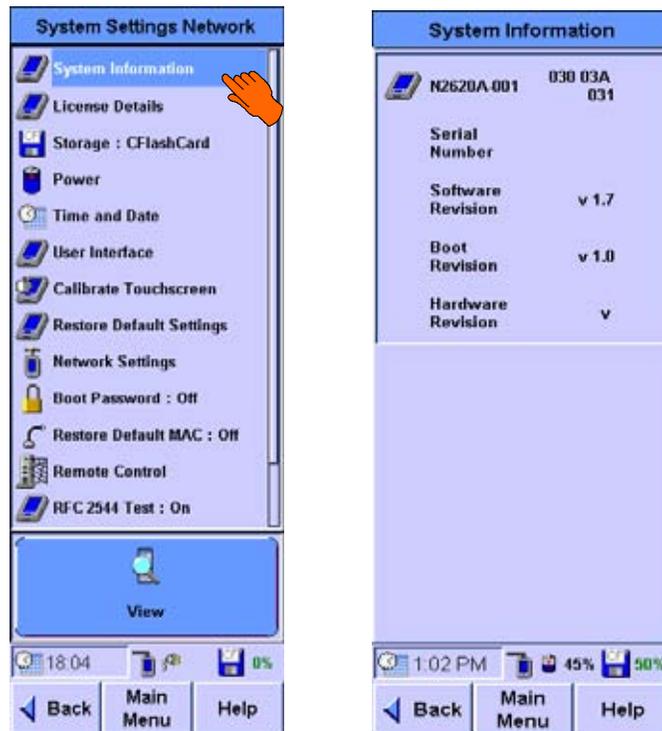


License Details

NOTE

For the License Details of FrameScope Pro with VoIP Option please refer to “License Information” on page 93.

This shows the features available in the current version of the software. When user selects this and clicks **Edit** , License Details will be displayed with all the available features. User can enable new features by clicking the checkbox and entering the corresponding license key. For acquiring license key, please contact the Technical Support Centre

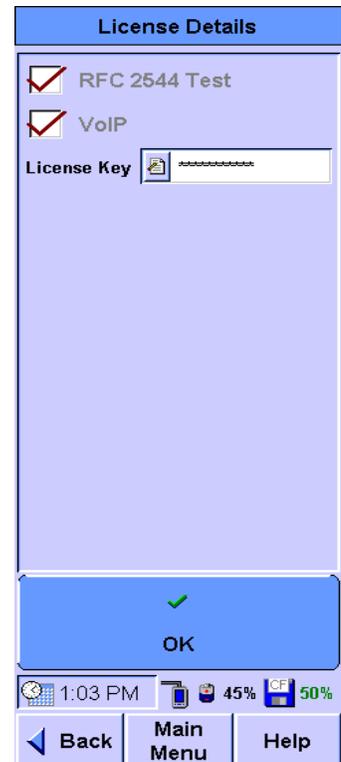


Storage Setup

This allows you to see the total capacity and percentage of usage of CompactFlash™ and internal flash. If the user selects next and CompactFlash™ is present in the system, the option to format the CompactFlash™ pops up. User can select YES to proceed with the format or press cancel.



Battery Status

To view the current battery status press **Power** then press **View**. The display also shows an estimated remaining battery time.

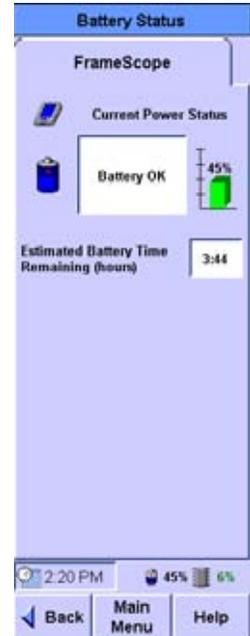

Time and Date Setup

To set the time and date on the FrameScope, press **Time and Date**, then press **Edit**. The Time and Date Setup screen allows you to set the Month, Day, Year, and Time as well as the display method for each.



User Interface Setup

The User Interface Setup screen is were the following choices are made:

Enable Touch Click ON/OFF


Enable Sleep Timeout ON/OFF - A screen touch will wake the screen. When enabled the Sleep Interval setting bar is displayed.

Sleep Interval (Minutes) how many minutes (1-15) without a screen touch or button press until the unit goes to sleep.

Enable Speaker ON/OFF

Volume Control Scale of 1 to 15

Contrast Scale of 1 to 15

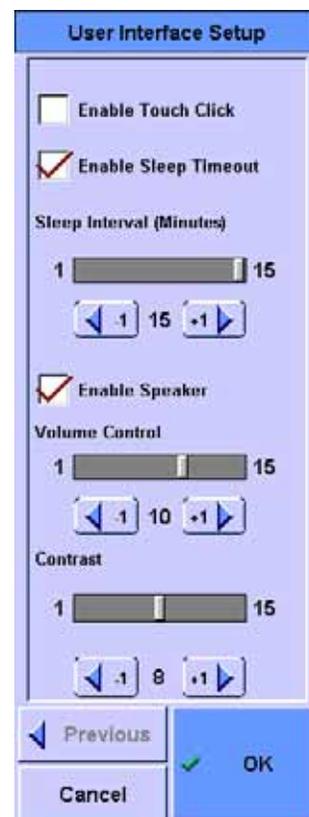

Boot Password

To protect the FrameScope Pro from unauthorized use you can set a password that must be entered before the instrument boots up. By default, the FrameScope Pro has no password protection.

To enable the boot password:

- 1 In the system menu, select **Boot Password**.
- 2 To enable the password, make sure the box **Password checking enabled** is selected.
- 3 If you want to enter a new password, or change the existing password:
 - a Make sure the box **Change Password** is selected.
 - b Enter the password in the **New Password** and **Confirm New Password** fields.
- 4 Press **OK**.



The screenshot shows the 'Boot Password Setup' dialog box. It has a title bar with the text 'Boot Password Setup'. Inside the dialog, there are two checkboxes: 'Password checking enabled' and 'Change Password'. Below these are two text input fields: 'New Password:' and 'Confirm New Password:'. At the bottom of the dialog, there are four buttons: 'Previous' (with a left arrow), 'Cancel', 'OK' (with a checkmark), and 'OK' (with a checkmark).

Touchscreen Calibration

If it seems that the FrameScope is not responding correctly to taps on the touch screen, you may need to calibrate the touch screen to bring it into alignment with the underlying display.

To calibrate the touch screen:

- 1 Ensure that you have the stylus available.
- 2 On the Main Menu, press **System**. The System Settings screen displays.
- 3 On the System Settings screen, press **Calibrate Touch Screen**, then press **Edit**. A Calibration screen displays.
- 4 Using the stylus, press the screen where the onscreen instructions direct. Since the co-ordinate readings are very sensitive, you should touch exactly on the point where the screen drawing for the stylus indicates.
- 5 When the calibration is complete, the System Settings screen displays.




Restore Default Settings

The following procedure describes how to restore the FrameScope Pro to the configuration values that were set when your unit was shipped from the factory.

- 1 From the Main Menu on either the Network tab, press the **System** button. The System Settings screen is displayed.
- 2 Use the Scroll button to select **Restore Default Settings**.



- 3 Press the **Edit** button or press the **OK** button to call the Restore Defaults screen.
- 4 If you want to clear data in the internal flash and return to the default settings and profiles of the FrameScope, press the **Format Internal Flash** checkbox.
- 5 Press **OK** to restore the factory-programmed settings.
- 6 Because this will erase any current settings, you are asked to confirm. In the subsequent confirmation dialog boxes press **Yes** to accept the resets. Press **No** to cancel the resets and return to the System Settings screen.
- 7 If the Format Internal Flash option is selected, you **MUST** re-install the FrameScope Pro software. See the FrameScope Pro Upgrade Utility manual for details on how to upgrade or re-install.

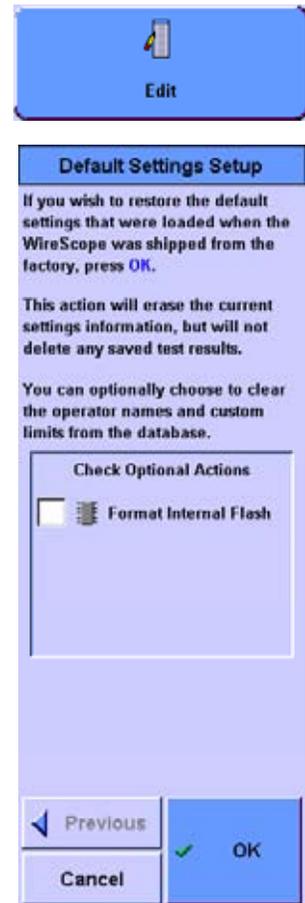


Network Settings

The Network Settings screen shows a summary of the network configuration. This screen may also be accessed by pressing on the FrameScope icon on the right of the Main Menu. This includes the following:

NOTE

For the Network Settings of FrameScope Pro with VoIP Option please refer to the Voice Testing Chapter page 93

The Network Settings screen can be reached by pressing on the FrameScope Icon on the Main Menu or by pressing **System** from the Main Menu and then pressing **Network Settings** and then **Edit**.

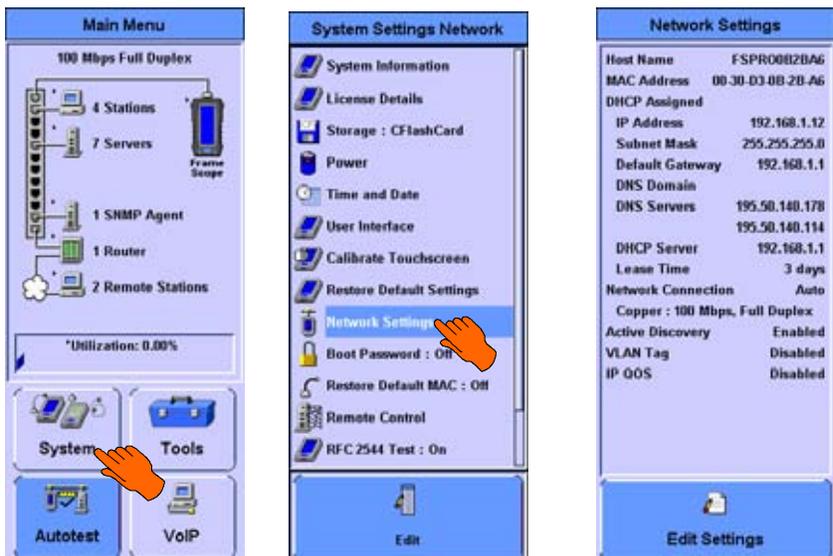

The information displayed includes Host Name (FrameScope Pro name, which by default is FRSCOPE plus the last three hex bytes of the MAC address, but it can be changed,) MAC address of the FrameScope Pro (This is a factory setting that identifies FrameScope uniquely among all Ethernet devices.), information assigned by DHCP or manually, Network Connection (Auto or Manual,) and whether Active Discovery and Measure Length are enabled or disabled. To change any of the settings, press **Edit Settings**.

The first Network Settings Setup screen allows you to select PPOE or IP addressing.

CAUTION

MAC address modification is not advisable.

If a modification is unavoidable, the changes should be done with extreme care so that it will not conflict with any MAC address that is in use.

- **MAC Address** - The MAC Address of the FrameScope. Usually it contains a value set in the factory. But this field can be used to change the MAC address if this is necessary for a specific case or to satisfy security requirements.

The MAC address can be reset to the factory default on the next boot-up as described in [“Restoring the Default MAC Address”](#) on page 113.



PPPoE Settings If you select PPPoE, you must also enter Username, Password and Domain in the PPPoE Settings Screen, after you press **Next**:

NOTE

PPPoE has no manual configuration of IP address, Sub-net mask or default gateway.

IP Settings You can select DHCP to automatically configure the FrameScope Pro when connected to the network, or manually configure the IP address, Gateway, Subnet Mask and other settings. If you manually configure the IP settings, you have to at least enter a valid IP address and a valid subnet mask.

- **IP Address** – This value uniquely identifies the FrameScope in the TCP/IP network.
- **Subnet Mask** – This value is combined with the IP Address to define the subnet to which the FrameScope belongs.



- Default Gateway – This is the default gateway (router) the FrameScope will use to communicate with devices on other subnets.

Press **Next** when satisfied with your choices.

The second Network Settings Setup screen allows you to change the Host Name from the default, enter a DNS Domain, and to provide DNS and WINS server addresses.


Host Name This name will be used to identify the FrameScope in NetBIOS and FrameScope protocols. The name defaults to 'FRSCOPE' plus the last 3 hexadecimal digits of the MAC Address. It may be changed to any name desired.

DNS and NetBIOS Settings Devices on the network may be referred to by name. In the Domain Name System (DNS), the FrameScope asks DNS servers to convert the name to an IP address. When NetBIOS names are used, the FrameScope asks WINS servers to convert the name to an IP address. The DNS Domain and the DNS and WINS servers can be learned through DHCP and may be entered manually by the user. If the user enters a DNS Domain, it will be used in place of the DHCP supplied value. If the user enters DNS or WINS servers, they will be used in preference to the DHCP supplied values.




When satisfied with all the settings, press **Next** to get the third Network Settings Setup screen.

Network Connection Since network hardware may function at a variety of speeds and modes, the FrameScope has the ability to auto-negotiate its speed and mode when it is connected to the network. The auto-negotiation attempts to configure the devices for the fastest network connection supported. If necessary, the user can manually set the FrameScope for 10 ,100 or 1000 Mbps and full or half duplex mode (For Gigabit, only full duplex mode is available). This may be used for instance to prove that a 10/100 switch can properly support the 10 Mbps speed. User can also select whether to use Fibre interface or copper interface.

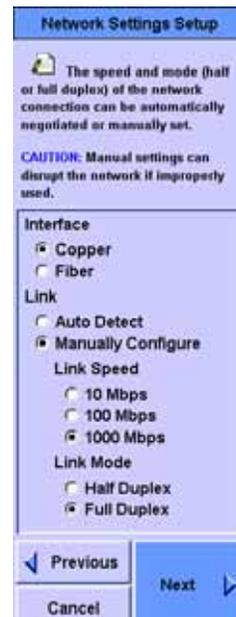

When satisfied with the settings, press **Next** get the fourth Network Settings Setup screen.

VLAN Support FrameScope Pro supports C-VLAN (IEEE 802.1q) and P-VLAN (IEEE 802.1ad) tagging.

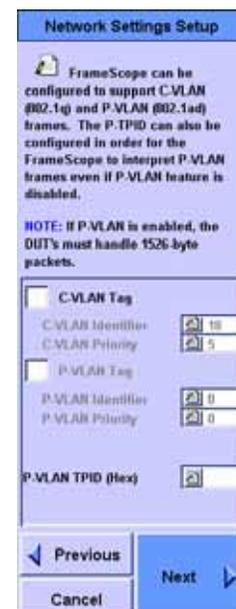

Enabling C-VLAN allows sending and receiving of q-tagged frames. Set the appropriate C-VLAN Identifier and C-VLAN priority. These values are dependent on the network under test's C-VLAN setting. Q-tagging is normally used to group different host traffic in enterprise networks as if these hosts are on a single LAN even if they are geographically separated from each other.

Enabling P-VLAN allows sending and receiving of ad-tagged frames (also know as Stacked VLAN). Set the appropriate P-VLAN Identifier and P-VLAN Priority. These values are dependent on the network under test's P-VLAN setting. AD-tagging is normally used in service provider network to separate different client traffic. Set a 4-hex digit value on P-VLAN TPID when testing on the service provider network. This value will be used by FrameScope Pro as the Tag Protocol ID (TPID) field to be inserted and stripped when enabling P-VLAN support. This field indicates that the packet is a P-VLAN packet in a service provider network. This field is dependent on the P-VLAN settings of a service provider,

so users should set this value appropriately. It can be set even if P-VLAN is not enabled to indicate to FrameScope Pro that the packet is a P-VLAN packet and should be interpreted by the device accordingly.

Press **Next** to go to Miscellaneous Settings Page when satisfied with the VLAN settings.

Miscellaneous settings

Active Discovery (Enable / Disable) When the FrameScope is attached to a switch port it only sees broadcast traffic and traffic targeted for the FrameScope. When 'Active Discovery' is enabled the FrameScope requests information from devices on the network to increase the amount of information the FrameScope can learn from the network.

NOTE

Active Discovery will affect the network and, in some cases, will trigger some alarms. Use at your own risk.

Erase Station List (Enable/Disable) The FrameScope automatically discovers stations on the network which it is connected to and shows these stations on the main window. The user can refresh this station list by removing and reconnecting the physical link (i.e. Fiber or Copper cable) when Erase Station List feature is enabled.

IP Qos (Enable / Disable) If 'Qos' is enabled, FrameScope will send IP packets with the IP TOS field set. User can select either to use IP TOS or IP Differential Service field (DSCP). If IP TOS is used, user can set the IP Priority along with TOS Value. If DSCP is used, user can set the DSCP value to be used in the IP Packets.

Flow Control (Enable/Disable) If Flow Control is enabled, FrameScope Pro will transmit flow control packets (XON and XOFF frames) based on the MAC FIFO's fullness.

When satisfied, press **OK**.




Restoring the Default MAC Address

If the MAC address of the FrameScope Pro is unknown, and you want to restore it back to the original hardware MAC address:

- 1 In the system menu, select **Restore Default MAC**.
- 2 To restore the hardware MAC address, make sure the box **Restore Default MAC at Next Boot Enable** is selected.

If you do not want to restore the MAC address on the next boot up, make sure this box is not selected.

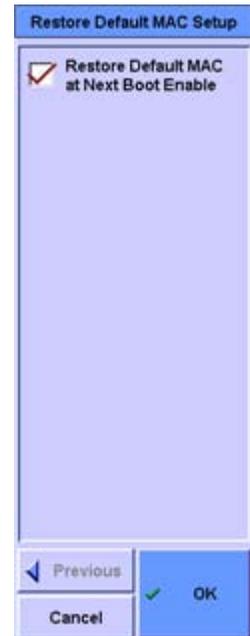

Remote Control


The FrameScope Pro can be controlled through a web interface. This can be done using the standard Test Port on the side of the FrameScope or with the *optional* Auxiliary Port on the top of the instrument.

For both methods, users have to install the latest FrameScope Pro Upgrade Utility. The essential files for remote control are installed using this installer. This can be found in the CDROM supplied. Users can also download from the web. Please visit www.framescope.com

Click on Remote Control in the System Settings and you will see the following screen.

This shows the status of the web server as well as the status of the remote control; that is, which port this remote control application uses. It also shows the IP address, subnet mask and default gateway of the designated port.

This screen can also show whether the link for the remote control is working.

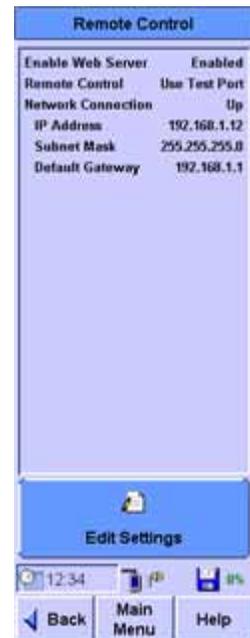

Enabling and setting the remote control web server

If you have an auxiliary port, you can choose whether to use this or the test port for remote control.

If you change the port used for remote control, you will have to restart the FrameScope Pro for the change to take effect.

You can also choose to increase the web access security by adding a User Name and Password.

You can also change the default port (80). If you change the Port Number, then you must specify the port number to access the FrameScope.

For example, if the FrameScope's address is 209.6.108.253, the URL would be `http://209.6.108.253`.

If Port 8080 is used, the URL would become `http://209.6.108.253:8080`




Whenever the Remote Control settings are changed, the FrameScope must reboot to use the new settings.

Starting remote control

The FrameScope Pro Remote Control can be evoked by either using the FrameScope Pro Remote Host or from the FrameScope Pro Web Page hosted by the FrameScope Pro.

The FrameScope Pro Remote Host can be launched from the Windows Start menu,

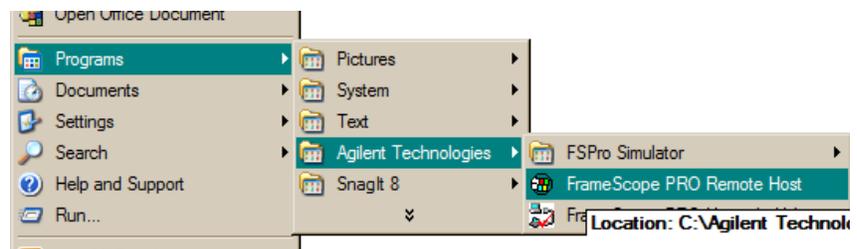


or from the web page on the FrameScope Pro, by clicking the link “Remote Control”




Once the Remote Host is running, you need to enter the IP address of the FrameScope Pro to be controlled. This IP address of the FrameScope Pro can be obtained from the Remote Control Settings Page on the FrameScope Pro.

Once the remote host connects to the FrameScope Pro, the screen of the FrameScope Pro can be viewed in the Remote Host

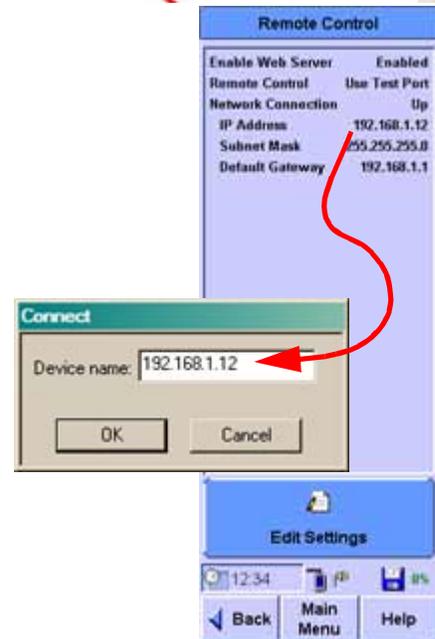

Control application as shown below. You can now control the FrameScope Pro with the PC's mouse,.

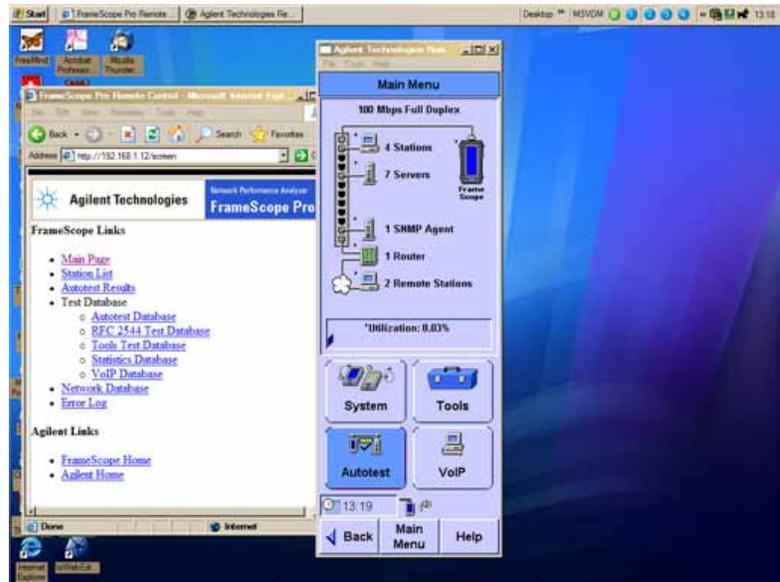

Setting up the Optional Auxiliary Port

To view the status of the Auxiliary port or to make changes to it, go to the Auxiliary Port settings, by highlighting Auxiliary Port Settings options under the System Settings Network.

The screen shows the status of the link of the Auxiliary port and the IP address, subnet mask and default gateway configured for the port.




To change the network settings of the Auxiliary port, click on the edit button and the Auxiliary port setup screen will appear.

CAUTION

MAC address modification is not advisable.

If a modification is unavoidable, the changes should be done with extreme care so that it will not conflict with any MAC address that is in use.

- MAC Address - The MAC Address of the FrameScope usually contains a value set in the factory. But this field can be used to change the MAC address if this is necessary for a specific case or to satisfy security requirements.

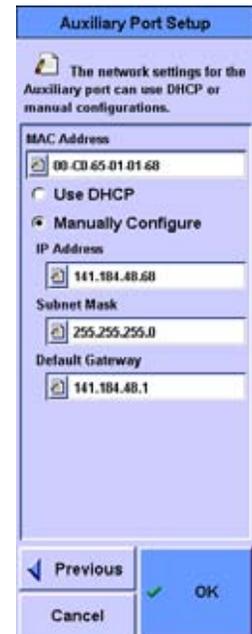

The MAC address can be reset to the factory default on the next boot-up by turning “Restore Default MAC” on in the System Settings.

You can use DHCP to automatically configure the FrameScope when connected to the network, or manually configure the IP details. If you manually configure, you are required to at least enter a valid IP address and a valid subnet mask.

- IP Address – This value uniquely identifies the FrameScope in the TCP/IP network.
- Subnet Mask – This value is combined with the IP Address to define the subnet to which the FrameScope belongs.
- Default Gateway – This is the default gateway (router) the FrameScope will use to communicate with devices on other subnets.

If you make changes, a pop-up will appear asking you to restart the FrameScope Pro for the new settings to take affect.

RFC 2544 Test

Two FrameScopes or One FrameScope and a loopback device, are needed for RFC 2544 tests: round-trip latency test, point-to-point throughput test, frame loss rate tests and back to back tests. One FrameScope is the master and the other is the slave (if loopback is not selected), which is placed in the network point under test. The slave FrameScope has to be pre-set for RFC 2544 tests. For steps on slave FrameScope settings, see [“Setting the slave FrameScope for RFC 2544 Tests”](#) on page 65.

SNMP Settings

The FrameScope Pro uses the default community “public” and the default port 161 for SNMP access. You may expand the SNMP communities and port numbers to use during active discovery, SNMP queries, and the Locate Switch Tool. Press **SNMP Settings** on the Network System Settings screen then press **Edit**. Enter the additional information and press **OK**.





The image shows a screenshot of the 'SNMP Settings' dialog box. The title bar is blue and contains the text 'SNMP Settings'. Below the title bar, there is a small icon of a computer and a text box that reads: 'Enter the SNMP communities and port numbers to use during active discovery, SNMP queries and the Locate Switch Port tool.' Below this, another text box states: 'The default community "public" and default port 161 will be used first and then the communities and ports listed here will be tried.' The dialog box contains two sections: 'Community' and 'Port'. The 'Community' section has three numbered input fields (1, 2, 3) with a small icon to the left of each. The 'Port' section has two numbered input fields (1, 2) with a small icon to the left of each. At the bottom of the dialog box, there are four buttons: 'Previous' (with a left arrow), 'Cancel', 'OK' (with a green checkmark), and a blue button with the text 'OK'.

Demo Mode

The FrameScope Pro may be put in a Demo mode for training or demonstration purposes. The Demo mode provides for a network consisting of several stations, servers, a router, two switch/bridges, and 5 SNMP agents. All functions are demoable without connecting to a live network. Autotests of all functions are simulated.

The Demo mode may be enabled and disabled by pressing **Demo Mode:** on the System Settings menu then pressing **Edit**. When satisfied, press **OK**.

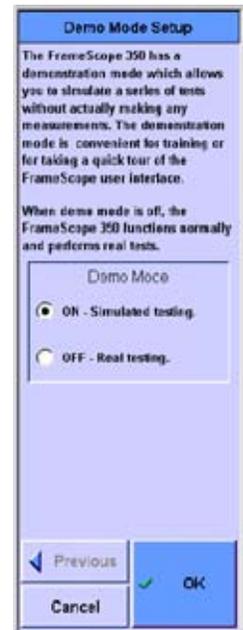

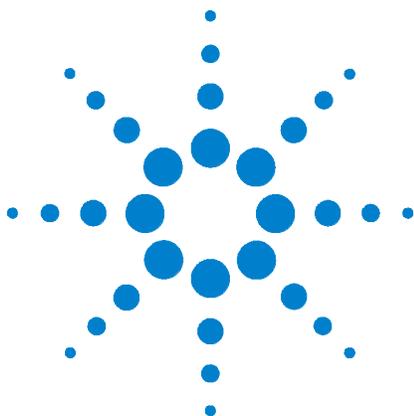

5 Network Performance Analyzer Reference

Network Connection	125
Network Database	126
Station List	126
Device Details	126
Active Discovery Process	127
Network Performance Autotest	129
Autotest Setup	129
The Default Autotest Suite	130
Editing Tests	130
Deleting Tests	130
Adding Tests	131
DHCP Server	132
DNS Server	134
WINS Server (NetBIOS Name Server)	135
NT File Server	136
NFS File Server	136
Web Server	140
E-mail Server	142
Novell Server	144
FTP Server Autotest	144
SNMP Agent	151
Primary Domain Controller	151
Backup Domain Controller	151
Router	151
Workstation	151
Autotest Results	152
Statistics	154
Overall Statistics	154
Top Transmitters	155
Error Mix	155
Protocol Mix	156
Network Tools	157



5 Network Performance Analyzer Reference

Ping	157
Trace Route	157
SNMP Query	158
Locate Switch Port	158
Performance Tests	158
Traffic Generation	158
Remote Control	161
Memory Requirements	163

Network Connection

Before the FrameScope Pro is attached to a network, it is constantly checking for a connection. When the FrameScope Pro detects that it has been plugged into a network device it does the following:

- Listens for a link pulse or traffic to determine which cable pairs are being used for transmit and receive. If this operation fails, a dialog pops up informing the user of the error, and the FrameScope Pro continues to listen for a link. This condition usually means that the network device is not turned on, or the connection from the FrameScope Pro to the device is faulty.
- Auto-negotiates wire speed and mode (optional). The user can manually set the speed and mode (half or full duplex) through the Network Settings wizard. The wire speed and mode are displayed on the network map on the Main Menu and on the Network Settings Window.
- Uses DHCP to obtain the following (optional):
 - IP address
 - IP subnet mask
 - Default gateway
 - DNS server
 - NetBIOS node type
 - NetBIOS Name Server (WINS)

The user can manually set these parameters through the Network Settings wizard. These parameters are displayed on the Network Settings Window. If DHCP fails, a dialog pops up informing the user and asking if DHCP should be retried or if the FrameScope should give up. DHCP may fail if the DHCP server is not accessible from the FrameScope Pro's connection point or if the DHCP server's security is configured to deny access by unknown devices.

- Test the Default Gateway and the DNS and WINS servers. If any of these devices is not working, an error is recorded in the Error Log. The Default Gateway is tested by ARPing for its MAC address. The DNS and WINS servers are tested by looking up the FrameScope Pro's host name.

When all of this has finished, the FrameScope Pro is ready to monitor the network and perform network testing.

Network Database

The FrameScope Pro listens to the network traffic and actively interrogates network devices to learn about attached hosts, servers, switches and routers. This information is stored in the Network Database. The database may be saved to or retrieved from CompactFlash™ or may be uploaded to a PC through the web interface.

Station List

The Network Database is organized into the following groups where each station is listed by name, if known, and address:

Local Stations lists stations with any of the following:

- IP addresses on the same subnet as the FrameScope.
- IPX addresses in the same broadcast domain.
- MAC address, but no IP or IPX address.

Remote Stations lists stations with any of the following:

- IP addresses not on the same subnet as the FrameScope.
- IPX addresses on the other side of a router

Servers Lists stations that supply services, grouped by service

Routers Lists stations that advertise routing capabilities or transmit traffic from remote stations.

FrameScopes - Lists other FrameScopes found.

Switches/Bridges Lists stations who support bridge MIBs through SNMP.

SNMP Agents Lists stations who are running SNMP agents.

The operator can get more detailed information about any device by selecting it from one of these lists.

Device Details

The Network Database includes details learned about each device. The detailed information includes the following, where appropriate:

DNS, NetBIOS and SNMP System name

MAC address

Network addresses: IP and IPX

Services provided by the device (DHCP, DNS, etc.)

Protocols used by the device (IP, IPX, etc.)

While the device details are displayed, the following statistics pertaining to the device are also available by pressing the **Statistics** button:

Unicasts, where the % is the percentage of all unicasts

Broadcasts, where the % is the percentage of all broadcasts

Multicasts, where the % is the percentage of all multicasts

Errors, where the % is the percentage of all errors

The FrameScope Pro also provides a set of tools for accessing a device from the detailed view. These tools include:

Ping

Locate Switch Port

Trace Route (IP Only)

SNMP query (IP Only)

Performance Tests (loopback tests)

Active Discovery Process

Active Discovery Query order for FrameScope Pro

- Every 60 seconds:
 - Get SNMP name and bridge info
- Done once:
 - Broadcast PING
- Every 600 seconds:
 - Broadcast a DHCP discover message.
- Every 60 seconds:
 - Broadcast a FrameScope announcement (UDP to/from port 52341)
 - Broadcast RIP v1 and v2 routing table requests


- Every 300 seconds:
 - Send an ARP for each IP address in the subnet range
 - For every ARP response received, send an ICMP echo request
- Every 300 seconds:
 - Reset IP services
- Every 30 seconds (and whenever a new IP address is learned)
 - Discover IP Services
 - a. Discover Domain Controller
 - b. Discover Domain Browsers
 - c. For each IP station in the station list which has not been probed yet:
 - 1) Query the DNS servers to get the hostname for the IP address.
 - 2) ARP the IP address
 - 3) Start a TCP connect to the LPD port to check for an IP printer server.
 - 4) Use SNMP to request the system name
 - 5) Use SNMP to request the subnet mask
 - 6) Start a TCP connect to the HTTP port to check for a web server
 - d. For each MAC in the station list
 - 1) Mark as router any MAC that has more than one IP address associated, one of which is marked as remote
- Every 60 Seconds:
 - Broadcast an IPX SAP Request

Network Performance Autotest

The Autotest is used to measure connectivity and response time of important network resources. Each network resource is tested using target-specific access methods to communicate with these resources. The test results are compared to pre defined metrics and rated on a scale of 1 to 5, with 5 indicating the best performance. The criteria for the ratings can be adjusted so that the user can look at fluctuations in performance tuned to the resource's best possible performance.

Autotest Setup

The Autotest Setup screen can be reached by pressing on the **Autotest** button on the Main Menu.

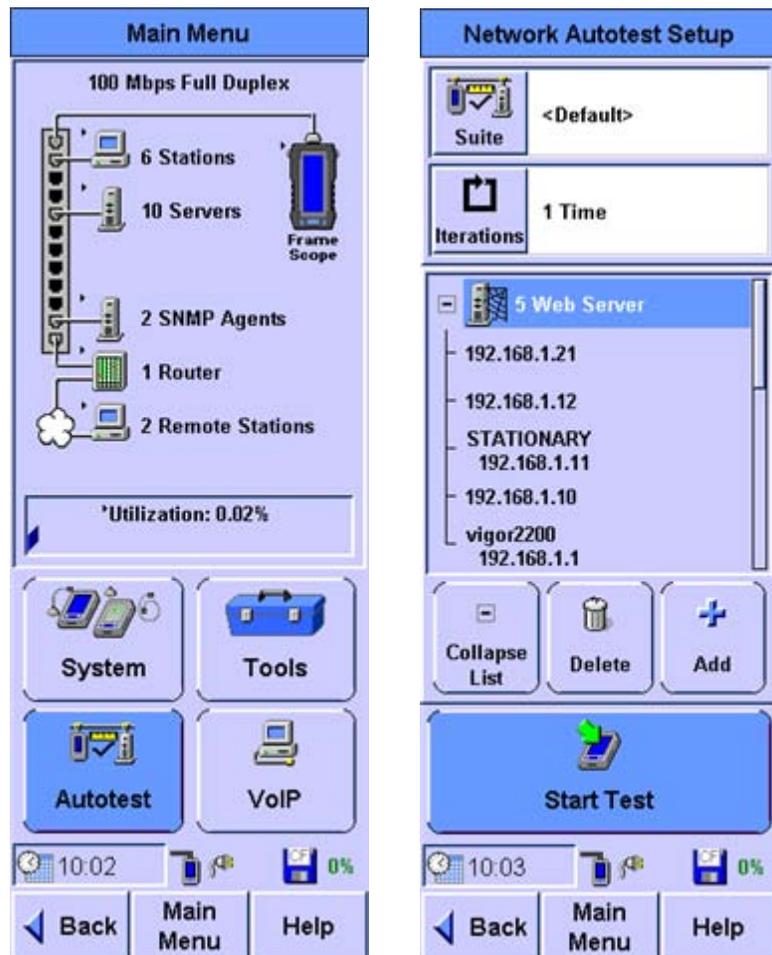

The Autotest contains a suite of tests that can verify multiple features on multiple devices. Each test within the Autotest suite verifies a specific feature on a specific device. For instance, one

device may act as both a DHCP server and a DNS server. An Autotest suite used to test this device would contain a DHCP server test and a DNS server test for this device. The same Autotest suite can also contain tests for other devices.

The Default Autotest Suite

The FrameScope boots up with the <Default> suite selected. When the <Default> suite is selected, the FrameScope automatically creates an Autotest suite from the servers listed in the Network Database.

Editing Tests

Each test has parameters that specify the test's behavior and coverage. For instance, there is a well-known port for web servers to listen on, but a web server may have been configured to listen at a different port. So, the port number is provided as a parameter with the well-known port number as the default. User names and passwords are also included as parameters for tests that can provide extra coverage by logging in to a server. The extra coverage may include reading a file or retrieving E-mail. Each server has a default test that can be performed without the user providing any set up information so that a new test can be configured with minimal effort. After selecting a specific name or address, the **Edit** button starts up a wizard which allows the test's parameters to be modified. See the description of each test below for more information.

Deleting Tests

The **Delete** button operates on the selected test or test heading. If a test is selected when the **Delete** button is pressed, the test is removed from the Autotest suite. If a heading such as **6 Print Server** is selected, all of the print server tests will be removed from the suite.


Adding Tests

The Add button will start up a wizard which is used to add tests to the test suite.

If the Network Database contains devices with features not covered by any test in the test suite, tests for these features will be listed under **Untested Servers**. One of these tests may be added to the Autotest suite by selecting the test and pressing **OK**. All of these tests may be added to the suite by pressing the **Add All** radio button and pressing **OK**.



Another way to add a test to the suite is to press the **Create New** radio button and press **Next**.

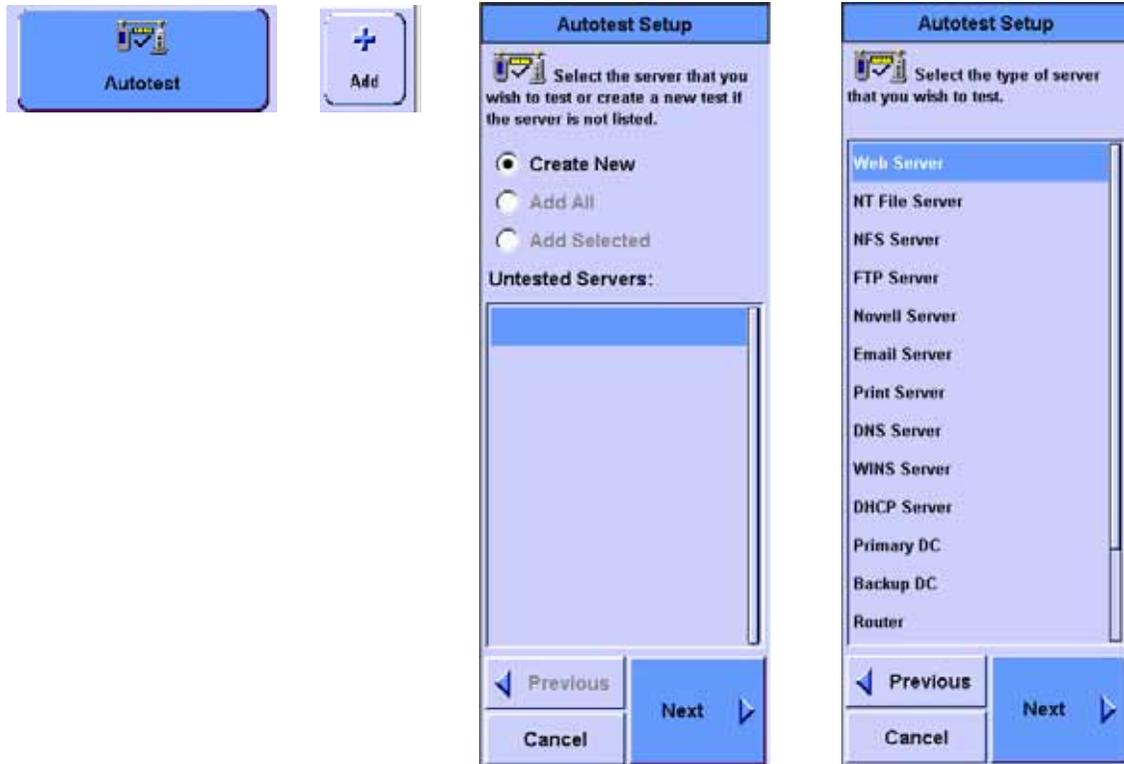

- 1 A list of test types is presented on the next screen.
- 2 Select the type of test and press Next.
- 3 Test specific parameters may be edited on the next screens as discussed below under each test heading.


DHCP Server

The DHCP Server test verifies that the DHCP server responds to a request for an IP address and other optional items. If any optional information is requested, the server response would be checked for all of the requested information.

Setup

The IP address of the DHCP Server to test is entered on the first DHCP Server test setup screen. All DHCP responses received during this test are compared against this address to verify that responses are being received from this server. The next setup screen is used to specify which optional items should be


requested from the DHCP Server. The last setup screen provides a list of the measurements performed during this test.

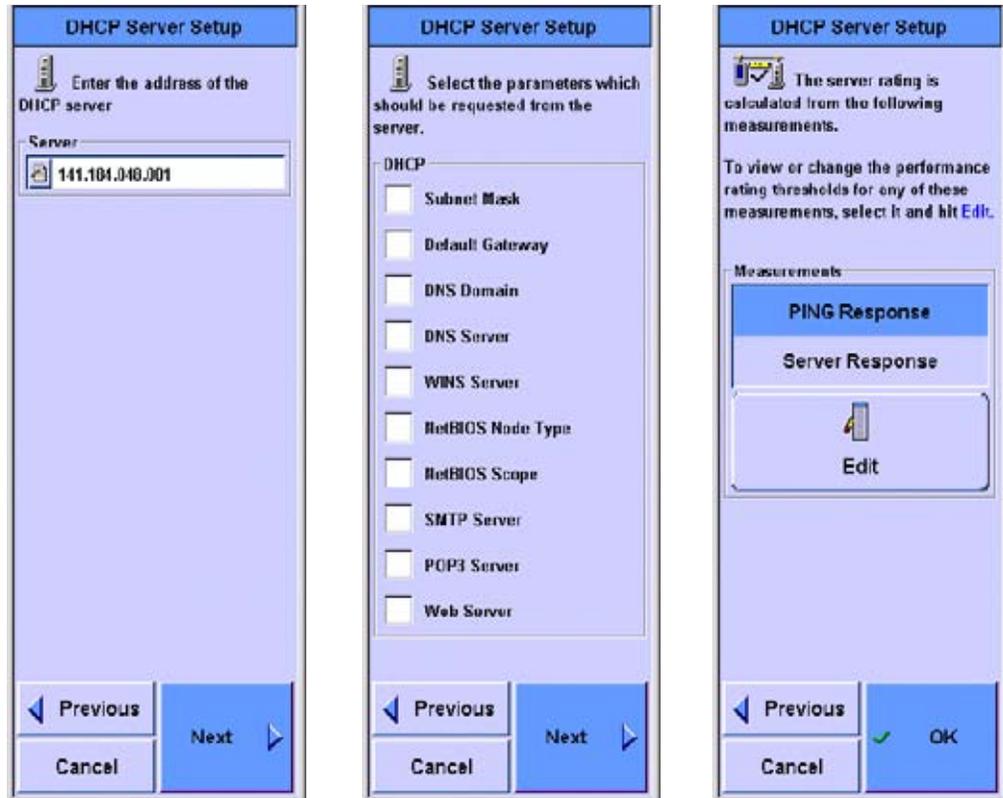

Any of the thresholds used to rate the performance of each of these measurements may be viewed and modified by selecting it from this list and selecting Edit. The measurements taken during this test are:

PING Response The time it takes to perform an ICMP Echo test on the server.

Server Response The total time for negotiating for an IP address from the DHCP Server

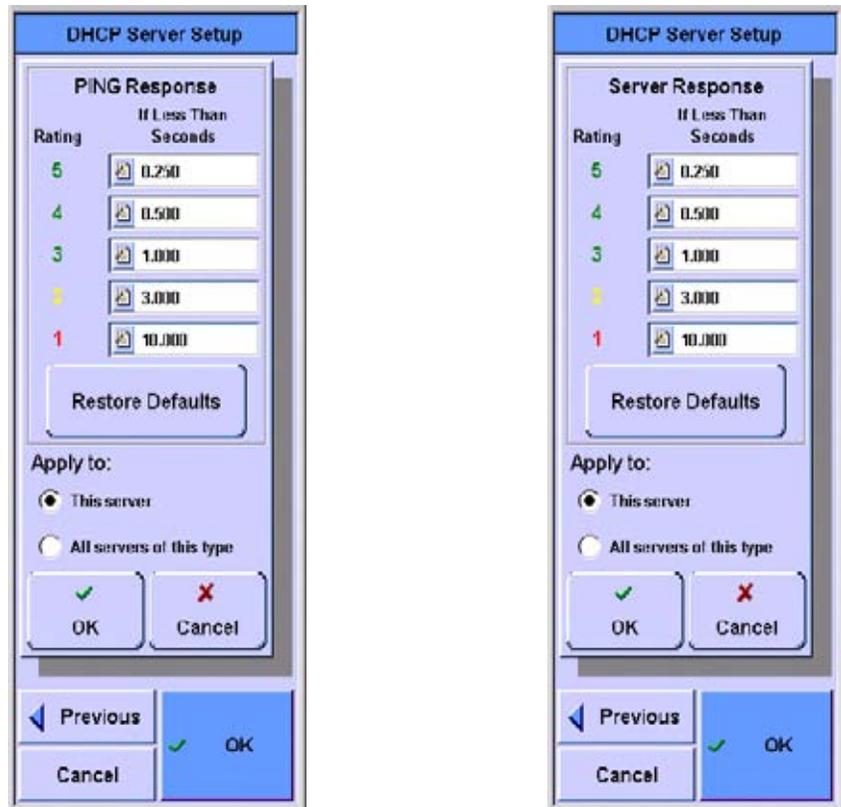


DNS Server

The DNS Server test verifies that the server can look up a name or an IP address.

Test Setup

The first setup screen is used to enter the IP address of the DNS server to test and to enter the name or address that will be sent to the DNS server in the request. If no name or address is provided, the DNS server is requested to look up its own address and return a name.

The last setup screen provides a list of the measurements performed during the test. Any of the thresholds used to rate the performance of each of these measurements may be viewed and modified by selecting it from this list and selecting Edit as shown in the DHCP server.

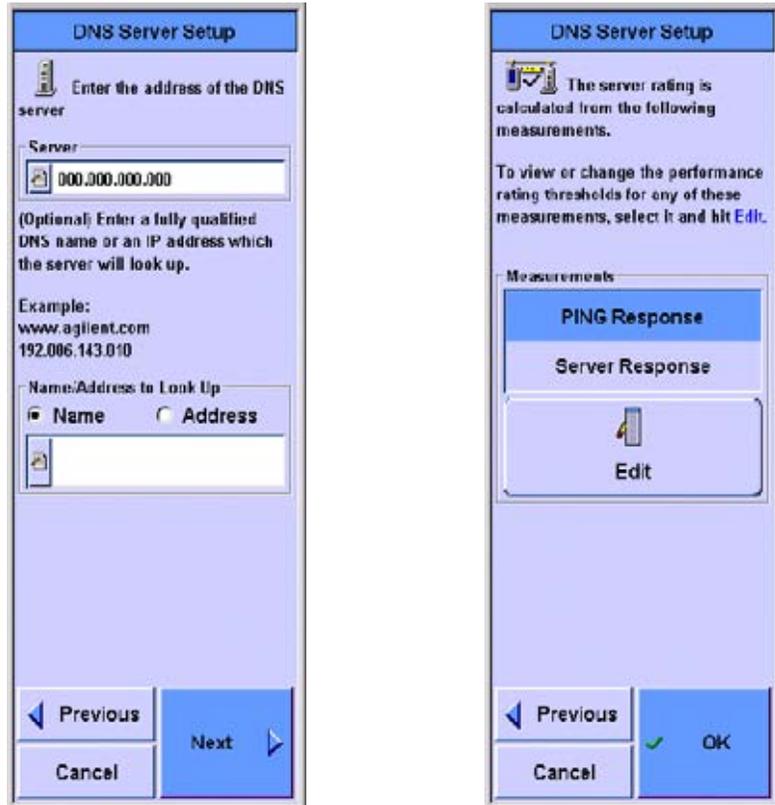

The measurements taken during this test are:

PING Response The time it takes to perform an ICMP Echo test on the server.

Server Response The request/response time for converting a name or address into an address or name.


WINS Server (NetBIOS Name Server)

The WINS Server test verifies that the server can convert a name to an IP address.

Test Setup

The first setup screen is used to enter the IP address of the WINS server to test and to enter the name that will be sent to the WINS server in the request.

The last setup screen provides a list of the measurements performed during the test. Any of the thresholds used to rate the performance of each of these measurements may be viewed and modified by selecting it from this list and selecting Edit as shown in the DHCP server.

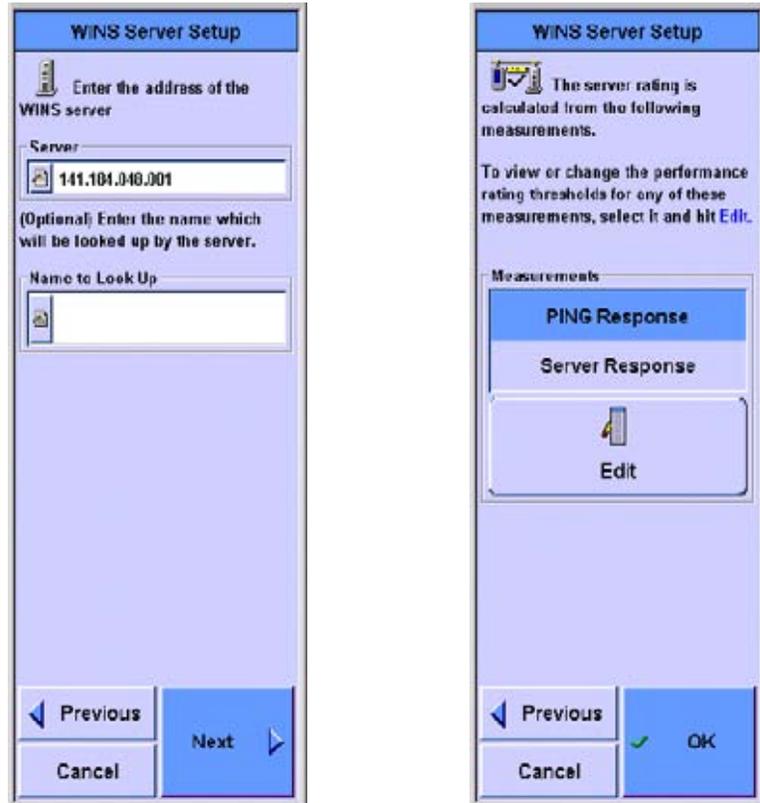

The measurements taken during this test are:

PING Response The time it takes to perform an ICMP Echo test on the server.

Server Response The request/response time for converting a name into an address.

NT File Server

NFS File Server

The file server tests provide the following basic operations:


- Check server availability by logging-in to the server or with a partial log-in if a username and password are required for log-in but have not been provided by the user.

- The following operations are optional. If any of these operations is requested, the user must enter the full path name to the file (or directory) on the server:
 - Log in to the server.
 - Read from an existing file.
 - Write to, read from, and delete a file.


Test Setup

The first file server setup screen requests a name or address as well as login information needed to access the server.


Include domain name in the **User Name** entry, for example: abc@agilent.com.sg.

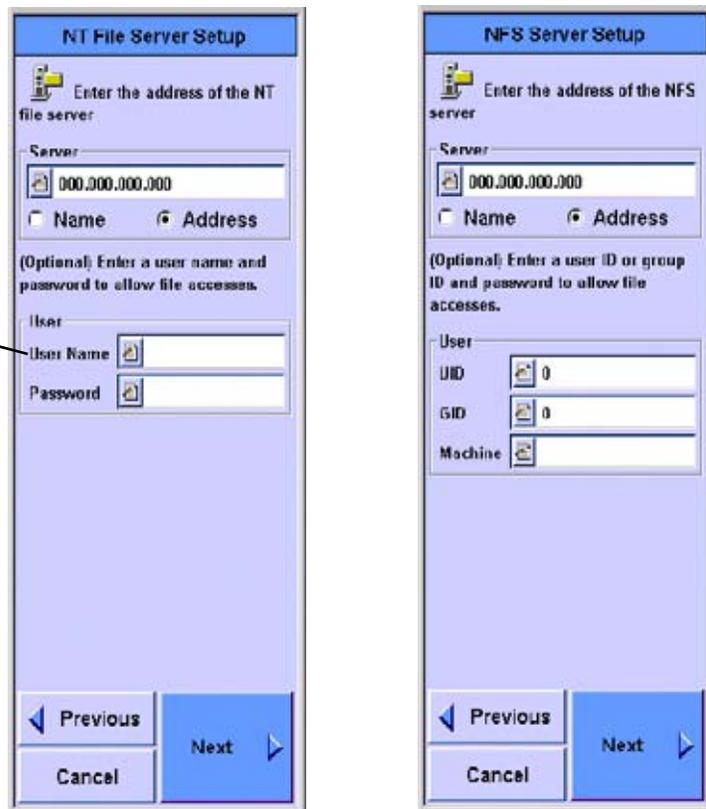

The next setup screen allows selection of the file actions to be tested.

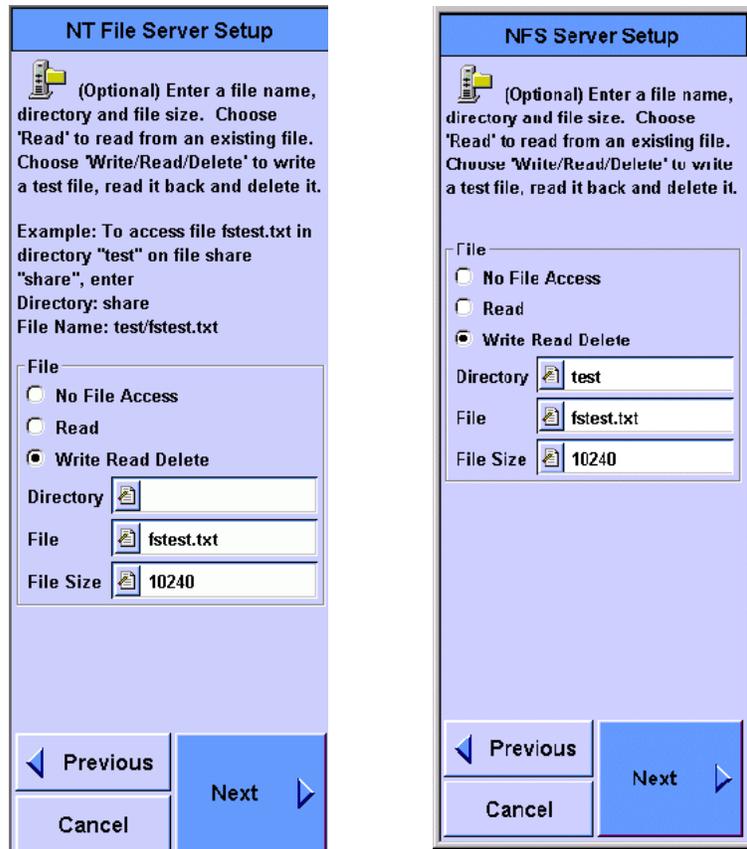

The last setup screen provides a list of the measurements performed during the test. Any of the thresholds used to rate the performance of each of these measurements may be viewed and modified by selecting it from this list and selecting Edit. Note that the scroll bar on the right of the screen only shows the location of the screen shown. Use the Scroll rocker to scroll through the list. The time responses are modified as shown in the DHCP server.

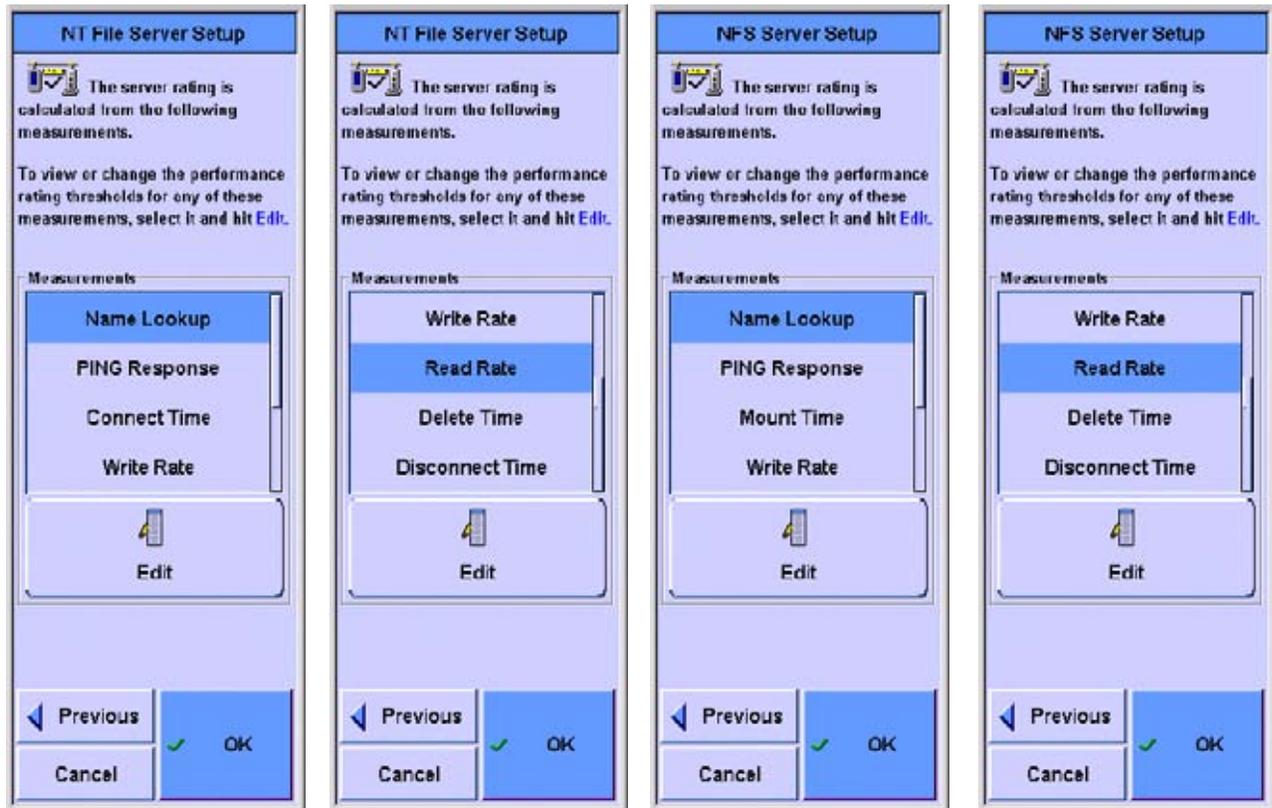

The measurements taken during this test are:

Name Lookup The request/response time for converting a name into an address.

PING Response The time it takes to perform an ICMP Echo test on the server.

Connect Time/Mount Time The time it takes to connect to the NT file server, or mount the NFS server.


Write Rate The bytes per second rating of the write operation.

Read Rate The bytes per second rating of the read operation.

Delete Time The time it takes to delete the file.

Disconnect Time The time it takes to disconnect from the file server.

Examples of modifying rates and time are shown below:

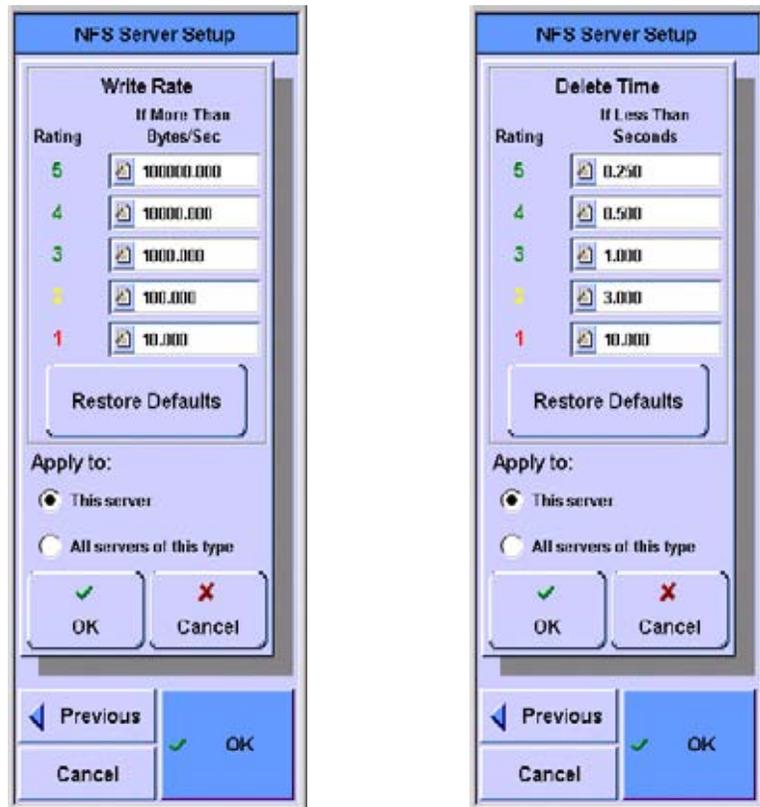


Web Server

The Web Server test verifies that server is accessible and measures the download time of the first HTTP get operation.

Test Setup

The first setup screen is used to enter the URL of the web server to test. The second setup screen provides an opportunity to request a proxy server and to name it. The last setup screen provides a list of the measurements performed during the test.

Any of the thresholds used to rate the performance of each of these measurements may be viewed and modified by selecting it from this list and selecting Edit.

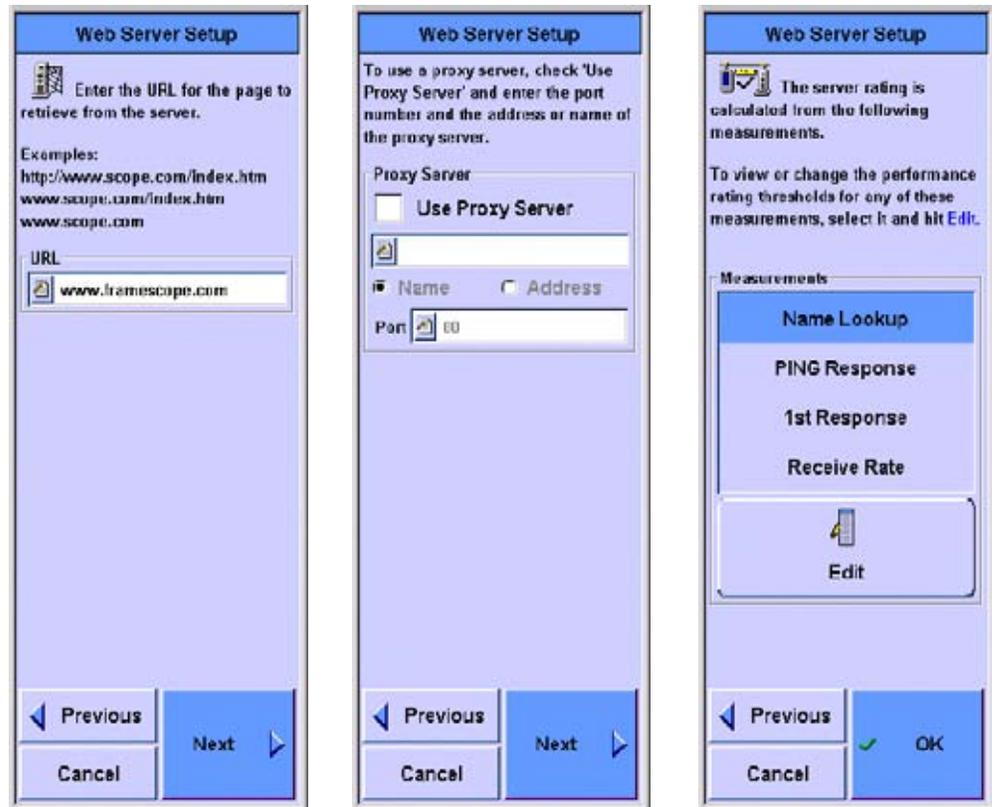


The measurements taken during this test are:

Name Lookup The request/response time for converting a name into an address.

PING Response The time it takes to perform an ICMP Echo test on the server.

1st Response The time it takes to acknowledge the GET command.

Receive Rate The rate in bytes per second for the download of the first data in response to the get command.

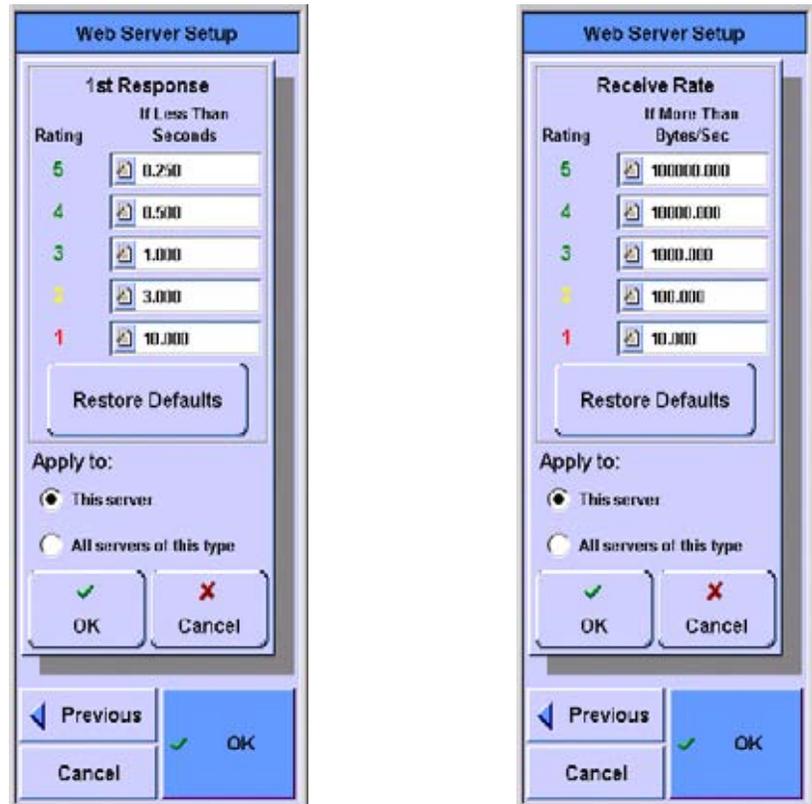


E-mail Server

The E-mail Server test verifies that the E-mail server is accessible and measures the access time and download rate of E-mail.

Test Setup

The first setup screen is used to enter the name or address of the E-mail server and enter the user name and password, if desired. The second setup screen is used to enter the operations to be tested and the send and receive methods as well as the ports used. Default port addresses are provided

The last setup screen provides a list of the measurements performed during the test. Any of the thresholds used to rate the performance of each of these measurements may be viewed and modified by selecting it from this list and selecting Edit.

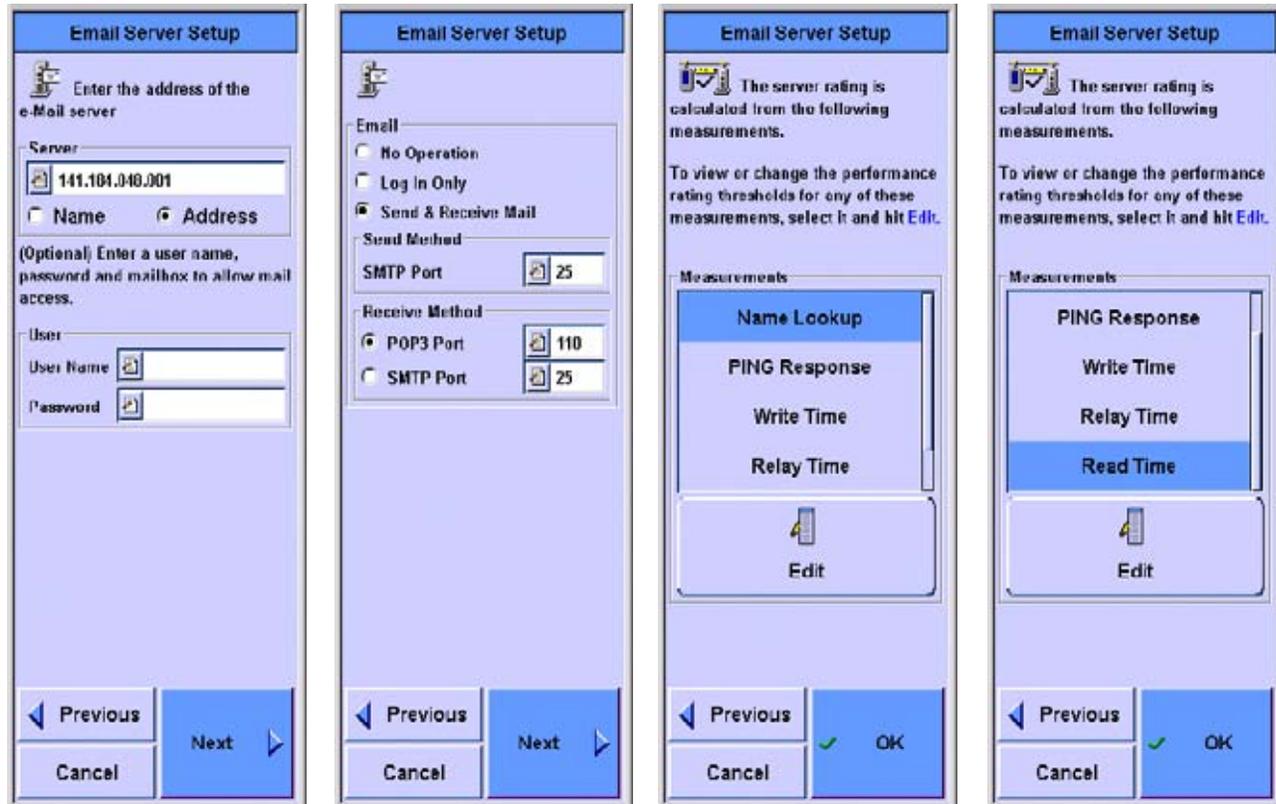

NOTE

If e-mail server and e-mail domain names differ, the entry for User Name has to include its domain name. For example, if the e-mail server name is "pop3.agilent.com.sg" and the e-mail domain name is "agilent.com.sg", enter "abc@agilent.com.sg" in the User Name field.

The measurements taken during this test are:

Name Lookup The request/response time for converting a name into an address.

PING Response The time it takes to perform an ICMP Echo test on the server.

Write Time The time it takes to write to the server.

Relay Time The time it takes to relay through the server and be available to read.

Read Time The time it takes to read the E-mail using either POP3 or SMTP.

These times may all be modified by selecting the measurement and pressing **Edit**.

Novell Server

Print Server

FTP Server Autotest

The FTP Server Test allows users to test the designated server in three ways


- No File Access
- Read
- Write Read Delete

The name look-up time, connect time, disconnect time, read time, read rate, write time, write rate and file size results are presented accordingly.

Test Setup

First, the FTP server to be tested needs to be added. FTP servers are not discovered by Active Discovery.

- 1 Select Autotest on the main menu and click on Add.
- 2 Next, click on Create New and select FTP server.

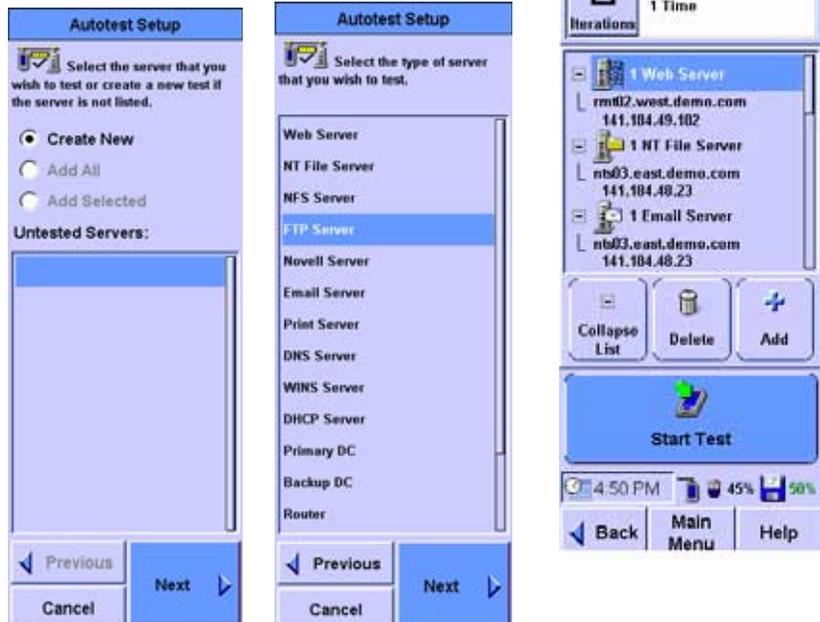

- 3 Users can enter user name and password to access the FTP server. If anonymous login is used, leave the username and password fields blank. Enter the name of the proxy server and port if required. Both Active and Passive FTP transactions modes are supported. Click on NEXT to continue the setup.

5 Network Performance Analyzer Reference
Network Performance Autotest

FTP Server Setup

Enter the address of the server

Server

141.183.30.99

Name Address

(Optional) Enter a user name and password to allow file accesses.

Enter Proxy Name, Port and mode of FTP operation.

User

User Name user

Password *

Use Proxy Server

proxy-server

Port 21

Active Mode

Previous Next

Cancel

If required, enter User Name and Password here. For anonymous login, leave these fields blank


If required, enter name of proxy server and port number here

Check box if Active FTP transaction mode is used. Uncheck for Passive transaction mode

Three types of tests are available.

No File Access This mode locates the FTP server, connects then disconnects from server.

Parameters tested are, Name Look-up, Tests Connect and Disconnect Time

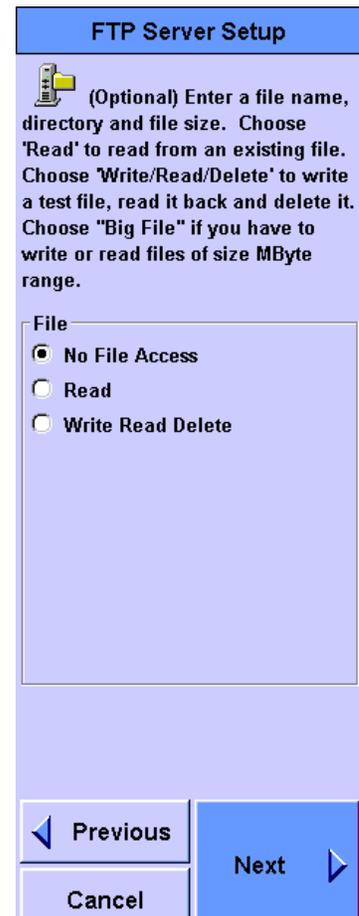

FTP Server Setup

(Optional) Enter a file name, directory and file size. Choose 'Read' to read from an existing file. Choose 'Write/Read/Delete' to write a test file, read it back and delete it. Choose "Big File" if you have to write or read files of size MByte range.

File

- No File Access
- Read
- Write Read Delete

Previous Next

Cancel

Read This mode tests the FTP server by reading a file specified by the users which is found on the FTP server.

FTP Server Setup

(Optional) Enter a file name, directory and file size. Choose 'Read' to read from an existing file. Choose 'Write/Read/Delete' to write a test file, read it back and delete it. Choose "Big File" if you have to write or read files of size MByte range.

File

No File Access

Read

Write Read Delete

Directory /public/software

File fstest.txt

Big File

Previous Next

Cancel

Directory to Read from

Name of File to be read from the FTP Server

Parameters tested are, Name Lookup, Connect Time, Read Time, Read Rate and Disconnect Time.

Write Read Delete This mode uploads a test file generated by the FrameScope™ Pro to the FTP server under test. The test then reads the test file back and FrameScope™ Pro deletes the file it uploaded. Users can select the default file size or any size from 1000 bytes.

FTP Server Setup

(Optional) Enter a file name, directory and file size. Choose 'Read' to read from an existing file. Choose 'Write/Read/Delete' to write a test file, read it back and delete it. Choose "Big File" if you have to write or read files of size MByte range.

File

No File Access

Read

Write Read Delete

Directory

File

File Size

Big File

Previous Next

Cancel

Alternatively, users can select the Big File option to specify files sizes in Mega Bytes and a file up to 1000MB can be uploaded, read back and deleted.

File



Big File

FileSize (MByte)

Previous Next

5 Network Performance Analyzer Reference
Network Performance Autotest

Measurement Parameters and ratings can be changed and customized accordingly. When the setup is completed, click on START TEST to begin.

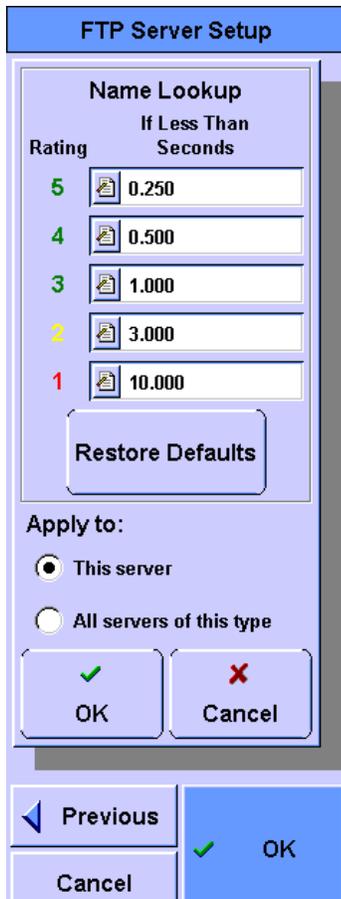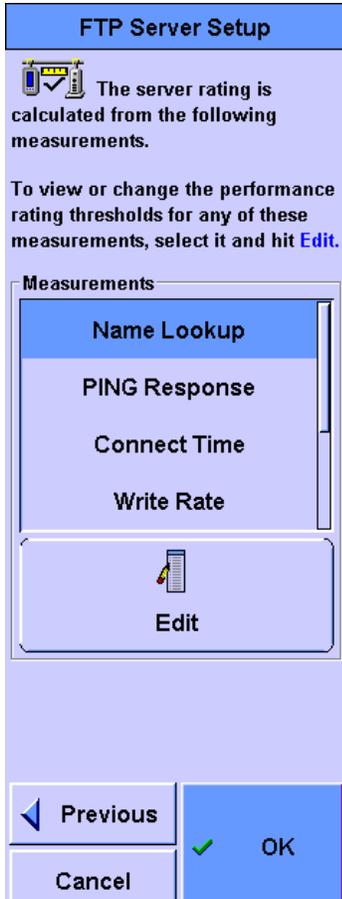

SNMP Agent

Primary Domain Controller

Backup Domain Controller

Router


Workstation

These tests verify that the named device is accessible and measures the name lookup time and the ping response time.

Test Setup

The first setup screen is used to enter the name or address of the device to be tested.

The last setup screen provides a list of the measurements performed during the test. Any of the thresholds used to rate the performance of each of these measurements may be viewed and modified by selecting it from this list and selecting Edit.

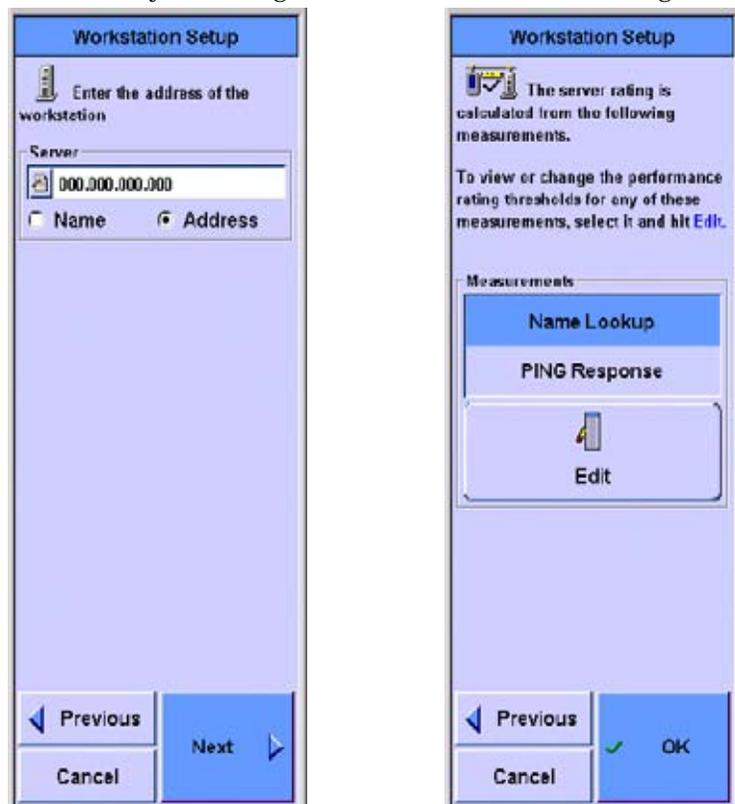


The measurements taken during all these tests are:

Name Lookup The request/response time for converting a name into an address.

PING Response The time it takes to perform an ICMP Echo test on the device.

Autotest Results

While the test is running, the overall status of each server test is displayed. As each test completes, it is given a performance metric. When all of the tests are completed, the overall performance metric is calculated and presented to the user. Details about each test result may be viewed. As an example of the details available, a web server test may require a DNS lookup, a PING response, a first response, and a page read operation. The status and time for each of these operations is presented in the detailed view.

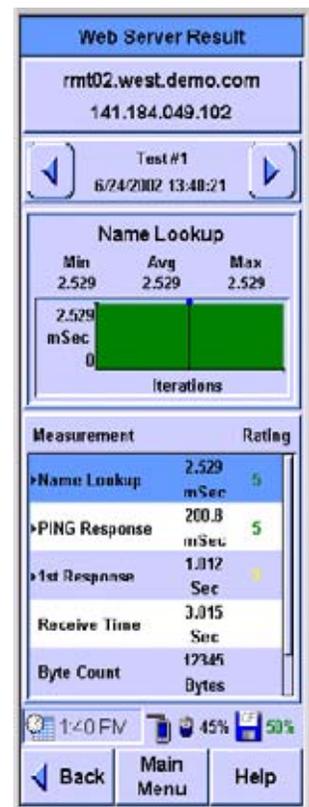

The Autotest may be left running in a loop with a programmable delay between each iteration of the autotest. This feature may be used to find problems that may only occur at certain times of the day. In this case, the response times for each test are

recorded and the current, average, minimum and maximum response times for each test are displayed after each test. When the autotest is finished, the response times for any test may be plotted.

Statistics

The first view into statistics provides the overall network health. The operator can drill down into the statistics to get more and more detailed information. Some of the more detailed information is gathered by software that may not have enough bandwidth to process 100% of the frames. So a value is presented for the percent of frames processed in these cases.

Overall Statistics

The current and maximum values of each statistic are displayed. Graphs of the each statistic are also displayed in strip charts. The interval at which the graph is updated is programmable so that the graph can cover the last 5 minutes in detail up to the last 24 hours with less details. The operator can obtain more information about any of these statistics by selecting it.



Utilization Utilization values are displayed as percent of total network bandwidth. Pressing this statistic switches to a list of Top Transmitters.

Unicasts The number of unicast frames or the percent of the utilization used up by unicast frames. Pressing this statistic switches to a list of Top Unicast Transmitters.

Multicasts The number of multicast frames or the percent of the utilization used up by broadcast frames. Pressing this statistic switches to a list of Top Multicast Transmitters. Pressing any of the Top Transmitters brings up the Station Detail screen for that station.

Broadcasts The number of broadcast frames or the percent of the utilization used up by broadcast frames. Pressing this statistic switches to a list of Top Broadcast Transmitters. Pressing any of the Top Transmitters brings up the Station Detail screen for that station.

Errors The number of frames with errors or the percent of the utilization used up by frames with errors. Pressing this statistic switches to the Error Mix. Pressing on one of the Error Mix, will switch to a list of the Top Transmitter of that error type. Pressing any of the Top Transmitters brings up the Station Detail screen for that station.

Collisions The number of collisions or the percent of the utilization used up by collisions.

Top Transmitters

A list of stations, sorted by a specific statistic is displayed. The statistic used for sorting is set when the list is created. For instance, if the user enters the Top Transmitters by pressing the Jabbers statistic in the Statistics screen the Top Jabber Transmitters is displayed. Pressing any of the Top Transmitters brings up the Station Detail screen for that station.

Error Mix

Long Frames Any frame over 1522 bytes with a valid CRC and alignment. Pressing this statistic gets you to the Top Long Frame Transmitters.

Short Frames Any frame under 64 bytes long with a valid CRC and alignment. Pressing this statistic gets you to the Top Short Frame Transmitters.

Jabbers Any frame over 1522 bytes with a CRC or alignment error. Pressing this statistic gets you to the Top Jabber Transmitters.

CRC/Alignment Errors Any valid sized frame with a CRC or alignment error. Pressing this statistic gets you to the Top Transmitters with an invalid CRC or alignment.

Protocol Mix

Selecting the protocol option gets you to the Top Transmitters of that protocol. Pressing any of the Top Transmitters brings up the Station Detail screen for that station.

- IP
- IPX
- ARP
- RARP
- Banyan
- DECnet
- SNA
- AppleTalk
- NetBIOS
- Spanning Tree
- Other

Saving and Retrieving Statistics Data

The Statistics Data can be saved on the main page of the statistics function. You can view a list of statistics data saved by clicking on the Database button.

To retrieve the saved data tables, you can either access the CF card using a card reader or via the FrameScope Pro configured as a web server. (Please refer to [“Remote Control”](#) on page 114).

Network Tools

Ping

The Ping tool is used to verify access to devices on a network. The current, minimum, maximum and average response times are displayed along with a count for the number of times there was no response.

This tool may be run in IP or IPX mode. The IP Ping sends ICMP Echo frames to the target device. The IPX Ping can use either Diagnostic Responder or Ping frames.

The operator may alter the following parameters:

Target Device Address The target device may be selected from a list or entered as a name or address. If an IP device is specified by a name, DNS and WINS are used to translate the name into an IP address. Names in IPX mode are translated using the SAP protocol.

Frame Size Length of the frame, in bytes, including the FCS.

Number of Frames Number of frames to send. If Continuous is selected, the FrameScope sends frames until the tool is stopped.

Time to Live (IP Only) The maximum number of routers to traverse to the target device.

Don't Fragment (IP Only) Selecting this option sets the Don't Fragment flag in the IP frame. This flag tells routers along the path that this frame should not be divided into smaller fragments.

Trace Route

The Trace Route tool is used to determine the route taken to a slave device. A list of routers found along the path to the slave device is displayed along with a count of the number of hops to each router and the response time for each router.

The operator may alter the following parameters:

Slave device IP address The slave device may be selected from a list or entered as a name or IP address. If the device is specified by a name, DNS and WINS are used to translate the name into an IP address.

Maximum Hop Count The maximum number of routers to traverse while tracing out the route.

SNMP Query

This tool uses SNMP to retrieve the following information from the device. This information is usually provided by IT services.

- MIB II System Group
 - System description
 - Up time
 - Contact
 - System name
 - Location

Locate Switch Port

This tool is used to determine the switch port to which a device is connected. SNMP is used to look for switches in the network. Each of these switches are probed to see if the device shows up in the switch's tables. All of the switch ports which are mapped to the devices MAC address are displayed. There is no order to the list for multiple results, so you cannot interpret the results as a direct path.

Performance Tests

The Performance Tests tool is used to verify the performance of a network between two network points. These tests are IP and MAC loopback tests, RFC 2544 throughput, latency, frame loss rate and back to back tests. For details on each test, go to [“Performance Tests”](#) on page 53. Some points to note are:

- All loopback and RFC 2544 tests require a second FrameScope as a slave device.
- The MAC loopback test only works within the subnet (does not work across routers).

Traffic Generation

A hardware based traffic generation tool is provided to enable network testing under heavily loaded conditions. Hardware-based timers control the transmission of the user specified frames into the network.

The operator may change any of the following properties of the traffic being generated:

Frame Length The number of bytes in the frame, including the FCS. This number ranges from 64-1518 unless long or short frames are specified. If the Short Frames box is checked, the frame size ranges from 40-63. If the Long Frames box is checked, the frame size ranges from 1519 to 16000.

Frame Rate The rate at which frames are transmitted by the FrameScope. Changing the Frame Rate causes the Utilization to be recalculated.

Utilization The percent of the Ethernet bandwidth which the FrameScope should fill up. This value ranges from 0 which causes no frames to be transmitted to 100 which causes the FrameScope to completely load the network connection. Changing the Utilization causes the Frame Rate to be recalculated.

Frames or Continuous Specifies the number of frames the FrameScope should generate when the **Start** button is pressed. If **Continuous** is selected, the FrameScope begins generating frames when the **Start** button is pressed and does not stop until the **Stop** button is pressed or the Traffic Generator tool is exited.

Errors Frames with errors may be generated. The error types include CRC error, short frame or long frame.

Frame Type

- 802.3/802.2
- Ethernet/IP
- SNAP/IP
- Ethernet/IPX
- 802.3/IPX
- 802.2/IPX
- SNAP/IPX

Source MAC Choices include this FrameScope's MAC or simulate multiple (10, 100 or 200) stations. The simulated MACs use the values 00-0C-65-01-00-XX where XX increments from 01 to C8 (hex).

Destination MAC To send a frame to a station on the local LAN, enter its MAC address. If the destination address is set to FF-FF-FF-FF-FF-FF, the frame will be received by all devices on the LAN. To send a frame across a router, the router's MAC address should be used.

Source IP or IPX Source network address, if required. If Source MAC is set to simulate multiple stations, then the Source IP increments along with the MAC. For instance, if the FrameScope is set up to generate Ethernet/IP frames from multiple simulated stations with IP Address set to 209.6.108.202, then the first two frames would be addressed as follows:

Frame Number	MAC Address	IP Address
1	00-0C-65-01-00-01	209.6.108.202
2	00-0C-65-01-00-02	209.6.108.203

Destination IP or IPX Destination network address, if required.

Remote Control

A web server is implemented in the FrameScope Pro to provide a means to control and monitor the FrameScope Pro via a web browser.



The FrameScope's home page provides links to the following FrameScope functions:

Station List Links to the current list of stations. This is the same list that is accessible on the FrameScope through the Tools -> Network Database buttons.

Autotest Results Links to the current autotest results.

Test Database Links to a list of stored test results from the following test tools:

- Autotest Database - links to a list of stored Network Autotest results.
- RFC 2544 Test Database - links to a list of RFC 2544 throughput, latency, frame loss rate and back to back test results.
- Tools Test Database - links to a list of MAC and IP loopback test results.
- Statistics Database - links to a list of saved statistics data.
- VoIP Database - links to a list of VoIP test results.

These results may be viewed directly as web pages or the result file may be uploaded to a PC. The result file contains all of the results for the test in Comma Separated Value (CSV) format for use in spreadsheet programs.

Java™ generated reports are available for RFC2544 and VoIP tests.

A User defined logo can now be included into Java Test Reports, via the CF memory card.

To display logo in Java report, save the the image file of the logo, in the size 250 pixels wide by 40 pixels high, as a .GIF file, with the name customer.gif, in the directory “<drive>\WSDATA1.0\logo\” on the Compact Flash Memory Card.

The report will automatically scale the logo if it is larger, however, providing an image with the recommended resolution will provide a better effect.

By default, when users press the SAVE button, the FrameScope creates a logo directory and “customer.gif” logo file with the logo of Agilent Technologies.

NOTE

If the FrameScope is currently running one of the tools (Autotest, RFC 2544, IP/MAC Loopback or Statistics) in any of the FrameScope screens, its respective stored data or test results in the FrameScope cannot be displayed. For example, if you are running Statistics on the FrameScope, you cannot view the Statistics database from the remote screen.

Network Database Links to a list of stored station lists. These station lists may be uploaded to the PC. The station lists are stored in Comma Separated Value (CSV) format for use in spreadsheet or database programs.

Remote Control Links to a page which shows an image of the FrameScope’s display. Clicking on this image has the effect of pressing the FrameScope’s display. The display is updated when the user of the web interface clicks on the screen or every 10 seconds if no screen operations are performed.

Error Log Links to a list of errors found on the network.

Memory Requirements

The FrameScope Pro requires a CompactFlash™ card to store test results and network station lists. The amount of memory that each Autotest result takes up depends on the number of test and the number of iterations that you set before starting the test. The results require about 600 bytes per test plus 150 bytes per iteration for each test. There is a limit of 100 tests and a limit of 100 iterations. Therefore, the maximum results size is about 1.5 MB.

The Autotest suite storage requirement is only 350 bytes per test, so the maximum size is about 35 KB.

The station list storage requirement is 250 bytes per station with a maximum of about 1500 stations, so the maximum size is 375 KB.

The FrameScope Pro does not use any of the 4MB of internal Flash memory for network test result storage.


The following table lists approximate record storage capacities when configured for a 32 MB removable CompactFlash™ card and for comparison, a 192 MB card. All sizes of CompactFlash™ will work as FrameScope Pro Network Autotest results storage.

Saved Test Results Capacities, assuming a 1 MB used for test suites and station lists

Autotest #	Iterations	Size of record	Capacity (# of Records)	
			32 MB CFlash Card	192 MB CFlash Card
10 Autotests	1	60 KB	516	3183
10 Autotests	100	156 KB	198	1224
100 Autotests	1	600 KB	51	318
100 Autotests	100	1.56 MB	19	122

5 Network Performance Analyzer Reference

Memory Requirements

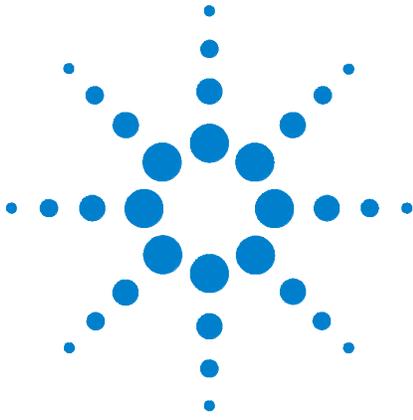

6 Specifications

Physical 166

Environmental 167

Electrical 169

Ports 170

 USB-Host and Client ports 170

 Card Bus Slot 170

Display 171



Physical

FrameScope Pro physical characteristics are:

Size	9.256" x 4.944" x 2.959" HWD (234.2 x 126.0 x 75.2 MM.)
Weight	2.53 lbs. (1.15 kg)

Environmental

Indoor / Outdoor	Intended for indoor use; not weatherized
Operating temperature range	0 to 40°C (32 to 104° F)
Storage temperature range	-10 to 55°C (14 to 131° F) -20 to 55° C (-4 to 131° F)
Maximum humidity	80% for temperatures to 31°C (88° F)
Altitude	To 2000 meters
Pollution degree	2

 Agilent Technologies	DECLARATION OF CONFORMITY According to ISO/IEC Guide 22 and CEN/CENELEC EN 45014	
---	--	---

Manufacturer's Name: Agilent Technologies International sarl
Manufacturer's Address: Rue de la Gare 29
 CH-1110 Morges
 Switzerland

Declares under sole responsibility that the product as originally delivered

Product Name: Framescope Pro - Network Performance Analyzer
Product Number: N2620A

complies with the essential requirements of the following applicable European Directives, and carries the CE marking accordingly:

- The Low Voltage Directive 73/23/EEC, amended by 93/68/EEC
- The EMC Directive 89/336/EEC, amended by 93/68/EEC


and conforms with the following product standards:

	Standard	Limit
EMC	IEC 61326:1997+A1:1998+A2:2000 / EN 61326:1997+A1:1998+A2:2001 CISPR 11:1997+A1:1999 / EN 55011:1998+A1:1999 IEC 61000-4-2:2001 / EN 61000-4-2:1995+A1:1998+A2:2001 IEC 61000-4-3:2002 / EN 61000-4-3:2002 IEC 61000-4-4:2001 / EN 61000-4-4:1995+A1:2001+A2:2001 IEC 61000-4-5:2001 / EN 61000-4-5:1995+A1:2001 IEC 61000-4-6:2001 / EN 61000-4-6:1996+A1:2001 IEC 61000-4-8:2001 / EN 61000-4-8:1993+A1:2001 IEC 61000-4-11:2001 / EN 61000-4-11:1994+A1:2001 Canada: ICES-001 Australia/New Zealand: AS/NZS 2064,1	Group 1 Class A 4kV CD, 8kV AD 3 V/m, 80-1000 MHz 0.5kV signal lines, 1kV power lines 0.5 kV line-line, 1 kV line-ground 3V, 0.15-80 MHz 30 A/m 1 cycle/100%
Safety	IEC 61010-1:2001 / EN 61010-1:2001 Canada: CAN/CSA-C22.2 No. 61010-1:2004 USA: UL 61010-1:2004	

Supplementary Information:

The product was tested in a typical configuration with Agilent Technologies test systems.
 This DoC applies to above-listed products placed on the EU market after:

2005-February-01
 Date

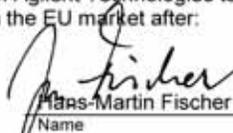
 Name

Product Regulations Representative PMD, DVS
 Agilent Technologies
 Title

For further information, please contact your local Agilent Technologies sales office, agent or distributor.

Electrical

Battery	A removable rechargeable Lithium (Li Ion) battery pack typically provides 4-6 hours of operation between charges, depending on use and power management settings. The battery has built in charger, that recharges the Li Ion pack in less than 5 hours. Extra battery packs are available. Battery pack specification: (Part Number N2595A-096) 7.4 V dc 3800 mAh
External power	Power converter: External ac to dc power converter (5183-8208) supplies 12 V DC, 1.5 A to the FrameScope Pro power connector. Power connector polarity: Positive (+) on the outer sleeve; Negative (-) on the tip.
Mains supply voltage	Must be within 10% of nominal voltage
Installation overvoltage	Category II

WARNING

Use only the ac adapter supplied in the FrameScope Pro Kit. Using other power adapters may damage the tester, and will void its warranty.

Ports

USB-Host and Client ports


The USB-B port allows the FrameScope Pro to connect to a PC equipped with a USB port or control external USB port (Host USB).

Card Bus Slot

Card Bus Slot is provided to cater for future enhancements.

Display

6.625" (16.83 cm) diagonal backlit color touch sensitive LCD.
Resolution: 240 (H) x 640 (V). The display is capable of displaying text and graphics in up to 256 colors.

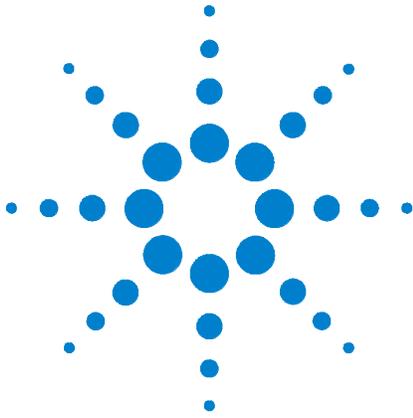

7 Glossary

Glossary 174



Glossary

ARP Address Resolution Protocol - A broadcast protocol used to discover the low level (MAC) address that corresponds to the higher level (IP, IPX, etc.) address.

Auto Discovery Proactively requesting information about the network. Also called Active Discovery.

Auto Negotiation The process of querying a switch or hub port to connect at the highest possible rate. The options include 10 or 100 Mbit Ethernet at half or full duplex.

Back-to-back Fixed length frames presented at a rate such that there is the minimum legal separation for a given medium between frames over a short to medium period of time.

Bridge A device used to expand a local area network by forwarding frames between data link layers associated with two separate cables. See also **router**.

Broadcast A transmission addressed to all stations on a network.

Collision The error that occurs when two stations attempt to transmit at the same time on an Ethernet network.

CRC Error Cyclic Redundancy Check - An error detection scheme using a number derived from the data that is transmitted in the packet. The number is calculated by the sending station and stored in the packet. The receiving station, upon receipt of the packet recalculates the number and compares it to the stored value. If they are not the same, then the packet has changed erroneously during the transmission.

Community A string or password for retrieving SNMP data from a station or device.

Default Gateway The preferred system for providing access outside the local subnet. A gateway is a form of **Router**. In order for a station to access the stations on other subnets or the Internet, it must know the address of the system that controls access, this system is the Default Gateway.

Default Router The router to which a packet will be sent if no specific entry in its route table directs it elsewhere.

DHCP Dynamic Host Configuration Protocol - a procedure which allows devices that are entering or re-entering the network to request that certain parameters are automatically assigned to them. DHCP assigns a unique IP address. A device may request a subnet mask, default router address, name server address, and other parameters and addresses.

DHCP server Any of several kinds of devices that provide DHCP services. These commonly include file servers and routers.

Diagnostic Responder IPX echo tool (ping).

DNS Domain Name Server or Domain Name Services. A capability used widely within both the Internet and corporate networks that resolves (or matches) names with IP addresses. For example, if a workstation needs to retrieve a web page from abc.com, a request containing the name abc.com is sent to a domain name server. That server, or another acting on its behalf, will respond with the IP address of the host at which the web page is stored.

DNS Domain A Internet naming hierarchy such as Agilent.com

Domain Controller In an NT environment, the domain controller has the responsibility for storing certain information about users, resources and devices on the network. There will be a primary domain controller and a backup domain controller. These are referred to as the PDC and BDC, respectively.

DSCP Differentiated Services Code Point- Field in IP Packet which is used in the network for packet classification and traffic conditioning functions.

E-Mail Electronic Mail - A system of sending messages and files across the network from one user to another.

E-mail Server A device that stores incoming and outgoing E-mail messages. The protocol most often used for retrieving messages from the E-mail server to a user's workstation is POP3 (Post Office Protocol #3). Conversely, the protocol most often used to send E-mail messages from the workstation to the E-mail server is SMTP (Simple Mail Transfer Protocol.) SMTP is also used in order that the source and destination E-mail servers may exchange E-mails.

File Server A generic term for a device that provides files upon request. It overlaps other commonly used terms such as Novell server, NT server, and Unix server, which are more specific because they indicate the operating system running in the file server. File servers often provide other functions such as remote access, DHCP, or security related services.

Frame Data organized in bytes encapsulated with a header and a trailer containing information regarding the data. Frame and packet are sometime used interchangeably.

Frame Loss Rate Percentage of frames that should have been forwarded by a network device under steady state (constant) load that were not forwarded due to lack of resources.

Frame Type The format of the frame. Some examples are: SNAP/IP, SNAP/IPX, 802.3/802.2, EthernetII/IP, EthernetII/IPX, 802.3/IPX, 802.2/IPX.

FTP File Transfer Protocol - Internet protocol for transferring files from one computer to another.

Hop A data link through a bridge or router between stations on a network. For example: Agilent.com is 6 hops away from my PC.

ICMP Internet Control Message Protocol - The IP layer protocol for handling errors and control messages.

IP Internet Protocol. The protocol developed and used in the Internet. It is now used in nearly all public and private networks. It provides an addressing structure that allows relaying of packets in a manner that is logically separated from the underlying physical network. It is a connectionless, best effort protocol designed to work across dissimilar networks.

IP address A four-byte address always written in decimal with each byte separated by dots. This is an address normally assigned through software and associated with a hardware address of a network interface card. It can also be associated with a resource on the network such as an SNMP agent.

IPX Internetwork Packet Exchange - Novell Netware's network layer protocol, it handles network addressing, routing and packets.

Latency The time interval starting when the last bit of the input frame reaches the input port and ending when the first bit of the output frame is seen on the output port.

Locate Using SNMP, report the switch or hub port that a station is connected to.

MAC address The unique address of each hardware component, NIC card, hub, switch, etc., on a network. These are assigned by the manufacturer of the networking equipment when the hardware is produced.

MAC Loopback The process of transmitting and receiving packets at the MAC layer and reporting delay, the quantity transmitted and received as well as any errors which occur.

MIB Management Information Base - A set of parameters that are available and sometimes customizable that an SNMP management station can query. Used to report status or configuration information of components of a network.

Multicast A subset of a Broadcast where a packet is only delivered to a subset of all possible destinations that share a multicast address.

NFS Server Network File System - A Sun Microsystems protocol allowing computers on the same network use data stored on other computers as if it were on local disks. An NFS server is usually a UNIX server.

Novell server A device that provides services such as file services and print services in a network where a Novell operating system is being used.

Ping A commonly used test which determines whether a device can be reached. Generally, from a command line a user types ping a.b.c.d <enter> to determine whether the device at IP address a.b.c.d can be reached. The response is often an indication of the success of the test and a time stamp designating the length of the query-response, usually in milliseconds. The ping tests reachability by sending an ICMP echo request to the destination and waiting for a reply.

POP Post Office Protocol - E-mail post office protocol that allows a single user host system to connect and download E-mail.

RFC 2544 This RFC defines specific set of tests to measure and report the performance characteristics of network devices.

RIP Routing Information Protocol - An interior gateway protocol that allows groups of hosts on a LAN share routing information.

Router A device that forwards traffic between subnets or connected networks.

RMON Remote Monitoring - Using SNMP to read or control remote probes for network monitoring and troubleshooting.

SAP Request Service Advertisement Protocol - A Netware protocol for publicizing the current network address of available services.

Server A computer or service that is shared among stations on the network. Any device in the network that provides services upon request.

SMTP Simple Mail Transfer Protocol - The Internet electronic mail protocol used to transfer mail between hosts.

SNMP Simple Network Management Protocol - A standard protocol used to manage nodes on an IP network.

SNMP Agent Devices that are being managed in a network can contain an SNMP agent. A network management program or device sends a query to the agent. The agent retrieves the requested value from a database stored in the managed device and sends the reply. SNMP agents often retrieve and reply with statistics about the managed device. Examples include utilization values on ports, address tables that are stored, and vendor profiles. The protocol used to communicate the information is the Simple Network Management Protocol (SNMP).

Station A computer on the network.

Statistics The measurement of key network parameters such as utilization, frame and protocol traffic.

Subnet A portion of the network that shares a network address with other subnets.

Subnet Mask A bit mask used to identify which bits in an IP address apply to the subnet.

Time to live A field in an IP packet which indicates how long the packet should be allowed to exist before being discarded.

Traceroute A Ping like tool that reports the number of hops to the destination as well as the time delays to each hop along the way. Traceroute is useful for locating bottlenecks in network traffic.

Type of Service A field in an IP packet that controls the quality of service that the packet requires. The internet is a “best effort” network, using the Type of Service bits, higher grades of service can be requested. If the network equipment supports better service i.e. VoIP, the better service will be provided.

Unicast A frame sent to a specific single destination.

UNIX server A device providing services in a network and running a version of the Unix operating system. A UNIX server is usually an NFS server.

Utilization A measure of how much of the network’s bandwidth is being used. It is usually expressed as a percent of the maximum line speed in the network. For example, if the network’s current usage is at 2 Mb/sec and the bandwidth available (line speed) is 100 Mb/sec., we say the utilization is 2%.

Web Browser The program running in a client host when someone is interacting with a web server. It is the software used to browse the Internet.

Web Server A network server that contains files that describe Internet pages. The pages are usually developed in a language named Hypertext Markup Language (HTML). A company’s home page is an example of an HTML file that can be retrieved from a web server.

WINS Server A type of name server used in the Microsoft NT environment. WINS stand for Windows Internet Name Services. It is a variation of DNS.

7 Glossary
Glossary

INDEX

A

ac adapter
 specifications, 169
Active Discovery, 127

B

Backlight, 103
Backup Domain Controller test, 151
Battery
 charging, 20
 Status, 101

C

Calibration
 Information, 108
 touchscreen, 105
CompactFlash card
 icon, 96
Contrast, 103

D

Database
 network, 80, 126
 test, 79
Date Setup, 102
Default Settings, restore, 106
DHCP Server test, 132
DNS Server test, 134

E

E-mail Server test, 142
Error Log, 74

F

file server tests, 136
FTP server test, 144

H

Hub Port, blinking, 72

L

List, station, 126

M

MAC Loopback, 55
Memory Requirements
 Network test, 163

N

Network
 connecting to, 22
 connection, 125
 Testing Overview, 26, 86
network resources list, 28
Network Tools Menu, 157
NFS File Server test, 136
Novell server test, 144

P

Ping, 38
Primary Domain Controller test, 151
Print Server test, 144

R

Remote Control, 161
Router test, 151

S

Sleep Timeout, 103
SNMP
 Agent test, 151
 Queries, 44
Statistics, 47
Status Display, 96
Storage Setup, 99, 100
Switch Ports, locating, 83
System Information, 98

T

Time Setup, 102
tools menu
 network, 157
Touch Click, 103
Trace Route, 41
Traffic Generator, 50

U

User Interface Setup, 103

W

Web Server test, 140
WINS Server test, 135
WireMap Adapter Testing, 76
Workstation test, 151

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>