

# **HID-SS**

## **HID Proximity Reader Module for 2-Gang Entrance Panel**


#### - INSTRUCTIONS -

The HID-SS is a 2-gang stainless steel unit that contains an HID ProxPoint® Plus Card Reader. This module installs next to any one of Aiphone's 2-gang stainless steel sub stations (-SS and -SSR series\*), creating a unified look with the intercom and card reader installed together. Horizontal and vertical surface mount boxes are available for mounting both units. The HID-SS does not need to be used with an intercom station. The card reader provides electronic access to a building through the standard Access Control system, which is not supplied by Aiphone.

\* See matching models numbers on page 2, or see Aiphone Catalog for more information.

#### **INSTALLATION:**


- 1. Install HID-SS alongside of or below the 2-gang intercom sub station.
- 2. The HID-SS will mount into the SBX-2BH, SBX-2BV, SBX-2G, or any standard 2-gang box or ring.
- 3. Secure wire connections as shown on wiring chart.
- 4. Cut any unused wire so that bare wires are not exposed.
- 5. Refer to standard product installation manuals for complete system information. No additional information pertaining to the Access Control system is provided by Aiphone.

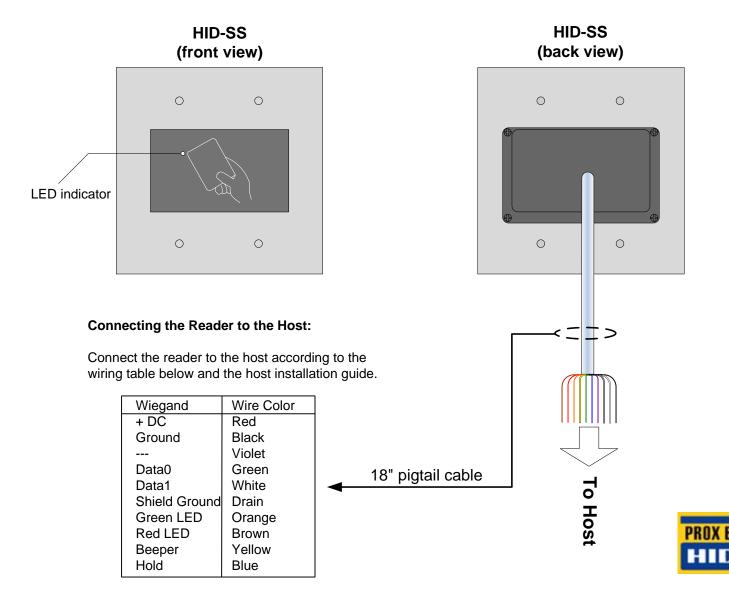

### **TYPICAL LAYOUTS:**



 2-gang sub and HID-SS Mounted vertically in SBX-2BV vertical surface mount box



2-gang sub and HID-SS mounted in SBX-2BH horizontal surface mount box



HID-SS without intercom sub station (with optional SBX-2G surface mount box)

#### **TESTING AND OPERATION:**

- When power is applied to the card reader, the LED will flash green three (3) times while
  the beeper beeps simultaneously. The LED will then turn red. This indicates that the
  microcontroller is operating properly.
- Present an ID card to the reader. (Hold card directly in front of reader.) The LED will
  momentarily turn green while the beeper beeps once, indicating that the card was read
  successfully.

SPECIFICATIONS:

Reader: 6005B Series Power Source: 5.0 – 16.0 VDC

Absolute Max. Voltage: 18 VDC
Peak Current: 80 mA
Avg. Current 5V or 12V: 20 mA

Terminations: Color-coded pre-wired pigtails

Wiring Distance: 500'

Dimensions (H x W x D): 4 3/4" x 4 3/4" x 7/8"

Operating Temperature: -10° ~ 60° C / 14° ~ 140° F

INTERCOM SYSTEM: MATCHING SUB STATIONS:

LEM, LEF, LAF-C/CA,

AP-M, MP-S series: LE-SS/A, LE-SSR

NEM, NDR, NDRM series: NE-SS/A, NE-SSR

IE, TC-M, TD-H,

KB Audio door stn: IE-SS/A, IE-SSR

For additional options, please contact Aiphone Technical Support.

#### **FCC WARNING:**

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference that may cause undesired operation.
- For proper regulatory compliance, the drain wire should be disconnected at the power supply end of the cable.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The Reader is intended to be powered from a limited power source output of a previously certified power supply.

Aiphone Communication Systems 1700 130th Ave. N.E. Bellevue, WA 98005 (425) 455-0510 FAX (425) 455-0071

**TOLL FREE TECHNICAL SUPPORT:** 

(800) 692-0200 E-MAIL: tech@aiphone.com

HID-SS Instr. 0913JD Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com