


**Amana® Radarange®**  
MICROWAVE OVEN

# Use & Care Manual

Written as a step-by-step guide to teach you how to operate your Radarange Oven at your convenience and in the privacy of your own home.

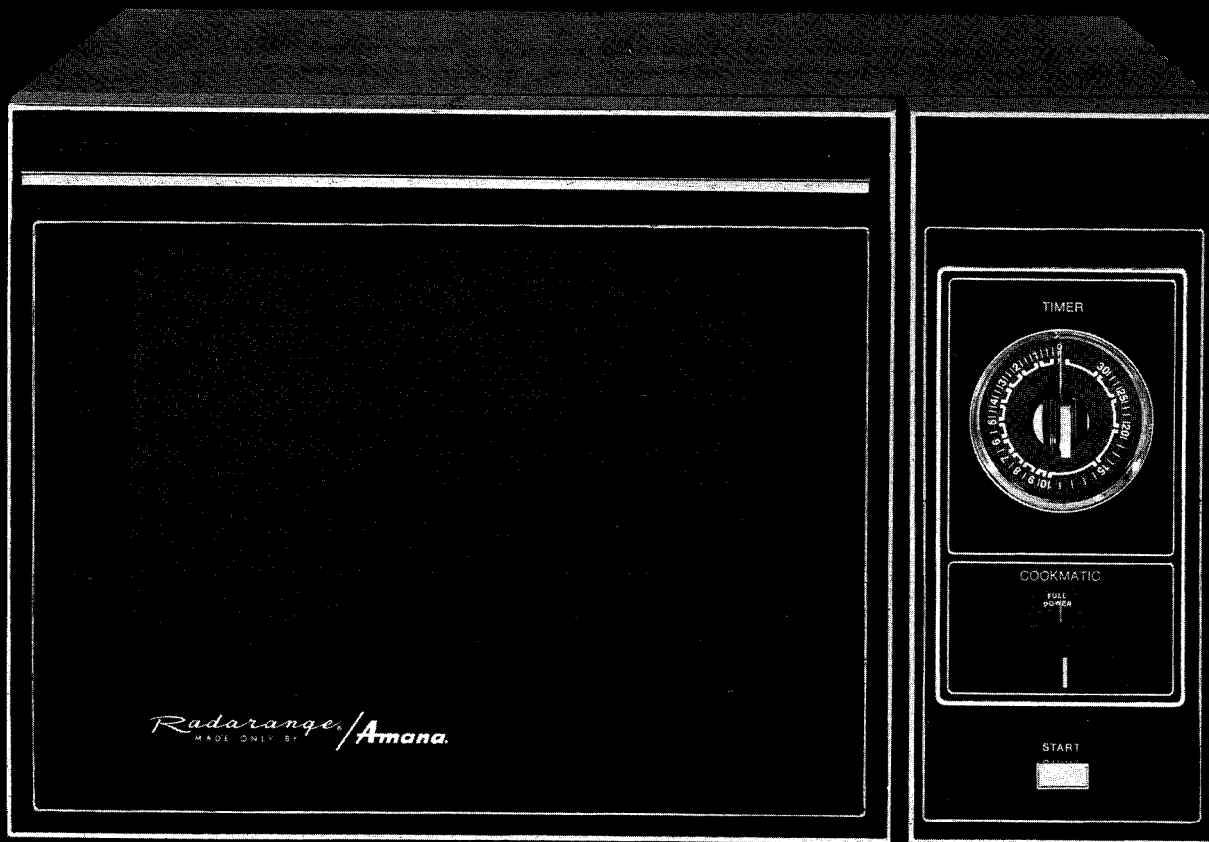

## Model RRL-5D\*

Read this manual carefully before installing and operating your new Radarange Oven. Store this manual with your Amana cookbook for future reference.

\*Model number may be preceded by the letter "C" in Canada.

# Contents

<b>Session 1 — Installing and Learning Correct Use of Microwave Oven</b> .....	2
Important Safety Instructions .....	2
Precautions:	
Avoid Exposure to Microwave Energy .....	4
About General Use .....	4
Regarding Specific Types of Foods, Etc. ....	5
Regarding Utensils .....	5
Operation of Interlock Switch Systems .....	7
<b>Session 2 — Learning the Controls</b> .....	8-9
Using the Minute Timer .....	9
<b>Session 3 — Cooking</b> .....	10
Cooking With Full Power .....	10
Slow Cooking .....	11
Defrosting .....	12
Making Entire Meals in Your Microwave Oven .....	13
<b>Maintenance</b> .....	14
Cleaning the Unit .....	14
Changing Oven Light .....	14
If Glass Tray Should Break .....	15
<b>Before Calling for Service</b> .....	16

**Radarange**  
MICROWAVE OVEN

Record in space below the Model No., Manufacturing (MFG.) No., and Serial No. recorded on the nameplate of your oven. The nameplate is located on the back of the unit.

Model No. \_\_\_\_\_

MFG. No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Date Installed \_\_\_\_\_

Selling Dealer \_\_\_\_\_

Retain these numbers and your Sales Receipt for proof of purchase should warranty questions arise. Your Sales Receipt is required should warranty service be needed.

## IMPORTANT CAUTIONS

**Read all instructions before operating.**

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

**WARNING:** — To reduce the risk of burns, electric shock, fire injury to persons or exposure to microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 4.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on page 3.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. As with any appliance, close supervision is necessary when used by children.
6. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped.
7. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.
8. Do not cover or block any openings on the appliance.
9. See door surface cleaning instructions on page 14.

**SAVE THESE INSTRUCTIONS**

### Installation Instructions

#### UNPACKING THE OVEN

- A. Unpack and visually check the oven. After the oven is uncrated, all packing materials must be removed from the oven cavity. Inspect the oven for any damage such as damaged gasketing around the door, dents or holes in the screen of the door or dents inside the oven cavity. Replace the glass oven tray in the oven. Do not operate the oven without the glass tray in place.

Any dents or breakage should be reported to your Amana dealer and the delivering carrier immediately. Your Amana dealer will tell you if the unit will operate correctly.

- B. On the back of the oven is a serial plate. Record the model number, manufacturing number and serial number stamped on the plate in the space provided on page 1 of this book.

We also suggest that you retain for future reference your sales receipt, or any document prepared by your selling dealer which states model number, manufacturing number, serial number and purchase or delivery date.

- C. Complete the registration card which is included with the packet that comes with the oven.

**This must be filled out and returned to Amana Refrigeration, Inc., Amana, Iowa 52204. Federal regulations require that all manufacturers of microwave ovens have a permanent record of the owners of each oven.**

## Electrical Requirements

**IMPORTANT: PLEASE READ AND FOLLOW THESE INSTRUCTIONS.**

### WARNING:

For your personal protection against possible shock hazards, this appliance is equipped with a three-prong (grounding) plug. **DO NOT UNDER ANY CIRCUMSTANCES CUT OR REMOVE THE ROUND GROUNDING PRONG FROM THIS PLUG.**

For your personal safety, this oven must be plugged **DIRECTLY** into a separate, properly grounded and polarized three-prong wall receptacle. Where a two-prong wall receptacle is encountered, it is the personal responsibility and obligation of the customer to contact a qualified electrician and have it replaced with a properly grounded and polarized wall receptacle in accordance with the National Electrical Code.

**The oven must be grounded at all times.** If you move the oven from area to area, the receptacle you use must be a fully grounded and polarized separate circuit, and the electrical circuit must be of the proper power rating.

**Do not use a two-prong adaptor.**

**Do not use an extension cord.**

**This oven must be plugged directly into a separate 120 volt, 15 amp, 60 cycle circuit all its own.** No other appliances or lights must be on the circuit. If a microwave oven is on a circuit with other appliances, cooking times can be increased and fuses can be blown.


The wall receptacle you intend to use must receive its power from an electrical circuit with the correct power rating. It is the personal responsibility and obligation of the customer to have a qualified electrician make sure that the electrical circuit matches the power rating stamped on the oven serial plate.

**Do not build the oven in with the sides, top or bottom air flow restricted. The oven must have sufficient air flow around it. If you wish to build in the Radarange Oven, a special built-in kit can be ordered through your Amana dealer.**

## Safety Instructions

**Read and follow these rules for safe operation.**

The Radarange Oven is designed to be **safe** and **reliable**. Now we ask you to do your part. As with all appliances, there are certain rules to follow, some that apply to all microwave ovens and some that are unique. Make sure everyone who cooks is familiar with this product's operation and with these precautions.

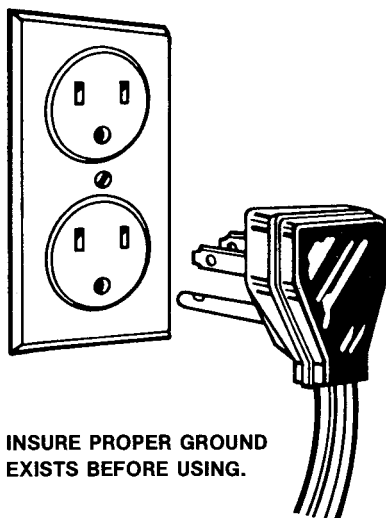

**INSURE PROPER GROUND EXISTS BEFORE USING.**

## A. PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.

- (1) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (2) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (3) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (a) door (bent), (b) hinges and latches (broken or loosened), (c) door seals and sealing surfaces.
- (4) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## B. Precautions about **general use**

- (1) **Do not operate oven without glass tray in place.**
- (2) **Extreme overcooking**, as in conventional cooking, can cause food to smoke or possibly ignite. In the rare event this happens, turn timer to the **OFF** position, keep the oven door closed and the fire will extinguish itself.
- (3) **Do not operate** the oven **when it is empty**. Microwave energy can damage the magnetron tube if the oven is operated empty for an extended period of time.
- (4) **Food and cookware** should not be rested on the oven door. It could misalign the door.
- (5) **Water** must never be poured into the bottom of the oven.
- (6) **Do not remove the outer case or door at any time**. Doing so would expose you to extremely high voltage. All service and repair should be performed by a qualified service technician.
- (7) **Do not leave the oven unattended** when drying anything. Foods, or other items can become too dry and can ignite. If anything does ignite, turn timer to the **OFF** position. Do not open the door until after the fire stops.
- (8) This Amana Radarange Microwave Oven is designed **for home use only; do not use this oven for commercial purposes**. (Amana manufactures a full line of microwave ovens designed especially for use in restaurants, factories, offices and other commercial areas. Inquiries regarding Amana Commercial Radarange Microwave Ovens should be directed to Amana Refrigeration, Inc., Amana, Iowa 52204.)

C. Precautions about **specific types of foods and cooking**

- (1) **WARNING: Do not heat or reheat liquids in a microwave oven without stirring first.** Liquids must be briskly stirred or poured to mix in air. If air is not mixed into a liquid, it can erupt in the oven or when removed from the oven.
- (2) **Eggs** must not be cooked or reheated in the shell or with an unbroken yolk. To do so may result in a pressure build-up and eruption. Pierce the yolk with a fork or knife before cooking. Do not reheat previously cooked eggs in the microwave oven unless finely chopped or scrambled.
- (3) **Potatoes, tomatoes,** or other foods with a skin, must have the skin pierced before being cooked in the microwave oven. All foods with an outer skin or membrane should be pierced to allow steam to escape during cooking.
- (4) **Special popcorn in bags** designed and labeled for **MICROWAVE ONLY** may be used. Since your microwave oven cooks very fast, do **not** exceed the minimum amount of cooking time recommended on the popcorn package. Do **not** leave the oven unattended.
- (5) **Home canning** must not be done in any microwave oven, as metal lids are generally used. Since metal lids reflect microwaves, you cannot be assured that the food product will be heated uniformly to 212°F or above, and there is a probability of deterioration of the food product. USDA extension specialists do not recommend home canning in microwave ovens.
- (6) **Deep fat frying** must not be done in any microwave oven. The fat could overheat and be hazardous to handle.
- (7) **Excess fat and drippings** from meats and poultry should be basted away during cooking to prevent splattering.

D. Precautions about **utensils**

See the introductory chapter of the Amana cookbook for suggested utensils.

- (1) **WARNING: Do not heat sealed containers in any microwave oven.** Containers with restricted openings, such as syrup bottles, should not be used for cooking or reheating. Food or liquid could expand rapidly and cause the container to break.
- (2) **Regular cooking thermometers** must not be used in the Radarange oven. Most cooking thermometers contain mercury and may cause "arcing," malfunction, and/or damage to the oven.
- (3) **Plastic bags and other air-tight containers** must always be pierced or opened before heating in a microwave oven to allow steam to escape.
- (4) **Metal cookware** is not generally recommended for use in the microwave oven. The use of metal cookware, "TV" dinner trays or foil will increase cooking time and decrease energy efficiency. It usually causes uneven cooking and can cause "arcing".

- (5) **Newspapers** must never be placed in a microwave oven. Some types printers' inks can absorb microwave energy and could cause the paper to ignite.
- (6) **Paper towels** which contain nylon or other synthetic fibers woven through them must not be used because the heated synthetics could cause the paper to ignite.
- (7) **Metal or ceramic accessories** which have a special design to absorb microwave energy to provide heat ("active" accessories such as browning skillets) may be used with caution. Be sure to test any such device before use and to read carefully all instructions provided with the accessory. Any questions concerning these accessory products should be referred to the accessory manufacturer. Amana Refrigeration, Inc., doesn't endorse any brand of accessory. If you purchase any accessory, follow the accessory manufacturer's directions. Remember that all microwave accessories are not "top quality"; many may **not** be suitable for microwave cooking. Caution must be used when purchasing microwave accessories.



## Check Operation of Interlock Switch Systems

The **START** switch turns the oven on. Microwave energy is generated only when the door is closed, cooking time has been set, the cooking power control has been set on **FULL POWER, SLO COOK or DEFROST**, and the **START** switch has been pushed.

In addition, the oven has interlock switches to assure no microwave energy is generated when the door is open.

To check or remove food from the oven before the cooking time has elapsed, open the oven door. When the oven door is opened, hidden interlock switches sense the motion of the door and automatically turn the oven off.

Here is how you may check the operation of the **START** switch:

1. **Put a glass of water in the oven.**
2. **Turn the timer dial clockwise.**
3. **Locate this switch on the oven:**


**START**

4. **Push the **START** switch.** The oven should be operating. The interior light should be on. The light will always be on when the oven is operating and whenever the oven door is open.
5. **Open the oven door.** The oven should now shut off and the sound of the motor should cease. **Close the oven door.**
6. **Push the **START** switch.** The oven should be operating.
7. Open the door and remove the glass of water. The oven Timer Dial should stop.
8. **Turn the Timer Dial counterclockwise until it clicks "off".**

If under any of the preceding conditions the oven does not operate as stated, do not use it. Call your Amana dealer or authorized service agency. Your Radarange Oven is now ready to use and you're familiar with the basic precautions for its safe use.



# Session 2<sup>8</sup>

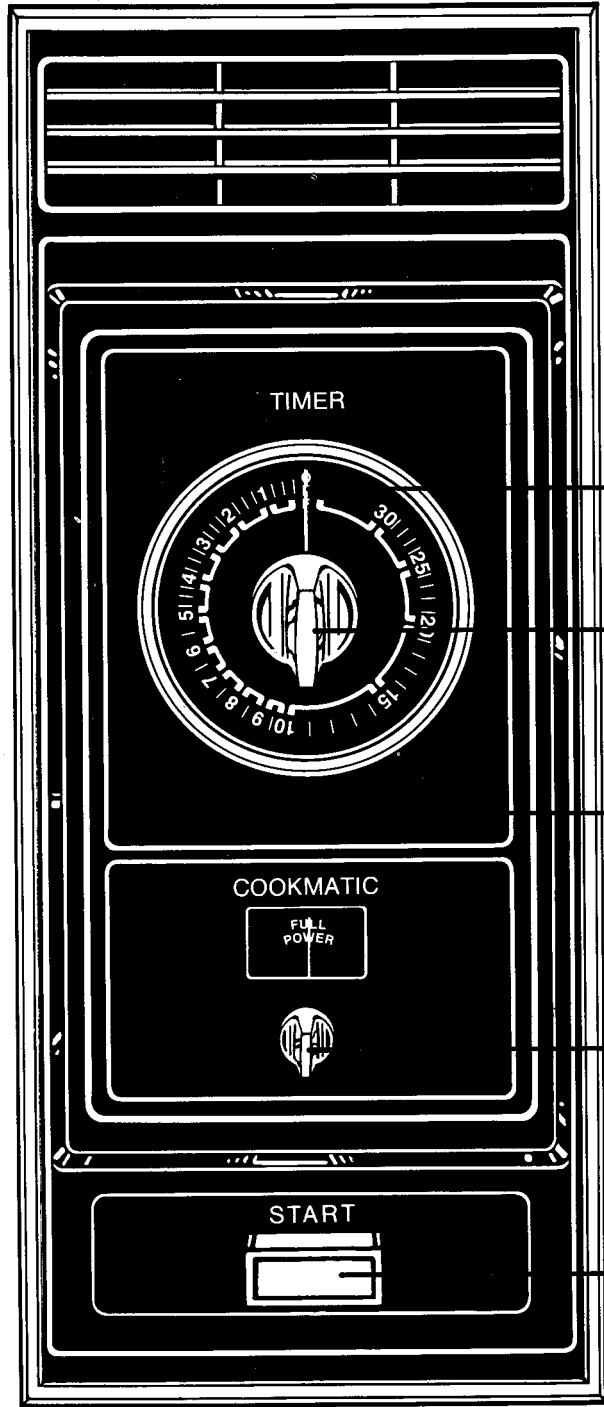

## Learning the Controls

The control panel on your Radarange Microwave Oven looks like the picture at left:

**TIMER SETTING MARK** — For precise measurement of time.

**TIMER DIAL** — Turned (clockwise) to select the amount of cooking time desired.

**COOK LIGHT (CANADIAN MODELS ONLY)** — Glows red when the oven is cooking at full power. Flashes on and off when cooking at lower power levels.

**COOKING POWER CONTROL DIAL** — Turned (in either direction) to select the cooking power setting desired, or to set the kitchen timer.

**START SWITCH** — Pushed to start cooking operation. You must select cooking time before pushing start switch.

**USING THE MINUTE TIMER** — You can use your Radarange Oven's timer, without cooking, as a kitchen timer to time mixing, steeping or even telephone calls!

Locate each of these controls on your Radarange Oven.

### TRY IT! Using the Minute Timer

To use the kitchen timer feature of your oven to time three minutes, follow these steps:

- A. Turn the **Cooking Power Control Dial** to the **TIMER** setting.
- B. Set the **Timer Dial** for three minutes.
- C. Push **START**. The oven blower and oven light will come on and the **Timer Dial** will move counterclockwise as time expires.  
You can estimate the amount of time remaining by looking at the setting directly behind the **Timer Setting Mark**.
- D. When the three minutes are up, a signal will sound.

Note: The oven door must be closed for the minute timer to operate. When the oven is set to use the timer, the **Cooking Power Control Dial** should not be changed. This prevents the oven from generating any microwave energy when it is operating as a minute timer. Remember, do not attempt to cook when the oven is empty.

### SUMMARY — To Use the Minute Timer

1. Set the **Cooking Power Control Dial** to the **Timer** setting.
2. Set the desired time by turning the **Timer Dial**.
3. Push **START**.

## Cooking

There are three basic cooking cycles on your Radarange Microwave Oven:

- 1) **FULL POWER** (marked **FULL PWR** on the Cooking Power Control Dial.
- 2) **SLO COOK**, and
- 3) **DEFROST**.

### TRY IT! Cooking With Full Power

**FULL POWER** means that full microwave power is delivered to the oven cavity. Cooking with **FULL POWER** is the fastest and easiest way to cook in a microwave oven. When at **FULL POWER** your Radarange Microwave Oven will provide approximately 700 watts\* of cooking power. It's **very** fast!

Set your Radarange Microwave Oven at **FULL POWER** when your Amana cookbook recipes and charts specify **FULL POWER**.

A. **Put a casserole dish filled with water in the Radarange Oven.** This is to absorb the microwaves as you experiment with the controls. When there is no food, water or other "load" to absorb the microwave energy being produced, parts of the microwave oven could be damaged.

B. **Look at the Timer Dial.** Notice it is numbered from "1" to "30". These numbers represent minutes of cooking time. Notice there are 3 small marks between each of the numbers from "1" to "5". These each represent 15 second intervals. For example, the first mark between "4" and "5" means 4 minutes, 15 seconds. To cook for 4 minutes, 15 seconds, you'd set the Timer Dial at this mark.

The marks between the "5" and "10" each represent 30 seconds. If, for example, you wanted to cook something for 7 minutes and 30 seconds, you'd set the timer dial on the mark between the 7 and 8. The marks between "10" and "30" each represent one minute. If you want to cook something for 12 minutes, you'd set the Timer Dial at the second mark past the "10".

This very last mark (just to the right of **OFF**) is the 30-minute setting.

This means that the longest cooking time you can set is 30 minutes.

That's as much as you'll need for cooking most foods. And if you want to cook longer, all you do is reset the timer to the amount of additional time required after the first 30 minutes is up and start the oven again.

C. **Set the timer for 10 minutes by turning the Timer Dial clockwise until the timer setting mark is directly in front of the "10".**

D. **Turn the Cooking Power Control Dial to FULL PWR.**

E. **Push the **START** switch.** The oven is now cooking. Notice the Timer Dial moves counterclockwise as the time expires. You can estimate the amount of cooking time remaining by looking at the setting directly behind the timer setting mark.

\*per 1 liter test

- F. Occasionally you may make a mistake when setting a cooking time. Or you may decide to change the time setting after you've started cooking. If so, it's easy to change the time setting on your Radarange Oven. For example, suppose you decide you only want to cook 5 minutes more. **Turn the dial counterclockwise to the 5-minute setting.** Easy!

You may also want to stop the oven at some time to check the cooking, to stir, etc. If so, it's easy. Just open the oven door. The oven will turn off immediately. Check the water, then close the door. Now, **push the START switch.** The oven will start cooking again from the point where it stopped when you stopped the oven.

- G. Suppose now that the food is done and needs no more cooking. **Move the timer dial back to the OFF POSITION.**

## SUMMARY — To Cook With Full Power

1. Turn Timer Dial clockwise to desired setting.  
(To cook 3 minutes, set at "3".)
2. Check to be sure the Cooking Power Selector Dial is at the **FULL PWR** position.
3. Push START switch.

## TRY IT! Slo Cooking

Many foods cook very well at full microwave power (FULL PWR). However, just as some foods cook better at lower rather than higher conventional oven temperatures, some foods cook better at lower rather than higher microwave power levels. Your Amana Radarange Microwave Oven has three cooking power levels from which to choose. These power levels are attained by cycling the microwave power on and off at various time intervals. Each power level is particularly well suited for cooking different types of foods. If a recipe in your Amana cookbook is designed to be cooked at a lower power level, the recipe may tell you to use either the **SLO COOK** or **DEFROST** cycle. Consult the "3-Power Level Oven Conversion Chart" and "Guidelines for Using Oven with 3 Power Level Settings" found in the introduction chapter of the Amana cookbook. Other foods should be cooked at **FULL POWER**, following the recipe cooking times and other instructions exactly as written.

To see how the **SLO COOK** cycle works:

- A. **Place a cup of fresh, cool water in your Radarange Oven.**
- B. **Set the timer for 1 minute, 30 seconds.**
- C. **Turn the Cooking Power Control Dial to SLO COOK.**
- D. Push START switch. The oven is now cooking on the **SLO COOK** cycle. In the **SLO COOK** cycle the microwave power cycles on for approximately 60% of the cooking time. Electric ranges operate in this same way — cycling electric energy on and off to maintain a slower cooking speed.

When the cooking time has elapsed a signal will sound. (**Note:** the signal will not sound if less than 1½ minutes is set on the Timer Dial. If you want to signal the sound, turn the dial past 1½ minutes, then back to the shorter time setting.) **Notice the Timer Dial** — its will not be at **OFF** but at the first mark to the left of **OFF**. If desired, turn the dial counterclockwise until you hear a “click” and the dial is at the **OFF** position. This safety feature assures the timer will not be turned accidentally.

## SUMMARY — To Slo Cook

1. Turn Timer Dial clockwise to desired time setting.
2. Turn Cooking Power Control Dial to **SLO COOK** setting.
3. Push **START** switch.

## Defrosting

Your Radarange Microwave Oven is designed to allow quick defrosting of frozen foods. Most foods are defrosted using the **DEFROST** cycle. The **DEFROST** cycle pulses microwave energy on and off automatically. During the “on” periods (approximately 40% of the time set on the Timer Dial) microwave energy is produced, heating the exterior of the frozen food. During the “off” periods (approximately 60% of the time set on the Timer Dial) the heat is conducted to the interior of the food. This allows the food to be evenly defrosted, with little or no cooking of the exterior before the interior is completely thawed.

## TRY IT! Defrosting!

A 10 oz. package of frozen fruit can be defrosted in your Radarange Oven in 3½-4½ minutes on the Defrost Cycle.


- A. **Unwrap and place 10 oz. frozen fruit in a 1-quart covered casserole.** If fruit is packaged in a plastic bag, merely slit the bag to allow steam to escape. (If you do not have frozen fruit on hand, place 2 ice cubes in a cup in the Radarange Oven.)
- B. **Place fruit or cup of ice in Radarange Oven.**
- C. **Set the timer for 3½ minutes.** (Note: Start with the shortest amount of time and increase only if needed.)
- D. **Turn the Cooking Power Control Dial to the DEFROST setting.**
- E. Push **START** switch.
- F. At the end of 3½ minutes, **remove the casserole from the Radarange Oven. Remove cover, and stir fruit.**
- G. **If additional defrosting is necessary, set the timer for 1 minute; then push **START** switch.**


## SUMMARY — To Defrost

1. Turn Timer Dial clockwise to desired defrosting time setting.
2. Turn the Cooking Power Control Dial to **DEFROST**.
3. Push **START** switch.

## Making Entire Meals In Your Microwave Oven

Read "Meal Planning," the second section of your Amana cookbook. In this section you'll learn how to make entire meals in your microwave oven.

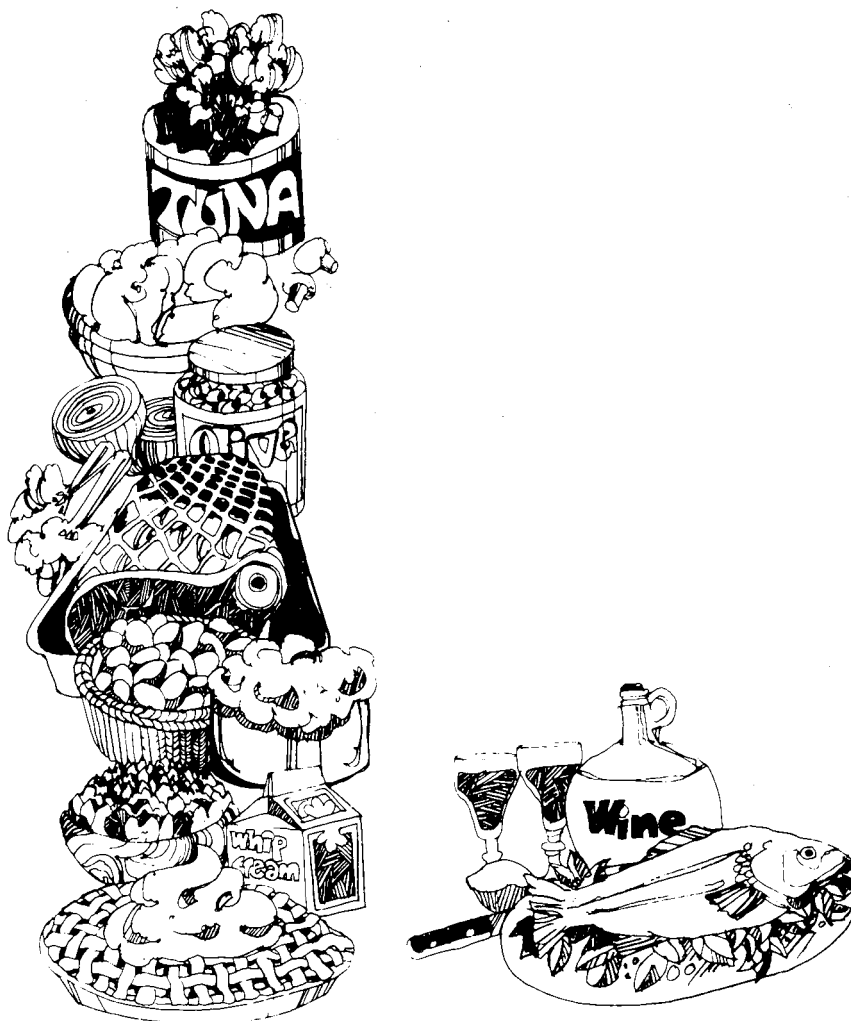

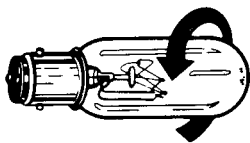

To remove bulb,  
press in and  
turn counterclockwise.

## To Clean Oven Interior

The inside walls and floor are made of stainless steel. If they should become splattered, all you do is wipe them with a paper towel or clean with a mild detergent in warm water using a soft sponge or cloth. If desired, a cup of water can be boiled in the oven to loosen soil before cleaning.

Do not use an abrasive to clean the inside. It might damage the stainless steel. Never pour water into the bottom of the oven.

**To Clean The Glass Tray**, lift up the tray and remove. Wash in warm water and detergent or in a dishwasher. Replace with drip tray so the word "FRONT" is readable. Do not operate the oven without tray in position.

### To Clean The Splatter Shield Inside Oven

The splatter shield keeps the top of the oven and antenna from getting dirty. Normally, a damp cloth will remove any splatter from the shield. However, if you want to clean it more thoroughly, remove the splatter shield. **Be careful not to bend the antenna when removing the splatter shield.** The shield is secured by four screws in recessed wells in the front underside of the shield and four tabs which fit into slots in the back oven wall. Remove the four screws. Then carefully lower the shield and, clearing the antenna, pull the shield forward out of the back wall slots and out of the oven. Wash the shield in hot, soapy water. **Do not** wash in a dishwasher. **Do not** use harsh or abrasive cleansers. When replacing, again be careful not to bend the antenna. Also be sure the splatter shield tabs fit snugly into the slots in the back of the oven before replacing the screws.

### To Clean the Oven Exterior

Use a soft sponge or cloth dampened with mild, sudsy water. Do not use abrasive cleaners.

### To Clean The Discharge Air Vents

There will be a slight build-up of cooking vapors in the discharge vent located in the upper right hand corner, above the control panel. This vent should be cleaned occasionally. Do not attempt to remove the front of the control; it is an integral part of the oven. Clean the air vent with a damp cloth.

## How to Change the Oven Light

The light bulb for the inside of the oven can be changed only from the back. On the upper right hand side of the oven back is a metal plate secured with one screw. The light bulb is located behind this plate. Follow these steps to change the bulb:

- a) Unplug the Radarange Oven from the electric outlet.
- b) Facing the oven back, remove the screw, allowing the metal plate and light to swing outward.
- c) Remove the bulb, being careful not to burn fingers or break the bulb. (To remove the bulb press into socket and turn counterclockwise.)
- d) Replace the bulb with a 25 watt bulb (Amana Part Number A31675-1). To replace the bulb press it into socket before turning clockwise.

- e) Reposition the plate being careful not to bend hinge tabs.  
Replace the screw.
- f) Connect the Radarange Oven to the power outlet.

## If the Glass Tray Should Break

The glass oven tray must be in place when operating the oven. This allows the microwaves to be reflected up into the bottom of the food that is being cooked. The tray is a special type of glass and, if it is accidentally broken, it must be replaced with the same type of glass from your Amana Dealer.

## Before Calling for Service

Be sure you have read and followed the operating instructions. Avoid unnecessary service calls for difficulties that are not the result of defective workmanship or materials. You will be charged for a servicer's travel expenses and labor, even though the product may be in warranty, if the difficulty is not caused by workmanship or material, or if that item is customer replaceable. The following items are considered customer replaceable: oven light bulb, glass tray, accessories, and knobs that can be removed by pulling off the control shaft.

### IF THE OVEN WON'T TURN ON . . .

- Is the oven plugged securely into the power outlet?
- Is a fuse blown or circuit breaker open?

### IF MICROWAVE POWER WON'T COME ON . . .

- Did you push the **START** switch?
- Is the oven door securely closed?

### IF ANOTHER FEATURE DOESN'T APPEAR TO BE OPERATING CORRECTLY . . .

- Have you followed the use and care instructions exactly? Review them to be sure.

### IF FOOD IS OVERCOOKED . . .

- Did you remember to set the correct cooking power level? (Review instructions, pages 10-13)

### IF FOOD IS UNDERCOOKED . . .

- Did you remember to set the correct cooking power level? (Review instructions, pages 10-13.)
- Are there other energy-consuming appliances on the same circuit as the microwave oven? (Review installation instructions, page 3.)
- Is the line voltage to your home low or lower than usual? (The power company in your area should be able to tell you if there is low voltage to your home.)



IF A PULSING SOUND IS HEARD WHEN COOKING AT SLO COOK OR DEFROST . . . .


- This is normal. The pulsing sound is the result of the magnetron tube cycling on and off to produce the lower power level.

IF THE OVEN LIGHT PULSES DIMMER, THEN BRIGHTER . . . .

- Is the line voltage to your home low or lower than usual? (The power company in your area should be able to tell you if there is low voltage to your home.)

IF ROOM LIGHTS DIM OR PULSE DIMMER, THEN BRIGHTER WHEN THE OVEN IS IN USE . . . .

- Is the microwave oven on a separate circuit? (Review installation instructions, page 3.)

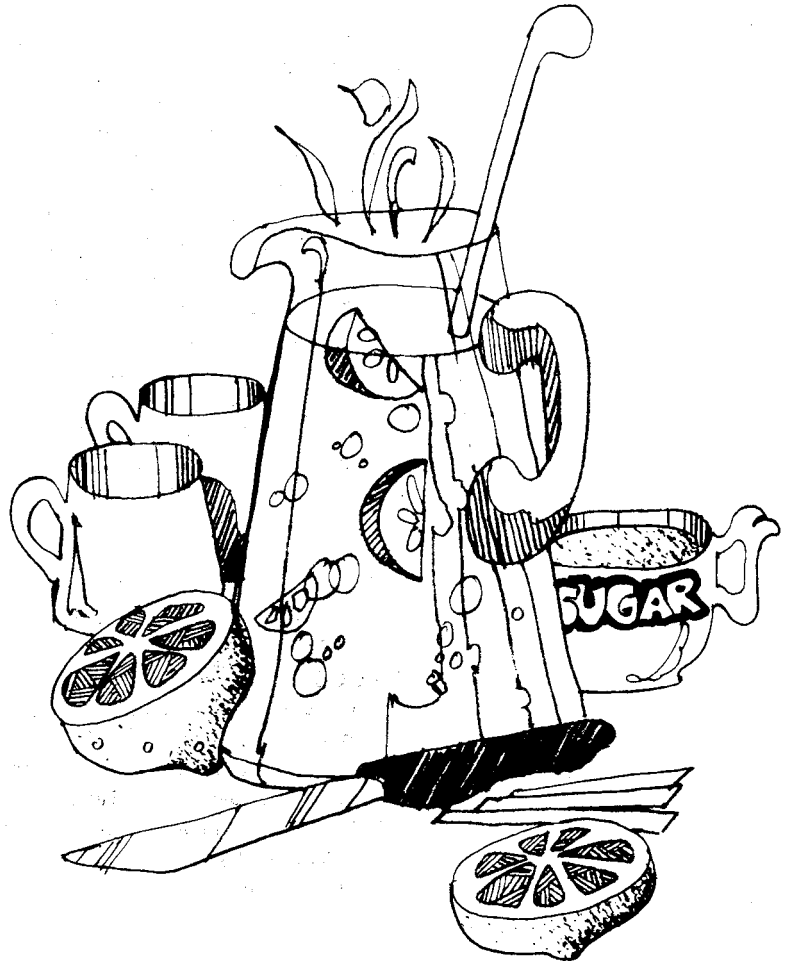

## When Service is Required

Call nearest authorized service agency. (The dealer from whom you purchased your Radarange Oven can give you the name of your nearest authorized Service Center.) Help them give you prompt service by providing:

1. An accurate description of the trouble.
2. Complete model, manufacturing, and serial numbers (located on nameplate on the back of the Radarange Oven.)
3. Date of installation. (We also suggest you retain your sales receipt.)

**Remember**, repair by an unauthorized service person that results in subsequent failure will void the warranty promise.

Amana has a large network of Authorized Service Centers in the U.S. However, if you should have a service problem that is not resolved locally,

Write:

- Customer Relations Department
- AMANA REFRIGERATION, INC.
- Amana, Iowa 52204

Or Dial: (319) 622-5511 Monday through Friday (8 a.m. - 5 p.m., Central Time Zone) and ask for Customer Relations.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>