CC-IRC
Infrared Emitter





nuas entropha System Accessories

#### **CC-IRC IR Emitter Overview**


The IR Emitter adheres directly to the IR control window of your equipment by using clear two-sided tape to securely adhere the opaque shield. This "standard configuration" allows you to control your equipment either from either IR emitters or a hand-held remote control.

The two black adhesive-backed window shields (Figure 3) are included within each emitter package and allow for alternate configurations. With this shield (surrounding the internal emitter), you can restrict IR reception through the device's control window by blocking any interference or IR signals produced by sources other than the internal emitter. Without this shield, any incoming IR signal can pass through to the IR control window and overlap signals sent via the emitter (Figure 1).

Note: Each CC-IRC package is shipped with four sealed alcohol pads which can be used to clean any adhesive residue left from a previous installation of the window shield on the surface of a device's IR control window.

## **Pass-Through Configurations**

This method allows IR signals generated from hand-held remotes to easily pass through the opaque red shell/cover. The internal IR LED can be oriented to either face towards or away from the shell (Figure 1), depending on its output configuration. Use the low-output configuration when device is being saturated by an IR signal. Use the high-output configuration when the device isn't receiving enough of an IR signal and requires more strength. The side with the round "bump" is the high-output side.

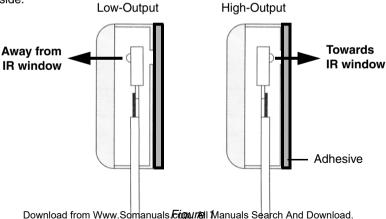

# Removing the Factory-Installed Shell

The factory-installed shell is easily removed by carefully separating the two halves with a sharp-edged tool, such as an X-Acto<sup>TM</sup> knife.

The IR LED can then be reversed or removed when the shell is

separated. Once the IR emitter and/or shield installations have been completed, the housing can be re-assembled by pressing the two halves firmly together.

 


Figure 2

### **Shielded Configuration**


Use this configuration to prevent interference from fluorescent lights or other IR sources. The metallic shield prohibits passage of external IR signals and ensures proper IR signals will be received from the emitter.

- 1. Remove the IR LED from the factory-installed shell (Figure 2).
- Test fit the location and size of the IR shield (Figure 3) on the target device. If necessary, use scissors to trim the shield to fit the opening of the IR window.
- Remove the adhesive backing from the IR shield and carefully place the IR LED into the recessed area using the correct orientation (Figure 1). Make sure the wires attached to the IR LED are not shorted together.
- 4. Flip the shield-emitter combo back over and begin to carefully position the shield over the IR control window so that it covers the entire surface (Figure 4). This keeps any other signal from coming through.
- Press firmly on the shield surface to activate the pressure-sensitive adhesive.



Opaque IR Window Shield

Download from Www.Somanuals.com. All Manuals Search And Download.

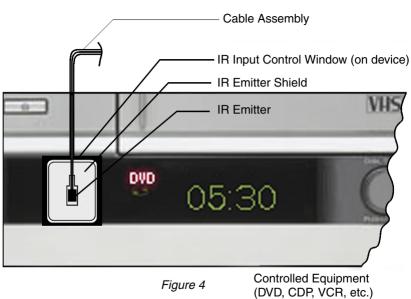

Download from Www.Somanuals.com. All Manuals Search And Download.

#### **AMX Limited Warranty and Disclaimer**

AMX Corporation warrants its products to be free of defects in material and workmanship under normal use for three (3) years from the date of purchase from AMX Corporation, with the following exceptions:

- Electroluminescent and LCD Control Panels are warranted for three (3) years, except for the display and touch overlay components that are warranted for a period of one (1) year.
- Disk drive mechanisms, pan/tilt heads, power supplies, and MX Series products are warranted for a period of one (1) year.
- Unless otherwise specified, OEM and custom products are warranted for a period of one
   (1) year.
- AMX Software is warranted for a period of ninety (90) days.
- Batteries and incandescent lamps are not covered under the warranty.

This warranty extends only to products purchased directly from AMX Corporation or an Authorized AMX Dealer. All products returned to AMX require a Return Material Authorization (RMA) number. The RMA number is obtained from the AMX RMA Department. The RMA number must be clearly marked on the outside of each box. The RMA is valid for a 30-day period. After the 30-day period the RMA will be cancelled. Any shipments received not consistent with the RMA, or after the RMA is cancelled, will be refused, AMX is not responsible for products returned without a valid RMA number, AMX Corporation is not liable for any damages caused by its products or for the failure of its products to perform. This includes any lost profits, lost savings, incidental damages, or consequential damages, AMX Corporation is not liable for any claim made by a third party or by an AMX Dealer for a third party. This limitation of liability applies whether damages are sought, or a claim is made, under this warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if AMX Corporation or an authorized representative of AMX Corporation has been advised of the possibility of any such damages. This limitation of liability, however, will not apply to claims for personal injury. Some states do not allow a limitation of how long an implied warranty last. Some states do not allow the limitation or exclusion of incidental or consequential damages for consumer products. In such states, the limitation or exclusion of the Limited Warranty may not apply. This Limited Warranty gives the owner specific legal rights. The owner may also have other rights that vary from state to state. The owner's saids be to consum applicable state it was not in the configuration of partial and the configuration of partial configurations.

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY, AMX CORPORATION MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. AMX CORPORATION EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS LIMITED WARRANTY.

©2006 AMX Corporation. All Rights Reserved.

041-004-2606 2/06

93-0000-11 Rev E

All rights reserved. AMX, the AMX logo, the building icon, the home icon, and the light bulb icon are all trademarks of AMX Corporation.

AMX reserves the right to alter specifications without notice at any time.

\*In Canada doing business as Pania Inc.



3000 research drive, richardson, TX 75082 USA 469 624 8000 • 800 222 0193 • fax 469 624 7153

Download from Www.Somanuals.com. All Manuals Search And Download. brussels • dallas • los angeles • mexico city • philadelphia • shanghai • singapore • tampa • toronto\* • york Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com