

American DJ® User Instructions



QUADRA FORCE/SYS™

**CAUTION! Read instructions before installing or plugging unit in.
DO NOT mount near any flammable surface -- Operate in well ventilated area.**

SPECIFICATIONS: "QUADRA FORCE™"

Weight:	9lbs. (master), 8lbs. Slaves
Size:	6"H x 11.5"W x 12.75"L
Lamp:	EXY 82V 250W
Fuse:	10A GMA
Supply Voltage:	120V
Working Position:	Any Safe position
Colors:	Multiple Dichroic Colored Moonflower Effect

HALOGEN LAMP WARNING!

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

Operating Instructions:

The Quadra Force/SYS is designed to operate as a complete 4-unit lighting system, consisting of 1 master and 3 slave units. Each lightweight unit is a multi-dichroic rotating moonflower effect, projecting a different gobo in multiple beams of rich color. The three slave units plug directly into the master to perform a sound-activated chasing light show.

Verify Package Contents:(1) Master Unit - Equipped with three AC input jacks on the rear panel
(3) Slave Units - Each equipped with one AC input jack on the rear panel (3) Computer-style AC cords of varied lengths. Once the three slaves have been connected to the master, plug the master unit into a standard 110V power supply. Each unit has been lamped and is ready for operation. Turn the knob on the rear panel of the master to adjust for the desired level of audio sensitivity. Note: If the audio sensitivity is turned all the way down or if there is no sound, the units will not chase; instead, the effect will remain fixed on one unit, which will cause overheating and damage to that unit.

To focus a unit, loosen the two Phillips screws on the bottom panel which hold the lens in place. Slide the lens forward or backward until you achieve proper focus. Tighten screws.

Caution! Never open unit when in use. Always disconnect main power before serving or replacing lamp. Always replace with same lamp and fuse.

Lamp Replacement

Unplug the unit and allow it to cool down. Remove finger screw on the top panel and its attached door. Remove the bad lamp from the socket and slide it up through the retaining clips. Replace lamp, being careful not to touch lamp with bare fingers. Reassemble.

Please fill out and send the enclosed warranty card to ensure proper registration of this product. Contact your authorized American DJ dealer for service.

American DJ®, Los Angeles, CA. 90058 USA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>