American Standard



SINGLE-HOLE BAR/PANTRY FAUCET WITH SWING SPOUT


Installation Instructions 7100.2XX 7190.132


Certified to comply with ANSI A112.18.1M U.S. Patent No. 5,819,789

 
34440 REV. 1.4

Thank you for selecting American-Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothlyplease read these instructions carefully before you begin.

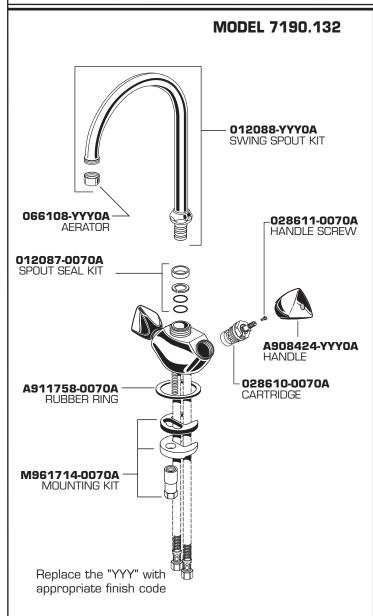

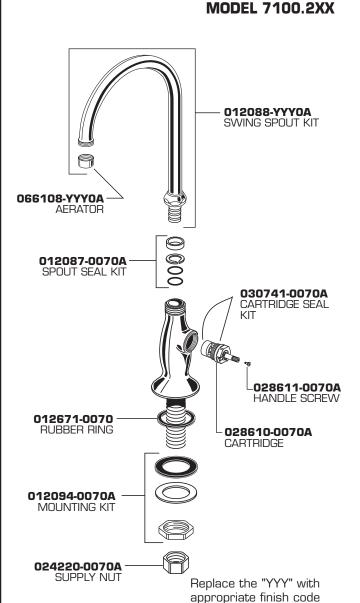





HOT LINE FOR HELP

For toll-free information and answers to your questions, call:
1-800-442-1902
Weekdays 8:00 a.m. to 6:00 p.m. EST
IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)
Weekdays 8:00 a.m. to 7:00 p.m. EST
IN MEXICO 01-800-839-1200

Product names listed herein are trademarks of American Standard Inc. © AS America, Inc. 2008

	CHROME	002
	WHITE	020
ı	BONE	021
	POL. BRASS	099


1

SWING SPOUT ASSEMBLY

CAUTION

Turn off hot and cold water supplies before beginning.

Assemble the SPOUT (3) and tighten the SPOUT NUT (4) until snug on VALVE BODY.

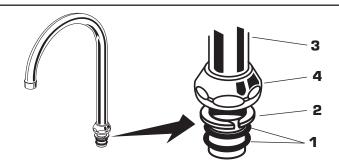

2

FITTING INSTALLATION


- Remove LOCKNUT (1), BRASS WASHER (2), and GASKET (3) from fitting.
- Place RUBBER RING (4) in recess of fitting.
- Insert inlet hoses (on model 7190.132 only) and THREADED SHANK through hole of sink making certain RUBBER RING (4) is properly seated in the recess of the fitting base.
- Assemble GASKET (3), BRASS WASHER (2), and LOCKNUT (1) onto the THREADED SHANK from underside of sink deck.
- Tighten the LOCKNUT (1) securely.

For Model 7190.132 Only

Connect the hot water supply to the left inlet hose and the cold water supply to the right inlet hose using appropriate connectors.

For Model 7100.2XX Only

 Connect hot or cold water supply lines to shank using sealant, appropriate connectors, and coupling nuts.

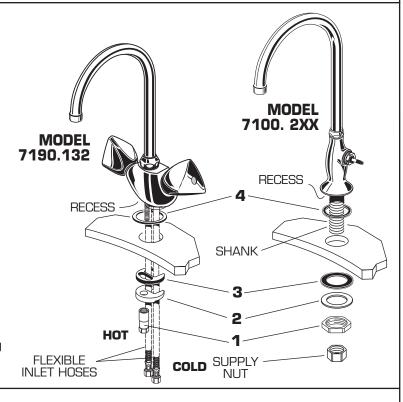

3

TEST INSTALLED FAUCET

- Remove AERATOR.
- With handle in OFF position, turn on water supplies and check all connections for leaks.
- Operate both handles to flush water lines thoroughly.
 Checkspout mounting and hose connections for leaks.
- Turn handles into OFF position and replace AERATOR.



SERVICE

- To change direction of handle rotation, proceed as follows:
 - Turn valve to OFF position.
 - Remove INSERT and HANDLE SCREW.
 - Slip HANDLE with ADAPTER off.
 - Remove SPRING CLIP (1).
 - Lift STOP WASHER (2), turn 90° and replace.
 - Replace SPRING CLIP (1).
 - Replace ADAPTER, HANDLE, SCREW, and INSERT.

- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR and rinse clean.
- If spout drips, operate handles several times from OFF to ON position. Do not force handles turn only 90°.
- Plastic SCREEN (3) in CARTRIDGE (4) may accumulate dirt causing reduced water flow. To clean, first turn off hot and cold water supplies, then:
 - Remove INSERT and HANDLE SCREW.
 - Slip HANDLE with ADAPTER off.
 - Unscrew CARTRIDGE (4) with wrench.
 - Thoroughly rinse plastic SCREEN (3) at base of CARTRIDGE (4).
 - Replace CARTRIDGE (4) until flange is tight against valve body.
 - Turn välves OFF.
 - Replace ADAPTER, HANDLE, SCREW, and INSERT.





CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A
CLOTH WITH A COARSE SURFACE.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com