HAVING TROUBL	E W/ YOUR SOUND SYSTEM?
CONDITION	POSSIBLE CAUSE
No Sound (Power LED Not Lit)	 turn POWER switch on
	 plug in power cord
	 check for blown fuse
No Sound (Power LED Lights)	 check for output from source
	 make sure all cables are completely plugged in
	 increase volume control
Distorted Sound	 check input cable connection
	 lower input signal level
Excessive Hum / Noise	 use shielded input cable
Mic Volume Too Low	 set balanced input to mic-level
Blows Fuse w/ Auxiliary Speaker	 shorted speaker cable

11/1000)

Anchor Audio Customer Service 888-444-6077 www.anchoraudio.com

AN-1000X TECHNICAL SPECIFICATIONS

Rated Power Output Max SPL @ Rated Power Frequency Response Speaker Type	50 watt continuous/90 watt dynamic er 103 dB @ 1 meter 65 Hz – 20 kHz ± 3dB 4.5" woofer w/ shielded magnet, 10mm dome tweeter, ferro-fluid cooled	Inputs Balanced Mic-Level Setting Line-Level Setting Line	female XLR, switchable phantom power, 15 volts DC @ 6.8 k ohm Lo-Z Bridging (10 k ohm) Hi-Z, unbalanced, 1/4″-phone & RCA
AC Power Reqs.	110 - 125 VAC, 50/60 Hz	Outputs	
Export Model	208 - 240 VAC, 50/60 Hz (90W max)	Line (post fader)	Lo-Z, buffered, RCA
Dimensions (HWD)	5.25 x 8.4 x 9" / 13 x 21 x 23 cm	Speaker	8 ohm, unswitched, 1/4"-phone
Weight	9.5 lbs / 3.3 Kg	Sensitivity For Rated Output	
Tone Controls		Line	balanced -18 dBv (125 mVrms)
Bass	+8/-12 dB @ 100 Hz	Microphone	balanced -56 dBv (1.5 mVrms)
Treble	+10/-12 dB @ 10 kHz	Line	-18 dBv (125 mVrms)


AN-1000X

Portable Sound System

OWNER'S MANUAL



CONTENTS		
GETTING STARTED	2	
FEEDBACK	3	
BASIC SYSTEM OPERATION	4	
BALANCED INPUT JACK	4	
AN-1000X ACCESSORIES	6	
IMPORTANT SAFEGUARDS		
HAVING TROUBLE W/ YOUR SOUND SYSTEM?	8	
AN-1000X TECHNICAL SPECIFICATIONS		

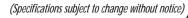



Anchor Audio, Inc.

Portable Sound Systems
• Torrance, California 100-0026-000/G - 9/06 Download from Www.Somanuals.com. All Manuals Search And Download.

A MESSAGE FROM THE OWNER

Thank you for choosing an Anchor Audio portable sound system. Our products incorporate state-of-the-art design and the finest quality of materials and workmanship. We're proud of our products and appreciate the confidence which you have shown by selecting an Anchor product.

I hope you'll take a few minutes to review this manual. We've incorporated several unique features into our products, and your knowledge of how to use them will enhance the performance and your enjoyment of the system.

David Jacobs, President on behalf of all Anchor Employees

GETTING STARTED

Please check your new unit carefully for any damage which may have occurred during shipment. Each Anchor product is carefully inspected at the factory and packed in specially designed boxes for safe transport.

Notify the freight carrier immediately of any damage to the shipping box or product. Repack the unit in the original box and wait for inspection by the carrier's claim agent. Notify your dealer of the pending freight claim.

NOTE: All damage claims must be made with freight carrier!

RETURNING SYSTEMS FOR SERVICE OR REPAIR

For service or repair, please contact the dealer you purchased your system from or Anchor Audio Customer Service at (888) 444-6077 to obtain a RA (Return Authorization) number. All shipments to Anchor Audio must include an RA number and must be shipped prepaid. C.O.D. shipments will be refused and returned at your expense.

IMPORTANT: Save the shipping box & packing materials, they were specially designed to ship your unit!

SYSTEM INVENTORY

You should receive the following items, if anything is missing please contact your dealer immediately.

- AN-1000X Powered Monitor
- AC Power Cord
- Owner Manual

WARRANTY REGISTRATION

Please go to our website (www.anchoraudio.com) and select "Warranty Registration". Completing this online registration form will activate your limited six-year warranty.

IMPORTANT SAFEGUARDS



CAUTION: To reduce the risk of electric shock, do not remove the cover. No user-serviceable parts inside. Refer servicing to qualified personnel.

WARNING: To prevent fire or electric shock, do not expose this equipment to rain or moisture.



ATTENTION: Pour eviter les risques de choc électrique, ne pas enlever le couvercle. Aucun entretien de pièces intérieures par l'usager. Confier l'entretien au personnel qualifié.

AVIS: Pour eviter les risques d'incendie ou d'électrocution, n'exposez pas cet article à lapluie ou a l'humidité.

EXPLANATION OF GRAPHICAL SYMBOLS



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to humans.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

EXPLICATION DES SYMBOLES GRAPHIQUES



Le symbole éclair avec point de flèche à l'intérieur d'un triangle équilatéral est utilisé pour alerter l'utilisateur de la presence à l'intérieur du coffret de "voltage dangereux" non isolé d'ampleur suffisante pour constituer un risque d'elétrocution.



Le point d'exclamation à l'intérieur d'un triangle équilatéral est employé pour alerter les utilisateurs de la présence d'instructions importantes pour la fonctionnement et l'entretien (service) dans le livret d'instruction accompagnant l'appareil.

AN-1000X ACCESSORIES

MIC-90 - Handheld Microphone

Anchor's dynamic, balanced, low impedance microphone with a unidirectional pick-up pattern. It has an on/off switch and comes w/ a 20' cable & mic clip.

AN-1001X - Companion Speaker

Unpowered speaker for use with the AN-1000X. It has a 1/4"-phone input jack and parallel input/output wire terminals. Designed to accept Omnimount® 25-series mounts. Speaker cable not included.

SS-250 - Speaker Stand

Collapsible speaker stand. Rated load capacity 25 pounds. (Requires SB-1 bracket sold separately)

SB-1 - Stand Mounting Bracket

U-shaped swivel bracket. Mounts to a wall, ceiling or on a speaker stand. (Adapter included)

RM-1 - Single Rackmount Kit

Mounts one AN-1000X in a standard equipment rack.

RM-12 - Dual Rackmount Kit

Mounts two AN-1000X's in a standard equipment rack.

SC-50 - Speaker Cable Heavy duty speaker cable - 50'.

MSB-201 - Combo Mic/Speaker Stand

Floor stand w/ 33" adjustable boom. Speaker stand when combined w/ SB-1 mounting bracket.

HS-1 - Carry Handle Convenient attachable handle for AN-1000X.

HC-1550 - Hard Case

Traveling hard case, holds up to two AN-1000X's, two mics & accessories.

FEEDBACK

Feedback is a howling noise or shrill sound that is self-generated by the sound system. It is caused by a microphone picking up the sound coming from the speaker and then being re-amplified. Once a feedback loop is started it will continue until the system is adjusted.

FEEDBACK CAUSES

- Microphone too close, pointing towards or in front of the speaker
- Volume setting too loud for room
- Sound reflections from hard surfaces, walls, etc.

AVOIDING & ELIMINATING FEEDBACK

- Point the microphone in a different direction
- Keep the microphone away from the speaker; position speaker in FRONT of microphone
- Reduce the sound system volume levels

CAUTION: Feedback can damage your equipment & may be hazardous to hearing.

PROBLEMS? Consult the troubleshooting section on the back page of this manual or call Anchor Audio Customer Service - 888-444-6077.

BASIC SYSTEM OPERATION

The AN-1000X is the most versatile powered monitor on the market, is designed to amplify the signal from a wide variety of input sources. Use it on an A/V rack, as a studio monitor, in a trade show booth or on a US Navy warship, you decide.

Here's How Easy It Is To Use

- 1. Place the AN-1000X in desired location
- 2. Plug the power cord into a grounded AC outlet
- 3. Plug an audio source into one of the three input jacks on the back panel:
 - LINE IN RCA jack
 - LINE IN 1/4-inch phone jack
 - BALANCED INPUT* XLR jack
- 4. Turn volume control on front panel to minimum
- 5. Set power switch on back panel to ON (red LED on front panel should light)
- 5. Adjust the volume, bass & treble controls to desired levels

IMPORTANT: To avoid feedback, do not position a microphone in front of speaker.


***BALANCED INPUT JACK**


The balanced XLR input jack allows the AN-1000X to be used in a variety of applications. The input can be user configured for a Lo-Z microphone or bridging balanced line-level inputs (such as used in the pro-audio and broadcast industry). In addition, the input has 15 volt phantom power which may be switched on or off.

The factory default setting is for microphone-level inputs w/ 15 volts DC phantom power. Follow the instructions below to change settings.

Change Balanced Input Jack Configuration

- 1. Remove rubber grommet located just above XLR input
- 2. Set the three dip switches w/ a small pointed object
- 3. Replace rubber grommet to protect system

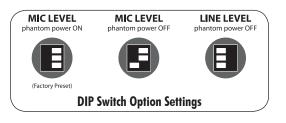

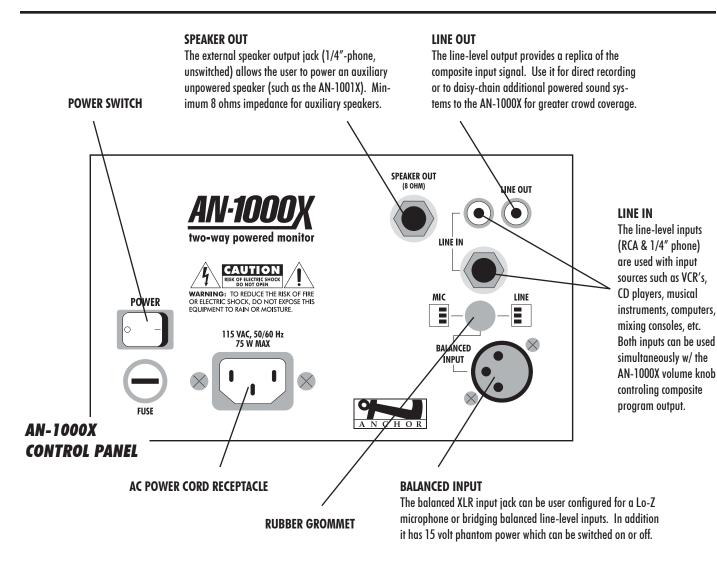

CAUTION: ALWAYS use shielded audio cables on input connections to prevent interference.

PROBLEMS? Consult the troubleshooting section on the back page of this manual.

NEED MORE HELP? Contact the Anchor Audio Customer Service Department - 888-444-6077.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com