

Arcam CD62 Compact Disc player



Safety guidelines

Safety instructions

This product is designed and manufactured to meet strict quality and safety standards. However, you should be aware of the following installation and operation precautions:

1. Take heed of warnings and instructions

You should read all the safety and operating instructions before operating this appliance. Retain this handbook for future reference and adhere to all warnings in the handbook or on the appliance.

2. Water and moisture

The presence of electricity near water can be dangerous. Do not use the appliance near water – for example next to a bathtub, washbowl, kitchen sink, in a wet basement or near a swimming pool, etc..

3. Object or liquid entry

Take care that objects do not fall and liquids are not spilled into the enclosure through any openings. Liquid filled objects such as vases should not be placed on the equipment.

4. Ventilation

Do not place the equipment on a bed, sofa, rug or similar soft surface, or in an enclosed bookcase or cabinet, since ventilation may be impeded. We recommend a minimum distance of 50mm (2 inches) around the sides and top of the appliance to provide adequate ventilation.

5. Heat

Locate the appliance away from naked flames or heat producing equipment such as radiators, stoves or other appliances (including other amplifiers) that produce heat.

6. Climate

The appliance has been designed for use in moderate climates.

7. Racks and stands

Only use a rack or stand that is recommended for use with audio equipment. If the equipment is on a portable rack it should be moved with great care, to avoid overturning the combination.

8. Cleaning

Unplug the unit from the mains supply before cleaning.

The case should normally only require a wipe with a soft, damp, lint-free cloth. Do not use paint thinners or other chemical solvents for cleaning.

We do not advise the use of furniture cleaning sprays or polishes as they can cause indelible white marks if the unit is subsequently wiped with a damp cloth.

9. Power sources

Only connect the appliance to a power supply of the type described in the operating instructions or as marked on the appliance.

10. Power-cord protection

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, and the point where they exit from the appliance.

11. Grounding

Ensure that the grounding means of the appliance is not defeated.

12. Power lines

Locate any outdoor antenna/aerial away from power lines.

13. Non-use periods

If the unit has a standby function, a small amount of current will continue to flow into the equipment in this mode. Unplug the power cord of the appliance from the outlet if left unused for a long period of time.

14. Abnormal smell

If an abnormal smell or smoke is detected from the appliance, turn the power off immediately and unplug the unit from the wall outlet. Contact your dealer immediately.

15. Servicing

You should not attempt to service the appliance beyond that described in this handbook. All other servicing should be referred to qualified service personnel.

16. Damage requiring service

The appliance should be serviced by qualified service personnel when:

- A. the power-supply cord or the plug has been damaged, or
- B. objects have fallen, or liquid has spilled into the appliance, or
- C. the appliance has been exposed to rain, or
- D. the appliance does not appear to operate normally or exhibits a marked change in performance, or
- E. the appliance has been dropped or the enclosure damaged.

Safety compliance

This product has been designed to meet the EN60065 international electrical safety standard.

Using this handbook

This handbook has been designed to give you all the information you need to install, connect, set up and use the Arcam CD62 compact disc player. The CR224 remote control handset supplied with this equipment is also described, as it applies to operating the CD62.

Note that this product is not upgradeable to a CD72, CD92, or any other model in the Arcam range.

Safety

Safety guidelines are set out on the inside front cover of this handbook.

Many of these items are common sense precautions, but for your own safety, and to ensure that you do not damage the unit, we strongly recommend that you read them.

Contents

Safety guidelines	2
Safety instructions	2
Safety compliance	2
Using this handbook	3
Safety	3
Models covered	3
Installation	4
Positioning the unit	4
Connecting to other equipment	4
Connecting to a power supply	4
CD62 rear panel	4
Using your CD player	5
CDs with text	5
Using the CR224 remote control	6
Technical specification	7
Guarantee	8
On-line registration	8

Installation

Positioning the unit

Always place the CD player on a level, firm surface. Placing your player on a set of dedicated sorbothane isolation feet will isolate the unit from its surroundings as well as absorbing the vibrations created within the player itself. You will generally hear some sonic improvements, which makes this an extremely cost-effective upgrade.

Connecting to other equipment

Interconnect cables

Interconnecting cables are not supplied with this CD player. We recommend high quality cables as inferior quality cables will degrade the sound quality of your system. Please contact your Arcam dealer for details of suitable cables.

Audio outputs

Connect these to your amplifier's CD or any other line-level input using suitable high quality interconnect cables. Ensure that the left and right audio outputs from the CD player are connected to the same left and right inputs on your amplifier.

Coaxial digital output

Use this socket if you are using a separate digital to analogue converter (DAC) or digital recorder. Connect to the DAC or recorder's digital input using a suitable 75Ω screened cable.

CAUTION: Never connect the digital output socket to a conventional audio input.

Optical digital output

Use this socket if you are using a separate DAC or digital recorder with an optical connection. Connect using a suitable optical cable.

Remote input

It is not necessary to make any connection to this socket in normal use. The connection is for ease of installation to multi-room remote control systems and is suitable for modulated IR commands. Contact your multi-room installer for more information.

Connecting to a power supply

Wrong plug?

Check that the plug supplied with the unit fits your supply and that your mains supply voltage agrees with the voltage setting (120V or 230V) indicated on the rear panel of the unit.

If your mains supply voltage or mains plug is different, consult your Arcam dealer or Arcam Customer Support on +44 (0)1223 203203.

Mains lead

 
The appliance is normally supplied with a moulded mains plug already fitted to the lead. If for any reason the plug needs to be removed, it must be disposed of immediately and securely, as it is a potential shock hazard when inserted into the mains socket. Should you require a new mains lead, contact your Arcam dealer.

Plugging in

Push the plug (IEC line socket) of the power cable supplied with the unit into the socket (**POWER INLET**) in the back of the unit. Make sure it is pushed in firmly.


Put the plug on the other end of the cable into your power supply socket and switch the socket on.

CD62 rear panel (part)

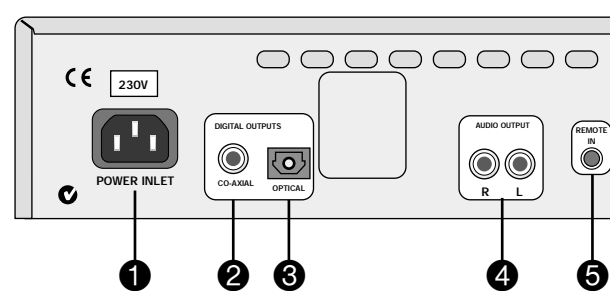

- 1 Power inlet, with voltage indicator
- 2 Coaxial digital output
- 3 Optical digital output
- 4 Single audio output
- 5 Remote input

 Using your CD player

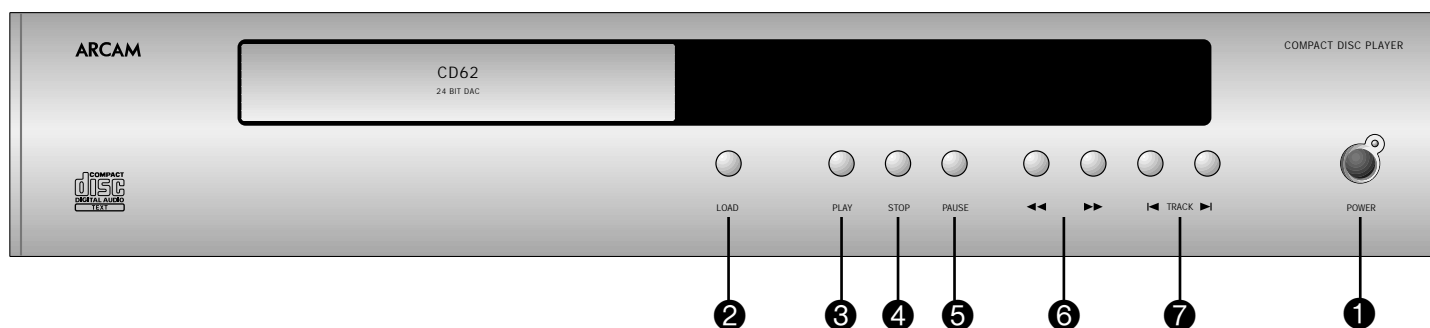


POWER 1

Press this button to switch the CD player on and off. When first powered up with no CD installed the display shows:



LOAD 2

 To install a CD, press **LOAD** (or **OPEN** on the remote control). The CD tray opens – it accepts 12cm and 8cm discs. Place the CD in the tray with the label facing uppermost. Press **LOAD** again (or press **PLAY**, or gently push the tray in 5mm) to close the tray. You will see the total number of tracks and total disc time, for example...



The display returns to '0' after a few seconds. The disc is now ready to play.

PLAY 3

Press to play the CD. To restart from track 1, press **STOP** and then **PLAY**.

Make sure your amplifier's input source selector is set to the correct input.

STOP 4

Press to stop the CD playing. The display shows '0' and the number of tracks.

PAUSE 5

Press to pause the disc (interrupt play).

Press **PAUSE** again, or **PLAY** to resume play from the same point.

SEARCH 6

Press ◀◀ to search backwards, or ▶▶ to search forwards for a particular passage within the currently playing track. If the player is in 'PAUSE' mode the search is made at high speed with the sound muted.

SKIP TRACK 7

To start a CD with a track other than the first, press ▶| or |◀ to locate the desired track.

To select another track during play, press |◀ or ▶|. The track is played automatically after selection. Pressing |◀ once returns to the start of the current track. To select the previous track, press |◀ twice quickly. To go back two tracks, press |◀ three times, and so on.

CDs with text

Load

You will see the total number of tracks and the total disc time with 'CD TEXT' illuminated in the display. The artist and album title scrolls across the display before returning to show the artist and total number of tracks.



Play

The track number is briefly displayed, followed by the track title scrolling across the display. The display returns to showing the track number and time.

Track selection

When a new track is selected, the track number is briefly displayed, followed by the track title scrolling across the display. The display returns to showing the track number and time.


NOTE: The track title is always displayed when a track is selected, either for playing or programming.

The artist is always displayed when the disc is stopped.

The **TIME** button turns the text display off.

The text display supports English only.

Using the CR224 remote control

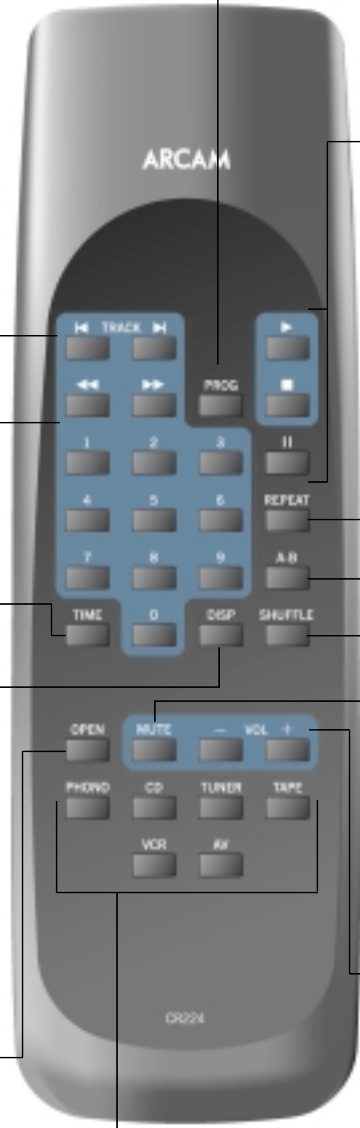

PROG (Program)
You can program a selection of up to 24 tracks from a disc to play in any order. Select a track by using the **▶** and **◀** buttons, then press **PROG** to program the track into memory ('PROGRAM' appears on the display to indicate that you have started programming a sequence). Repeat these steps to program the remaining tracks in your selection. Alternatively, press **PROG** once and enter your track selection using the 0-9 keypad.

The display shows the track numbers programmed, the total length of the programmed sequence and the number of tracks programmed (shown by a number below the word 'STEP').

Each time you enter a track the number below 'STEP' increments by one and flashes until you press **PROG** to confirm. If you fail to press **PROG** within about five seconds the display stops flashing and you will have to reselect the track.

Press **▶** to play the program. Press **▶** again to replay the entire sequence from the start. Press and hold **CLEAR** to erase the programmed sequence. Press **PROG** again to exit the program facility: the display flashes 'CONTINUE' and shows '0'.

Skip and Search Track
Skip track backwards and forwards;
Search backwards and forwards (see page 5)

TIME
Press **TIME** once to display the remaining time of the currently playing track. Press again to display the time remaining on the disc. Press a third time to turn the text display on.

Press **TIME** again and the display reverts to its original setting, showing the time elapsed for the current track.

For CDs with text, pressing **TIME** once while the disc is loaded but not playing displays the artist's name.

Pressing **TIME** a second time displays the total number of tracks and the total playing time.

DISP (Display)
Turns the display on or off. Turning the display off generally produces a slight improvement in sound quality.

OPEN
Opens and closes the CD tray.

Source selection
These operate in the same way as the source selector on the front panel of an Arcam integrated amplifier.

0-9 keypad
This allows direct access to individual tracks on the disc. To select a track, press the corresponding keypad button. For tracks greater than 9, enter the digits in sequence. For example, to play track 15, press and hold **1** until the number on the display moves to the left, then press **5**.

Playback control
Play, Stop and Pause (see page 5).

REPEAT
To repeat the entire CD or a pre-programmed selection of tracks press **REPEAT** once: 'REPEAT' lights on the display. To repeat a particular track, select that track and then press **REPEAT** twice so that 'REPEAT 1' is shown on the display. If you now select a different track, that track is repeated instead.

To cancel the repeat function press **REPEAT** a third time.

A-B
This button enables you to repeat any section of music within a track. Whilst the disc is playing, press the **A-B** button at the start of the section you wish to repeat. 'REPEAT' is shown on the display and the letter 'A-' flashes. Press the button a second time when you reach the end of the section you wish to repeat. The 'A-B' letters stop flashing and remain lit. This section will repeat until you press **▶** or **▶** or **◀**. The forward search button (**▶▶**) moves forward within the selected loop.

SHUFFLE
Press once to shuffle play CD tracks (i.e. play them in a random order). Press again to cancel shuffle play.

MUTE
Stops sound to the speaker outputs of certain Arcam amplifiers.

VOL (Volume) +/-
Adjusts the volume on Arcam remote-controllable amplifiers. Note that the volume (+/-) controls and **MUTE** button have no effect on the audio output level of the CD players.

NOTE: Remember to install the two AAA batteries supplied before trying to use your remote control. Do not place anything in front of the display area on the CD player (where the IR receiver is located), or the remote control may not work.

Technical specification

Digital to Analogue conversion

24-bit multilevel Delta-Sigma DAC

Laser pick-up	3 beam
Laser wavelength	780nm
Numerical aperture	0.45
Dynamic range	106dB
Signal to noise ratio (CCIR)	>100dB
Harmonic distortion (0dB, 1kHz)	<0.005%
Frequency response (± 0.5 dB)	5Hz–20kHz
Output level (0dB)	2.3Vrms
Output impedance	120 Ω
Minimum recommended load	5k Ω

Physical

Dimensions	W430 x D290 x H84mm
Weight	4.6kg nett/6.1kg packe
Power consumption	32VA maximum

Digital output connection	75 Ω co-axial optical TOSLINK
---------------------------	---

Supplied accessories

	Mains lead
	CR224 remote control
	2 x AAA batteries

E&OE

NOTE: All specification values are typical unless otherwise stated.

Continual improvement policy

Arcam has a policy of continual improvement for its products. This means that designs and specifications are subject to change without notice.

Radio interference

The CD62 is a digital audio device which has been designed to very high standards of electromagnetic compatibility.

The CD player and DAC generate, and can radiate RF (radio frequency) energy. In some cases this can cause interference with FM and AM radio reception. If this is the case, keep the CD player and its connecting cables as far from the tuner and its aerials as possible. Connecting the CD player and the tuner to different mains sockets can also help to reduce interference.

EC COUNTRIES – This product has been designed to comply with directive 89/336/EEC.

USA – This product complies with FCC requirements.

Laser radiation

If an Arcam CD player is operated whilst the outer casing is removed, invisible laser radiation could cause eye damage.

**CLASS I
LASER PRODUCT**

Guarantee

Worldwide Guarantee

This entitles you to have the unit repaired free of charge, during the first two years after purchase, at any authorised Arcam distributor provided that it was originally purchased from an authorised Arcam dealer or distributor. The manufacturer can take no responsibility for defects arising from accident, misuse, abuse, wear and tear, neglect or through unauthorised adjustment and/or repair, neither can they accept responsibility for damage or loss occurring during transit to or from the person claiming under the guarantee.

The warranty covers:

Parts and labour costs for two years from the purchase date. After two years you must pay for both parts and labour costs. The warranty does not cover transportation costs at any time.

Claims under guarantee

This equipment should be packed in the original packing and returned to the dealer from whom it was purchased, or failing this, directly to the Arcam distributor in the country of residence.

It should be sent carriage prepaid by a reputable carrier – NOT by post. No responsibility can be accepted for the unit whilst in transit to the dealer or distributor and customers are therefore advised to insure the unit against loss or damage whilst in transit.

For further details contact Arcam at:

Arcam Customer Support Department,
Pembroke Avenue, Waterbeach, CAMBRIDGE
CB5 9PB, England.

Telephone: +44 (0)1223 203203

Fax: +44 (0)1223 863384

Email: support@arcam.co.uk

Problems?

Always contact your dealer in the first instance.

If your dealer is unable to answer any query regarding this or any other Arcam product please contact Arcam Customer Support on +44 (0) 1223 203203 or write to us at the above address and we will do our best to help you.

On-line registration

You can register your Arcam product on line at:

www.arcam.co.uk/reg

ARCAM

PEMBROKE AVENUE, WATERBEACH, CAMBRIDGE CB5 9PB, ENGLAND

telephone +44 (0)1223 203203 fax +44 (0)1223 863384 email support@arcam.co.uk website www.arcam.co.uk

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>