

ASK Proxima Lamp Information Guide

<u>Model</u>	<u>Lumens</u>	<u>Lamp Life</u>	<u>How to Check Lamp Hours</u>	<u>How to Reset Lamp Hours</u>
C110	1500	3000 Hours	Press the Menu button and choose About. If the maximum lamp time of 3000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 3000 hours, the lamp will not light (Lamp Error LED will be Blinking). Press and Hold the "Volume +" and the "Volume -" buttons simultaneously for ten seconds. LED on keypad will reset, and you can power the lamp on.
C160	1700	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.
C180	2200	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.
C410	2800	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.
C420	3200	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.

ASK Proxima Lamp Information Guide

C440	3500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and the "Volume +" button simultaneously for ten seconds, then release. Power LED on keypad will reset to green, and you can power the lamp on.
C450	4500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and the "Volume +" button simultaneously for ten seconds, then release. Power LED on keypad will reset to green, and you can power the lamp on.
DP1000x	1100	3000 Hours	Press Menu Button, choose Setup, then choose Service, then Info. At 2900 hours the Lamp LED lights.	Press Menu Button, choose Setup, then choose Service, then Reset Lamptimer. Press Select button again to confirm reset. This will turn off the Lamp LED also.
DP1200x	1100	2000 Hours	Press the Menu Button, then choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. If reached 2000 hour life, Press and Hold the "Volume+" button and then Press the "Volume -" button and hold for ten seconds to reset.
DP2000s	1000	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. If reached 2000 hour life, must Press and Hold the "Volume+" button and then Press the "Volume -" button to reset.
DP2000x	1300	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. If reached 2000 hour life, must Press and Hold the "Volume+" button and then Press the "Volume -" button to reset.
DP2300	45	40 Hours	N/A	N/A
DP2400	90	40 Hours	N/A	N/A

ASK Proxima Lamp Information Guide

DP2700	90	40 Hours	N/A	N/A
DP2710	300	40 Hours	N/A	N/A
DP2750B	90	40 Hours	N/A	N/A
DP2800	90	40 Hours	N/A	N/A
DP2810	300	40 Hours	N/A	N/A
DP2900	600	400 Hours	N/A	N/A
DP2910	600	400 Hours	N/A	N/A
DP4100	C: 315, B&W: 1050	400 Hours	Press the Menu Button, then choose Advanced.	Press the Menu Button, choose Advanced, then choose Lamp Reset.
DP4100Z	C: 315, B&W: 1050	400 Hours	Press the Menu Button, then choose Advanced.	Press the Menu Button, choose Advanced, then choose Lamp Reset.
DP4200Z	C: 400, B&W: 1400	400 Hours	Press the Menu Button, then choose Advanced.	Press the Menu Button, choose Advanced, then choose Lamp Reset.
DP5100	300	750 Hours	Using the remote control, Press and Hold the "Call" button for five to ten seconds. The hours used will appear on the screen.	Lamp Hours can't be reset. Must keep track of hours on each lamp manually.
DP5500	500	1000 Hours	Press and Hold the "Reset" button on the keypad or the "Timer" button on the remote for three seconds.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
DP5600	500	1000 Hours	Press and Hold the "Level +" button on the keypad for 40+ seconds. The lamp hours remaining will be displayed.	With the projector displaying, press the Reset Switch on the connection panel with a ball point pen or paper clip. "RESET" will appear on the screen and then disappear, resetting the lamp timer.
DP5610	500	1000 Hours	Press and Hold the Down Arrow Button for 40+ seconds. The lamp hours remaining will be displayed.	Press the Menu Button, choose Setting, then choose Lamp Replace. Select Yes, and confirm again with Yes.

ASK Proxima Lamp Information Guide

DP5800	650	2000 Hours	Press and Hold the "Reset" button on the keypad or the "Timer" button on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
DP5900	700	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
DP5950	1250	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
DP6150	1400	2000 Hours	Press the Menu Button, then choose Advanced, then Service. Select Info.	Press the Menu Button, choose Advanced, then choose Service, then Reset Lamp Timer and Press Select. Note: You must have an active source connected and displayed on the projector in order to reset the lamp.
DP6155	2000	2000 Hours	Press the Menu Button, then choose Advanced, then Service. Select Info.	Press the Menu Button, choose Advanced, then choose Service, then Reset Lamp Timer and Press Select. Note: You must have an active source connected and displayed on the projector in order to reset the lamp.
DP6500x	2500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.

ASK Proxima Lamp Information Guide

DP6800	600	2000 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
DP6810	900	2000 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
DP6850	1500	1500 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Timer" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.

ASK Proxima Lamp Information Guide

DP6850+	1800	1500 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
DP6860	2400		Press and Hold the Reset button on the Keypad or the remote for five seconds. The Lamp Hours used will be displayed.	Press and Hold the "Reset" button on the keypad or on the remote control for three seconds, the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
DP6870	3500	2000 Hours	Press and Hold the Reset button on the Keypad or the remote for five seconds. The Lamp Hours used will be displayed.	Press and Hold the "Reset" button on the keypad or on the remote control for three seconds, the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
DP8000	3000	1500 Hours	Press Menu Button, choose Setup, then choose Service, then Info. When the lamp hours reach 2000 hours, the Alarm LED on the projector Lights.	Press Menu Button, choose Setup, then choose Service, then Lamp Timer Reset.
DP8000HB	3300	1500 Hours	Press Menu Button, choose Setup, then choose Service, then Info. When the lamp hours reach 2000 hours, the Alarm LED on the projector Lights.	Press Menu Button, choose Setup, then choose Service, then Lamp Timer Reset.

ASK Proxima Lamp Information Guide

DP8200x	3200	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Setup, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and then press the "Volume +" button within three seconds. LED on keypad will reset, and you can power the lamp on.
DP8300	3500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and the "Volume +" button simultaneously for ten seconds, then release. Power LED on keypad will reset to green, and you can power the lamp on.
DP8400	4500	2000 Hours	Press the Menu button and choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. At 2000 hours, the lamp will not light (Lamp Error LED will be On). You must press and hold the "Volume -" button and the "Volume +" button simultaneously for ten seconds, then release. Power LED on keypad will reset to green, and you can power the lamp on.
DP9100	300	700 Hours	Press the Menu button, choose Projector, then choose "Lamp Hours". The number of hours used will be displayed.	Press the Menu button, choose Projector, then choose the Reset button under the Lamp Hours menu.
DP9200	500	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
DP9210	600	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
DP9240	1600	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.

ASK Proxima Lamp Information Guide

DP9250	1400	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
DP9250+	1900	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
DP9260	2200	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
DP9260+	2500	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
DP9270	2600	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Counter Reset" and select. You will be asked to confirm the reset.
DP9280	3000	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
DP9290	3500	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Counter Reset" and select. You will be asked to confirm the reset.
DP9295	4100	1500 Hours	Press and Hold the Up Arrow button on the keypad for 30+ seconds. The lamp hours will appear on the display. When the lamp life approaches the end, the Lamp Replacement Indicator lights Yellow.	Press the Menu button, choose Setting, then choose Lamp Counter Reset and press Select button. A message will appear asking if you want to reset the lamp timer, choose Yes and press the Select button. Another confirmation box appears and select Yes.
DS1	600	1000 Hours	Press the Menu Button, then Power, then choose Lamp Usage. The hours used will be displayed.	Press the Menu Button, then Power, then choose Lamp Usage. Highlight the Lamp Usage icon, the press and hold the Power On button on the remote control for ten seconds to reset the lamp timer back to zero.

ASK Proxima Lamp Information Guide

DS2	800	1500 Hours	Press and Hold the "Exit" button on the keypad or remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Exit" button on the keypad or remote for three seconds. The lamp hours used will be displayed. While the lamp hours are being displayed, press the "Menu" button on the keypad or remote. The reset menu will appear. Using the Right or Left Arrow buttons on the keypad or remote, select "Reset".
DX1	1000	1000 Hours	Press the Menu Button, then Power, then choose Lamp Usage. The hours used will be displayed.	Press the Menu Button, then Power, then choose Lamp Usage. Highlight the Lamp Usage icon, the press and hold the Power On button on the remote control for ten seconds to reset the lamp timer back to zero.
DX2	1000	1500 Hours	Press and Hold the "Exit" button on the keypad or remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Exit" button on the keypad or remote for three seconds. The lamp hours used will be displayed. While the lamp hours are being displayed, press the "Menu" button on the keypad or remote. The reset menu will appear. Using the Right or Left Arrow buttons on the keypad or remote, select "Reset".
DX3	1100	2000 Hours	Press the Menu Button, choose Advanced, then choose Service, then Info.	Press the Menu Button, choose Advanced, then choose Service, then Lamptimer.
Impression 1280	450		Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
Impression 750	225	40 Hours	N/A	N/A
Impression 8300	650		Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
Impression 860	500	750 Hours	Press the Menu button, then choose Help, then About. The total hours used will be displayed in the window. Message will come on screen when you exceed the 750 hours, directing you to replace the lamp.	Lamp replacement only by qualified service personnel.
Impression 880	350	750 Hours	Press the Menu button, then choose Help, then About. The total hours used will be displayed in the window. A Red LED will light on the keypad and a message will come on screen when you exceed the 750 hours, directing you to replace the lamp.	Lamp replacement only by qualified service personnel.

ASK Proxima Lamp Information Guide

Impression 960		750 Hours	Press the Menu button, then choose Help, then About. The total hours used will be displayed in the window. Message will come on screen when you exceed the 750 hours, directing you to replace the lamp.	Lamp replacement only by qualified service personnel.
Impression 970	400	750 Hours	Press the Menu button, then choose Help, then About. The total hours used will be displayed in the window. Message will come on screen when you exceed the 750 hours, directing you to replace the lamp.	Lamp replacement only by qualified service personnel.
Impression A10	1200	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
Impression A2	650	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
Impression A4	500	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
Impression A4+	750	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
Impression A6	450	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
Impression A6+	650	2500 Hours	Press the Menu Button, then choose Help, then About.	Press the Menu Button, choose Options, then choose Service, then Reset Lamp Timer.
LB10	250	50 Hours	N/A	N/A
LB20	200	50 Hours	N/A	N/A
LB30	300	50 Hours	N/A	N/A
LB30+	300	50 Hours	N/A	N/A
LS1	600	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
LS2	1200	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
LX	800	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
LX1	800	4000 Hours	Press the Menu Button, choose Advanced, then choose Service, then Service Info.	Press the Menu Button, choose Advanced, then choose Service, then Service Lamp Timer.

ASK Proxima Lamp Information Guide

LX2	1200	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
M1	1100	2000 Hours	Press the Menu Button, then choose About. If the maximum lamp time of 2000 hours is exceeded, the lamp will not light. The lamp must be replaced and the lamp timer reset before the projector will operate.	Press the Menu Button, choose Settings, then choose Service, then Lamp Reset. If reached 2000 hour life, Press and Hold the "Volume+" button and then Press the "Volume -" button and hold for ten seconds to reset.
M2+	1400	3000 Hours	Press Menu Button, choose Setup, then choose Service, then Info. At 2900 hours the Lamp LED lights.	Press Menu Button, choose Setup, then choose Service, then Reset Lamptimer. Press Select button again to confirm reset. This will turn off the Lamp LED also.
PRO AV 9300	1500	750 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the "Menu" and "Select" buttons simultaneously on the keypad for three seconds. Using the Up/Down Arrow buttons select "Lamp Age" and then press the "Select" button on the keypad or the "Left Mouse" button on the remote. Move the arrow to "Yes" and press the "Select" button on the keypad or the "Left Mouse" button on the remote.
PRO AV 9310	2100	750 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
PRO AV 9320	2700	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
PRO AV 9350	5000	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
PRO AV 9400	2300	750 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
PRO AV 9400+	3000	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.

ASK Proxima Lamp Information Guide

PRO AV 9410	3700	1000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
PRO AV 9500	5200	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Counter Reset" and select. Then choose which lamp to reset and select. You will be asked to confirm the reset.
PRO AV 9550	5800	1500 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours used on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Counter Reset" and select. Then choose which lamp to reset and select. You will be asked to confirm the reset.
PRO AV RX7000	250 NITS	2000 Hours	Press and Hold the Up Arrow Button on the Keypad for 40+ seconds. The displayed Data value will be the hours remaining on the lamp.	Press the Menu Button, choose Setting, then choose "Lamp Age" and select. You will be asked to confirm the reset.
PRO AV SX1	1000	1000 Hours	"Lamp Replace" Indicator blinks on and off when the lamp hours reach 1000.	With the projector in Standby, press and hold the "Video", "Setting", and "Quick Align+" at the same time for six seconds or more. While the "Standby" and "Operate" indicators are on, press the "Video", "Setting", and "Computer" buttons at the same time. The "Standby" and "Operate" indicators will blink two seconds alternately, and after blinking the projector returns to the Standby state (the Standby Indicator lights up). This completes the lamp reset.
S520	800	2000 Hours	Press and Hold the "Reset" button on the keypad or "Timer" on the remote for three seconds. The lamp hours used will be displayed.	Press and Hold the "Reset" button on the keypad or "Timer" on the remote control for three seconds, and the lamp hours used will be displayed. Release button. While the Lamp Time is being displayed, press the "Reset" button on the keypad or the "Menu" button on the remote. Use the Left Arrow Button on the keypad or the Mouse disk on the remote to choose "0" on the screen. Press and Hold the "Reset" button for three seconds. The lamp timer will be reset.
S540	1000	2000 Hours	Press the Menu Button, choose Setup, then choose Service, then Info	Press the Menu Button, choose Setup, then choose Service, then Reset Lamp Timer

ASK Proxima Lamp Information Guide

SV1	700	4000 Hours	Press the Menu Button, choose Advanced, then choose Service, then Service Info.	Press the Menu Button, choose Advanced, then choose Service, then Service Lamp Timer.
SV1+	700	4000 Hours	Press the Menu Button, choose Advanced, then choose Service, then Service Info.	Press the Menu Button, choose Advanced, then choose Service, then Service Lamp Timer.
X350	1100	2000 Hours	Press the Menu Button, choose Setup, then Service and Info	Press the Menu Button, choose Setup, then choose Service, then Reset Lamp Timer
X540	1100	2000 Hours	Press the Menu Button, choose Setup, then Service and Info	Press the Menu Button, choose Setup, then choose Service, then Reset Lamp Timer

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>