



**Audi A3 • A3 Sportback**

**Audi S3**

Quick reference guide



### Fuel tank flap

 
**To open:**  
Press the left side of the flap.

**To close:**  
Press the tank flap until you hear it click into place.



### Fuel and tyre pressures

(see sticker)

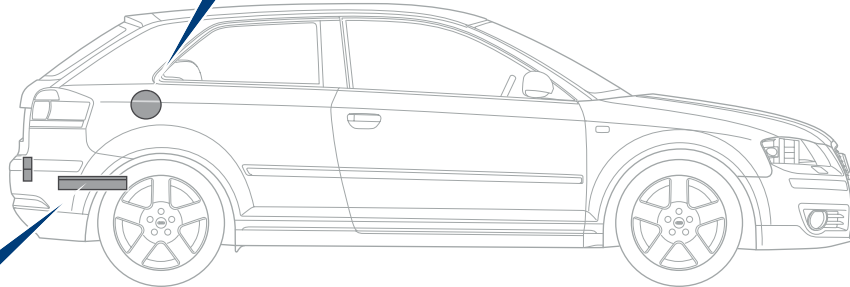


### Warning triangle

The compartment for the warning triangle is located in the luggage compartment under the floor panel (on vehicles with four-wheel drive) or below the tailgate opening.



### Engine oil

 The correct oil specifications and engine oil capacity are listed in the Performance, weights and dimensions section of the Owner's Manual.

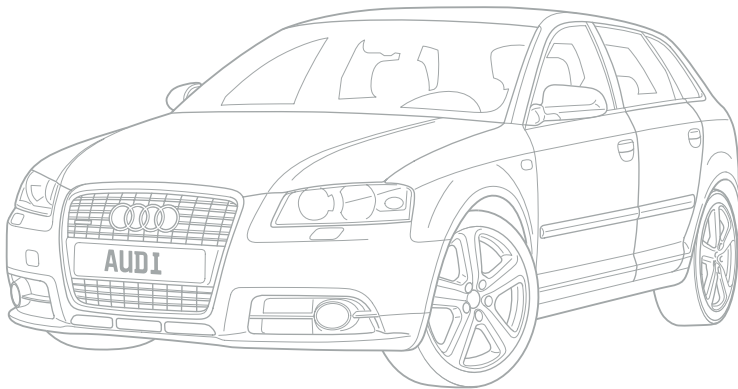

***Dear Audi Driver,***

*This quick reference guide gives you an overview of the main features and controls of your vehicle. However, it cannot replace the detailed Owner's Manual which contains important information and safety warnings.*

*Please refer to your Owner's Manual for detailed information on your vehicle. You will find everything you need to know about the radio, CD, navigation, TV and telephone functions in the Operating Manual for your sound system or navigation system.*

*We wish you safe and enjoyable motoring with your new Audi.*

**AUDI AG**

## Controls and displays





### 1 Electric windows

To set the desired position:  
Press/pull to the first stop  
and hold.

„One-touch“ function:  
Press/pull briefly to the  
second stop.

### 2 Adjuster for exterior mirrors

Turn the adjuster for:

-  Left exterior mirror
-  Exterior mirror heating
-  Right exterior mirror
-  Exterior mirror retraction

Press the adjuster to move  
the mirror glass in the  
desired direction.

### 3 Door handle and central locking switch

 
-  Unlock
-  Lock

 
### 4 Light switch

### 5 Bonnet lock release

### 6 Instrument lighting



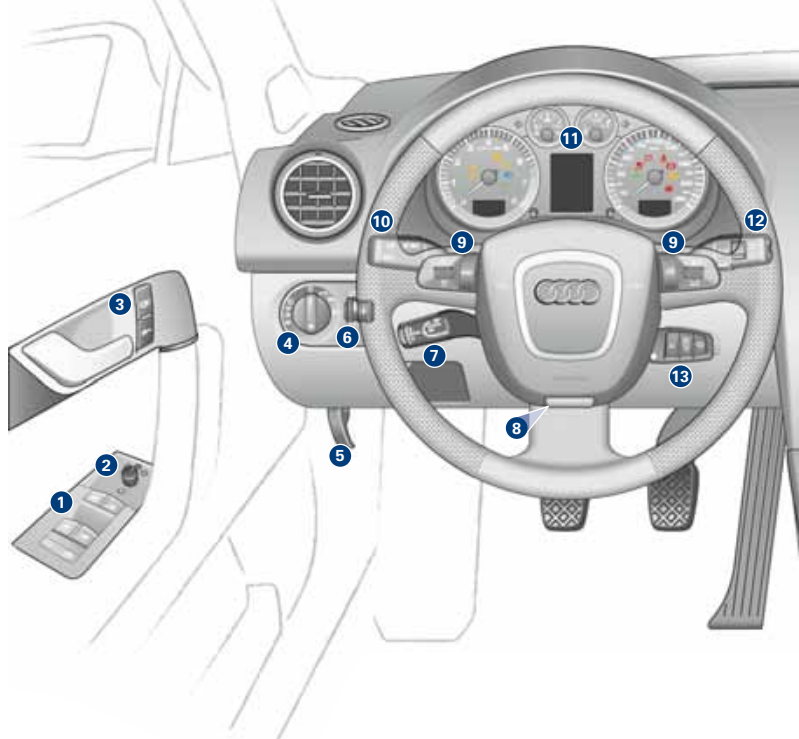
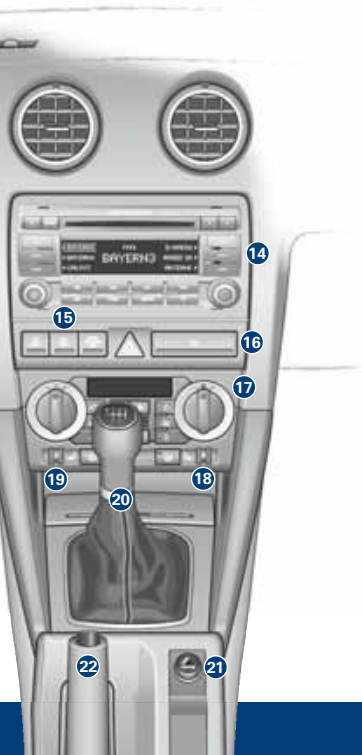
### 7 Cruise control system





- 8 Steering wheel position adjuster
- 9 Controls on multi-function steering wheel
- 10 Turn signal and main beam lever
- 11 Instruments and warning/indicator lamps
- 12 Windscreen wipers/washer and buttons for on-board computer
- 13 Ignition lock
- 14 Sound system or navigation system

15 Switches and warning lamps for:

-  Activating tyre pressure monitoring
-  Electronic stabilisation program
-  Passenger airbag off
-  Hazard warning lights

- 16 Storage tray
- 17 Air conditioner
- 18 Front passenger's seat heating
- 19 Driver's seat heating
- 20 Gear lever or selector lever for automatic gearbox
- 21 Cigarette lighter/electrical socket
- 22 Handbrake

### Sitting position





Sit in a normal upright position and do not sit too close to the steering wheel. If necessary, also adjust the position of the steering wheel.




## Seat adjustment

### Electric seat adjustment

#### 1 To adjust seat height and move seat backwards or forwards:

-  Front of seat cushion up/down
-  Rear of seat cushion up/down
-  Seat up/down
-  Seat forwards/backwards

#### 2 To adjust backrest:

-  Backrest further upright/  
further reclined

#### 3 To adjust lumbar support:

Press the appropriate part of the switch.



### Adjusting head restraint

To lower, press button 8 on the side of the head restraint. The top of the head restraint should be at eye level or higher.

### Manual seat adjustment

#### 3 To adjust lumbar support:

Press the appropriate part of the switch.

#### 4 To move seat backwards or forwards:

Lift the lever and move the seat. Then release the lever and move the seat further until the catch engages.

#### 5 To adjust seat height:

Pull up or press down the lever repeatedly.

#### 6 To adjust backrest:

Take your weight off the backrest and turn the knob.

#### 7 Easy entry function (three-door vehicles only):

 
Pull the lever upwards and fold the backrest forwards.

## Starting the engine

### Switching on the ignition/starting the engine

Insert the key into the ignition lock.

**To switch on the ignition:** Turn the key to position **1**. The glow plugs on diesel engines start preheating in this position.

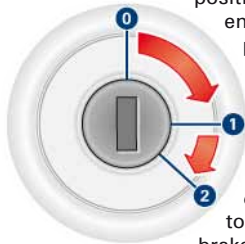

**To start the engine (on vehicles with manual gearbox):** Press the clutch and turn the key to position **2** until the engine starts.

**To start the engine (on vehicles with automatic gearbox):** Move the selector lever to position **P** or **N**, press the brake pedal, and turn the key to position **2** until the engine starts.

**To switch off the engine:** Turn the key to position **0**.

## Automatic gearbox

 
### Selector lever positions

- P** Parking lock
- R** Reverse gear
- N** Neutral
- D** Drive (*forwards*)
- S** Sport position


**To release the selector lever and engage a gear:** Switch on the ignition, press the brake pedal, and press the interlock button on the selector lever.

Move the selector lever to **D** or **S** to start driving forwards.

**tiptronic:** To switch to manual gear selection mode, push the selector lever from position **D** to the right. The gears are shown on the driver information system.

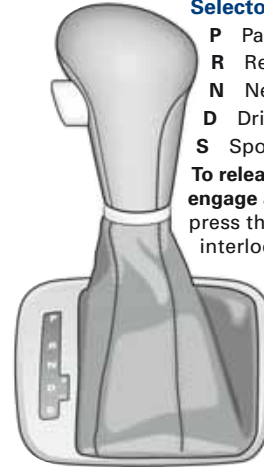

 **To shift up or down a gear:** Briefly push the selector lever forwards or backwards.

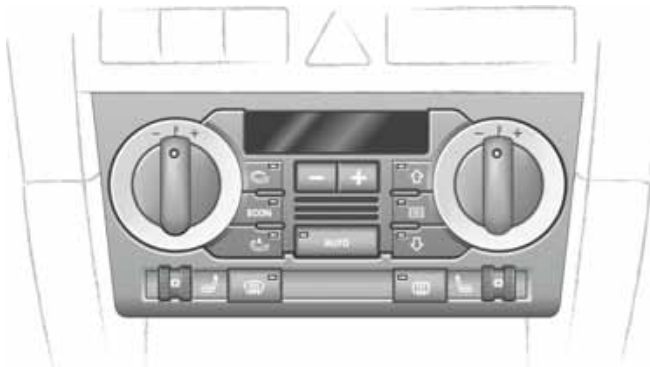

### Switches for air conditioner

**Control on left:** Temperature selection for left side

**Control on right:** Temperature selection for right side

**AUTO Automatic mode**

Set the desired temperature and press the button.

 
**- + Blower speed (switches in the middle)**

**⌚ Air recirculation**

Circulates and filters the air in the interior of the vehicle

**ECON ECON mode**

Activates/deactivates air cooling

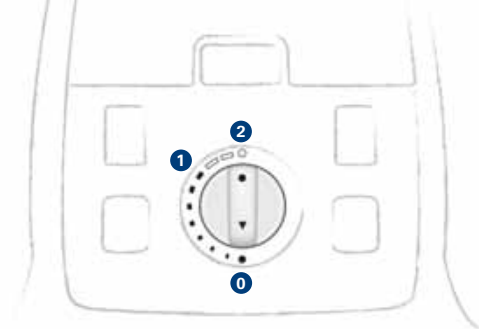

### Sun roof

**Comfort position:** Turn the control to position **1**.

**To open:** Turn the control towards **2** until the roof reaches the desired position.

**To close:** Turn the control to position **0**.

**To tilt open/close:** Briefly press/pull the control in position **0**. Press/pull the control and hold it to tilt the roof to any desired position.





## open sky sun roof

**Comfort position:** Briefly press rear end of switch **1** twice.

**To open/close:** Press rear end of switch **1** (*open*) or front end of switch **2** (*close*) until the open sky sun roof is fully open/closed or has reached the desired position.

 
**To tilt open/close:** Briefly press rear or front end of switch **1** or **2**.




## hill hold assist

### Driving away on a slope

If you press and hold the foot brake for several seconds on a gradient, this will prevent the vehicle from rolling back. When you take your foot off the brake pedal, the vehicle will be held for a moment longer, allowing you to drive off.

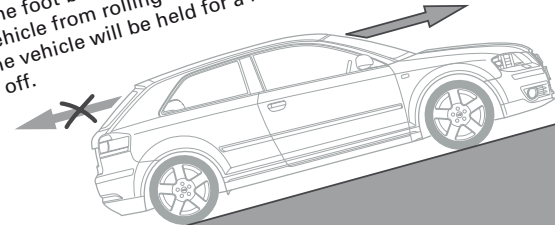

## Cruise control system

When the system is switched on, the indicator lamp  appears in the instrument cluster.

**To switch on/off:** Pull/press lever **2**.

**To set speed:** Press button **1**.

**To adjust stored speed:** Press lever up (*faster*) or down (*slower*).

# Audi Navigation System plus

## Components

### 1 Driver information system

### 2 Multi-function steering wheel

Scroll the **left thumbwheel** to select a menu item in the driver information system. Press the thumbwheel to confirm the selection.

Press the **MODE button** to switch between the active audio source and the navigation and telephone functions.

Briefly press the  button to switch on the speech dialogue system.

Speak after the *<beep>*, e.g. say *<Help>* to call up the possible operating commands.

Press and hold the talk button to switch off the speech dialogue system.

Scroll the **right thumbwheel** to adjust the volume. If you press the right thumbwheel, the last navigation cue will be repeated.





- 3 Display**
- 4 Function selector buttons**  
Press one of the buttons (e.g. RADIO) to activate the desired mode.
- 5 ON/OFF button**  
**To switch on:** Press briefly.  
**To adjust volume:** Turn.  
**To mute:** Press briefly.  
**To switch off:** Press and hold.
- 6 Control buttons**  
To activate one of the functions shown in the four corners of the display, press the control button for that corner of the display.
- 7 Rotary pushbutton**  
**To select a menu item on display 3:** Turn the rotary pushbutton.  
**To confirm selection:** Press the rotary pushbutton.

### Operating logic

The operating logic for accessing the functions is always the same.



- A To call up the menu in a corner of the display:** Press the corresponding button.
- B To select:** Turn the rotary pushbutton.
- C To confirm:** Press the rotary pushbutton.



- 1 Press the RADIO function selector button.



- 2 Turn the rotary pushbutton and select the desired station.



- 3 Press the rotary pushbutton to confirm.



 
- 4 Press the control button for "Memory". The control button corresponds to the top left-hand corner of the display.



- 5 Turn the rotary pushbutton and select the desired memory position.



- 6 Press the rotary pushbutton to confirm.

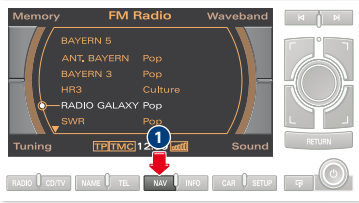

- 1 Press the NAV function selector button.



- 2 Turn the rotary pushbutton and select "Town/ZIP".
- 3 Press the rotary pushbutton to confirm.



- 4 Turn the rotary pushbutton and select the first letter of the destination town.
- 5 Press the rotary pushbutton to confirm.



- 6 Repeat the above step to enter the remaining letters of the destination town until the name of the desired town appears on the display.



- 7 When you have entered the town, turn the rotary pushbutton and select "OK".
- 8 Press the rotary pushbutton to confirm.



- 9 Select "Start route guidance" from the menu.
- 10 Press the rotary pushbutton to confirm. The route will be calculated.

## Functions

### Establishing a Bluetooth™ connection for a mobile phone


You can quickly connect a Bluetooth mobile phone to the onboard phone system on your navigation system:

- Switch on the ignition, navigation system and mobile phone.
- On your mobile phone, select the menu that looks for Bluetooth devices (e.g. "Hands-free").
- On the mobile phone, select "Audi UHV" and confirm.
- Enter the PIN "1234" on your mobile phone.




### Memory cards




















#### Loading:

- Press the  button to open the display.
- Insert the memory card into the reader slot as shown in the illustration and press in the memory card until you feel it click into place.

#### Removing:












- Press the  button to open the display.
- Press in the memory card. The card will be released and can then be removed from the reader slot.

## Warning and indicator lamps

	Tyre pressure too low (check without delay)		Door/s open
	Engine management <sup>1)</sup> or		Tailgate open
	Glow plug system <sup>1)</sup>		Brake pads worn <sup>1)</sup>
	Electronic stabilisation program (ESP)		Diesel particulate filter obstructed
	Emission control system		Light sensor/ rain sensor defective
	Main beam headlights		adaptive light defective
	Trailer turn signals		Headlight range control defective <sup>1)</sup>
	Turn signals/ hazard warning lights		Check engine oil level (lights up permanently)
	Fuel level low		Engine oil sensor defective <sup>1)</sup> (flashes)
	Engine oil pressure too low <sup>1)</sup>		Press clutch pedal
	Bonnet open		Washer fluid level low

<sup>1)</sup> If this warning lamp lights up when driving, please contact a qualified workshop without delay.

## Warning symbols

	Cruise control system		Electro-mechanical power steering
	Airbag system <sup>1)</sup>		Fault in the brake system
	Alternator <sup>1)</sup>		Fault in the cooling system
	Seat belt warning lamp		Engine oil pressure too low
	Fault in brake system or handbrake is applied		
	Anti-lock brake system <sup>1)</sup>		
	Electro-mechanical power steering		

If one of these red symbols lights up in the display while you are driving, stop the car immediately, switch off the engine and refer to the Owner's Manual.

© 2007 AUDI AG

AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to alteration and amendment. Concept and layout: Pfriemer GmbH. Printed in Germany.

[www.audi.com](http://www.audi.com)

**Audi A3 • A3 Sportback**

**Audi S3**

**Kurzanleitung**

**englisch 11.07**

**282.562.755.20**



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>